



**IAR Embedded  
Workbench**

# IAR C/C++ Development Guide

Compiling and Linking

for Arm Limited's  
**Arm® Cores**

## **COPYRIGHT NOTICE**

© 1999–2024 IAR Systems AB.

No part of this document may be reproduced without the prior written consent of IAR Systems AB. The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

## **DISCLAIMER**

The information in this document is subject to change without notice and does not represent a commitment on any part of IAR Systems. While the information contained herein is assumed to be accurate, IAR Systems assumes no responsibility for any errors or omissions.

In no event shall IAR Systems, its employees, its contractors, or the authors of this document be liable for special, direct, indirect, or consequential damage, losses, costs, charges, claims, demands, claim for lost profits, fees, or expenses of any nature or kind.

## **TRADEMARKS**

IAR Systems, IAR Embedded Workbench, Embedded Trust, C-Trust, IAR Connect, C-SPY, C-RUN, C-STAT, IAR Visual State, IAR KickStart Kit, I-jet, I-jet Trace, I-scope, IAR Academy, IAR, and the logotype of IAR Systems are trademarks or registered trademarks owned by IAR Systems AB.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Arm, Cortex, Thumb, and TrustZone are registered trademarks of Arm Limited. EmbeddedICE is a trademark of Arm Limited. uC/OS-II and uC/OS-III are trademarks of Micrium, Inc. CMX-RTX is a trademark of CMX Systems, Inc. Azure RTOS ThreadX is a trademark of Microsoft Corporation. RTX is a trademark of Quadros Systems. Fusion is a trademark of Unicoi Systems.

Renesas Synergy is a trademark of Renesas Electronics Corporation.

Adobe and Acrobat Reader are registered trademarks of Adobe Systems Incorporated.

All other product names are trademarks or registered trademarks of their respective owners.

## **EDITION NOTICE**

Thirty-first edition: June 2024

Part number: DARM-31

This guide applies to version 9.60.x of IAR Embedded Workbench® for Arm.

Internal reference: BB17, csrct2010.1, V\_110411, ISOC/IJOA.

# Brief contents

Tables .....	41
Preface .....	43
<b>Part 1. Using the build tools</b> .....	<b>51</b>
Introduction to the IAR build tools .....	53
Developing embedded applications .....	61
Data storage .....	75
Functions .....	79
Linking using ILINK .....	97
Linking your application .....	115
The DLIB runtime environment .....	131
Assembler language interface .....	175
Using C .....	203
Using C++ .....	213
Application-related considerations .....	223
Efficient coding for embedded applications .....	249
Shared objects (32-bit mode only) .....	269
<b>Part 2. Reference information</b> .....	<b>293</b>
External interface details .....	295
Compiler options .....	305
Linker options .....	363
Data representation .....	407

Extended keywords .....	423
Pragma directives .....	443
Intrinsic functions .....	471
The preprocessor .....	519
C/C++ standard library functions .....	539
The linker configuration file .....	553
Section reference .....	593
The stack usage control file .....	601
IAR utilities .....	609
Implementation-defined behavior for Standard C++ .....	661
Implementation-defined behavior for Standard C .....	699
Implementation-defined behavior for C89 .....	719
Index .....	731

# Contents

Tables .....	41
Preface .....	43
<b>Who should read this guide</b> .....	43
Required knowledge .....	43
<b>How to use this guide</b> .....	43
<b>What this guide contains</b> .....	44
Part 1. Using the build tools .....	44
Part 2. Reference information .....	44
<b>Other documentation</b> .....	45
User and reference guides .....	46
The online help system .....	46
Further reading .....	47
Web sites .....	47
<b>Document conventions</b> .....	48
Typographic conventions .....	48
Naming conventions .....	49
<b>Part I. Using the build tools</b> .....	51
Introduction to the IAR build tools .....	53
<b>The IAR build tools—an overview</b> .....	53
The IAR C/C++ Compiler .....	53
The IAR Assembler .....	54
The IAR ILINK Linker .....	54
Specific ELF tools .....	54
External tools .....	54
<b>IAR language overview</b> .....	55
<b>Device support</b> .....	55
32-bit Arm devices .....	56
64-bit Arm devices .....	56
Preconfigured support files .....	57

Examples for getting started .....	58
<b>Execution modes .....</b>	<b>58</b>
<b>Special support for embedded systems .....</b>	<b>59</b>
Extended keywords .....	59
Pragma directives .....	59
Predefined symbols .....	59
Accessing low-level features .....	60
<b>Developing embedded applications .....</b>	<b>61</b>
<b>Developing embedded software using IAR build tools .....</b>	<b>61</b>
Mapping of memory .....	61
Communication with peripheral units .....	62
Event handling .....	62
System startup .....	62
Real-time operating systems .....	62
Interoperability with other build tools .....	63
<b>The build process—an overview .....</b>	<b>63</b>
The translation process .....	64
The linking process .....	64
After linking .....	66
<b>Application execution—an overview .....</b>	<b>66</b>
The initialization phase .....	67
The execution phase .....	70
The termination phase .....	70
<b>Building applications—an overview .....</b>	<b>71</b>
<b>Basic project configuration .....</b>	<b>71</b>
32-bit mode processor configuration .....	72
64-bit mode processor configuration .....	73
Optimization for speed and size .....	73
<b>Data storage .....</b>	<b>75</b>
<b>Introduction .....</b>	<b>75</b>
Different ways to store data .....	75
<b>Storage of auto variables and parameters .....</b>	<b>76</b>
The stack .....	76

<b>Dynamic memory on the heap</b> .....	77
Potential problems .....	77
<b>Functions</b> .....	79
<b>Function-related extensions</b> .....	79
<b>32-bit Arm and Thumb code</b> .....	80
<b>64-bit A64 code</b> .....	80
<b>Execution in RAM</b> .....	81
<b>Interrupt functions for Cortex-M devices</b> .....	82
Interrupts for Cortex-M .....	82
Interrupts for Cortex-M with FPU .....	82
<b>Interrupt functions for</b>	
<b>Arm7/9/11, Cortex-A, and Cortex-R devices</b> .....	83
Interrupt functions .....	83
Installing exception functions .....	84
Interrupts and fast interrupts .....	85
Nested interrupts .....	86
Software interrupts .....	87
Interrupt operations .....	88
<b>Exception functions for 64-bit mode</b> .....	88
Exception functions .....	89
Exceptions and C++ member functions .....	89
Exception vector table .....	89
Nested exception functions .....	90
Supervisor-defined functions .....	91
Reset address .....	92
<b>Inlining functions</b> .....	92
C versus C++ semantics .....	93
Features controlling function inlining .....	93
<b>Stack protection</b> .....	94
Stack protection in the IAR C/C++ Compiler .....	94
Using stack protection in your application .....	95
<b>TrustZone interface</b> .....	95

Linking using ILINK .....	97
<b>Linker overview</b> .....	97
<b>Modules and sections</b> .....	98
<b>The linking process in detail</b> .....	99
<b>Placing code and data—the linker configuration file</b> .....	101
A simple example of a configuration file .....	102
<b>Initialization at system startup</b> .....	104
The initialization process .....	105
C++ dynamic initialization .....	106
<b>Stack usage analysis</b> .....	107
Introduction to stack usage analysis .....	107
Performing a stack usage analysis .....	107
Result of an analysis—the map file contents .....	108
Specifying additional stack usage information .....	110
Limitations .....	111
Situations where warnings are issued .....	112
Call graph log .....	112
Call graph XML output .....	113
Linking your application .....	115
<b>Linking considerations</b> .....	115
Choosing a linker configuration file .....	115
Defining your own memory areas .....	116
Placing sections .....	117
Reserving space in RAM .....	118
Keeping modules .....	119
Keeping symbols and sections .....	119
Application startup in 32-bit mode .....	119
Application startup in 64-bit mode .....	119
Setting up stack memory .....	120
Setting up heap memory .....	120
Setting up the atexit limit .....	120
Changing the default initialization .....	120
Interaction between ILINK and the application .....	124



Standard library handling .....	125
Producing output formats other than ELF/DWARF .....	125
Veneers .....	125
<b>Hints for troubleshooting</b> .....	125
Relocation errors .....	126
<b>Checking module consistency</b> .....	127
Runtime model attributes .....	127
Using runtime model attributes .....	128
<b>Linker optimizations</b> .....	129
Virtual function elimination .....	129
Small function inlining .....	129
Duplicate section merging .....	130
<b>The DLIB runtime environment</b> .....	131
<b>Introduction to the runtime environment</b> .....	131
Runtime environment functionality .....	131
Briefly about input and output (I/O) .....	132
Briefly about C-SPY emulated I/O .....	134
Briefly about retargeting .....	134
<b>Setting up the runtime environment</b> .....	135
Setting up your runtime environment .....	136
Retargeting—Adapting for your target system .....	137
Overriding library modules .....	139
Customizing and building your own runtime library .....	140
<b>Additional information on the runtime environment</b> .....	142
Bounds checking functionality .....	142
Runtime library configurations .....	142
Prebuilt runtime libraries .....	143
Formatters for printf .....	148
Formatters for scanf .....	150
The C-SPY emulated I/O mechanism .....	151
The semihosting mechanism .....	151
Math functions .....	152
System startup and termination .....	153

System initialization .....	157
The DLIB low-level I/O interface .....	158
abort .....	159
__aeabi_assert .....	159
clock .....	160
__close .....	160
__exit .....	161
getenv .....	161
__getzone .....	162
__lseek .....	162
__open .....	162
raise .....	163
__read .....	163
remove .....	165
rename .....	165
signal .....	165
system .....	166
__time32, __time64 .....	166
__write .....	166
Configuration symbols for file input and output .....	168
Locale .....	168
<b>Managing a multithreaded environment</b> .....	169
Multithread support in the DLIB runtime environment .....	170
Enabling multithread support .....	171
C++ exceptions in threads .....	171
Setting up thread-local storage (TLS) .....	171
<b>Assembler language interface</b> .....	175
<b>Mixing C and assembler</b> .....	175
Intrinsic functions .....	175
Mixing C and assembler modules .....	175
Inline assembler .....	176
Reference information for inline assembler .....	178
An example of how to use clobbered memory .....	186

<b>Calling assembler routines from C</b> .....	186
Creating skeleton code .....	187
Compiling the skeleton code .....	187
<b>Calling assembler routines from C++</b> .....	189
<b>Calling convention</b> .....	189
Function declarations .....	190
Using C linkage in C++ source code .....	190
Preserved versus scratch registers .....	191
Function entrance .....	192
Function exit .....	195
Examples .....	197
<b>Call frame information</b> .....	199
CFI directives .....	199
Creating assembler source with CFI support .....	200
<b>Using C</b> .....	203
<b>C language overview</b> .....	203
<b>Extensions overview</b> .....	203
Enabling language extensions .....	205
<b>IAR C language extensions</b> .....	205
Extensions for embedded systems programming .....	205
Relaxations to Standard C .....	207
<b>Using C++</b> .....	213
<b>Overview—Standard C++</b> .....	213
Modes for exceptions and RTTI support .....	214
Exception handling .....	215
<b>Enabling support for C++</b> .....	216
<b>C++ feature descriptions</b> .....	216
Using IAR attributes with classes .....	216
Templates .....	217
Function types .....	217
Using static class objects in interrupts .....	217
Using New handlers .....	218
Debug support in C-SPY .....	218

<b>C++ language extensions</b> .....	219
<b>Migrating from the</b>	
<b>DLIB C++ library to the Libc++ C++ library</b> .....	221
<b>Porting code from EC++ or EEC++</b> .....	222
Application-related considerations .....	223
<b>Output format considerations</b> .....	223
<b>Stack considerations</b> .....	224
Stack size considerations .....	224
Stack alignment .....	224
Processor modes and stacks .....	224
<b>Heap considerations</b> .....	226
Heap memory handlers .....	226
Heap size and standard I/O .....	227
Heap alignment .....	227
<b>Interaction between the tools and your application</b> .....	227
<b>Checksum calculation for verifying image integrity</b> .....	229
Briefly about checksum calculation .....	229
Calculating and verifying a checksum .....	231
Checksums of address-translated ranges .....	237
Troubleshooting checksum calculation .....	237
<b>AEABI compliance</b> .....	238
Linking AEABI-compliant modules using the IAR ILINK linker ..	240
Linking AEABI-compliant modules using a third-party linker .....	240
Enabling AEABI compliance in the compiler .....	241
<b>CMSIS integration (32-bit mode)</b> .....	241
CMSIS DSP library .....	241
Customizing the CMSIS DSP library .....	242
Building with CMSIS on the command line .....	242
Building with CMSIS in the IDE .....	242
<b>Arm TrustZone®</b> .....	243
In 32-bit mode .....	243
In 64-bit mode .....	246

<b>Branch protection (PACBTI) — 32-bit mode only</b> .....	246
Using branch protection in your application .....	246
<b>Patching symbol definitions using \$Super\$\$ and \$Sub\$\$</b> ...	248
An example using the \$Super\$\$ and \$Sub\$\$ patterns .....	248
<b>Efficient coding for embedded applications</b> .....	249
<b>Selecting data types</b> .....	249
Using efficient data types .....	249
Floating-point types .....	250
Alignment of elements in a structure .....	250
Anonymous structs and unions .....	251
<b>Controlling data and function placement in memory</b> .....	252
Data placement at an absolute location .....	253
Data and function placement in sections .....	254
Data placement in registers (32-bit mode) .....	255
<b>Controlling compiler optimizations</b> .....	256
Scope for performed optimizations .....	257
Multi-file compilation units .....	257
Optimization levels .....	258
Speed versus size .....	259
Fine-tuning enabled transformations .....	259
<b>Facilitating good code generation</b> .....	262
Writing optimization-friendly source code .....	263
Saving stack space and RAM memory .....	263
Function prototypes .....	263
Integer types and bit negation .....	264
Protecting simultaneously accessed variables .....	265
Accessing special function registers .....	265
Passing values between C and assembler objects .....	267
Non-initialized variables .....	267
<b>Shared objects (32-bit mode only)</b> .....	269
<b>Introduction to shared objects</b> .....	269
Briefly about shared objects .....	269
Reasons for generating shared objects .....	270

Requirements for generating and using shared objects .....	270
<b>Working with shared objects .....</b>	<b>271</b>
Linking a shared object .....	271
Locating a shared object .....	272
Loading and unloading a shared object .....	272
Using a shared object .....	273
Debugging a shared object .....	273
<b>Shared object layout .....</b>	<b>274</b>
ELF header .....	274
Program headers .....	274
.hash .....	275
.dynsym .....	275
.dynstr .....	275
.rel.dyn .....	275
.rel.plt .....	275
.plt .....	276
.text .....	276
.dynamic .....	276
.got .....	276
.data .....	276
.bss .....	276
.uninit .....	277
Sample contents listing .....	277
<b>Troubleshooting shared objects .....</b>	<b>279</b>
There are no symbols in the shared object .....	279
Symbols are missing from the shared object .....	279
Symbols are undefined in the shared object .....	280
Symbols are both defined and declared as imported .....	280
A hidden symbol is exported .....	280
local symbols in .dynsym cause problems for the dynamic linker ..	280
<b>Reference information on</b>	
<b>command line options for shared objects .....</b>	<b>281</b>
--plt_mode .....	281
--shared (compiler option) .....	281

--shared (linker option) .....	282
--so_export .....	282
--so_import .....	283
--so_internalize .....	284
--so_internalize_stdlib .....	284
--visibility .....	285
<b>Reference information on</b>	
<b>linker directives for shared objects</b> .....	286
so_alignment directive .....	286
so_export directive .....	286
so_import directive .....	287
so_internalize directive .....	288
so_name directive .....	289
so_needed directive .....	290
so_rpath directive .....	290
so_runpath directive .....	291
<b>Reference information on linker blocks for shared objects</b>	291
so_bss .....	291
so_code .....	291
so_const .....	292
so_data .....	292
<b>Part 2. Reference information</b> .....	293
<b>External interface details</b> .....	295
<b>Invocation syntax</b> .....	295
Compiler invocation syntax .....	295
Linker invocation syntax .....	296
Passing options .....	296
Environment variables .....	297
<b>Include file search procedure</b> .....	297
<b>Compiler output</b> .....	298
<b>Linker output</b> .....	299

<b>Text encodings</b> .....	300
Characters and string literals .....	301
<b>Reserved identifiers</b> .....	301
<b>Diagnostics</b> .....	302
Message format for the compiler .....	302
Message format for the linker .....	302
Severity levels .....	303
Setting the severity level .....	303
Internal error .....	304
Error return codes .....	304
<b>Compiler options</b> .....	305
<b>Options syntax</b> .....	305
Types of options .....	305
Rules for specifying parameters .....	305
<b>Summary of compiler options</b> .....	307
<b>Descriptions of compiler options</b> .....	313
--aapcs .....	313
--aarch64 .....	313
--abi .....	314
--aeabi .....	314
--align_sp_on_irq .....	315
--arm .....	315
--branch_protection .....	315
--c89 .....	316
--char_is_signed .....	316
--char_is_unsigned .....	316
--cmse .....	317
--cpu .....	317
--cpu_mode .....	319
--c++ .....	319
-D .....	320
--debug, -r .....	320
--dependencies .....	321



--deprecated_feature_warnings .....	322
--diag_error .....	322
--diag_remark .....	323
--diag_suppress .....	323
--diag_warning .....	324
--diagnostics_tables .....	324
--discard_unused_publics .....	324
--dlib_config .....	325
--do_explicit_zero_opt_in_named_sections .....	326
-e .....	326
--enable_hardware_workaround .....	327
--enable_restrict .....	327
--endian .....	327
--enum_is_int .....	328
--error_limit .....	328
-f .....	328
--f .....	329
--fpu .....	330
--guard_calls .....	331
--header_context .....	331
-I .....	331
-l .....	332
--libc++ .....	333
--lock_regs .....	333
--macro_positions_in_diagnostics .....	333
--make_all_definitions_weak .....	334
--max_cost_constexpr_call .....	334
--max_depth_constexpr_call .....	334
--mfc .....	335
--no_alignment_reduction .....	335
--no_bom .....	335
--no_call_frame_info .....	336
--no_clustering .....	336
--no_code_motion .....	336

--no_const_align .....	337
--no_cse .....	337
--no_default_fp_contract .....	337
--no_exceptions .....	338
--no_fragments .....	338
--no_inline .....	338
--no_literal_pool .....	339
--no_loop_align .....	339
--no_mem_idioms .....	340
--no_normalize_file_macros .....	340
--no_path_in_file_macros .....	340
--no_rtti .....	341
--no_rw_dynamic_init .....	341
--no_scheduling .....	341
--no_size_constraints .....	342
--no_static_destruction .....	342
--no_system_include .....	342
--no_tbaa .....	343
--no_typedefs_in_diagnostics .....	343
--no_unaligned_access .....	343
--no_uniform_attribute_syntax .....	344
--no_unroll .....	344
--no_var_align .....	345
--no_warnings .....	345
--no_wrap_diagnostics .....	345
--nonportable_path_warnings .....	346
-O .....	346
--only_stdout .....	347
--output, -o .....	347
--pending_instantiations .....	347
--predef_macros .....	348
--preinclude .....	348
--preprocess .....	349
--public_equ .....	349

--relaxed_fp .....	349
--remarks .....	350
--require_prototypes .....	350
--ropi .....	351
--ropi_cb .....	352
--rwpi .....	352
--rwpi_near .....	353
--section .....	353
--section_prefix .....	354
--silent .....	355
--source_encoding .....	355
--stack_protection .....	355
--strict .....	356
--system_include_dir .....	356
--text_out .....	356
--thumb .....	357
--uniform_attribute_syntax .....	357
--use_cplusplus_inline .....	358
--use_paths_as_written .....	358
--use_unix_directory_separators .....	358
--utf8_text_in .....	359
--vectorize .....	359
--version .....	359
--vla .....	359
--warn_about_c_style_casts .....	360
--warn_about_incomplete_constructors .....	360
--warn_about_missing_field_initializers .....	360
--warnings_affect_exit_code .....	361
--warnings_are_errors .....	361
<b>Linker options .....</b>	<b>363</b>
<b>Summary of linker options .....</b>	<b>363</b>
<b>Descriptions of linker options .....</b>	<b>367</b>
--abi .....	368

--accurate_math .....	368
--advanced_heap .....	368
--basic_heap .....	369
--BE8 .....	369
--BE32 .....	369
--call_graph .....	370
--config .....	370
--config_def .....	371
--config_search .....	371
--cpp_init_routine .....	372
--cpu .....	372
--default_to_complex_ranges .....	372
--define_symbol .....	373
--dependencies .....	373
--diag_error .....	374
--diag_remark .....	375
--diag_suppress .....	375
--diag_warning .....	376
--diagnostics_tables .....	376
--do_segment_pad .....	376
--enable_hardware_workaround .....	377
--enable_stack_usage .....	377
--entry .....	378
--entry_list_in_address_order .....	378
--error_limit .....	378
--exception_tables .....	379
--export_builtin_config .....	379
--extra_init .....	380
-f .....	380
--f .....	381
--force_exceptions .....	381
--force_output .....	382
--fpu .....	382
--image_input .....	382

--import_cmse_lib_in .....	383
--import_cmse_lib_out .....	384
--inline .....	384
--keep .....	384
--library_security .....	385
--log .....	386
--log_file .....	387
--mangled_names_in_messages .....	387
--manual_dynamic_initialization .....	388
--map .....	388
--merge_duplicate_sections .....	389
--no_bom .....	389
--no_dynamic_rtti_elimination .....	390
--no_entry .....	390
--no_exceptions .....	391
--no_fragments .....	391
--no_free_heap .....	391
--no_inline .....	392
--no_library_search .....	392
--no_literal_pool .....	392
--no_locals .....	393
--no_out_extension .....	393
--no_range_reservations .....	393
--no_remove .....	394
--no_vfe .....	394
--no_warnings .....	394
--no_wrap_diagnostics .....	395
--only_stdout .....	395
--output, -o .....	395
--pi_veneers .....	395
--place_holder .....	396
--preconfig .....	396
--printf_multibytes .....	397
--redirect .....	397

--remarks .....	397
--require_bti .....	398
--require_pac .....	398
--scanf_multibytes .....	398
--search, -L .....	399
--semihosting .....	399
--silent .....	400
--small_math .....	400
--stack_usage_control .....	400
--strip .....	401
--text_out .....	401
--threaded_lib .....	401
--timezone_lib .....	402
--treat_rvct_modules_as_softfp .....	402
--use_full_std_template_names .....	402
--use_optimized_variants .....	403
--utf8_text_in .....	403
--version .....	404
--vfe .....	404
--warnings_affect_exit_code .....	405
--warnings_are_errors .....	405
--whole_archive .....	405
<b>Data representation .....</b>	<b>407</b>
<b>Alignment .....</b>	<b>407</b>
Alignment on the Arm core .....	408
<b>Byte order (32-bit mode only) .....</b>	<b>408</b>
<b>Basic data types—integer types .....</b>	<b>409</b>
Integer types—an overview .....	409
Bool .....	410
The enum type .....	410
The char type .....	410
The wchar_t type .....	410
The char16_t type .....	410

The char32_t type .....	410
Bitfields .....	410
<b>Basic data types—floating-point types</b> .....	415
Floating-point environment .....	415
32-bit floating-point format .....	415
64-bit floating-point format .....	416
Representation of special floating-point numbers .....	416
<b>Pointer types</b> .....	417
Function pointers .....	417
Data pointers .....	417
Casting .....	418
<b>Structure types</b> .....	418
Alignment of structure types .....	418
General layout .....	419
Packed structure types .....	419
<b>Type qualifiers</b> .....	420
Declaring objects volatile .....	420
Declaring objects volatile and const .....	422
Declaring objects const .....	422
<b>Data types in C++</b> .....	422
Extended keywords .....	423
<b>General syntax rules for extended keywords</b> .....	423
Type attributes .....	423
Object attributes .....	425
<b>Summary of extended keywords</b> .....	426
<b>Descriptions of extended keywords</b> .....	427
__absolute .....	427
__arm .....	428
__big_endian .....	428
__cmse_nonsecure_call .....	428
__cmse_nonsecure_entry .....	429
__exception .....	429
__fiq .....	430

__interwork .....	430
__intrinsic .....	430
__irq .....	430
__little_endian .....	431
__naked .....	431
__nested .....	431
__no_alloc, __no_alloc16 .....	432
__no_alloc_str, __no_alloc_str16 .....	433
__no_init .....	434
__noreturn .....	434
__packed .....	434
__ramfunc .....	436
__ro_placement .....	436
__root .....	437
__stackless .....	437
__svc .....	438
__task .....	439
__thumb .....	439
__weak .....	440
<b>Supported GCC attributes</b> .....	440
visibility .....	442
<b>Pragma directives</b> .....	443
<b>Summary of pragma directives</b> .....	443
<b>Descriptions of pragma directives</b> .....	446
bitfields .....	446
calls .....	447
call_graph_root .....	448
data_alignment .....	448
default_function_attributes .....	449
default_variable_attributes .....	450
deprecated .....	451
diag_default .....	451
diag_error .....	452



diag_remark .....	452
diag_suppress .....	453
diag_warning .....	453
error .....	453
function_category .....	454
include_alias .....	454
inline .....	455
language .....	456
location .....	456
message .....	458
no_stack_protect .....	458
object_attribute .....	458
once .....	459
optimize .....	459
pack .....	461
__printf_args .....	461
public_equ .....	462
required .....	462
rtmodel .....	463
__scanf_args .....	464
section .....	464
section_prefix .....	465
stack_protect .....	465
STDC CX_LIMITED_RANGE .....	465
STDC FENV_ACCESS .....	466
STDC FP_CONTRACT .....	466
svc_number .....	467
type_attribute .....	467
unroll .....	468
vectorize .....	468
weak .....	469

Intrinsic functions .....	471
<b>Summary of intrinsic functions</b> .....	471
Intrinsic functions for ACLE .....	471
Intrinsic functions for Neon instructions .....	472
Intrinsic functions for MVE instructions .....	472
Intrinsic functions for CDE instructions .....	473
<b>Descriptions of IAR intrinsic functions</b> .....	473
__arm_cdp, __arm_cdp2 .....	473
__arm_ldc, __arm_ldcl, __arm_ldc2, __arm_ldc12 .....	474
__arm_mcr, __arm_mcr2, __arm_mcr, __arm_mcr2 .....	475
__arm_mrc, __arm_mrc2, __arm_mrrc, __arm_mrrc2 .....	475
__arm_rsr, __arm_rsr64, __arm_rsrp .....	476
__arm_stc, __arm_stcl, __arm_stc2, __arm_stc2l .....	477
__arm_wsr, __arm_wsr64, __arm_wsrp .....	477
__CDP, __CDP2 .....	478
__CLREX .....	478
__CLZ .....	479
__crc32b, __crc32h, __crc32w, __crc32d .....	479
__crc32cb, __crc32ch, __crc32cw, __crc32cd .....	479
__disable_debug .....	480
__disable_fiq .....	480
__disable_interrupt .....	480
__disable_irq .....	480
__disable_SError .....	481
__DMB .....	481
__DSB .....	481
__enable_debug .....	481
__enable_fiq .....	482
__enable_interrupt .....	482
__enable_irq .....	482
__enable_SError .....	482
__fma, __fmaf .....	483
__get_BASEPRI .....	483

__get_CONTROL .....	483
__get_CPSR .....	483
__get_FAULTMASK .....	484
__get_FPSCR .....	484
__get_interrupt_state .....	484
__get_IPSR .....	485
__get_LR .....	485
__get_MSP .....	485
__get_PRIMASK .....	486
__get_PSP .....	486
__get_PSR .....	486
__get_return_address .....	487
__get_SB .....	487
__get_SP .....	487
__ISB .....	487
__LDC, __LDCL, __LDC2, __LDC2L .....	487
__LDC_noidx, __LDCL_noidx, __LDC2_noidx, __LDC2L_noidx .....	488
__LDREX, __LDREXB, __LDREXD, __LDREXH .....	489
__MCR, __MCR2 .....	489
__MCRR, __MCRR2 .....	490
__MRC, __MRC2 .....	490
__MRRC, __MRRC2 .....	491
__no_operation .....	492
__PKHBT .....	492
__PKHTB .....	492
__PLD, __PLDW .....	493
__PLI .....	493
__QADD, __QDADD, __QDSUB, __QSUB .....	493
__QADD8, __QADD16, __QASX, __QSAX, __QSUB8, __QSUB16 .....	494
__QCFlag .....	494
__QDOUBLE .....	494
__QFlag .....	494

__RBIT .....	495
__reset_Q_flag .....	495
__reset_QC_flag .....	495
__REV, __REV16, __REVSH .....	495
__rintn, __rintnf .....	496
__ROR .....	496
__RRX .....	496
__SADD8, __SADD16, __SASX, __SSAX, __SSUB8, __SSUB16 .....	496
__SEL .....	497
__set_BASEPRI .....	497
__set_CONTROL .....	497
__set_CPSR .....	498
__set_FAULTMASK .....	498
__set_FPSCR .....	498
__set_interrupt_state .....	498
__set_LR .....	499
__set_MSP .....	499
__set_PRIMASK .....	499
__set_PSP .....	499
__set_SB .....	500
__set_SP .....	500
__SEV .....	500
__SHADD8, __SHADD16 __SHASX, __SHSAX, __SHSUB8, __SHSUB16 .....	500
__SMLABB, __SMLABT __SMLATB, __SMLATT, __SMLAWB, __SMLAWT .....	501
__SMLAD, __SMLADX, __SMLSD, __SMLSDX .....	501
__SMLALBB, __SMLALBT, __SMLALTB, __SMLALTT .....	501
__SMLALD, __SMLALDX, __SMLSLD, __SMLSLDX .....	501
__SMMLA, __SMMLAR, __SMMLS, __SMMLSR .....	502
__SMMUL, __SMMULR .....	502
__SMUAD, __SMUADX, __SMUSD, __SMUSDX .....	502
__SMUL .....	503

__SMULBB, __SMULBT	
__SMULTB, __SMULTT, __SMULWB, __SMULWT	503
__sqrt, __sqrtf	503
__SSAT	503
__SSAT16	504
__STC, __STCL, __STC2, __STC2L	504
__STC_noidx, __STCL_noidx, __STC2_noidx, __STC2L_noidx	505
__STREX, __STREXB, __STREXD, __STREXH	505
__SWP, __SWPB	506
__SXTAB, __SXTAB16, __SXTAH, __SXTB16	506
__TT, __TTT, __TTA, __TTAT	506
__UADD8, __UADD16	
__UASX, __USAX, __USUB8, __USUB16	507
__UHADD8, __UHADD16	
__UHASX, __UHSAX, __UHSUB8, __UHSUB16	507
__UMAAL	507
__UQADD8, __UQADD16	
__UQASX, __UQSAX, __UQSUB8, __UQSUB16	508
__USAD8, __USADA8	508
__USAT	508
__USAT16	509
__UXTAB, __UXTAB16, __UXTAH, __UXTB16	509
__VFMA_F64, __VFMS_F64	
__VFNMA_F64, __VFNMS_F64, __VFMA_F32	
__VFMS_F32, __VFNMA_F32, __VFNMS_F32	509
__VMINNM_F64, __VMAXNM_F64	
__VMINNM_F32, __VMAXNM_F32	510
__VRINTA_F64, __VRINTM_F64, __VRINTN_F64,	
__VRINTP_F64, __VRINTX_F64, __VRINTR_F64,	
__VRINTZ_F64, __VRINTA_F32, __VRINTM_F32,	
__VRINTN_F32, __VRINTP_F32, __VRINTX_F32,	
__VRINTR_F32, __VRINTZ_F32	510
__VSQRT_F64, __VSQRT_F32	511
__WFE, __WFI, __YIELD	511

<b>Supported GCC built-in functions</b> .....	511
The preprocessor .....	519
<b>Overview of the preprocessor</b> .....	519
<b>Description of predefined preprocessor symbols</b> .....	520
__AAPCS__ .....	520
__AAPCS_VFP__ .....	520
__aarch64__ .....	520
__arm__ .....	521
__ARM_32BIT_STATE .....	521
__ARM_64BIT_STATE .....	521
__ARM_ADVANCED_SIMD__ .....	521
__ARM_ALIGN_MAX_PWR .....	521
__ARM_ALIGN_MAX_STACK_PWR .....	522
__ARM_ARCH .....	522
__ARM_ARCH_ISA_A64 .....	522
__ARM_ARCH_ISA_ARM .....	522
__ARM_ARCH_ISA_THUMB .....	522
__ARM_ARCH_PROFILE .....	522
__ARM_BIG_ENDIAN .....	523
__ARM_FEATURE_AES .....	523
__ARM_FEATURE_CLZ .....	523
__ARM_FEATURE_CMSE .....	523
__ARM_FEATURE_CRC32 .....	523
__ARM_FEATURE_CRYPT0 .....	524
__ARM_FEATURE_DIRECTED_ROUNDING .....	524
__ARM_FEATURE_DSP .....	524
__ARM_FEATURE_FMA .....	524
__ARM_FEATURE_FP16_FML .....	524
__ARM_FEATURE_IDIV .....	524
__ARM_FEATURE_NUMERIC_MAXMIN .....	525
__ARM_FEATURE_QBIT .....	525
__ARM_FEATURE_QRDMX .....	525
__ARM_FEATURE_SAT .....	525

__ARM_FEATURE_SHA2 .....	525
__ARM_FEATURE_SHA3 .....	525
__ARM_FEATURE_SHA512 .....	525
__ARM_FEATURE_SIMD32 .....	526
__ARM_FEATURE_SM3 .....	526
__ARM_FEATURE_SM4 .....	526
__ARM_FEATURE_UNALIGNED .....	526
__ARM_FP .....	526
__ARM_FP16_ARGS .....	526
__ARM_FP16_FML .....	527
__ARM_FP16_FORMAT_IEEE .....	527
__ARM_MEDIA__ .....	527
__ARM_NEON .....	527
__ARM_NEON_FP .....	527
__ARM_PCS_AAPCS64 .....	527
__ARM_PROFILE_M__ .....	528
__ARM_ROPI .....	528
__ARM_RWPI .....	528
__ARM_SIZEOF_MINIMAL_ENUM .....	528
__ARM_SIZEOF_WCHAR_T .....	528
__ARMVFP__ .....	529
__ARMVFP_D16__ .....	529
__ARMVFP_SP__ .....	529
__BASE_FILE__ .....	529
__BUILD_NUMBER__ .....	529
__CORE__ .....	530
__COUNTER__ .....	530
__cplusplus .....	530
__CPU_MODE__ .....	530
__DATE__ .....	530
__EXCEPTIONS .....	531
__FILE__ .....	531
__func__ .....	531
__FUNCTION__ .....	531

__IAR_SYSTEMS_ICC__ .....	531
__ICCARM__ .....	532
__ILP32__ .....	532
__LIBCPP .....	532
__LIBCPP_ENABLE_CXX17_REMOVED_FEATURES .....	532
__LINE__ .....	532
__LITTLE_ENDIAN__ .....	532
__LP64__ .....	533
__PRETTY_FUNCTION__ .....	533
__ROPI__ .....	533
__RTTI__ .....	533
__RWPI__ .....	533
__STDC__ .....	534
__STDC_LIB_EXT1__ .....	534
__STDC_NO_ATOMICS__ .....	534
__STDC_NO_THREADS__ .....	534
__STDC_NO_VLA__ .....	534
__STDC_UTF16__ .....	534
__STDC_UTF32__ .....	534
__STDC_VERSION__ .....	535
__thumb__ .....	535
__TIME__ .....	535
__TIMESTAMP__ .....	535
__VER__ .....	535
<b>Descriptions of miscellaneous preprocessor extensions .....</b>	<b>535</b>
#include_next .....	536
NDEBUG .....	536
__STDC_WANT_LIB_EXT1__ .....	536
#warning .....	536
<b>Supported GCC predefined preprocessor symbols .....</b>	<b>537</b>
<b>C/C++ standard library functions .....</b>	<b>539</b>
<b>C/C++ standard library overview .....</b>	<b>539</b>
Header files .....	540



Library object files .....	540
Alternative more accurate library functions .....	540
Reentrancy .....	540
The longjmp function .....	541
<b>DLIB runtime environment—implementation details</b> .....	541
Briefly about the DLIB runtime environment .....	541
C header files .....	542
C++ header files .....	543
Library functions as intrinsic functions .....	547
Not supported C/C++ functionality .....	547
Atomic operations .....	548
Added C functionality .....	548
Non-standard implementations .....	551
Symbols used internally by the library .....	551
<b>The linker configuration file</b> .....	553
<b>Overview</b> .....	553
<b>Declaring the build type</b> .....	554
build for directive .....	555
<b>Defining memories and regions</b> .....	555
define memory directive .....	556
define region directive .....	556
logical directive .....	557
<b>Regions</b> .....	559
Region literal .....	559
Region expression .....	560
Empty region .....	561
<b>Section handling</b> .....	562
define block directive .....	563
define section directive .....	566
define overlay directive .....	569
initialize directive .....	570
do not initialize directive .....	573
keep directive .....	574

place at directive .....	574
place in directive .....	576
reserve region .....	577
use init table directive .....	577
<b>Section selection</b> .....	<b>579</b>
section-selectors .....	580
extended-selectors .....	583
<b>Using symbols, expressions, and numbers</b> .....	<b>585</b>
check that directive .....	585
define symbol directive .....	586
export directive .....	586
expressions .....	587
keep symbol directive .....	589
numbers .....	589
<b>Structural configuration</b> .....	<b>589</b>
error directive .....	590
if directive .....	590
include directive .....	591
<b>Predefined linker symbols</b> .....	<b>591</b>
__version .....	591
Section reference .....	593
<b>Summary of sections and blocks</b> .....	<b>593</b>
<b>Descriptions of sections and blocks</b> .....	<b>595</b>
.bss .....	595
CSTACK .....	595
.data .....	595
.data_init .....	595
.exc.text .....	596
HEAP .....	596
__iar_tls\$\$DATA .....	596
__iar_tls\$\$INITDATA .....	596
.iar.dynexit .....	597
.iar.locale_table .....	597

.init_array .....	597
.intvec .....	597
IRQ_STACK .....	597
.noinit .....	598
.preinit_array .....	598
.prepreinit_array .....	598
.rodata .....	598
.tbss .....	598
.tdata .....	599
.text .....	599
.textw .....	599
.textw_init .....	599
Veneer\$CMSE .....	599
<b>The stack usage control file .....</b>	<b>601</b>
<b>Overview .....</b>	<b>601</b>
C++ names .....	601
<b>Stack usage control directives .....</b>	<b>601</b>
call graph root directive .....	602
exclude directive .....	602
function directive .....	602
max recursion depth directive .....	603
no calls from directive .....	604
possible calls directive .....	604
<b>Syntactic components .....</b>	<b>605</b>
<i>category</i> .....	605
<i>func-spec</i> .....	605
<i>module-spec</i> .....	605
<i>name</i> .....	606
<i>call-info</i> .....	606
<i>stack-size</i> .....	606
<i>size</i> .....	607

IAR utilities .....	609
<b>The IAR Archive Tool—iarchive</b> .....	609
Invocation syntax .....	610
Summary of iarchive commands .....	610
Summary of iarchive options .....	611
Diagnostic messages .....	611
<b>The IAR ELF Tool—ielftool</b> .....	613
Invocation syntax .....	613
Summary of ielftool options .....	614
Specifying ielftool address ranges .....	615
<b>The IAR ELF Dumper—ielfdump</b> .....	615
Invocation syntax .....	616
Summary of ielfdump options .....	616
<b>The IAR ELF Object Tool—iobjmanip</b> .....	617
Invocation syntax .....	617
Summary of iobjmanip options .....	618
Diagnostic messages .....	618
<b>The IAR Absolute Symbol Exporter—ismexport</b> .....	620
Invocation syntax .....	620
Summary of ismexport options .....	621
Steering files .....	622
Hide directive .....	622
Rename directive .....	623
Show directive .....	623
Show-root directive .....	624
Show-weak directive .....	624
Diagnostic messages .....	624
<b>The IAR ELF Relocatable Object Creator—iexe2obj</b> .....	626
Invocation syntax .....	626
Building the input file .....	627
Summary of iexe2obj options .....	628
<b>Descriptions of options</b> .....	628
-a .....	628

--all .....	628
--bin .....	629
--bin-multi .....	629
--checksum .....	630
--code .....	633
--create .....	634
--delete, -d .....	634
--disasm_data .....	635
--edit .....	635
--export_locals .....	635
--extract, -x .....	636
-f .....	636
--f .....	637
--fake_time .....	637
--fill .....	638
--front_headers .....	639
--generate_vfe_header .....	639
--hide_symbols .....	639
--ihex .....	640
--ihex-len .....	640
--keep_mode_symbols .....	640
--no_bom .....	641
--no_header .....	641
--no_rel_section .....	641
--no_strtab .....	642
--no_utf8_in .....	642
--offset .....	642
--output, -o .....	643
--parity .....	644
--prefix .....	645
--ram_reserve_ranges .....	645
--range .....	646
--raw .....	646
--remove_file_path .....	647

--remove_section .....	647
--rename_section .....	647
--rename_symbol .....	648
--replace, -r .....	648
--reserve_ranges .....	649
--section, -s .....	649
--segment, -g .....	650
--self_reloc .....	651
--show_entry_as .....	651
--silent .....	651
--simple .....	652
--simple-ne .....	652
--source .....	652
--srec .....	653
--srec-len .....	653
--srec-s3only .....	653
--strip .....	654
--symbols .....	654
--text_out .....	654
--titxt .....	655
--toc, -t .....	655
--update_symbol .....	656
--update_typeless_globals .....	657
--use_full_std_template_names .....	657
--utf8_text_in .....	658
--verbose, -V .....	658
--version .....	658
--vtoc .....	659
--wrap .....	659

Implementation-defined behavior for Standard C++ .....	661
--	-----

<b>Descriptions of implementation-defined behavior for C++</b> .....	661
--	-----

List of topics .....	661
----------------------	-----

<b>Implementation quantities</b> .....	696
--	-----

Implementation-defined behavior for Standard C .....	699
<b>Descriptions of implementation-defined behavior</b> .....	699
J.3.1 Translation .....	699
J.3.2 Environment .....	700
J.3.3 Identifiers .....	701
J.3.4 Characters .....	701
J.3.5 Integers .....	703
J.3.6 Floating point .....	704
J.3.7 Arrays and pointers .....	705
J.3.8 Hints .....	705
J.3.9 Structures, unions, enumerations, and bitfields .....	705
J.3.10 Qualifiers .....	706
J.3.11 Preprocessing directives .....	706
J.3.12 Library functions .....	709
J.3.13 Architecture .....	714
J.4 Locale .....	715
Implementation-defined behavior for C89 .....	719
<b>Descriptions of implementation-defined behavior</b> .....	719
Translation .....	719
Environment .....	719
Identifiers .....	720
Characters .....	720
Integers .....	721
Floating point .....	722
Arrays and pointers .....	722
Registers .....	723
Structures, unions, enumerations, and bitfields .....	723
Qualifiers .....	724
Declarators .....	724
Statements .....	724
Preprocessing directives .....	724
Library functions for the IAR DLIB runtime environment .....	726

Index .....	731
-------------	-----



# Tables

1: Typographic conventions used in this guide .....	48
2: Naming conventions used in this guide .....	49
3: Sections holding initialized data .....	105
4: Description of a relocation error .....	126
5: Example of runtime model attributes .....	128
6: Library configurations .....	143
7: Formatters for printf .....	149
8: Formatters for scanf .....	150
9: Library objects using TLS .....	170
10: Inline assembler operand constraints in 32-bit mode .....	180
11: Inline assembler operand constraints in 64-bit mode .....	181
12: Supported constraint modifiers .....	182
13: List of valid clobbers .....	184
14: Operand modifiers and transformations in 32-bit mode .....	184
15: Operand modifiers and transformations in 64-bit mode .....	185
16: Registers used in 32-bit mode for passing parameters .....	193
17: Registers used in 64-bit mode for passing parameters .....	194
18: Registers used in 32-bit mode for returning values .....	195
19: Registers used in 64-bit mode for returning values .....	196
20: 32-bit mode call frame information resources defined in a names block .....	200
21: 64-bit mode call frame information resources defined in a names block .....	200
22: Language extensions .....	205
23: Section operators and their symbols .....	207
24: Stacks for Arm processor modes .....	225
25: Memory ranges for TrustZone example .....	245
26: Compiler optimization levels .....	258
27: Compiler environment variables .....	297
28: ILINK environment variables .....	297
29: Error return codes .....	304
30: Compiler options summary .....	307
31: Linker options summary .....	363

32: Integer types .....	409
33: Floating-point types .....	415
34: Function pointers .....	417
35: Data pointers .....	417
36: Extended keywords summary .....	426
37: Pragma directives summary .....	443
38: Traditional Standard C header files—DLIB .....	542
39: C++ header files .....	543
40: New Standard C header files—DLIB .....	546
41: Examples of section selector specifications .....	582
42: Section summary .....	593
43: iarchive parameters .....	610
44: iarchive commands summary .....	610
45: iarchive options summary .....	611
46: ielftool parameters .....	613
47: ielftool options summary .....	614
48: ielfdumparm parameters .....	616
49: ielfdumparm options summary .....	616
50: iobjmanip parameters .....	617
51: iobjmanip options summary .....	618
52: isymexport parameters .....	620
53: isymexport options summary .....	621
54: iexe2obj parameters .....	626
55: iexe2obj options summary .....	628
56: Execution character sets and their encodings .....	663
57: C++ implementation quantities .....	697
58: Execution character sets and their encodings .....	702
59: Translation of multibyte characters in the extended source character set .....	715
60: Message returned by strerror()—DLIB runtime environment .....	716
61: Execution character sets and their encodings .....	720
62: Message returned by strerror()—DLIB runtime environment .....	729

# Preface

Welcome to the *IAR C/C++ Development Guide for Arm*. The purpose of this guide is to provide you with detailed reference information that can help you to use the build tools to best suit your application requirements. This guide also gives you suggestions on coding techniques so that you can develop applications with maximum efficiency.

---

## Who should read this guide

Read this guide if you intend to use the C or C++ language to develop an application for 32-bit or 64-bit Arm cores, and need detailed reference information on how to use the build tools.

### REQUIRED KNOWLEDGE

To use the tools in IAR Embedded Workbench, you should have working knowledge of:

- The architecture and instruction set of the Arm core you are using (refer to the chip manufacturer's documentation)
- The C or C++ programming language
- Application development for embedded systems
- The operating system of your host computer.

For more information about the other development tools incorporated in the IDE, refer to their respective documentation, see *Other documentation*, page 45.

---

## How to use this guide

When you start using the IAR C/C++ Compiler and Linker for Arm, you should read *Part 1. Using the build tools* in this guide.

When you are familiar with the compiler and linker and have already configured your project, you can focus more on *Part 2. Reference information*.

If you are new to using IAR Embedded Workbench, we suggest that you first go through the tutorials, which you can find in IAR Information Center in the product, under **Product explorer**. They will help you get started.

---

## What this guide contains

Below is a brief outline and summary of the chapters in this guide.

### PART I. USING THE BUILD TOOLS

- *Introduction to the IAR build tools* gives an introduction to the IAR build tools, which includes an overview of the tools, the programming languages, the available device support, and extensions provided for supporting specific features of the various Arm cores and devices.
- *Developing embedded applications* gives the information you need to get started developing your embedded software using the IAR build tools.
- *Data storage* describes how to store data in memory.
- *Functions* gives a brief overview of function-related extensions—mechanisms for controlling functions—and describes some of these mechanisms in more detail.
- *Linking using ILINK* describes the linking process using the IAR ILINK Linker and the related concepts.
- *Linking your application* lists aspects that you must consider when linking your application, including using ILINK options and tailoring the linker configuration file.
- *The DLIB runtime environment* describes the DLIB runtime environment in which an application executes. It covers how you can modify it by setting options, overriding default library modules, or building your own library. The chapter also describes system initialization introducing the file `cstartup.s`, how to use modules for locale, and file I/O.
- *Assembler language interface* contains information required when parts of an application are written in assembler language. This includes the calling convention.
- *Using C* gives an overview of the two supported variants of the C language, and an overview of the compiler extensions, such as extensions to Standard C.
- *Using C++* gives an overview of the level of C++ support.
- *Application-related considerations* discusses a selected range of application issues related to using the compiler and linker.
- *Efficient coding for embedded applications* gives hints about how to write code that compiles to efficient code for an embedded application.
- *Shared objects (32-bit mode only)* describes how you can use the ILINK linker to generate shared objects, and provides related conceptual and reference information.

### PART 2. REFERENCE INFORMATION

- *External interface details* provides reference information about how the compiler and linker interact with their environment—the invocation syntax, methods for

passing options to the compiler and linker, environment variables, the include file search procedure, and the different types of compiler and linker output. The chapter also describes how the diagnostic system works.

- *Compiler options* explains how to set options, gives a summary of the options, and contains detailed reference information for each compiler option.
- *Linker options* gives a summary of the options, and contains detailed reference information for each linker option.
- *Data representation* describes the available data types, pointers, and structure types. This chapter also gives information about type and object attributes.
- *Extended keywords* gives reference information about each of the Arm-specific keywords that are extensions to the standard C/C++ language.
- *Pragma directives* gives reference information about the pragma directives.
- *Intrinsic functions* gives reference information about functions to use for accessing Arm-specific low-level features.
- *The preprocessor* gives a brief overview of the preprocessor, including reference information about the different preprocessor directives, symbols, and other related information.
- *C/C++ standard library functions* gives an introduction to the C or C++ library functions, and summarizes the header files.
- *The linker configuration file* describes the purpose of the linker configuration file, and describes its contents.
- *Section reference* gives reference information about the use of sections.
- *The stack usage control file* describes the syntax and semantics of stack usage control files.
- *IAR utilities* describes the IAR utilities that handle the ELF and DWARF object formats.
- *Implementation-defined behavior for Standard C++* describes how the compiler handles the implementation-defined areas of Standard C++.
- *Implementation-defined behavior for Standard C* describes how the compiler handles the implementation-defined areas of Standard C.
- *Implementation-defined behavior for C89* describes how the compiler handles the implementation-defined areas of the C language standard C89.

---

## Other documentation

User documentation is available as hypertext PDFs and as a context-sensitive online help system in HTML format. You can access the documentation from the IAR

Information Center or from the **Help** menu in the IAR Embedded Workbench IDE. The online help system is also available via the F1 key.

## USER AND REFERENCE GUIDES

The complete set of IAR development tools is described in a series of guides. Information about:

- System requirements and information about how to install and register the IAR products are available in the *Installation and Licensing Quick Reference Guide* and the *Licensing Guide*.
- Using the IDE for project management and building, is available in the *IDE Project Management and Building Guide for Arm*.
- Using the IAR C-SPY® Debugger and C-RUN runtime error checking, is available in the *C-SPY® Debugging Guide for Arm*.
- Programming for the IAR C/C++ Compiler for Arm and linking, is available in the *IAR C/C++ Development Guide for Arm*.
- Programming for the IAR Assembler for Arm, is available in the *IAR Assembler User Guide for Arm*.
- Performing a static analysis using C-STAT and the required checks, is available in the *C-STAT® Static Analysis Guide*.
- Using I-jet, refer to the *IAR Debug Probes User Guide for I-jet®, I-jet Trace, and I-scope*.
- Using IAR J-Link and IAR J-Trace, refer to the *J-Link/J-Trace User Guide*.
- Porting application code and projects created with a previous version of the IAR Embedded Workbench for Arm, is available in the *IAR Embedded Workbench® Migration Guide*.

**Note:** Additional documentation might be available depending on your product installation.

## THE ONLINE HELP SYSTEM

The context-sensitive online help contains information about:

- IDE project management and building
- Debugging using the IAR C-SPY® Debugger
- The IAR C/C++ Compiler and Linker
- The IAR Assembler
- C-STAT

## FURTHER READING

These books might be of interest to you when using the IAR development tools:

- Seal, David, and David Jagger. *ARM Architecture Reference Manual*. Addison-Wesley.
- Barr, Michael, and Andy Oram, ed. *Programming Embedded Systems in C and C++*. O'Reilly & Associates.
- Furber, Steve. *ARM System-on-Chip Architecture*. Addison-Wesley.
- Harbison, Samuel P. and Guy L. Steele (contributor). *C: A Reference Manual*. Prentice Hall.
- Labrosse, Jean J. *Embedded Systems Building Blocks: Complete and Ready-To-Use Modules in C*. R&D Books.
- Mann, Bernhard. *C für Mikrocontroller*. Franzis-Verlag. [Written in German.]
- Meyers, Scott. *Effective C++*. Addison-Wesley.
- Meyers, Scott. *More Effective C++*. Addison-Wesley.
- Meyers, Scott. *Effective STL*. Addison-Wesley.
- Sloss, Andrew N. et al, *ARM System Developer's Guide: Designing and Optimizing System Software*. Morgan Kaufmann.
- Sutter, Herb. *Exceptional C++: 47 Engineering Puzzles, Programming Problems, and Solutions*. Addison-Wesley.

The web site **isocpp.org** also has a list of recommended books about C++ programming.

## WEB SITES

Recommended web sites:

- The chip manufacturer's web site.
- The Arm Limited web site, **www.arm.com**, that contains information and news about the Arm cores.
- The IAR web site, **www.iar.com**, that holds application notes and other product information.
- The web site of the C standardization working group, **www.open-std.org/jtc1/sc22/wg14**.
- The web site of the C++ Standards Committee, **www.open-std.org/jtc1/sc22/wg21**.
- The C++ programming language web site, **isocpp.org**. This web site also has a list of recommended books about C++ programming.
- The C and C++ reference web site, **en.cppreference.com**.

---

## Document conventions

When, in the IAR documentation, we refer to the programming language C, the text also applies to C++, unless otherwise stated.

When referring to a directory in your product installation, for example `arm\doc`, the full path to the location is assumed, for example `c:\Program Files\IAR Systems\Embedded Workbench N.n\arm\doc`, where the initial digit of the version number reflects the initial digit of the version number of the IAR Embedded Workbench shared components.

### TYPOGRAPHIC CONVENTIONS

The IAR documentation set uses the following typographic conventions:

Style	Used for
<code>computer</code>	<ul style="list-style-type: none"> <li>Source code examples and file paths.</li> <li>Text on the command line.</li> <li>Binary, hexadecimal, and octal numbers.</li> </ul>
<i>parameter</i>	A placeholder for an actual value used as a parameter, for example <i>filename.h</i> where <i>filename</i> represents the name of the file.
[option]	An optional part of a linker or stack usage control directive, where [ and ] are not part of the actual directive, but any [, ], {, or } are part of the directive syntax.
{option}	A mandatory part of a linker or stack usage control directive, where { and } are not part of the actual directive, but any [, ], {, or } are part of the directive syntax.
[option]	An optional part of a command line option, pragma directive, or library filename.
[a b c]	An optional part of a command line option, pragma directive, or library filename with alternatives.
{a b c}	A mandatory part of a command line option, pragma directive, or library filename with alternatives.
<b>bold</b>	Names of menus, menu commands, buttons, and dialog boxes that appear on the screen.
<i>italic</i>	<ul style="list-style-type: none"> <li>A cross-reference within this guide or to another guide.</li> <li>Emphasis.</li> </ul>
...	An ellipsis indicates that the previous item can be repeated an arbitrary number of times.

Table 1: Typographic conventions used in this guide







Style	Used for
	Identifies instructions specific to the IAR Embedded Workbench® IDE interface.
	Identifies instructions specific to the command line interface.
	Identifies helpful tips and programming hints.
	Identifies warnings.

Table 1: Typographic conventions used in this guide (Continued)

## NAMING CONVENTIONS

The following naming conventions are used for the products and tools from IAR, when referred to in the documentation:

Brand name	Generic term
IAR Embedded Workbench® for Arm	IAR Embedded Workbench®
IAR Embedded Workbench® IDE for Arm	the IDE
IAR C-SPY® Debugger for Arm	C-SPY, the debugger
IAR C-SPY® Simulator	the simulator
IAR C/C++ Compiler™ for Arm	the compiler
IAR Assembler™ for Arm	the assembler
IAR ILINK Linker™	ILINK, the linker
IAR DLIB Runtime Environment™	the DLIB runtime environment

Table 2: Naming conventions used in this guide

**In 32-bit mode** refers to using IAR Embedded Workbench for Arm configured for the instruction sets T32/T and A32.

**In 64-bit mode** refers to using IAR Embedded Workbench for Arm configured for the instruction set A64.


For more information, see *Execution modes*, page 58.



# Part I. Using the build tools

This part of the *IAR C/C++ Development Guide for Arm* includes these chapters:

- Introduction to the IAR build tools
- Developing embedded applications
- Data storage
- Functions
- Linking using ILINK
- Linking your application
- The DLIB runtime environment
- Assembler language interface
- Using C
- Using C++
- Application-related considerations
- Efficient coding for embedded applications
- Shared objects (32-bit mode only)

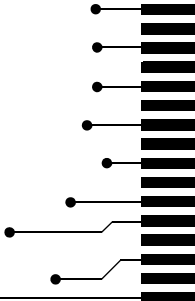



# Introduction to the IAR build tools

- The IAR build tools—an overview
- IAR language overview
- Device support
- Execution modes
- Special support for embedded systems

---

## The IAR build tools—an overview

In the IAR product installation you can find a set of tools, code examples, and user documentation, all suitable for developing software for Arm-based embedded applications. The tools allow you to develop your application in C, C++, or in assembler language.



IAR Embedded Workbench® is a powerful Integrated Development Environment (IDE) that allows you to develop and manage complete embedded application projects. It provides an easy-to-learn and highly efficient development environment with maximum code inheritance capabilities, and comprehensive and specific target support. IAR Embedded Workbench promotes a useful working methodology, and therefore a significant reduction in development time.

For information about the IDE, see the *IDE Project Management and Building Guide for Arm*.



The compiler, assembler, and linker can also be run from a command line environment, if you want to use them as external tools in an already established project environment.

### THE IAR C/C++ COMPILER

The IAR C/C++ Compiler for Arm is a state-of-the-art compiler that offers the standard features of the C and C++ languages, plus extensions designed to take advantage of the Arm-specific facilities.

## THE IAR ASSEMBLER

The IAR Assembler for Arm is a powerful relocating macro assembler with a versatile set of directives and expression operators. The assembler features a built-in C language preprocessor, and supports conditional assembly.

The IAR Assembler for Arm uses the same mnemonics and operand syntax as the Arm Limited Arm Assembler, which simplifies the migration of existing code. For more information, see the *IAR Assembler User Guide for Arm*.

## THE IAR ILINK LINKER

The IAR ILINK Linker for Arm is a powerful, flexible software tool for use in the development of embedded controller applications. It is equally well suited for linking small, single-file, absolute assembler programs as it is for linking large, relocatable input, multi-module, C/C++, or mixed C/C++ and assembler programs.

## SPECIFIC ELF TOOLS

ILINK both uses and produces industry-standard ELF and DWARF as object format, additional IAR utilities that handle these formats are provided:

- The IAR Archive Tool—`iarchive`—creates and manipulates a library (archive) of several ELF object files
- The IAR ELF Tool—`ielftool`—performs various transformations on an ELF executable image (such as, fill, checksum, format conversion etc)
- The IAR ELF Dumper for Arm—`ielfdumparm`—creates a text representation of the contents of an ELF relocatable or executable image
- The IAR ELF Object Tool—`iobjmanip`—is used for performing low-level manipulation of ELF object files
- The IAR Absolute Symbol Exporter—`isymexport`—exports absolute symbols from a ROM image file, so that they can be used when linking an add-on application.

**Note:** These ELF utilities are well-suited for object files produced by the tools from IAR. Therefore, we recommend using them instead of the GNU binary utilities.

## EXTERNAL TOOLS

For information about how to extend the tool chain in the IDE, see the *IDE Project Management and Building Guide for Arm*.

---

## IAR language overview

The IAR C/C++ Compiler for Arm supports:

- C, the most widely used high-level programming language in the embedded systems industry. You can build freestanding applications that follow these standards:
  - Standard C—also known as C18. Hereafter, this standard is referred to as *Standard C* in this guide.
  - C89—also known as C94, C90, and ANSI C.
- Standard C++—also known as C++17. A well-established object-oriented programming language with a full-featured library well suited for modular programming. The IAR implementation of Standard C++ can be used with different levels of support for exceptions and runtime type information (RTTI), and offers a choice of two different standard libraries:
  - DLIB, which is a C++14 library, and which comes in two configurations: Normal and Full. The Normal configuration is smaller and offers slightly less functionality.
  - Libc++, which is a C++17 library. It has only one configuration, corresponding to the Full configuration of the DLIB library.

Each of the supported languages can be used in *strict* or *relaxed* mode, or relaxed with IAR extensions enabled. The strict mode adheres to the standard, whereas the relaxed mode allows some common deviations from the standard. Both the strict and the relaxed mode might contain support for features in future versions of the C/C++ standards.

For more information about C, see the chapter *Using C*.

For more information about C++, see the chapter *Using C++*.

For information about how the compiler handles the implementation-defined areas of the languages, see the chapters *Implementation-defined behavior for Standard C* and *Implementation-defined behavior for Standard C++*.

It is also possible to implement parts of the application, or the whole application, in assembler language. See the *IAR Assembler User Guide for Arm*.

---

## Device support

To get a smooth start with your product development, the IAR product installation comes with a wide range of device-specific support.

**Note:** The object code that the compiler generates is not always binary compatible between the cores. Therefore it is crucial to specify a processor. The default core is Cortex-M3.

## 32-BIT ARM DEVICES

Most of the cores and devices that belong to the Armv4, Armv5, Armv6, Armv7 and Armv8 generations are supported (including Armv8.1-M).

### Arm architecture profiles

From Armv7, the Arm architectures consist of three *architectural profiles*:

- The A profile, the *application* profile, implemented by the Cortex-A series, compatible with AArch32.
- The R profile, the *real-time* profile, implemented by the Cortex-R series.
- The M profile, the *microcontroller* profile, implemented by most cores in the Cortex-M series.

### 32-bit Arm properties

- The 32-bit Arm devices (except the M profile) have CPU modes: User mode, Interrupt (FIQ, IRQ) mode, Supervisor mode, etc.
- The 32-bit Arm devices have these instruction sets (not all cores have all instruction sets):
  - Thumb (T), 16-bit wide instructions. Used for compact code.
  - Arm (A32), 32-bit wide instructions. Used for faster code.
  - Thumb-2 (T32), extended 32-bit wide instructions to the Thumb instruction set.
- Addresses are always 32-bit.
- The register set consists of thirteen generic 32-bit registers.
- Some 32-bit Arm devices can have coprocessors, like VFP (vector floating point) and SIMD (serial instructions multiple data). The coprocessors have sixteen 64-bit registers or thirty-two 128-bit registers.
- The 32-bit Arm devices use 32-bit ELF as object and image format.

## 64-BIT ARM DEVICES

- The 64-bit Arm devices based on architectures up to Armv8.4-A are supported, as well as Armv8-R AArch64.
- The Armv8-A/R generation defines two execution states: AArch32 and AArch64. (Not all cores support both execution states.)

### The AArch32 execution state

The 32-bit AArch32 execution state is compatible with the Armv7-A architecture—it has the same CPU modes, instruction sets, register set, etc—and it has VFP and



advanced SIMD. In this execution state, the CPU always runs **in 32-bit mode** (see *Execution modes*, page 58).

### The AArch64 execution state

- AArch64 supports four levels of privilege:
  - EL0, exception level 0, user mode.
  - EL1, exception level 1, OS mode.
  - EL2, exception level 2, hypervisor mode. Optional.
  - EL3, exception level 3, secure monitor mode. Optional.

The CPU can traverse from a higher EL to a lower one, and during that traversal it can change from the AArch64 into the AArch32 execution state.

- In the AArch64 state, the CPU runs **in 64-bit mode**. See *Execution modes*, page 58.
- AArch64 supports one instruction set, A64, that has 32-bit instructions.
- Addresses are always 64-bit.
- The register set has thirty-one 64-bit wide generic registers.
- A VFP and NEON module is always present. That module have 32 registers that are 128-bits wide.
- There are three defined data models for AArch64:
  - ILP32. It has 32-bit `long` and pointer types, and 32-bit `wchar_t` type. It uses 32-bit ELF as object and image format.
  - LP64. It has 64-bit `long` and pointer types, and 32-bit `wchar_t` type. It uses 64-bit ELF as object and image format.
  - LLP64. It has 32-bit `long` type, 64-bit pointer type, and 16-bit `wchar_t` type. IAR Embedded Workbench for Arm does **not** support this data model.

**Note:** Code generated for AArch64 using the ILP32 data model cannot be linked with code generated using the LP64 data model. Neither can code generated for AArch32 and AArch64 be linked together.

### PRECONFIGURED SUPPORT FILES

The IAR product installation contains preconfigured files for supporting different devices. If you need additional files for device support, they can be created using one of the provided ones as a template.

#### Header files for I/O

Standard peripheral units are defined in device-specific I/O header files with the filename extension `.h`. The product package supplies I/O files for all devices that are available at the time of the product release. You can find these files in the

`arm\inc\<vendor>` directory. Make sure to include the appropriate include file in your application source files. If you need additional I/O header files, they can be created using one of the provided ones as a template. For detailed information about the header file format, see `EWARM_HeaderFormat.pdf` located in the `arm\doc` directory.

### Linker configuration files

The `arm\config` directory contains ready-made linker configuration files for all supported devices. The files have the filename extension `icf` and contain the information required by the linker. For more information about the linker configuration file, see *Placing code and data—the linker configuration file*, page 101, and for reference information, the chapter *The linker configuration file*.

### Device description files

The debugger handles several of the device-specific requirements, such as definitions of available memory areas, peripheral registers and groups of these, by using device description files. These files are located in the `arm\config` directory and they have the filename extension `ddf`. The peripheral registers and groups of these can be defined in separate files (filename extension `sfr`), which in that case are included in the `ddf` file. For more information about these files, see the *C-SPY® Debugging Guide for Arm* and `EWARM_DDFFORMAT.pdf` located in the `arm\doc` directory.

## EXAMPLES FOR GETTING STARTED

Example applications are provided with IAR Embedded Workbench. You can use these examples to get started using the development tools from IAR. You can also use the examples as a starting point for your application project.

The examples are ready to be used as is. They are supplied with ready-made workspace files, together with source code files and all other related files. For information about how to run an example project, see the *IDE Project Management and Building Guide for Arm*.

---

## Execution modes

IAR Embedded Workbench for Arm supports the 32-bit and 64-bit Arm architectures by means of execution modes.

**In 32-bit mode** refers to using IAR Embedded Workbench for Arm configured to generate and debug code for the instruction sets T32/T and A32, either on an Armv4/5/6/7 core or in the AArch32 execution state on an Arm v8-A core. In 32-bit mode you can use both the A32 and T32/T instruction sets and switch between them using jump instructions.

**In 64-bit mode** refers to using IAR Embedded Workbench for Arm configured to generate and debug code for the instruction set A64 in the AArch64 execution state on an Arm v8-A core. Code in 64-bit mode can trap into code in 32-bit mode, and that code can return back. However, the IAR translator tools do not support this switch being used in a single linked image. Switching between A32/T32/T code and A64 code must be performed by using several images. For example, an OS using 64-bit mode can start applications in either 64-bit or in 32-bit mode.

The AArch32 execution state is compatible with the Arm v7 architecture. The AArch32 execution state is emulated inside the AArch64 execution state.

---

## Special support for embedded systems

This section briefly describes the extensions provided by the compiler to support specific features of the various Arm cores and devices.

### EXTENDED KEYWORDS

The compiler provides a set of keywords that can be used for configuring how the code is generated. For example, there are keywords for controlling how to access and store data objects, as well as for controlling how a function should work internally and how it should be called/returned.

By default, language extensions are enabled in the IDE.

The compiler command line option `-e` makes the extended keywords available, and reserves them so that they cannot be used as variable names. See `-e`, page 326 for additional information.

For more information, see the chapter *Extended keywords*. See also *Data storage and Functions*.

### PRAGMA DIRECTIVES

The pragma directives control the behavior of the compiler, for example how it allocates memory, whether it allows extended keywords, and whether it issues warning messages.

The pragma directives are always enabled in the compiler. They are consistent with standard C, and are useful when you want to make sure that the source code is portable.

For more information about the pragma directives, see the chapter *Pragma directives*.

### PREDEFINED SYMBOLS

With the predefined preprocessor symbols, you can inspect your compile-time environment, for example time of compilation or the build number of the compiler.

For more information about the predefined symbols, see the chapter *The preprocessor*.

## **ACCESSING LOW-LEVEL FEATURES**

For hardware-related parts of your application, accessing low-level features is essential. The compiler supports several ways of doing this: intrinsic functions, mixing C and assembler modules, and inline assembler. For information about the different methods, see *Mixing C and assembler*, page 175.

# Developing embedded applications

- Developing embedded software using IAR build tools
- The build process—an overview
- Application execution—an overview
- Building applications—an overview
- Basic project configuration

---

## Developing embedded software using IAR build tools

Typically, embedded software written for a dedicated microcontroller is designed as an endless loop waiting for some external events to happen. The software is located in ROM and executes on reset. You must consider several hardware and software factors when you write this kind of software. To assist you, compiler options, extended keywords, pragma directives, etc., are included.

### MAPPING OF MEMORY

Embedded systems typically contain various types of memory, such as on-chip RAM, external DRAM or SRAM, ROM, EEPROM, or flash memory.

As an embedded software developer, you must understand the features of the different types of memory. For example, on-chip RAM is often faster than other types of memories, and variables that are accessed often would in time-critical applications benefit from being placed here. Conversely, some configuration data might be seldom accessed but must maintain its value after power off, so it should be saved in EEPROM or flash memory.

For efficient memory usage, the compiler provides several mechanisms for controlling placement of functions and data objects in memory. For more information, see *Controlling data and function placement in memory*, page 252.

The linker places sections of code and data in memory according to the directives you specify in the linker configuration file, see *Placing code and data—the linker configuration file*, page 101.

## COMMUNICATION WITH PERIPHERAL UNITS

If external devices are connected to the microcontroller, you might need to initialize and control the signaling interface, for example by using chip select pins, and detect and handle external interrupt signals. Typically, this must be initialized and controlled at runtime. The normal way to do this is to use special function registers (SFR). These are typically available at dedicated addresses, containing bits that control the chip configuration.

Standard peripheral units are defined in device-specific I/O header files with the filename extension `.h`. See *Device support*, page 55. For an example, see *Accessing special function registers*, page 265.

## EVENT HANDLING

In embedded systems, using *interrupts* is a method for handling external events immediately, for example, detecting that a button was pressed. In general, when an interrupt occurs in the code, the core immediately stops executing the code it runs, and starts executing an interrupt routine instead.

The compiler provides various primitives for managing hardware and software interrupts, which means that you can write your interrupt routines in C, see *Interrupt functions for Cortex-M devices*, page 82 and *Interrupt functions for Arm7/9/11, Cortex-A, and Cortex-R devices*, page 83. See also *Exception functions for 64-bit mode*, page 88.

## SYSTEM STARTUP

In all embedded systems, system startup code is executed to initialize the system—both the hardware and the software system—before the `main` function of the application is called. The CPU imposes this by starting execution from a fixed memory address.

As an embedded software developer, you must ensure that the startup code is located at the dedicated memory addresses, or can be accessed using a pointer from the vector table. This means that startup code and the initial vector table must be placed in non-volatile memory, such as ROM, EPROM, or flash.

A C/C++ application further needs to initialize all global variables. This initialization is handled by the linker in conjunction with the system startup code. For more information, see *Application execution—an overview*, page 66.

## REAL-TIME OPERATING SYSTEMS

In many cases, the embedded application is the only software running in the system. However, using an RTOS has some advantages.

For example, the timing of high-priority tasks is not affected by other parts of the program which are executed in lower priority tasks. This typically makes a program more deterministic and can reduce power consumption by using the CPU efficiently and putting the CPU in a lower-power state when idle.

Using an RTOS can make your program easier to read and maintain, and in many cases smaller as well. Application code can be cleanly separated into tasks that are independent of each other. This makes teamwork easier, as the development work can be easily split into separate tasks which are handled by one developer or a group of developers.

Finally, using an RTOS reduces the hardware dependence and creates a clean interface to the application, making it easier to port the program to different target hardware.

See also *Managing a multithreaded environment*, page 169.

## INTEROPERABILITY WITH OTHER BUILD TOOLS

The IAR compiler and linker provide support for AEABI, the Embedded Application Binary Interface for Arm. For more information about this interface specification, see the [www.arm.com](http://www.arm.com) web site.

The advantage of this interface is the interoperability between vendors supporting it—an application can be built up of libraries of object files produced by different vendors and linked with a linker from any vendor, as long as they adhere to the AEABI standard.

AEABI specifies full compatibility for C and C++ object code, and for the C library. The AEABI does not include specifications for the C++ library.

For more information about the AEABI support in the IAR build tools, see *AEABI compliance*, page 238.

The IAR build tools for Arm with version numbers from 8.xx and up are not fully compatible with earlier versions of the product. For more information, see the *IAR Embedded Workbench® Migration Guide for ARM*.

For more information, see *Linker optimizations*, page 129.

---

## The build process—an overview

This section gives an overview of the build process—how the various build tools (compiler, assembler, and linker) fit together, going from source code to an executable image.


To become familiar with the process in practice, you should go through the tutorials available from the IAR Information Center.

## THE TRANSLATION PROCESS

There are two tools in the IDE that translate application source files to intermediary object files—the IAR C/C++ Compiler and the IAR Assembler. Both produce relocatable object files in the industry-standard format ELF, including the DWARF format for debug information.

**Note:** The compiler can also be used for translating C source code into assembler source code. If required, you can modify the assembler source code which can then be assembled into object code. For more information about the IAR Assembler, see the *IAR Assembler User Guide for Arm*.

This illustration shows the translation process:

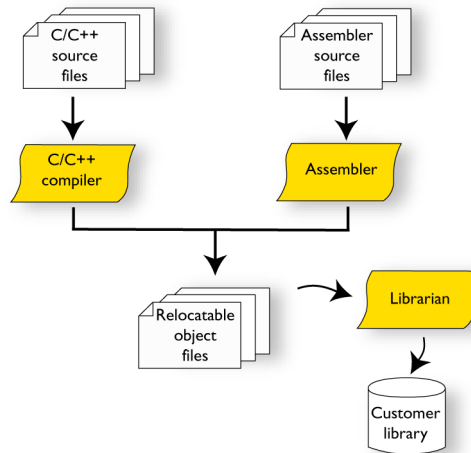

After the translation, you can choose to pack any number of modules into an archive, or in other words, a library. The important reason you should use libraries is that each module in a library is conditionally linked in the application, or in other words, is only included in the application if the module is used directly or indirectly by a module supplied as an object file. Optionally, you can create a library, then use the IAR utility `iarchive`.

## THE LINKING PROCESS

The relocatable modules in object files and libraries, produced by the IAR compiler and assembler cannot be executed as is. To become an executable application, they must be *linked*.




**Note:** Modules produced by a toolset from another vendor can be included in the build as well. Be aware that this might also require a compiler utility library from the same vendor.

The IAR ILINK Linker (`ilinkarm.exe`) is used for building the final application. Normally, the linker requires the following information as input:

- Several object files and possibly certain libraries
- A program start label (set by default)
- The linker configuration file that describes placement of code and data in the memory of the target system

This illustration shows the linking process:

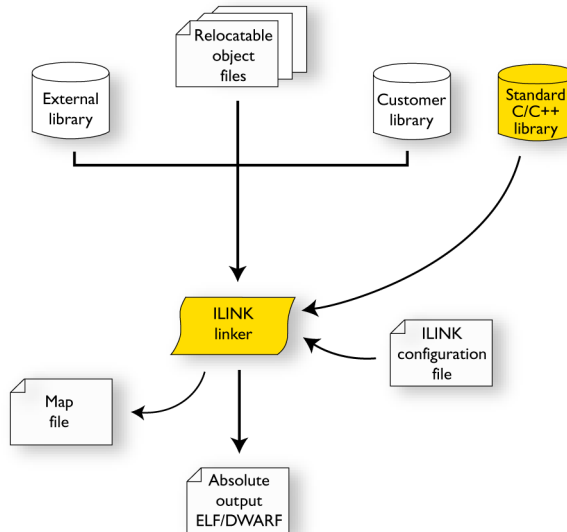

**Note:** The Standard C/C++ library contains support routines for the compiler, and the implementation of the C/C++ standard library functions.

While linking, the linker might produce error messages and logging messages on `stdout` and `stderr`. The log messages are useful for understanding why an application was linked the way it was, for example, why a module was included or a section removed.


For more information about the linking process, see *The linking process in detail*, page 99.

## AFTER LINKING

The IAR ILINK Linker produces an absolute object file in ELF format that contains the executable image. After linking, the produced absolute executable image can be used for:

- Loading into the IAR C-SPY Debugger or any other compatible external debugger that reads ELF and DWARF.
- Programming to a flash/PROM using a flash/PROM programmer. Before this is possible, the actual bytes in the image must be converted into the standard Motorola 32-bit S-record format or the Intel Hex-32 format. For this, use `ielftool`, see *The IAR ELF Tool—ielftool*, page 613.

This illustration shows the possible uses of the absolute output ELF/DWARF file:

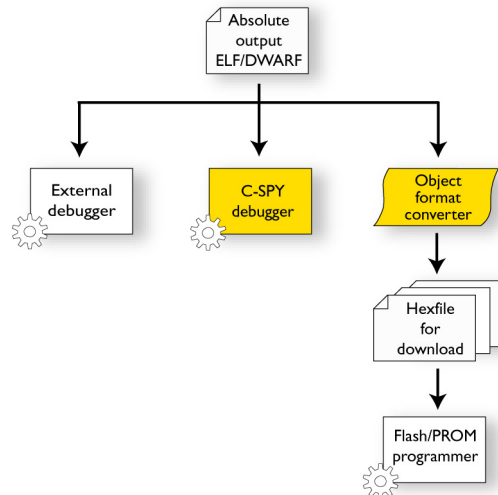


---

## Application execution—an overview

This section gives an overview of the execution of an embedded application divided into three phases, the:

- Initialization phase
- Execution phase
- Termination phase.

## THE INITIALIZATION PHASE


Initialization is executed when an application is started (the CPU is reset) but before the `main` function is entered. For simplicity, the initialization phase can be divided into:

- **Hardware initialization**, which as a minimum, generally initializes the stack pointer. The hardware initialization is typically performed in the system startup code `cstartup.s` and if required, by an extra low-level routine that you provide. It might include resetting/restarting the rest of the hardware, setting up the CPU, etc, in preparation for the software C/C++ system initialization.
- **Software C/C++ system initialization**  
Typically, this includes assuring that every global (statically linked) C/C++ symbol receives its proper initialization value before the `main` function is called.
- **Application initialization**  
This depends entirely on your application. It can include setting up an RTOS kernel and starting initial tasks for an RTOS-driven application. For a bare-bone application, it can include setting up various interrupts, initializing communication, initializing devices, etc.


For a ROM/flash-based system, constants and functions are already placed in ROM. The linker has already divided the available RAM into different areas for variables, stack, heap, etc. All symbols placed in RAM must be initialized before the `main` function is called.

The following sequence of illustrations gives a simplified overview of the different stages of the initialization.

- 1 When an application is started, the system startup code first performs hardware initialization, such as initialization of the stack pointer to point at the end of the predefined stack area:

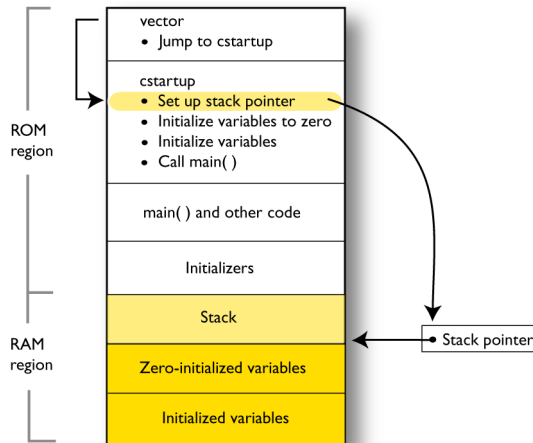


- Then, memories that should be zero-initialized are cleared, in other words, filled with zeros:

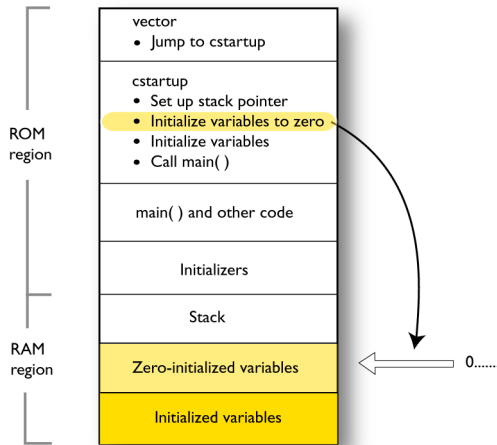


Typically, this is data referred to as *zero-initialized data*—variables declared as, for example, `int i = 0;`

- For *initialized data*, data declared, for example, like `int i = 6;` the initializers are copied from ROM to RAM

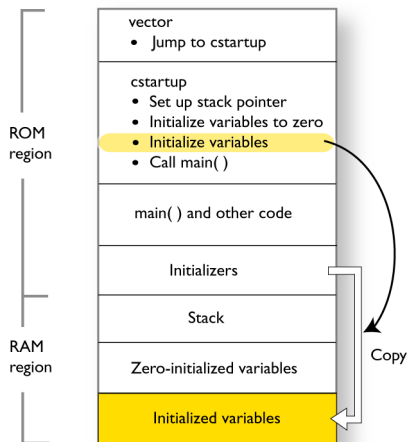

Then, dynamically initialized static objects are constructed, such as C++ objects.

**4** Finally, the `main` function is called:

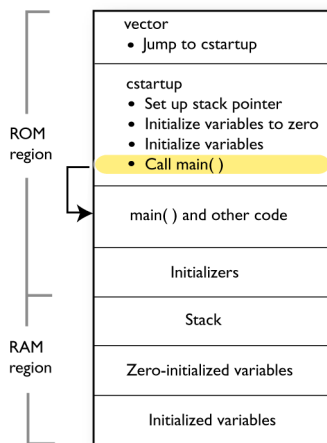

For more information about each stage, see *System startup and termination*, page 153.

For more information about data initialization, see *Initialization at system startup*, page 104.

## THE EXECUTION PHASE

The software of an embedded application is typically implemented as a loop, which is either interrupt-driven, or uses polling for controlling external interaction or internal events. For an interrupt-driven system, the interrupts are typically initialized at the beginning of the `main` function.

In a system with real-time behavior and where responsiveness is critical, a multi-task system might be required. This means that your application software should be complemented with a real-time operating system (RTOS). In this case, the RTOS and the different tasks must also be initialized at the beginning of the `main` function.

## THE TERMINATION PHASE

Typically, the execution of an embedded application should never end. If it does, you must define a proper end behavior.

To terminate an application in a controlled way, either call one of the Standard C library functions `exit`, `_Exit`, `quick_exit`, or `abort`, or return from `main`. If you return

from `main`, the `exit` function is executed, which means that C++ destructors for static and global variables are called (C++ only) and all open files are closed.

Of course, in case of incorrect program logic, the application might terminate in an uncontrolled and abnormal way—a system crash.

For more information about this, see *System termination*, page 156.

---

## Building applications—an overview

In the command line interface, the following line compiles the source file `myfile.c` into the object file `myfile.o` using the default settings:

```
iccarm myfile.c
```

You must also specify some critical options, see *Basic project configuration*, page 71.

On the command line, the following line can be used for starting the linker:

```
ilinkarm myfile.o myfile2.o -o a.out --config my_configfile.icf
```

In this example, `myfile.o` and `myfile2.o` are object files, and `my_configfile.icf` is the linker configuration file. The option `-o` specifies the name of the output file.

**Note:** By default, the label where the application starts is `__iar_program_start`. You can use the `--entry` command line option to change this.



When building a project, the IAR Embedded Workbench IDE can produce extensive build information in the **Build** messages window. This information can be useful, for example, as a base for producing batch files for building on the command line. You can copy the information and paste it in a text file. To activate extensive build information, right-click in the **Build** messages window, and select **All** on the context menu.

---

## Basic project configuration

This section gives an overview of the basic settings needed to generate the best code for the Arm device you are using. You can specify the options either from the command line interface or in the IDE. On the command line, you must specify each option separately, but if you use the IDE, many options will be set automatically, based on your settings of some of the fundamental options.

You need to make settings for:

- Processor configuration, that is processor variant, CPU mode, VFP and floating-point arithmetic, and byte order
- Optimization settings

- Runtime environment, see *Setting up the runtime environment*, page 135
- Customizing the ILink configuration, see the chapter *Linking your application*.

In addition to these settings, you can use many other options and settings to fine-tune the result even further. For information about how to set options and for a list of all available options, see the chapters *Compiler options*, *Linker options*, and the *IDE Project Management and Building Guide for Arm*, respectively.

## 32-BIT MODE PROCESSOR CONFIGURATION

To make the compiler generate optimum code, you should configure it for the Arm core you are using.

### Processor variant

The IAR C/C++ Compiler for Arm supports most 32-bit Arm cores and devices. All supported cores support Thumb instructions and 64-bit multiply instructions. The object code that the compiler generates is not always binary compatible between the cores, therefore it is crucial to specify a processor option to the compiler. The default core is Cortex-M3.



**Execution mode** should be **32-bit**. For information about setting the **Processor variant** option, see the *IDE Project Management and Building Guide for Arm*.



Use the `--cpu` option to specify the Arm core. For syntax information, see `--arm`, page 315 and `--thumb`, page 357.

### VFP and floating-point arithmetic

If you are using an Arm core that contains a Vector Floating Point (VFP) coprocessor, you can use the `--fpu` option to generate code that carries out floating-point operations utilizing the coprocessor, instead of using the software floating-point library routines.



See the *IDE Project Management and Building Guide for Arm*, for information about setting the **FPU** option in the IDE.



Use the `--fpu` option to specify the Arm core. For syntax information, see `--fpu`, page 330.

### Byte order

The compiler supports the big-endian and little-endian byte order. All user and library modules in your application must use the same byte order.



See the *IDE Project Management and Building Guide for Arm* for information about setting the **Endian mode** option in the IDE.





Use the `--endian` option to specify the byte order for your project. For syntax information, see `--endian`, page 327.

## 64-BIT MODE PROCESSOR CONFIGURATION

To make the compiler generate optimum code, you should configure it for the Arm core you are using.

### Processor variant

Select a 64-bit Armv8-A core that the IAR C/C++ Compiler for Arm supports. The object code that the compiler generates is not always binary compatible between the cores, therefore it is crucial to specify a processor option to the compiler.



**Execution mode** should be **64-bit**. For information about setting the **Processor variant** option, see the *IDE Project Management and Building Guide for Arm*.



Use the `--cpu` option to specify the Arm core. For syntax information, see `--cpu`, page 317, and `--aarch64`, page 313.

### Data model

Select a data model to use for the generated code, ILP32 or LP64.



For information about setting the **Data model** option, see the *IDE Project Management and Building Guide for Arm*.



Use the `--abi` option to specify the data model. For syntax information, see `--abi`, page 314.

## OPTIMIZATION FOR SPEED AND SIZE

The compiler's optimizer performs, among other things, dead-code elimination, constant propagation, inlining, common sub-expression elimination, static clustering, instruction scheduling, and precision reduction. It also performs loop optimizations, such as unrolling and induction variable elimination.

You can choose between several optimization levels, and for the highest level you can choose between different optimization goals—*size*, *speed*, or *balanced*. Most optimizations will make the application both smaller and faster. However, when this is not the case, the compiler uses the selected optimization goal to decide how to perform the optimization.

The optimization level and goal can be specified for the entire application, for individual files, and for individual functions. In addition, some individual optimizations, such as function inlining, can be disabled.

For information about compiler optimizations and for more information about efficient coding techniques, see the chapter *Efficient coding for embedded applications*.

# Data storage

- Introduction
- Storage of auto variables and parameters
- Dynamic memory on the heap

---

## Introduction

A 32-bit Arm core can address 4 Gbytes of continuous memory, ranging from 0x0 to 0xFFFF'FFFF. A 64-bit Arm core can address 16 Exbibytes of continuous memory, ranging from 0x0 to 0xFFFF'FFFF'FFFF'FFFF. Different types of physical memory can be placed in the memory range. A typical application will have both read-only memory (ROM) and read/write memory (RAM). In addition, some parts of the memory range contain processor control registers and peripheral units.

### DIFFERENT WAYS TO STORE DATA

In a typical application, data can be stored in memory in three different ways:

- *Auto variables*

All variables that are local to a function, except those declared static, are stored either in registers or on the stack. These variables can be used as long as the function executes. When the function returns to its caller, the memory space is no longer valid. For more information, see *Storage of auto variables and parameters*, page 76.

- *Global variables, module-static variables, and local variables declared static*

In this case, the memory is allocated once and for all. The word *static* in this context means that the amount of memory allocated for this kind of variables does not change while the application is running. The Arm core has one single address space and the compiler supports full memory addressing.

- *Dynamically allocated data*

An application can allocate data on the *heap*, where the data remains valid until it is explicitly released back to the system by the application. This type of memory is useful when the number of objects is not known until the application executes.

**Note:** There are potential risks connected with using dynamically allocated data in systems with a limited amount of memory, or systems that are expected to run for a long time. For more information, see *Dynamic memory on the heap*, page 77.

---

## Storage of auto variables and parameters

Variables that are defined inside a function—and not declared static—are named auto variables by the C standard. A few of these variables are placed in processor registers, while the rest are placed on the stack. From a semantic point of view, this is equivalent. The main differences are that accessing registers is faster, and that less memory is required compared to when variables are located on the stack.

Auto variables can only live as long as the function executes—when the function returns, the memory allocated on the stack is released.

### THE STACK

The stack can contain:

- Local variables and parameters not stored in registers
- Temporary results of expressions
- The return value of a function (unless it is passed in registers)
- Processor state during interrupts
- Processor registers that should be restored before the function returns (callee-save registers).
- Canaries, used in stack-protected functions. See *Stack protection*, page 94.

The stack is a fixed block of memory, divided into two parts. The first part contains allocated memory used by the function that called the current function, and the function that called it, etc. The second part contains free memory that can be allocated. The borderline between the two areas is called the top of stack and is represented by the stack pointer, which is a dedicated processor register. Memory is allocated on the stack by moving the stack pointer.

A function should never refer to the memory in the area of the stack that contains free memory. The reason is that if an interrupt occurs, the called interrupt function can allocate, modify, and—of course—deallocate memory on the stack.

See also *Stack considerations*, page 224 and *Setting up stack memory*, page 120.

### Advantages

The main advantage of the stack is that functions in different parts of the program can use the same memory space to store their data. Unlike a heap, a stack will never become fragmented or suffer from memory leaks.

It is possible for a function to call itself either directly or indirectly—a recursive function—and each invocation can store its own data on the stack.

## Potential problems

The way the stack works makes it impossible to store data that is supposed to live after the function returns. The following function demonstrates a common programming mistake. It returns a pointer to the variable `x`, a variable that ceases to exist when the function returns.

```
int *MyFunction()
{
    int x;
    /* Do something here. */
    return &x; /* Incorrect */
}
```

Another problem is the risk of running out of stack space. This will happen when one function calls another, which in turn calls a third, etc., and the sum of the stack usage of each function is larger than the size of the stack. The risk is higher if large data objects are stored on the stack, or when recursive functions are used.

---

## Dynamic memory on the heap

Memory for objects allocated on the heap will live until the objects are explicitly released. This type of memory storage is useful for applications where the amount of data is not known until runtime.

In C, memory is allocated using the standard library function `malloc`, or one of the related functions `calloc` and `realloc`. The memory is released again using `free`.

In C++, a special keyword, `new`, allocates memory and runs constructors. Memory allocated with `new` must be released using the keyword `delete`.

For information about how to set up the size for heap memory, see *Setting up heap memory*, page 120.

### POTENTIAL PROBLEMS

Applications that use heap-allocated data objects must be carefully designed, as it is easy to end up in a situation where it is not possible to allocate objects on the heap.

The heap can become exhausted if your application uses too much memory. It can also become full if memory that no longer is in use was not released.

For each allocated memory block, a few bytes of data for administrative purposes is required. For applications that allocate a large number of small blocks, this administrative overhead can be substantial.

There is also the matter of fragmentation—this means a heap where small pieces of free memory are separated by memory used by allocated objects. It is not possible to allocate

a new object if no piece of free memory is large enough for the object, even though the sum of the sizes of the free memory exceeds the size of the object.

Unfortunately, fragmentation tends to increase as memory is allocated and released. For this reason, applications that are designed to run for a long time should try to avoid using memory allocated on the heap.

# Functions

- Function-related extensions
- 32-bit Arm and Thumb code
- 64-bit A64 code
- Execution in RAM
- Interrupt functions for Cortex-M devices
- Interrupt functions for Arm7/9/11, Cortex-A, and Cortex-R devices
- Exception functions for 64-bit mode
- Inlining functions
- Stack protection
- TrustZone interface

---

## Function-related extensions

In addition to supporting Standard C, the compiler provides several extensions for writing functions in C. Using these, you can:

- Generate code for the 32-bit CPU modes Arm and Thumb
- Generate code for the A64 instruction set
- Execute functions in RAM
- Write interrupt functions for the different devices
- Control function inlining
- Facilitate function optimization
- Access hardware features.
- Create interface functions for TrustZone

The compiler uses compiler options, extended keywords, pragma directives, and intrinsic functions to support this.

For more information about optimizations, see *Efficient coding for embedded applications*, page 249. For information about the available intrinsic functions for accessing hardware operations, see the chapter *Intrinsic functions*.

---

## 32-bit Arm and Thumb code

**In 32-bit mode**, the IAR C/C++ Compiler for Arm can generate code for either the 32-bit Arm, or the 16-bit Thumb or Thumb2 instruction set. Use the `--cpu_mode` option, alternatively the `--arm` or `--thumb` options, to specify which instruction set should be used for your project. For individual functions, it is possible to override the project setting using the extended keywords `__arm` and `__thumb`. You can freely mix Arm and Thumb code in the same application.

When performing function calls, the compiler always attempts to generate the most efficient assembler language instruction or instruction sequence available. As a result, 4 Gbytes of continuous memory in the range `0x0-0xFFFF'FFFF` can be used for placing code. There is a limit of 4 Mbytes per code module.

The size of all code pointers is 4 bytes. There are restrictions to implicit and explicit casts from code pointers to data pointers or integer types or vice versa. For further information about restrictions, see *Pointer types*, page 417.

In the chapter *Assembler language interface*, the generated code is studied in more detail in the description of calling C functions from assembler language and vice versa.

---

## 64-bit A64 code

**In 64-bit mode**, the IAR C/C++ Compiler for Arm can generate code for the A64 instruction set. Use the `--cpu_mode` option, alternatively the `--aarch64` or `--abi` options, to specify which instruction set should be used for your project.

When performing function calls, the compiler always attempts to generate the most efficient assembler language instruction or instruction sequence available. As a result, 16 Exbibytes of continuous memory in the range `0x0-0xFFFF'FFFF'FFFF'FFFF` can be used for placing code. There is a limit of 64 Mbytes per code module.

The size of code pointers is 4 or 8 bytes, depending on the data model. There are restrictions to implicit and explicit casts from code pointers to data pointers or integer types or vice versa. For further information about restrictions, see *Pointer types*, page 417.

In the chapter *Assembler language interface*, the generated code is studied in more detail in the description of calling C functions from assembler language and vice versa.



---

## Execution in RAM

The `__ramfunc` keyword makes a function execute in RAM. In other words it places the function in a section that has read/write attributes. The function is copied from ROM to RAM at system startup just like any initialized variable, see *System startup and termination*, page 153.

The keyword is specified before the return type:

```
__ramfunc void foo(void);
```

If a function declared `__ramfunc` tries to access ROM, the compiler will issue a warning.

If the whole memory area used for code and constants is disabled—for example, when the whole flash memory is being erased—only functions and data stored in RAM may be used. Interrupts must be disabled unless the interrupt vector and the interrupt service routines are also stored in RAM.

String literals and other constants can be avoided by using initialized variables. For example, the following lines:

```
__ramfunc void test()
{
    /* myc: initializer in ROM */
    const int myc[] = { 10, 20 };

    /* string literal in ROM */
    msg("Hello");
}
```

can be rewritten to:

```
__ramfunc void test()
{
    /* myc: initialized by cstartup */
    static int myc[] = { 10, 20 };

    /* hello: initialized by cstartup */
    static char hello[] = "Hello";

    msg(hello);
}
```

For more information, see *Initializing code—copying ROM to RAM*, page 123.

---

## Interrupt functions for Cortex-M devices

Cortex-M has a different interrupt mechanism than previous Arm architectures, which means the primitives provided by the compiler are also different.

### INTERRUPTS FOR CORTEX-M

On Cortex-M, an interrupt service routine enters and returns in the same way as a normal function, which means no special keywords are required. Therefore, the keywords `__irq`, `__fiq`, and `__nested` are not available when you compile for Cortex-M.

These exception function names are defined in `cstartup_M.c` and `cstartup_M.s`. They are referred to by the library exception vector code:

```
NMI_Handler
HardFault_Handler
MemManage_Handler
BusFault_Handler
UsageFault_Handler
SVC_Handler
DebugMon_Handler
PendSV_Handler
SysTick_Handler
```

The vector table is implemented as an array. It should always have the name `__vector_table`, because the C-SPY debugger looks for that symbol when determining where the vector table is located.

The predefined exception functions are defined as weak symbols. A weak symbol is only included by the linker as long as no duplicate symbol is found. If another symbol is defined with the same name, it will take precedence. Your application can therefore simply define its own exception function by just defining it using the correct name from the list above. If you need other interrupts or other exception handlers, you must make a copy of the `cstartup_M.c` or `cstartup_M.s` file and make the proper addition to the vector table.

The intrinsic functions `__get_CPSR` and `__set_CPSR` are not available when you compile for Cortex-M. Instead, if you need to get or set values of these or other registers, you can use inline assembler. For more information, see *Passing values between C and assembler objects*, page 267.

### INTERRUPTS FOR CORTEX-M WITH FPU

For a Cortex-M core with an FPU, the system register bit `FPCCR.ASPEN` must be set to 1 to enable automatic state preservation of floating point registers (`S0–S15` and `FPSCR`). This will make interrupt service routines enter and return in the same way as normal functions also when floating-point registers are used.

The floating-point context saving procedure (`FPCCR.ASPEN=0`) can be omitted when:

- only one application task, and no interrupt handler, is going to use the FPU, or
- no application task, and only one interrupt handler, is going to use the FPU.

An application running without an operating system is regarded as one single application task. All handlers are affected, including the `SVC_Handler`, so software interrupt functions (functions declared with the `__svc` keyword) are also affected.

---

## Interrupt functions for Arm7/9/11, Cortex-A, and Cortex-R devices

The IAR C/C++ Compiler for Arm provides the following primitives related to writing interrupt functions for Arm7/9/11, Cortex-A, and Cortex-R devices:

- The extended keywords: `__irq`, `__fiq`, `__nested`,
- The intrinsic functions: `__enable_interrupt`, `__disable_interrupt`, `__get_interrupt_state`, `__set_interrupt_state`

**Note:** Cortex-M has a different interrupt mechanism than other Arm devices, and for these devices a different set of primitives is available. For more information, see *Interrupt functions for Cortex-M devices*, page 82.

### INTERRUPT FUNCTIONS

In embedded systems, using interrupts is a method for handling external events immediately, for example, detecting that a button was pressed.

#### Interrupt service routines

In general, when an interrupt occurs in the code, the core immediately stops executing the code it runs, and starts executing an interrupt routine instead. It is important that the environment of the interrupted function is restored after the interrupt is handled—this includes the values of processor registers and the processor status register. This makes it possible to continue the execution of the original code after the code that handled the interrupt was executed.

The compiler supports interrupts, software interrupts, and fast interrupts. For each interrupt type, an interrupt routine can be written.

All interrupt functions must be compiled in Arm mode—if you are using Thumb mode, use the `__arm` extended keyword or the `#pragma type_attribute=__arm` directive to override the default behavior. This is not applicable for Cortex-M devices.

## Interrupt vectors and the interrupt vector table

Each interrupt routine is associated with a vector address/instruction in the exception vector table, which is specified in the Arm cores documentation. The interrupt vector is the address in the exception vector table. For the Arm cores, the exception vector table starts at address `0x0`.

By default, the vector table is populated with a *default interrupt handler* which loops indefinitely. For each interrupt source that has no explicit interrupt service routine, the default interrupt handler will be called. If you write your own service routine for a specific vector, that routine will override the default interrupt handler.

## Defining an interrupt function—an example

To define an interrupt function, the `__irq` or the `__fiq` keyword can be used. For example:

```
__irq __arm void IRQ_Handler(void)
{
    /* Do something */
}
```

For more information about the interrupt vector table, see the Arm cores documentation.

**Note:** An interrupt function must have the return type `void`, and it cannot specify any parameters.

## Interrupt and C++ member functions

Only `static` member functions can be interrupt functions. When a non-static member function is called, it must be applied to an object. When an interrupt occurs and the interrupt function is called, there is no object available to apply the member function to.

## INSTALLING EXCEPTION FUNCTIONS

All interrupt functions and software interrupt handlers must be installed in the vector table. This is done in assembler language in the system startup file `cstartup.s`.

The default implementation of the Arm exception vector table in the standard runtime library jumps to predefined functions that implement an infinite loop. Any exception that occurs for an event not handled by your application will therefore be caught in the infinite loop (B. ).

The predefined functions are defined as weak symbols. A weak symbol is only included by the linker as long as no duplicate symbol is found. If another symbol is defined with the same name, it will take precedence. Your application can therefore simply define its own exception function by just defining it using the correct name.

These exception function names are defined in `cstartup.s` and referred to by the library exception vector code:

```
Undefined_Handler
SVC_Handler
Prefetch_Handler
Abort_Handler
IRQ_Handler
FIQ_Handler
```

To implement your own exception handler, define a function using the appropriate exception function name from the list above.

For example, to add an interrupt function in C, it is sufficient to define an interrupt function named `IRQ_Handler`:

```
__irq __arm void IRQ_Handler()
{
}
```

An interrupt function must have C linkage, read more in *Calling convention*, page 189.

If you use C++, an interrupt function could look, for example, like this:

```
extern "C"
{
    __irq __arm void IRQ_Handler(void);
}
__irq __arm void IRQ_Handler(void)
{
}
```

No other changes are needed.

## INTERRUPTS AND FAST INTERRUPTS

The interrupt and fast interrupt functions are easy to handle as they do not accept parameters or have a return value. Use any of these keywords:

- To declare an interrupt function, use the `__irq` extended keyword or the `#pragma type_attribute=__irq` directive. For syntax information, see `__irq`, page 430 and `type_attribute`, page 467, respectively.
- To declare a fast interrupt function, use the `__fiq` extended keyword or the `#pragma type_attribute=__fiq` directive. For syntax information, see `__fiq`, page 430, and `type_attribute`, page 467, respectively.

**Note:** An interrupt function (`irq`) and a fast interrupt function (`fiq`) must have a return type of `void` and cannot have any parameters. A software interrupt function (`swi` or `svc`)

may have parameters and return values. By default, only four registers, R0–R3, can be used for parameters and only the registers R0–R1 can be used for return values.

## NESTED INTERRUPTS

Interrupts are automatically disabled by the Arm core prior to entering an interrupt handler. If an interrupt handler re-enables interrupts, calls functions, and another interrupt occurs, then the return address of the interrupted function—stored in LR—is overwritten when the second IRQ is taken. In addition, the contents of SPSR will be destroyed when the second interrupt occurs. The `__irq` keyword itself does not save and restore LR and SPSR. To make an interrupt handler perform the necessary steps needed when handling nested interrupts, the keyword `__nested` must be used in addition to `__irq`. The function prolog—function entrance sequence—that the compiler generates for nested interrupt handlers will switch from IRQ mode to system mode. Make sure that both the IRQ stack and system stack is set up. If you use the default `cstartup.s` file, both stacks are correctly set up.

Compiler-generated interrupt handlers that allow nested interrupts are supported for IRQ interrupts only. The FIQ interrupts are designed to be serviced quickly, which in most cases mean that the overhead of nested interrupts would be too high.

This example shows how to use nested interrupts with the Arm vectored interrupt controller (VIC):

```
__irq __nested __arm void interrupt_handler(void)
{
    void (*interrupt_task)();
    unsigned int vector;

    /* Get interrupt vector. */
    vector = VICVectAddr;

    interrupt_task = (void(*)()) vector;

    /* Allow other IRQ interrupts to be serviced. */
    __enable_interrupt();

    /* Execute the task associated with this interrupt. */

    (*interrupt_task)();
}
```

**Note:** The `__nested` keyword requires the processor mode to be in either User or System mode.

## SOFTWARE INTERRUPTS

Software interrupt functions are slightly more complex than other interrupt functions, in the way that they need a software interrupt handler (a dispatcher), are invoked (called) from running application software, and that they accept arguments and have return values. The mechanisms for calling a software interrupt function and how the software interrupt handler dispatches the call to the actual software interrupt function is described here.

### Calling a software interrupt function

To call a software interrupt function from your application source code, the assembler instruction `SVC #immed` is used, where `immed` is an integer value that is referred to as the software interrupt number—or `svc_number`—in this guide. The compiler provides an easy way to implicitly generate this instruction from C/C++ source code, by using the `__svc` keyword and the `#pragma svc_number` directive when declaring the function.

An `__svc` function can, for example, be declared like this:

```
#pragma svc_number=0x23
__svc int svc_function(int a, int b);
```

In this case, the assembler instruction `SVC 0x23` will be generated where the function is called.

Software interrupt functions follow the same calling convention regarding parameters and return values as an ordinary function, except for the stack usage, see *Calling convention*, page 189.

For more information, see `__svc`, page 438, and `svc_number`, page 467, respectively.

### The software interrupt handler and functions

The interrupt handler—for example `SVC_Handler`—works as a dispatcher for software interrupt functions. It is invoked from the interrupt vector and is responsible for retrieving the software interrupt number and then calling the proper software interrupt function. The `SVC_Handler` must be written in assembler as there is no way to retrieve the software interrupt number from C/C++ source code.

### The software interrupt functions

The software interrupt functions can be written in C or C++. Use the `__svc` keyword in a function definition to make the compiler generate a return sequence suited for a specific software interrupt function. The `#pragma svc_number` directive is not needed in the interrupt function definition.

For more information, see `__svc`, page 438.

### Setting up the software interrupt stack pointer

If software interrupts will be used in your application, then the software interrupt stack pointer (`SVC_STACK`) must be set up and some space must be allocated for the stack. The `SVC_STACK` pointer can be set up together with the other stacks in the `cstartup.s` file. As an example, see the set up of the interrupt stack pointer. Relevant space for the `SVC_STACK` pointer is set up in the linker configuration file, see *Setting up stack memory*, page 120.

### INTERRUPT OPERATIONS

An interrupt function is called when an external event occurs. Normally it is called immediately while another function is executing. When the interrupt function has finished executing, it returns to the original function. It is imperative that the environment of the interrupted function is restored—this includes the value of processor registers and the processor status register.

When an interrupt occurs, the following actions are performed:

- The operating mode is changed corresponding to the particular exception
- The address of the instruction following the exception entry instruction is saved in `R14` of the new mode
- The old value of the `CPSR` is saved in the `SPSR` of the new mode
- Interrupt requests are disabled by setting bit 7 of the `CPSR` and, if the exception is a fast interrupt, further fast interrupts are disabled by setting bit 6 of the `CPSR`
- The PC is forced to begin executing at the relevant vector address.

For example, if an interrupt for vector `0x18` occurs, the processor will start to execute code at address `0x18`. The memory area that is used as start location for interrupts is called the interrupt vector table. The content of the interrupt vector is normally a branch instruction jumping to the interrupt routine.

**Note:** If the interrupt function enables interrupts, the special processor registers needed to return from the interrupt routine must be assumed to be destroyed. For this reason they must be stored by the interrupt routine to be restored before it returns. This is handled automatically if the `__nested` keyword is used.

---

## Exception functions for 64-bit mode

The compiler provides the following primitives related to writing exception functions for the 64-bit mode:

- The extended keywords `__exception`, `__nested`, and `__svc`
- The intrinsic functions `__enable_interrupt` and `__disable_interrupt`



- The special function names `Synchronous_Handler_A64`, `Error_Handler_A64`, `IRQ_Handler_A64`, and `FIQ_Handler_A64`

## EXCEPTION FUNCTIONS

An exception function is used for handling external interrupt events or internal exceptions. When an exception occurs, the code executed in the core is stopped and code in an exception starts executing instead. It is important that the environment of the excepted code is restored after the exception has been handled—this includes the values of the processor registers, status registers, etc. The execution can then continue as if no exception took place.

`__exception` is a function type attribute that defines an exception function. It must have `void` as a return value, and cannot have parameters. All used registers are saved at entrance and restored at exit. It returns with an `ERET` instruction.

```
__exception void func(void)
{
    /* Do something */
}
```

## EXCEPTIONS AND C++ MEMBER FUNCTIONS

Only `static` member functions can be exception functions. When a non-static member function is called, it must be applied to an object. When an exception occurs and the exception function is called, there is no object available to apply the member function to.

## EXCEPTION VECTOR TABLE

The IAR C/C++ Compiler uses the same exception vector table for the three exception levels EL1, EL2, and EL3. The exception vector table starts at the linker-defined symbol `__eevector`. It has 16 vectors, each 128 bytes large.

The IAR C/C++ Compiler only defines the vectors for exceptions that do not change exception level and that use the `SP` for the current exception level (offsets `0x200`, `0x280`, `0x300`, and `0x380`). Those four defined vectors have the names `Synchronous_Handler_A64`, `Error_Handler_A64`, `IRQ_Handler_A64`, and `FIQ_Handler_A64`. They have a default implementation that can be overridden by defining an `__exception` function with one of those names. If the function is too large

to fit in a vector, the compiler will issue an error. The function cannot then be used directly as an exception function. Instead, you must:

- 1 Write an assembler module that starts with a global symbol, for example `ee`. The symbol should jump to the exception function.
- 2 Edit the linker configuration file. Replace the `place` at directive for the relevant exception function (for example `Synchronous_Handler_A64`) with `place at address synchronous_evector { symbol ee };`.

By default, the exception vector table is placed at address 2048. To place it at another address, use one of these methods:

- Use the linker option `--config_def` to set the linker configuration symbol `__Exception_table_address`, like this:  
`--config_def __Exception_table_address=4096`
- Edit the linker configuration file that the project uses

The exception table must be 2Kbyte-aligned.

## NESTED EXCEPTION FUNCTIONS

An exception function can be nested. This also saves the `ELR_EL1` system register at entrance. When the function exits, interrupts are disabled and all saved registers are restored.

Note that the `SPSR_EL1` system register is not saved automatically. It must be saved explicitly before interrupts are enabled, for the status flags to be preserved after the exception. Doing this explicitly allows other bits of `SPSR_EL1` to be manipulated.

An example:

```
#include <intrinsics.h>
__exception __nested void func(void)
{
    // All used registers + ELR_EL1 have been saved. SPSR_EL1
    // and ESR_EL1 can be saved/used.

    __enable_interrupt();

    // Do stuff

    __disable_interrupt();

    // The possibly changed SPSR_EL1 and ESR_EL1 can be restored.
    // At exit, interrupts will be disabled and then all used
    // registers are restored. Then ERET is executed.
}
```

## SUPERVISOR-DEFINED FUNCTIONS

A function defined using the function type attribute `__svc` can have return values and can take parameters. It preserves the same registers as a normal function call, and returns with an `ERET` instruction. An `SVC`-defined function handles synchronous exceptions.

```
__svc void func(void)
{
    /* Do something */
}
```

See below for an example.

### Supervisor call

`SVC` is an A64 instruction that makes a supervisor call, that is, an exception. It is handled by the synchronous exception vector. The IAR C/C++ Compiler supports exchanging the normal call instruction used to call a function with the `SVC` instruction, by using the pragma directive `svc_number` in front of any function declaration or definition. The supplied number will be stored in the `ESR_EL1` system register.

```
#pragma svc_number = 23
__svc int Synchronous_Handler_A64(int i)
{
    return i;
}

void f()
{
    int i = Synchronous_Handler_A64(5); // Will use an SVC
}
```

The intended use for `SVC` functions is to let code executing in a lower exception level call code in a higher exception level.

```

// User code
#pragma svc_number = 1
int svc1(int);
#pragma svc_number = 2
int svc2(int);

int main(void)
{
    svc1(1);
}

// Supervisor code
__svc int Synchronous_Handler_A64(int a)
{
    // Get syndrome: AARCH64 SVC
    long long nr = 0;
    __asm("MRS %x0, ESR_EL1\n" : "=r"(nr));
    int ec = (nr >> 26) & 0x3F;
    if (ec != 0x15)
        return -1;

    // Get SVC number.
    nr &= 0xFF'FFFF;

    return nr + a;
}

```

Functions declared with `#pragma svc_number` do not have to use the same function signature. If different signatures are used, `Synchronous_Handler_A64` must be written in assembler language as a trampoline to the various calling handlers, in order to pass parameters and handle return values correctly.

## RESET ADDRESS

By default, the reset address is assumed to be at address 0. To place it at another address, use one of these methods:

- Use the linker option `--config_def` to set the linker configuration symbol `__Reset_address`, like this: `--config_def __Reset_address=4096`
- Edit the linker configuration file that the project uses

---

## Inlining functions

Function inlining means that a function, whose definition is known at compile time, is integrated into the body of its caller to eliminate the overhead of the function call. This optimization, which is performed at optimization level High, normally reduces

execution time, but might increase the code size. The resulting code might become more difficult to debug. Whether the inlining actually occurs is subject to the compiler's heuristics.

The compiler heuristically decides which functions to inline. Different heuristics are used when optimizing for speed, size, or when balancing between size and speed. Normally, code size does not increase when optimizing for size.

## C VERSUS C++ SEMANTICS

In C++, all definitions of a specific inline function in separate translation units must be exactly the same. If the function is not inlined in one or more of the translation units, then one of the definitions from these translation units will be used as the function implementation.

In C, you must manually select one translation unit that includes the non-inlined version of an inline function. You do this by explicitly declaring the function as `extern` in that translation unit. If you declare the function as `extern` in more than one translation unit, the linker will issue a *multiple definition* error. In addition, in C, inline functions cannot refer to static variables or functions.

For example:

```
// In a header file.
static int sX;
inline void F(void)
{
    //static int sY; // Cannot refer to statics.
    //sX;           // Cannot refer to statics.
}

// In one source file.
// Declare this F as the non-inlined version to use.
extern inline void F();
```

## FEATURES CONTROLLING FUNCTION INLINING

There are several mechanisms for controlling function inlining:

- The `inline` keyword.

If you compile your function in C or C++ mode, the keyword will be interpreted according to its definition in Standard C or Standard C++, respectively.

The main difference in semantics is that in Standard C you cannot (in general) simply supply an inline definition in a header file. You must supply an external definition in one of the compilation units, by designating the inline definition as being external in that compilation unit.

- `#pragma inline` is similar to the `inline` keyword, but with the difference that the compiler always uses C++ inline semantics.

By using the `#pragma inline` directive you can also disable the compiler's heuristics to either force inlining or completely disable inlining. For more information, see *inline*, page 455.

- `--use_cplusplus_inline` forces the compiler to use C++ semantics when compiling a Standard C source code file.
- `--no_inline`, `#pragma optimize=no_inline`, and `#pragma inline=never` all disable function inlining. By default, function inlining is enabled at optimization level High.

The compiler can only inline a function if the definition is known. Normally, this is restricted to the current translation unit. However, when the `--mfc` compiler option for multi-file compilation is used, the compiler can inline definitions from all translation units in the multi-file compilation unit. For more information, see *Multi-file compilation units*, page 257.

For more information about the function inlining optimization, see *Function inlining*, page 260.

---

## Stack protection

In software, a stack buffer overflow occurs when a program writes to a memory address on the program's call stack outside of the intended data structure, which is usually a fixed-length buffer. The result is, almost always, corruption of nearby data, and it can even change which function to return to. If it is deliberate, it is often called stack smashing. One method to guard against stack buffer overflow is to use stack canaries, named for their analogy to the use of canaries in coal mines.

### STACK PROTECTION IN THE IAR C/C++ COMPILER

The IAR C/C++ Compiler for Arm supports stack protection.



To enable stack protection for functions considered needing it, use the compiler option `--stack_protection`. For more information, see *--stack\_protection*, page 355.

The IAR implementation of stack protection uses a heuristic to determine whether a function needs stack protection or not. If any defined local variable has the array type or a structure type that contains a member of array type, the function will need stack protection. In addition, if the address of any local variable is propagated outside of a function, such a function will also need stack protection.

If a function needs stack protection, the local variables are sorted to let the variables with array type to be placed as high as possible in the function stack block. After those

variables, a canary element is placed. The canary is initialized at function entrance. The initialization value is taken from the global variable `__stack_chk_guard`. At function exit, the code verifies that the canary element still contains the original value. If not, the function `__stack_chk_fail` is called.

## USING STACK PROTECTION IN YOUR APPLICATION

To use stack protection, you must define these objects in your application:

- `extern uint32_t __stack_chk_guard`

The global variable `__stack_chk_guard` must be initialized prior to first use. If the initialization value is randomized, it will be more secure.

- `__interwork __nounwind __noreturn void __stack_chk_fail(void)`

The purpose of the function `__stack_chk_fail` is to notify about the problem and then terminate the application.

**Note:** The return address from this function will point into the function that failed.

The file `stack_protection.c` in the directory `arm\src\lib\runtime` can be used as a template for both `__stack_chk_guard` and `__stack_chk_fail`.

---

## TrustZone interface

TrustZone for Arm v8-M (**32-bit mode**) needs some compiler support to create a secure interface between the secure and the non-secure code. For this purpose, there are two function type attributes that control how code is generated—

`__cmse_nonsecure_entry` and `__cmse_nonsecure_call`. For more information, see *Arm TrustZone®*, page 243.

**Note:** TrustZone support is automatic in **64-bit mode**.





# Linking using ILINK

- Linker overview
- Modules and sections
- The linking process in detail
- Placing code and data—the linker configuration file
- Initialization at system startup
- Stack usage analysis

---

## Linker overview

The IAR ILINK Linker is a powerful, flexible software tool for use in the development of embedded applications. It is equally well suited for linking small, single-file, absolute assembler programs as it is for linking large, relocatable, multi-module, C/C++, or mixed C/C++ and assembler programs.

The linker combines one or more relocatable object files—produced by the IAR compiler or assembler—with selected parts of one or more object libraries to produce an executable image in the industry-standard format *Executable and Linking Format* (ELF).

The linker will automatically load only those library modules—user libraries and Standard C or C++ library variants—that are actually needed by the application you are linking. Furthermore, the linker eliminates duplicate sections and sections that are not required.

ILINK can link both Arm and Thumb code, as well as a combination of them. By automatically inserting additional instructions (veneers), ILINK will assure that the destination will be reached for any calls and branches, and that the processor state is switched when required. For more details about how to generate veneers, see *Veneers*, page 125.

The linker uses a *configuration file* where you can specify separate locations for code and data areas of your target system memory map. This file also supports automatic handling of the application's initialization phase, which means initializing global variable areas and code areas by copying initializers and possibly decompressing them as well.

The final output produced by ILINK is an absolute object file containing the executable image in the ELF (including DWARF for debug information) format. The file can be downloaded to C-SPY or any other compatible debugger that supports ELF/DWARF, or it can be stored in EPROM or flash.

To handle ELF files, various tools are included. For information about included utilities, see *Specific ELF tools*, page 54.

**Note:** The default output format in IAR Embedded Workbench is DEBUG.

---

## Modules and sections

Each relocatable object file contains one *module*, which consists of:

- Several sections of code or data
- Runtime attributes specifying various types of information, for example, the version of the runtime environment
- Optionally, debug information in DWARF format
- A symbol table of all global symbols and all external symbols used.

**Note:** In a library, each module (source file) should only contain one single function. This is important if you want to override a function in a library with a function in your own application. The linker includes modules only if they are referred to from the rest of the application. If the linker includes a library module that contains several functions because one function is referred to, and another function in that module should be overridden by a function defined by your application, the linker issues a “duplicate definitions” error.

A *section* is a logical entity containing a piece of data or code that should be placed at a physical location in memory. A section can consist of several *section fragments*, typically one for each variable or function (symbols). A section can be placed either in RAM or in ROM. In a normal embedded application, sections that are placed in RAM do not have any content, they only occupy space.

Each section has a name and a type attribute that determines the content. The type attribute is used (together with the name) for selecting sections for the ILINK configuration.

The main purpose of section attributes is to distinguish between sections that can be placed in ROM and sections that must be placed in RAM:

<code>ro readonly</code>	ROM sections
<code>rw readwrite</code>	RAM sections

In each category, sections can be further divided into those that contain code and those that contain data, resulting in four main categories:

<code>ro code</code>	Normal code
<code>ro data</code>	Constants
<code>rw code</code>	Code copied to RAM
<code>rw data</code>	Variables

`readwrite data` also has a subcategory—`zi|zeroinit`—for sections that are zero-initialized at application startup.

**Note:** In addition to these section types—sections that contain the code and data that are part of your application—a final object file will contain many other types of sections, for example, sections that contain debugging information or other type of meta information.

A section is the smallest linkable unit—but if possible, ILINK can exclude smaller units—section fragments—from the final application. For more information, see *Keeping modules*, page 119, and *Keeping symbols and sections*, page 119.

At compile time, data and functions are placed in different sections. At link time, one of the most important functions of the linker is to assign addresses to the various sections used by the application.

The IAR build tools have many predefined section names. For more information about each section, see the chapter *Section reference*.

You can group sections together for placement by using blocks. See *define block directive*, page 563.

---

## The linking process in detail

The relocatable modules in object files and libraries, produced by the IAR compiler and assembler, cannot be executed as is. To become an executable application, they must be *linked*.


**Note:** Modules produced by a toolset from another vendor can be included in the build as well, as long as the module is AEABI (Arm Embedded Application Binary Interface) compliant. Be aware that this might also require a compiler utility library from the same vendor.

The linker is used for the link process. It normally performs the following procedure (note that some of the steps can be turned off by command line options or by directives in the linker configuration file):

- Determine which modules to include in the application. Modules provided in object files are always included. A module in a library file is only included if it provides a definition for a global symbol that is referenced from an included module.
- Select which standard library files to use. The selection is based on attributes of the included modules. These libraries are then used for satisfying any still outstanding undefined symbols.
- Handle symbols with more than one definition. If there is more than one non-weak definition, an error is emitted. Otherwise, one of the definitions is picked (the non-weak one, if there is one) and the others are suppressed. Weak definitions are typically used for inline and template functions. If you need to override some of the non-weak definitions from a library module, you must ensure that the library module is not included (typically by providing alternate definitions for all the symbols your application uses in that library module).
- Determine which sections/section fragments from the included modules to include in the application. Only those sections/section fragments that are actually needed by the application are included. There are several ways to determine which sections/section fragments that are needed, for example, the `__root` object attribute, the `#pragma required` directive, and the `keep` linker directive. In case of duplicate sections, only one is included.
- Where appropriate, arrange for the initialization of initialized variables and code in RAM. The `initialize` directive causes the linker to create extra sections to enable copying from ROM to RAM. Each section that will be initialized by copying is divided into two sections—one for the ROM part, and one for the RAM part. If manual initialization is not used, the linker also arranges for the startup code to perform the initialization.
- Determine where to place each section according to the section placement directives in the *linker configuration file*. Sections that are to be initialized by copying appear twice in the matching against placement directives, once for the ROM part and once for the RAM part, with different attributes. During the placement, the linker also adds any required veneers to make a code reference reach its destination or to switch CPU modes.
- Produce an absolute file that contains the executable image and any debug information provided. The contents of each needed section in the relocatable input files is calculated using the relocation information supplied in its file and the addresses determined when placing sections. This process can result in one or more relocation failures if some of the requirements for a particular section are not met, for instance if placement resulted in the destination address for a PC-relative jump instruction being out of range for that instruction.

- Optionally, produce a map file that lists the result of the section placement, the address of each global symbol, and finally, a summary of memory usage for each module and library.

This illustration shows the linking process:

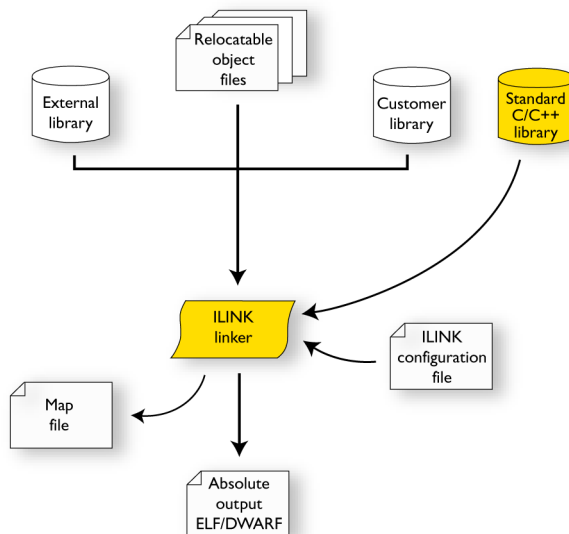

During the linking, ILINK might produce error and logging messages on `stdout` and `stderr`. The log messages are useful for understanding why an application was linked as it was. For example, why a module or section (or section fragment) was included.

**Note:** To see the actual content of an ELF object file, use `ielfdumparm`. See *The IAR ELF Dumper—ielfdump*, page 615.

## Placing code and data—the linker configuration file

The placement of sections in memory is performed by the IAR ILINK Linker. It uses the *linker configuration file* where you can define how ILINK should treat each section and how they should be placed into the available memories.

A typical linker configuration file contains definitions of:

- Available addressable memories
- Populated regions of those memories
- How to treat input sections

- Created sections
- How to place sections into the available regions

The file consists of a sequence of declarative directives. This means that the linking process will be governed by all directives at the same time.

To use the same source code with different derivatives, just rebuild the code with the appropriate configuration file.

## A SIMPLE EXAMPLE OF A CONFIGURATION FILE

Assume a simple 32-bit architecture that has these memory prerequisites:

- There are 4 Gbytes of addressable memory.
- There is ROM memory in the address range 0x0000–0x10000.
- There is RAM memory in the range 0x20000–0x30000.
- The stack has an alignment of 8.
- The system startup code must be located at a fixed address.

A simple configuration file for this assumed architecture can look like this:

```
/* The memory space denoting the maximum possible amount
   of addressable memory */
define memory Mem with size = 4G;

/* Memory regions in an address space */
define region ROM = Mem:[from 0x00000 size 0x10000];
define region RAM = Mem:[from 0x20000 size 0x10000];

/* Create a stack */
define block STACK with size = 0x1000, alignment = 8 { };

/* Handle initialization */
initialize by copy { readwrite }; /* Initialize RW sections */

/* Place startup code at a fixed address */
place at start of ROM { readonly section .cstartup };

/* Place code and data */
place in ROM { readonly }; /* Place constants and initializers in
                             ROM: .rodata and .data_init */
place in RAM { readwrite, /* Place .data, .bss, and .noinit */
              block STACK }; /* and STACK */
```

This configuration file defines one addressable memory `Mem` with the maximum of 4 Gbytes of memory. Furthermore, it defines a ROM region and a RAM region in `Mem`, namely `ROM` and `RAM`. Each region has the size of 64 Kbytes.

The file then creates an empty block called `STACK` with a size of 4 Kbytes in which the application stack will reside. To create a *block* is the basic method which you can use to get detailed control of placement, size, etc. It can be used for grouping sections, but also as in this example, to specify the size and placement of an area of memory.

Next, the file defines how to handle the initialization of variables, read/write type (`readwrite`) sections. In this example, the initializers are placed in ROM and copied at startup of the application to the RAM area. By default, ILINK may compress the initializers if this appears to be advantageous.


The last part of the configuration file handles the actual placement of all the sections into the available regions. First, the startup code—defined to reside in the read-only (`readonly`) section `.cstartup`—is placed at the start of the ROM region, that is at address `0x10000`.

**Note:** The part within `{ }` is referred to as *section selection* and it selects the sections for which the directive should be applied to. Then the rest of the read-only sections are placed in the ROM region.

**Note:** The section selection `{ readonly section .cstartup }` takes precedence over the more generic section selection `{ readonly }`.

Finally, the read/write (`readwrite`) sections and the `STACK` block are placed in the RAM region.

This illustration gives a schematic overview of how the application is placed in memory:

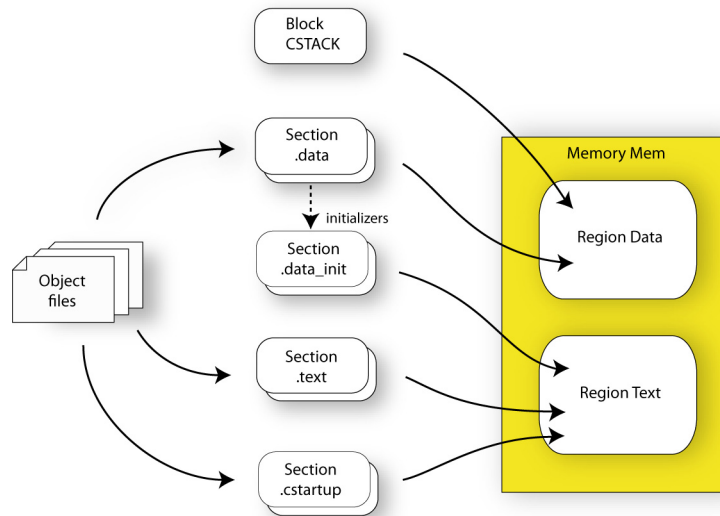

In addition to these standard directives, a configuration file can contain directives that define how to:

- Map a memory that can be addressed in multiple ways
- Handle conditional directives
- Create symbols with values that can be used in the application
- More in detail, select the sections a directive should be applied to
- More in detail, initialize code and data.

For more details and examples about customizing the linker configuration file, see the chapter *Linking your application*.

For more information about the linker configuration file, see the chapter *The linker configuration file*.

## Initialization at system startup

In Standard C, all static variables—variables that are allocated at a fixed memory address—must be initialized by the runtime system to a known value at application startup. This value is either an explicit value assigned to the variable, or if no value is given, it is cleared to zero. In the compiler, there are exceptions to this rule, for example, variables declared `__no_init`, which are not initialized at all.



The compiler generates a specific type of section for each type of variable initialization:

Categories of declared data	Source	Section type	Section name	Section content
Zero-initialized data	<code>int i;</code>	Read/write data, zero-init	<code>.bss</code>	None
Zero-initialized data	<code>int i = 0;</code>	Read/write data, zero-init	<code>.bss</code>	None
Initialized data (non-zero)	<code>int i = 6;</code>	Read/write data	<code>.data</code>	The initializer
Non-initialized data	<code>__no_init int i;</code>	Read/write data, zero-init	<code>.noinit</code>	None
Constants	<code>const int i = 6;</code>	Read-only data	<code>.rodata</code>	The constant
Code	<code>__ramfunc void myfunc() {}</code>	Read/write code	<code>.textrw</code>	The code

Table 3: Sections holding initialized data

**Note:** Clustering of static variables might group zero-initialized variables together with initialized data in `.data`. The compiler can decide to place constants in the `.text` section to avoid loading the address of a constant from a constant table.

For information about all supported sections, see the chapter *Section reference*.

## THE INITIALIZATION PROCESS

Initialization of data is handled by ILLINK and the system startup code in conjunction.

To configure the initialization of variables, you must consider these issues:

- Sections that should be zero-initialized, or not initialized at all (`__no_init`) are handled automatically by ILLINK.
- Sections that should be initialized, except for zero-initialized sections, should be listed in an `initialize` directive.

Normally during linking, a section that should be initialized is split into two sections, where the original initialized section will keep the name. The contents are placed in the new initializer section, which will get the original name suffixed with `_init`. The initializers should be placed in ROM and the initialized sections in RAM, by means of placement directives. The most common example is the `.data` section which the linker splits into `.data` and `.data_init`.

- Sections that contains constants should not be initialized—they should only be placed in flash/ROM.

In the linker configuration file, it can look like this:

```
/* Handle initialization */
initialize by copy { readwrite }; /* Initialize RW sections */

/* Place startup code at a fixed address */
place at start of ROM { readonly section .cstartup };

/* Place code and data */
place in ROM { readonly }; /* Place constants and initializers in
                             ROM: .rodata and .data_init */
place in RAM { readwrite, /* Place .data, .bss, and .noinit */
              block STACK }; /* and STACK */
```

**Note:** When compressed initializers are used (see *initialize directive*, page 570), the contents sections (that is, sections with the `_init` suffix) are not listed as separate sections in the map file. Instead, they are combined into aggregates of “initializer bytes”. You can place the contents sections the usual way in the linker configuration file, however, this affects the placement—and possibly the number—of the “initializer bytes” aggregates.

For more information about and examples of how to configure the initialization, see *Linking considerations*, page 115.

## C++ DYNAMIC INITIALIZATION

The compiler places subroutine pointers for performing C++ dynamic initialization into sections of the ELF section types `SHT_PREINIT_ARRAY` and `SHT_INIT_ARRAY`. By default, the linker will place these into a linker-created block, ensuring that all sections of the section type `SHT_PREINIT_ARRAY` are placed before those of the type `SHT_INIT_ARRAY`. If any such sections were included, code to call the routines will also be included.

The linker-created blocks are only generated if the linker configuration does not contain section selector patterns for the `preinit_array` and `init_array` section types. The effect of the linker-created blocks will be very similar to what happens if the linker configuration file contains this:

```
define block SHT$$PREINIT_ARRAY { preinit_array };
define block SHT$$INIT_ARRAY { init_array };
define block CPP_INIT with fixed order { block
                                         SHT$$PREINIT_ARRAY,
                                         block SHT$$INIT_ARRAY };
```

If you put this into your linker configuration file, you must also mention the `CPP_INIT` block in one of the section placement directives. If you wish to select where the linker-created block is placed, you can use a section selector with the name `".init_array"`.

See also *section-selectors*, page 580.

## Stack usage analysis

This section describes how to perform a stack usage analysis using the linker.

In the `arm\src` directory, you can find an example project that demonstrates stack usage analysis.

### INTRODUCTION TO STACK USAGE ANALYSIS

Under the right circumstances, the linker can accurately calculate the maximum stack usage for each call graph, starting from the program start, interrupt functions, tasks etc. (each function that is not called from another function, in other words, the root).

If you enable stack usage analysis, a stack usage chapter will be added to the linker map file, listing for each call graph root the particular call chain which results in the maximum stack depth.

The analysis is only accurate if there is accurate stack usage information for each function in the application.

In general, the compiler will generate this information for each C function, but if there are indirect calls—calls using function pointers—in your application, you must supply a list of possible functions that can be called from each calling function.

If you use a stack usage control file, you can also supply stack usage information for functions in modules that do not have stack usage information.

You can use the `check that` directive in your stack usage control file to check that the stack usage calculated by the linker does not exceed the stack space you have allocated.

### PERFORMING A STACK USAGE ANALYSIS

- 1 Enable stack usage analysis:



In the IDE, choose **Project>Options>Linker>Advanced>Enable stack usage analysis**.



On the command line, use the linker option `--enable_stack_usage`.  
See `--enable_stack_usage`, page 383.

- 2 Enable the linker map file:



In the IDE, choose **Project>Options>Linker>List>Generate linker map file**.



On the command line, use the linker option `--map`.

### 3 Link your project.

**Note:** The linker will issue warnings related to stack usage under certain circumstances, see *Situations where warnings are issued*, page 112.

### 4 Review the linker map file, which now contains a stack usage chapter with a summary of the stack usage for each call graph root. For more information, see *Result of an analysis—the map file contents*, page 108.

### 5 For more details, analyze the call graph log, see *Call graph log*, page 112.

**Note:** There are limitations and sources of inaccuracy in the analysis, see *Limitations*, page 111.

You might need to specify more information to the linker to get a more representative result. See *Specifying additional stack usage information*, page 110.



In the IDE, choose **Project>Options>Linker>Advanced>Enable stack usage analysis>Control file**.



On the command line, use the linker option `--stack_usage_control`.

See `--stack_usage_control`, page 406.

### 6 To add an automatic check that you have allocated memory enough for the stack, use the `check that` directive in your linker configuration file. For example, assuming a stack block named `MY_STACK`, you can write like this:

```
check that size(block MY_STACK) >=maxstack("Program entry")
      + totalstack("interrupt") + 100;
```

When linking, the linker emits an error if the check fails. In this example, an error will be emitted if the sum of the following exceeds the size of the `MY_STACK` block:

- The maximum stack usage in the category `Program entry` (the main program).
- The sum of each individual maximum stack usage in the category `interrupt` (assuming that all interrupt routines need space at the same time).
- A safety margin of 100 bytes (to account for stack usage not visible to the analysis).

See also *check that directive*, page 585 and *Stack considerations*, page 224.

## RESULT OF AN ANALYSIS—THE MAP FILE CONTENTS

When stack usage analysis is enabled, the linker map file contains a stack usage chapter with a summary of the stack usage for each call graph root category, and lists the call

chain that results in the maximum stack depth for each call graph root. This is an example of what the stack usage chapter in the map file might look like:

```
*****
*** STACK USAGE
***

Call Graph Root Category  Max Use  Total Use
-----
interrupt                  104      136
Program entry              168      168

Program entry
  "__iar_program_start": 0x000085ac
  Maximum call chain                                168 bytes

    "__iar_program_start"                            0
    "__cmain"                                         0
    "main"                                             8
    "printf"                                          24
    "_PrintfTiny"                                    56
    "_Prout"                                          16
    "putchar"                                         16
    "__write"                                         0
    "__dwrite"                                        0
    "__iar_sh_stdout"                                24
    "__iar_get_ttio"                                  24
    "__iar_lookup_ttioh"                              0

interrupt
  "FaultHandler": 0x00008434

  Maximum call chain                                32 bytes

    "FaultHandler"                                    32

interrupt
  "IRQHandler": 0x00008424

  Maximum call chain                                104 bytes

    "IRQHandler"                                     24
    "do_something" in suexample.o [1]                80
```

The summary contains the depth of the deepest call chain in each category as well as the sum of the depths of the deepest call chains in that category.

Each call graph root belongs to a call graph root category to enable convenient calculations in `check` that directives.

## SPECIFYING ADDITIONAL STACK USAGE INFORMATION

To specify additional stack usage information you can use either a stack usage control file (`suc`) where you specify stack usage control directives or annotate the source code.

You can:

- Specify complete stack usage information (call graph root category, stack usage, and possible calls) for a function, by using the stack usage control directive `function`. Typically, you do this if stack usage information is missing, for example in an assembler module. In your `suc` file you can, for example, write like this:

```
function MyFunc: 32,
    calls MyFunc2,
    calls MyFunc3, MyFunc4: 16;
```

```
function [interrupt] MyInterruptHandler: 44;
```

See also *function directive*, page 602.

- Exclude certain functions from stack usage analysis, by using the stack usage control directive `exclude`. In your `suc` file you can, for example, write like this:

```
exclude MyFunc5, MyFunc6;
```

See also *exclude directive*, page 602.

- Specify a list of possible destinations for indirect calls in a function, by using the stack usage control directive `possible calls`. Use this for functions which are known to perform indirect calls and where you know exactly which functions that might be called in this particular application. In your `suc` file you can, for example, write like this:

```
possible calls MyFunc7: MyFunc8, MyFunc9;
```

If the information about which functions that might be called is available at compile time, consider using the `#pragma calls` directive instead.

See also *possible calls directive*, page 604 and *calls*, page 447.

- Specify that functions are call graph roots, including an optional call graph root category, by using the stack usage control directive `call graph root` or the `#pragma call_graph_root` directive. In your `suc` file you can, for example, write like this:

```
call graph root [task]: MyFunc10, MyFunc11;
```

If your interrupt functions have not already been designated as call graph roots by the compiler, you must do so manually. You can do this either by using the `#pragma`

`call_graph_root` directive in your source code or by specifying a directive in your `suc` file, for example:

```
call graph root [interrupt]: Irq1Handler, Irq2Handler;
```

See also *call graph root directive*, page 602 and *call\_graph\_root*, page 448.

- Specify a maximum number of iterations through any of the cycles in the recursion nest of which the function is a member. In your `suc` file you can, for example, write like this:

```
max recursion depth MyFunc12: 10;
```

- Selectively suppress the warning about unmentioned functions referenced by a module for which you have supplied stack usage information in the stack usage control file. Use the `no calls from` directive in your `suc` file, for example, like this:

```
no calls from [file.o] to MyFunc13, MyFunc14;
```

- Instead of specifying stack usage information about assembler modules in a stack usage control file, you can annotate the assembler source with call frame information. For more information, see the *IAR Assembler User Guide for Arm*.

For more information, see the chapter *The stack usage control file*.

## LIMITATIONS

Apart from missing or incorrect stack usage information, there are also other sources of inaccuracy in the analysis:

- The linker cannot always identify all functions in object modules that lack stack usage information. In particular, this might be a problem with object modules written in assembler language or produced by non-IAR tools. You can provide stack usage information for such modules using a stack usage control file, and for assembler language modules you can also annotate the assembler source code with `CFI` directives to provide stack usage information. See the *IAR Assembler User Guide for Arm*.
- If you use inline assembler to change the frame size or to perform function calls, this will not be reflected in the analysis.
- Extra space consumed by other sources (the processor, an operating system, etc) is not accounted for.
- Source code that uses exceptions is not supported.
- If you use other forms of function calls, like software interrupts, they will not be reflected in the call graph.
- Using multi-file compilation (`--mfc`) can interfere with using a stack usage control file to specify properties of module-local functions in the involved files.

**Note:** Stack usage analysis produces a worst case result. The program might not actually ever end up in the maximum call chain, by design, or by coincidence. In particular, the set of possible destinations for a virtual function call in C++ might sometimes include implementations of the function in question which cannot, in fact, be called from that point in the code.



Stack usage analysis is only a complement to actual measurement. If the result is important, you need to perform independent validation of the results of the analysis.

### SITUATIONS WHERE WARNINGS ARE ISSUED

When stack usage analysis is enabled in the linker, warnings will be generated in the following circumstances:

- There is a function without stack usage information.
- There is an indirect call site in the application for which a list of possible called functions has not been supplied.
- There are no known indirect calls, but there is an uncalled function that is not known to be a call graph root.
- The application contains recursion (a cycle in the call graph) for which no maximum recursion depth has been supplied, or which is of a form for which the linker is unable to calculate a reliable estimate of stack usage.
- There are calls to a function declared as a call graph root.
- You have used the stack usage control file to supply stack usage information for functions in a module that does not have such information, and there are functions referenced by that module which have not been mentioned as being called in the stack usage control file.

### CALL GRAPH LOG

To help you interpret the results of the stack usage analysis, there is a log output option that produces a simple text representation of the call graph (`--log call_graph`).



**Example output:**

```

Program entry:
0 __iar_program_start [168]
  0 __cmain [168]
    0 __iar_data_init3 [16]
      8 __iar_zero_init3 [8]
        16 - [0]
      8 __iar_copy_init3 [8]
        16 - [0]
    0 __low_level_init [0]
  0 main [168]
    8 printf [160]
      32 _PrintfTiny [136]
        88 _Prout [80]
          104 putchar [64]
            120 __write [48]
              120 __dwrite [48]
                120 __iar_sh_stdout [48]
                  144 __iar_get_ttio [24]
                    168 __iar_lookup_ttioh [0]
                      120 __iar_sh_write [24]
                        144 - [0]
              88 __aeabi_uidiv [0]
                88 __aeabi_idiv0 [0]
            88 strlen [0]
          0 exit [8]
            0 _exit [8]
              0 __exit [8]
                0 __iar_close_ttio [8]
                  8 __iar_lookup_ttioh [0] ***
              0 __exit [8] ***

```

Each line consists of this information:

- The stack usage at the point of call of the function
- The name of the function, or a single '-' to indicate usage in a function at a point with no function call (typically in a leaf function)
- The stack usage along the deepest call chain from that point. If no such value could be calculated, "[---]" is output instead. "\*\*\*" marks functions that have already been shown.

**CALL GRAPH XML OUTPUT**

The linker can also produce a call graph file in XML format. This file contains one node for each function in your application, with the stack usage and call information relevant

to that function. It is intended to be input for post-processing tools and is not particularly human-readable.

For more information about the XML format used, see the `callGraph.txt` file in your product installation.

# Linking your application

- Linking considerations
- Hints for troubleshooting
- Checking module consistency
- Linker optimizations

---

## Linking considerations

Before you can link your application, you must set up the configuration required by ILINK. Typically, you must consider:

- Choosing a linker configuration file
- Defining your own memory areas
- Placing sections
- Reserving space in RAM
- Keeping modules
- Keeping symbols and sections
- Application startup in 32-bit mode
- Application startup in 64-bit mode
- Setting up stack memory
- Setting up heap memory
- Setting up the atexit limit
- Changing the default initialization
- Interaction between ILINK and the application
- Standard library handling
- Producing output formats other than ELF/DWARF
- Veneers

### CHOOSING A LINKER CONFIGURATION FILE

The `config` directory contains ready-made templates for linker configuration files (`*.icf`) for all supported cores.

The files contain the information required by ILINK. The only change, if any, you will normally have to make to the supplied configuration file is to customize the start and end addresses of each region so they fit the target system memory map. If, for example, your application uses additional external RAM, you must also add details about the external RAM memory area.

For some devices, device-specific configuration files are automatically selected.

To edit a linker configuration file, use the editor in the IDE, or any other suitable editor. Alternatively, choose **Project>Options>Linker** and click the **Edit** button on the **Config** page to open the dedicated linker configuration file editor.

Do not change the original template file. We recommend that you make a copy in the working directory, and modify the copy instead. If you are using the linker configuration file editor in the IDE, the IDE will make a copy for you.

Each project in the IDE should have a reference to one, and only one, linker configuration file. This file can be edited, but for the majority of all projects it is sufficient to configure the vital parameters in **Project>Options>Linker>Config**.

## DEFINING YOUR OWN MEMORY AREAS

The default configuration file that you selected has predefined ROM and RAM regions. This example will be used as a starting-point for all further examples in this chapter. Note that all examples are for **32-bit mode** unless otherwise stated.

```
/* Define the addressable memory */
define memory Mem with size = 4G;

/* Define a region named ROM with start address 0 and to be 64
Kbytes large */
define region ROM = Mem:[from 0 size 0x10000];

/* Define a region named RAM with start address 0x20000 and to be
64 Kbytes large */
define region RAM = Mem:[from 0x20000 size 0x10000];
```

Each region definition must be tailored for the actual hardware.

To find out how much of each memory that was filled with code and data after linking, inspect the memory summary in the map file (command line option `--map`).

### Adding an additional region

To add an additional region, use the `define region` directive, for example:

```
/* Define a 2nd ROM region to start at address 0x80000 and to be
128 Kbytes large */
define region ROM2 = Mem:[from 0x80000 size 0x20000];
```

## Merging different areas into one region

If the region is comprised of several areas, use a region expression to merge the different areas into one region, for example:

```
/* Define the 2nd ROM region to have two areas. The first with
the start address 0x80000 and 128 Kbytes large, and the 2nd with
the start address 0xC0000 and 32 Kbytes large */
define region ROM2 = Mem:[from 0x80000 size 0x20000]
                    | Mem:[from 0xC0000 size 0x08000];
```

or equivalently

```
define region ROM2 = Mem:[from 0x80000 to 0xC7FFF]
                    -Mem:[from 0xA0000 to 0xBFFFF];
```

## PLACING SECTIONS

The default configuration file that you selected places all predefined sections in memory, but there are situations when you might want to modify this. For example, if you want to place the section that holds constant symbols in the `CONSTANT` region instead of in the default place. In this case, use the `place in` directive, for example:

```
/* Place sections with readonly content in the ROM region */
place in ROM {readonly};

/* Place the constant symbols in the CONSTANT region */
place in CONSTANT {readonly section .rodata};
```

**Note:** Placing a section—used by the IAR build tools—in a different memory which use a different way of referring to its content, will fail.

For the result of each placement directive after linking, inspect the placement summary in the map file (the command line option `--map`).

## Placing a section at a specific address in memory

To place a section at a specific address in memory, use the `place at` directive, for example:

```
/* Place section .vectors at address 0 */
place at address Mem:0x0 {readonly section .vectors};
```

## Placing a section first or last in a region

To place a section first or last in a region is similar, for example:

```
/* Place section .vectors at start of ROM */
place at start of ROM {readonly section .vectors};
```

## Declare and place your own sections

To declare new sections—in addition to the ones used by the IAR build tools—to hold specific parts of your code or data, use mechanisms in the compiler and assembler. For example:

```
/* Place a variable in that section. */
const short MyVariable @ "MYOWNSECTION" = 0xF0F0;
```

This is the corresponding example in assembler language:

```
name      createSection
section MYOWNSECTION:CONST ; Create a section,
                                ; and fill it with
dc16      0xF0F0              ; constant bytes.
end
```

To place your new section, the original `place in ROM {readonly}`; directive is sufficient.

However, to place the section `MyOwnSection` explicitly, update the linker configuration file with a `place in` directive, for example:

```
/* Place MyOwnSection in the ROM region */
place in ROM {readonly section MyOwnSection};
```

## RESERVING SPACE IN RAM

Often, an application must have an empty uninitialized memory area to be used for temporary storage, for example, a heap or a stack. It is easiest to achieve this at link time. You must create a block with a specified size and then place it in a memory.

In the linker configuration file, it can look like this:

```
define block TempStorage with size = 0x1000, alignment = 4 { };
place in RAM { block TempStorage };
```

To retrieve the start of the allocated memory from the application, the source code could look like this:

```
/* Define a section for temporary storage. */
#pragma section = "TempStorage"
char *GetTempStorageStartAddress()
{
    /* Return start address of section TempStorage. */
    return __section_begin("TempStorage");
}
```

## KEEPING MODULES

If a module is linked as an object file, it is always kept. That is, it will contribute to the linked application. However, if a module is part of a library, it is included only if it is symbolically referred to from other parts of the application. This is true, even if the library module contains a root symbol. To assure that such a library module is always included, use `iarchive` to extract the module from the library, see *The IAR Archive Tool—iarchive*, page 609.

For information about included and excluded modules, inspect the log file (the command line option `--log modules`).

For more information about modules, see *Modules and sections*, page 98.

## KEEPING SYMBOLS AND SECTIONS

By default, ILINK removes any sections, section fragments, and global symbols that are not needed by the application. To retain a symbol that does not appear to be needed—or actually, the section fragment it is defined in—you can either use the root attribute on the symbol in your C/C++ or assembler source code, or use the ILINK option `--keep`. To retain sections based on attribute names or object names, use the directive `keep` in the linker configuration file.

To prevent ILINK from excluding sections and section fragments, use the command line options `--no_remove` or `--no_fragments`, respectively.

For information about included and excluded symbols and sections, inspect the log file (the command line option `--log sections`).

For more information about the linking procedure for keeping symbols and sections, see *The linking process*, page 64.

## APPLICATION STARTUP IN 32-BIT MODE

By default, the point where the application starts execution is defined by the `__iar_program_start` label, which is defined to point at the start of the `cstartup.s` file. The label is also communicated via ELF to any debugger that is used.

To change the start point of the application to another label, use the ILINK option `--entry`, see `--entry`, page 384.

## APPLICATION STARTUP IN 64-BIT MODE

The point where the application starts execution is defined by the `__Reset_address` label (it determines where the `cstartup` module starts). The `__iar_program_start` label is placed at the same address. This label is also communicated via ELF to any debugger that is used.

For information about how to change the reset address, see *Reset address*, page 92.

## SETTING UP STACK MEMORY

The size of the `CSTACK` block is defined in the linker configuration file. To change the allocated amount of memory, change the block definition for `CSTACK`:

```
define block CSTACK with size = 0x2000, alignment = 8{ };
```

Specify an appropriate size for your application. Note that **in 64-bit mode**, the stack alignment is 16.

For more information about the stack, see *Stack considerations*, page 224.

## SETTING UP HEAP MEMORY

The size of the heap is defined in the linker configuration file as a block:

```
define block HEAP with size = 0x1000, alignment = 8{ };
place in RAM {block HEAP};
```

Specify the appropriate size for your application. If you use a heap, you must allocate at least 50 bytes for it. Note that **in 64-bit mode**, the heap alignment is 16.

## SETTING UP THE ATEXTIT LIMIT

By default, the `atexit` function can be called a maximum of 32 times from your application. To either increase or decrease this number, add a line to your configuration file. For example, to reserve room for 10 calls instead, write:

```
define symbol __iar_maximum_atexit_calls = 10;
```

## CHANGING THE DEFAULT INITIALIZATION

By default, memory initialization is performed during application startup. `ILINK` sets up the initialization process and chooses a suitable packing method. If the default initialization process does not suit your application and you want more precise control over the initialization process, these alternatives are available:

- Suppressing initialization
- Choosing the packing algorithm
- Manual initialization
- Initializing code—copying ROM to RAM.

For information about the performed initializations, inspect the log file (the command line option `--log initialization`).



## Suppressing initialization

If you do not want the linker to arrange for initialization by copying, for some or all sections, make sure that those sections do not match a pattern in an `initialize by copy` directive—or use an `except` clause to exclude them from matching. If you do not want any initialization by copying at all, you can omit the `initialize by copy` directive entirely.

This can be useful if your application, or just your variables, are loaded into RAM by some other mechanism before application startup.

## Choosing a packing algorithm

To override the default packing algorithm, write for example:

```
initialize by copy with packing = lz77 { readwrite };
```

For more information about the available packing algorithms, see *initialize directive*, page 570.

## Manual initialization

In the usual case, the `initialize by copy` directive is used for making the linker arrange for initialization by copying—with or without packing—of sections with content at application startup. The linker achieves this by logically creating an initialization section for each such section, holding the content of the section, and turning the original section into a section without content. The name of this initialization section is the name of the original section with the added suffix `_init`. For example, the initialization section for the `.data` section is called `.data_init`. Then, the linker adds table elements to the initialization table so that the initialization will be performed at application startup.

You can use `initialize manually` to suppress the creation of table elements to take control over when and how the elements are copied. This is useful for overlays, but also in other circumstances.

For sections without content (zero-initialized sections), the situation is reversed. The linker arranges for zero initialization of all such sections at application startup, except for those that are mentioned in a `do not initialize` directive.

### **Simple copying example with an automatic block**

Assume that you have some initialized variables in `MYSECTION`. If you add this directive to your linker configuration file:

```
initialize manually { section MYSECTION };
```

you can use this source code example to initialize the section:

```
#pragma section = "MYSECTION"
#pragma section = "MYSECTION_init"
void DoInit()
{
    char * from = __section_begin("MYSECTION_init");
    char * to = __section_begin("MYSECTION");
    memcpy(to, from, __section_size("MYSECTION"));
}
```

This piece of source code takes advantage of the fact that if you use `__section_begin` (and related operators) with a section name, an automatic block is created by the linker for those sections.

**Note:** Automatic blocks override the normal section selection process and forces everything that matches the section name to form one block.

### **Example with explicit blocks**

Assume that you instead of needing manual initialization for variables in a specific section, you need it for all initialized variables from a particular library. In that case, you must create explicit blocks for both the variables and the content. Like this:

```
initialize manually      { section .data      object mylib.a };
define block MYBLOCK     { section .data      object mylib.a };
define block MYBLOCK_init { section .data_init object mylib.a };
```

You must also place the two new blocks using one of the section placement directives, the block `MYBLOCK` in RAM and the block `MYBLOCK_init` in ROM.

Then you can initialize the sections using the same source code as in the previous example, only with `MYBLOCK` instead of `MYSECTION`.

**Note:** When using manual initialization, you must handle each `copy init` batch explicitly. The linker will create a separate batch for each combination of source block or placement directive and destination block or placement directive. To see which batches are created, use initialization logging (`--log initialization`).

In some cases, blocks are created automatically by the linker, which can affect the number of batches. This can happen when using a block with `fixed order` and when using the first, last, or midway modifiers in extended section selectors.

### Overlay example

This is a simple overlay example that takes advantage of automatic block creation:

```
initialize manually { section MYOVERLAY* };

define overlay MYOVERLAY { section MYOVERLAY1 };
define overlay MYOVERLAY { section MYOVERLAY2 };
```

You must also place `overlay MYOVERLAY` somewhere in RAM. The copying could look like this:

```
#pragma section = "MYOVERLAY"
#pragma section = "MYOVERLAY1_init"
#pragma section = "MYOVERLAY2_init"
void SwitchToOverlay1()
{
    char * from = __section_begin("MYOVERLAY1_init");
    char * to = __section_begin("MYOVERLAY");
    memcpy(to, from, __section_size("MYOVERLAY1_init"));
}

void SwitchToOverlay2()
{
    char * from = __section_begin("MYOVERLAY2_init");
    char * to = __section_begin("MYOVERLAY");
    memcpy(to, from, __section_size("MYOVERLAY2_init"));
}
```

### Initializing code—copying ROM to RAM

Sometimes, an application copies pieces of code from flash/ROM to RAM. You can direct the linker to arrange for this to be done automatically at application startup, or do it yourself at some later time using the techniques described in *Manual initialization*, page 121.

You need to list the code sections that should be copied in an `initialize by copy` directive. The easiest way is usually to place the relevant functions in a particular section—for example, `RAMCODE`—and add `section RAMCODE` to your `initialize by copy` directive. For example:

```
initialize by copy { rw, section RAMCODE };
```

If you need to place the `RAMCODE` functions in some particular location, you must mention them in a placement directive, otherwise they will be placed together with other read/write sections.

If you need to control the manner and/or time of copying, you must use an `initialize manually` directive instead. See *Manual initialization*, page 121.

If the functions need to run without accessing the flash/ROM, you can use the `__ramfunc` keyword when compiling. See *Execution in RAM*, page 81.

### Running all code from RAM

If you want to copy the entire application from ROM to RAM at program startup, use the `initialize by copy` directive, for example:

```
initialize by copy { readonly, readwrite };
```

The `readwrite` pattern will match all statically initialized variables and arrange for them to be initialized at startup. The `readonly` pattern will do the same for all read-only code and data, except for code and data needed for the initialization.

Because the function `__low_level_init`, if present, is called before initialization, it and anything it needs, will not be copied from ROM to RAM either. In some circumstances—for example, if the ROM contents are no longer available to the program after startup—you might need to avoid using the same functions during startup and in the rest of the code.

If anything else should not be copied, include it in an `except` clause. This can apply to, for example, the interrupt vector table.

It is also recommended to exclude the C++ dynamic initialization table from being copied to RAM, as it is typically only read once and then never referenced again. For example, like this:

```
initialize by copy { readonly, readwrite }
    except { section .intvec,          /* Don't copy
                                        interrupt table */
            section .init_array }; /* Don't copy
                                        C++ init table */
```

### INTERACTION BETWEEN ILINK AND THE APPLICATION

ILINK provides the command line options `--config_def` and `--define_symbol` to define symbols which can be used for controlling the application. You can also use symbols to represent the start and end of a continuous memory area that is defined in the linker configuration file. For more information, see *Interaction between the tools and your application*, page 227.

To change a reference to one symbol to another symbol, use the ILINK command line option `--redirect`. This is useful, for example, to redirect a reference from a non-implemented function to a stub function, or to choose one of several different implementations of a certain function, for example, how to choose the DLIB formatter for the standard library functions `printf` and `scanf`.

The compiler generates mangled names to represent complex C/C++ symbols. If you want to refer to these symbols from assembler source code, you must use the mangled names.

For information about the addresses and sizes of all global (statically linked) symbols, inspect the entry list in the map file (the command line option `--map`).

For more information, see *Interaction between the tools and your application*, page 227.

## STANDARD LIBRARY HANDLING

By default, ILINK determines automatically which variant of the standard library to include during linking. The decision is based on the sum of the runtime attributes available in each object file and the library options passed to ILINK.

To disable the automatic inclusion of the library, use the option `--no_library_search`. In this case, you must explicitly specify every library file to be included. For information about available library files, see *Prebuilt runtime libraries*, page 143.

## PRODUCING OUTPUT FORMATS OTHER THAN ELF/DWARF

ILINK can only produce an output file in the ELF/DWARF format. To convert that format into a format suitable for programming PROM/flash, see *The IAR ELF Tool—ielftool*, page 613.

## VENEERS

Veneers are small sequences of code inserted by the linker to bridge the gap when a call instruction does not reach its destination or cannot switch to the correct mode.

Code for veneers can be inserted between any caller and called function. As a result, some registers must be treated as scratch registers at function calls, including functions written in assembler language. This applies to jumps as well. **In 32-bit mode**, R12 must be treated as a scratch register. **In 64-bit mode**, both X16 and X17 must be treated as scratch registers.

---

## Hints for troubleshooting

ILINK has several features that can help you manage code and data placement correctly, for example:

- Messages at link time, for examples when a relocation error occurs
- The `--log` option that makes ILINK log information to `stdout`, which can be useful to understand why an executable image became the way it is, see `--log`, page 392

- The `--map` option that makes ILINK produce a memory map file, which contains the result of the linker configuration file, see `--map`, page 394.

## RELOCATION ERRORS

For each instruction that cannot be relocated correctly, ILINK will generate a *relocation error*. This can occur for instructions where the target is out of reach or is of an incompatible type, or for many other reasons.

A relocation error produced by ILINK can look like this:

```
Error[Lp002]: relocation failed: out of range or illegal value
  Kind      : R_XXX_YYY[0x1]
  Location  : 0x40000448
              "myfunc" + 0x2c
              Module: somecode.o
              Section: 7 (.text)
              Offset: 0x2c
  Destination: 0x9000000c
              "read"
              Module: read.o(iolib.a)
              Section: 6 (.text)
              Offset: 0x0
```

The message entries are described in this table:

Message entry	Description
Kind	The relocation directive that failed. The directive depends on the instruction used.
Location	The location where the problem occurred, described with these details: <ul style="list-style-type: none"> <li>• The instruction address, expressed both as a hexadecimal value and as a label with an offset. In this example, <code>0x40000448</code> and <code>"myfunc" + 0x2c</code>.</li> <li>• The module, and the file. In this example, the module <code>somecode.o</code>.</li> <li>• The section number and section name. In this example, section number 7 with the name <code>.text</code>.</li> <li>• The offset, specified in number of bytes, in the section. In this example, <code>0x2c</code>.</li> </ul>

Table 4: Description of a relocation error

Message entry	Description
Destination	<p>The target of the instruction, described with these details:</p> <ul style="list-style-type: none"> <li>• The instruction address, expressed both as a hexadecimal value and as a label with an offset. In this example, <code>0x9000000c</code> and "read"—therefore, no offset.</li> <li>• The module, and when applicable the library. In this example, the module <code>read.o</code> and the library <code>iolib.a</code>.</li> <li>• The section number and section name. In this example, section number 6 with the name <code>.text</code>.</li> <li>• The offset, specified in number of bytes, in the section. In this example, <code>0x0</code>.</li> </ul>

Table 4: Description of a relocation error (Continued)

### Possible solutions

In this case, the distance from the instruction in `myfunc` to `__read` is too long for the branch instruction.

Possible solutions include ensuring that the two `.text` sections are allocated closer to each other or using some other calling mechanism that can reach the required distance. It is also possible that the referring function tried to refer to the wrong target and that this caused the range error.

Different range errors have different solutions. Usually, the solution is a variant of the ones presented above, in other words modifying either the code or the section placement.

## Checking module consistency

This section introduces the concept of runtime model attributes, a mechanism used by the tools provided by IAR to ensure that modules that are linked into an application are compatible, in other words, are built using compatible settings. The tools use a set of predefined runtime model attributes. In addition to these, you can define your own that you can use to ensure that incompatible modules are not used together.

**Note:** In addition to the predefined attributes, compatibility is also checked against the AEABI runtime attributes. These attributes deal mainly with object code compatibility, etc. They reflect compilation settings and are not user-configurable.

### RUNTIME MODEL ATTRIBUTES

A runtime attribute is a pair constituted of a named key and its corresponding value. In general, two modules can only be linked together if they have the same value for each key that they both define.

There is one exception—if the value of an attribute is `*`, then that attribute matches any value. The reason for this is that you can specify this in a module to show that you have considered a consistency property, and this ensures that the module does not rely on that property.

**Note:** For IAR predefined runtime model attributes, the linker checks them in several ways.

### Example

In this table, the object files could (but do not have to) define the two runtime attributes `color` and `taste`:

Object file	Color	Taste
<code>file1</code>	<code>blue</code>	<code>not defined</code>
<code>file2</code>	<code>red</code>	<code>not defined</code>
<code>file3</code>	<code>red</code>	<code>*</code>
<code>file4</code>	<code>red</code>	<code>spicy</code>
<code>file5</code>	<code>red</code>	<code>lean</code>

*Table 5: Example of runtime model attributes*

In this case, `file1` cannot be linked with any of the other files, because the runtime attribute `color` does not match. Also, `file4` and `file5` cannot be linked together, because the `taste` runtime attribute does not match.

On the other hand, `file2` and `file3` can be linked with each other, and with either `file4` or `file5`, but not with both.

## USING RUNTIME MODEL ATTRIBUTES

To ensure module consistency with other object files, use the `#pragma rtmodel` directive to specify runtime model attributes in your C/C++ source code. For example, if you have a UART that can run in two modes, you can specify a runtime model attribute, for example `uart`. For each mode, specify a value, for example `mode1` and `mode2`. Declare this in each module that assumes that the UART is in a particular mode. This is how it could look like in one of the modules:

```
#pragma rtmodel="uart", "mode1"
```

Alternatively, you can also use the `rtmodel` assembler directive to specify runtime model attributes in your assembler source code. For example:

```
rtmodel "uart", "mode1"
```



**Note:** Key names that start with two underscores are reserved by the compiler. For more information about the syntax, see *rtmodel*, page 463 and the *IAR Assembler User Guide for Arm*.

At link time, the IAR ILINK Linker checks module consistency by ensuring that modules with conflicting runtime attributes will not be used together. If conflicts are detected, an error is issued.

---

## Linker optimizations

This section contains information about:

- Virtual function elimination
- Small function inlining
- Duplicate section merging

### VIRTUAL FUNCTION ELIMINATION

Virtual Function Elimination (VFE) is a linker optimization that removes unneeded virtual functions and dynamic runtime type information.

In order for Virtual Function Elimination to work, all relevant modules must provide information about virtual function table layout, which virtual functions are called, and for which classes dynamic runtime type information is needed. If one or more modules do not provide this information, a warning is generated by the linker and Virtual Function Elimination is not performed.



If you know that modules that lack such information do not perform any virtual function calls and do not define any virtual function tables, you can use the `--vfe=forced` linker option to enable Virtual Function Elimination anyway.



In the IDE, select **Project>Options>Linker>Optimizations>Perform C++ Virtual Function Elimination** to enable this optimization.

**Note:** You can disable Virtual Function Elimination entirely by using the `--no_vfe` linker option. In this case, no warning will be issued for modules that lack VFE information.

For more information, see `--vfe`, page 410 and `--no_vfe`, page 400.

### SMALL FUNCTION INLINING

Small function inlining is a linker optimization that replaces some calls to small functions with the body of the function. This requires the body to fit in the space of the instruction that calls the function.



In the IDE, select **Project>Options>Linker>Optimizations>Inline small routines** to enable this optimization.



Use the linker option `--inline`.

## DUPLICATE SECTION MERGING

The linker can detect read-only sections with identical contents and keep only one copy of each such section, redirecting all references to any of the duplicate sections to the retained section.



In the IDE, select **Project>Options>Linker>Optimizations>Merge duplicate sections** to enable this optimization.



Use the linker option `--merge_duplicate_sections`.

**Note:** This optimization can cause different functions or constants to have the same address, so if your application depends on the addresses being different, for example, by using the addresses as keys into a table, you should not enable this optimization.

# The DLIB runtime environment

- Introduction to the runtime environment
- Setting up the runtime environment
- Additional information on the runtime environment
- Managing a multithreaded environment

---

## Introduction to the runtime environment

A *runtime environment* is the environment in which your application executes.

This section contains information about:

- Runtime environment functionality
- Briefly about input and output (I/O)
- Briefly about C-SPY emulated I/O
- Briefly about retargeting

### RUNTIME ENVIRONMENT FUNCTIONALITY

The *DLIB runtime environment* supports Standard C and C++ and consists of:

- The *C/C++ standard library*, both its interface (provided in the system header files) and its implementation.
- Startup and exit code.
- Low-level I/O interface for managing input and output (I/O).
- Special compiler support, for instance functions for switch handling or integer arithmetics.
- Support for hardware features:
  - Direct access to low-level processor operations by means of *intrinsic* functions, such as functions for interrupt mask handling
  - Peripheral unit registers and interrupt definitions in include files
  - The Vector Floating Point (VFP) coprocessor.

- Special ABI functions. For more information about AEABI compliance, see *AEABI compliance*, page 238.

Runtime environment functions are provided in a *runtime library*.

The runtime library is delivered both as a prebuilt library and (depending on your product package) as source files. The prebuilt libraries are available in different *configurations* to meet various needs, see *Runtime library configurations*, page 142. You can find the libraries in the product subdirectories `arm\lib` and `arm\src\lib`, respectively.

For more information about the library, see the chapter *C/C++ standard library functions*.


## BRIEFLY ABOUT INPUT AND OUTPUT (I/O)

Every application must communicate with its environment. The application might for example display information on an LCD, read a value from a sensor, get the current date from the operating system, etc. Typically, your application performs I/O via the C/C++ standard library or some third-party library.

There are many functions in the C/C++ standard library that deal with I/O, including functions for standard character streams, file system access, time and date, miscellaneous system actions, and termination and assert. This set of functions is referred to as the *standard I/O interface*.

On a desktop computer or a server, the operating system is expected to provide I/O functionality to the application via the standard I/O interface in the runtime environment. However, in an embedded system, the runtime library cannot assume that such functionality is present, or even that there is an operating system at all. Therefore,

the low-level part of the standard I/O interface is not completely implemented by default:

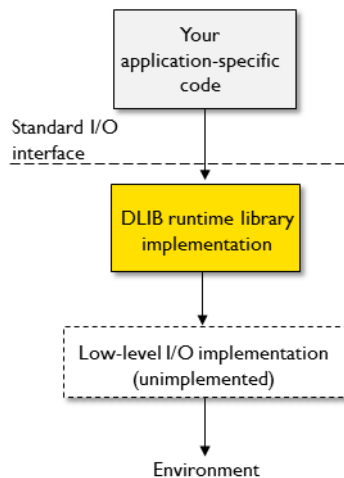


To make the standard I/O interface work, you can:

- Let the C-SPY debugger emulate I/O operations on the host computer, see *Briefly about C-SPY emulated I/O*, page 134
- *Retarget* the standard I/O interface to your target system by providing a suitable implementation of the interface, see *Briefly about retargeting*, page 134.

It is possible to mix these two approaches. You can, for example, let debug printouts and asserts be emulated by the C-SPY debugger, but implement your own file system. The debug printouts and asserts are useful during debugging, but no longer needed when running the application stand-alone (not connected to the C-SPY debugger).

## BRIEFLY ABOUT C-SPY EMULATED I/O

*C-SPY emulated I/O* is a mechanism which lets the runtime environment interact with the C-SPY debugger to emulate I/O actions on the host computer:

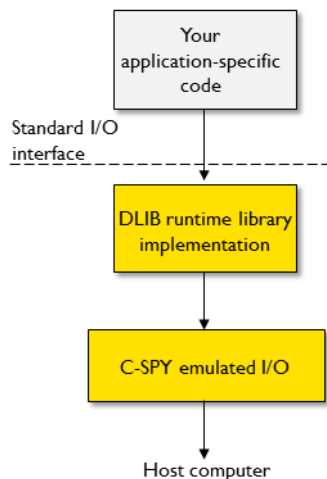

For example, when C-SPY emulated I/O is enabled:

- Standard character streams are directed to the C-SPY **Terminal I/O** window
- File system operations are performed on the host computer
- Time and date functions return the time and date of the host computer
- The C-SPY debugger notifies when the application terminates or an assert fails.

This behavior can be valuable during the early development of an application, for example in an application that uses file I/O before any flash file system I/O drivers are implemented, or if you need to debug constructions in your application that use `stdin` and `stdout` without the actual hardware device for input and output being available.

See *Setting up your runtime environment*, page 136 and *The semihosting mechanism*, page 151.


## BRIEFLY ABOUT RETARGETING

*Retargeting* is the process where you adapt the runtime environment so that your application can execute I/O operations on your target system.

The standard I/O interface is large and complex. To make retargeting easier, the DLIB runtime environment is designed so that it performs all I/O operations through a small set of simple functions, which is referred to as the *DLIB low-level I/O interface*. By

default, the functions in the low-level interface lack usable implementations. Some are unimplemented, others have stub implementations that do not perform anything except returning error codes.

To retarget the standard I/O interface, all you have to do is to provide implementations for the functions in the DLIB low-level I/O interface.

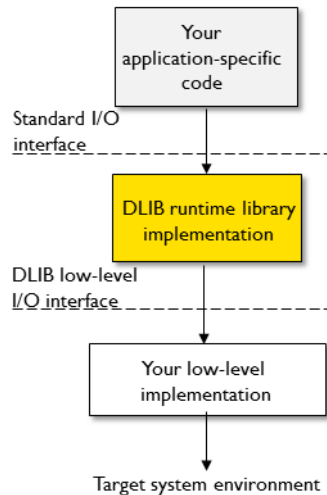

For example, if your application calls the functions `printf` and `fputc` in the standard I/O interface, the implementations of those functions both call the low-level function `__write` to output individual characters. To make them work, you just need to provide an implementation of the `__write` function—either by implementing it yourself, or by using a third-party implementation.

For information about how to override library modules with your own implementations, see *Overriding library modules*, page 139. See also *The DLIB low-level I/O interface*, page 158 for information about the functions that are part of the interface.

---

## Setting up the runtime environment

This section contains these tasks:

- Setting up your runtime environment
  - A runtime environment with basic project settings to be used during the initial phase of development.
- Retargeting—Adapting for your target system
- Overriding library modules

- Customizing and building your own runtime library

See also:

- Managing a multithreaded environment—for information about how to adapt the runtime environment to treat all library objects according to whether they are global or local to a thread.

## SETTING UP YOUR RUNTIME ENVIRONMENT

You can set up the runtime environment based on some basic project settings. It is also often convenient to let the C-SPY debugger manage things like standard streams, file I/O, and various other system interactions. This basic runtime environment can be used for simulation before you have any target hardware.

### To set up the runtime environment:

- 1 Before you build your project, choose **Project>Options>General Options** to open the **Options** dialog box.
- 2 On the **Library Configuration** page, verify the following settings:
  - **Library**—choose which *library configuration* to use. Typically, choose **None**, **Normal**, **Full**, or **Custom**. For library support for C++17, choose **Libc++**, which uses the Full library configuration.  
For information about the various library configurations, see *Runtime library configurations*, page 142.
- 3 On the **Library Options** page, select **Auto with multibyte support** or **Auto without multibyte support** for both **Printf formatter** and **Scanf formatter**. This means that the linker will automatically choose the appropriate formatters based on information from the compiler. For more information about the available formatters and how to choose one manually, see *Formatters for printf*, page 148 and *Formatters for scanf*, page 150, respectively.
- 4 To enable C-SPY emulated I/O, choose **Project>Options>General Options>Library Configuration** and choose **Semihosted** (`--semihosted`) or **IAR breakpoint** (`--semihosting=iar_breakpoint`).

**Note:** For some Cortex-M devices it is also possible to direct `stdout/stderr` via SWO. This can significantly improve `stdout/stderr` performance compared to semihosting. For hardware requirements, see the *C-SPY® Debugging Guide for Arm*.



To enable `stdout` via SWO on the command line, use the linker option `--redirect __iar_sh_stdout=__iar_sh_stdout_swo`.



To enable `stdout` via SWO in the IDE, select the **Semihosted** option and the **stdout/stderr via SWO** option.



See *Briefly about C-SPY emulated I/O*, page 134 and *The semihosting mechanism*, page 151.

- 5 On some systems, terminal output might be slow because the host computer and the target system must communicate for each character.

For this reason, a replacement for the `__write` function called `__write_buffered` is included in the runtime library. This module buffers the output and sends it to the debugger one line at a time, speeding up the output.

**Note:** This function uses about 80 bytes of RAM memory.



To use this feature in the IDE, choose **Project>Options>General Options>Library Options 1** and select the option **Buffered terminal output**.



To enable this function on the command line, add this to the linker command line:

```
--redirect __write=__write_buffered
```

- 6 Some math functions are available in different versions—default versions, smaller than the default versions, and larger but more accurate than default versions. Consider which versions you should use.

For more information, see *Math functions*, page 152.

- 7 When you build your project, a suitable prebuilt library and library configuration file are automatically used based on the project settings you made.

For information about which project settings affect the choice of library file, see *Runtime library configurations*, page 142.

You have now set up a runtime environment that can be used while developing your application source code.

## RETARGETING—ADAPTING FOR YOUR TARGET SYSTEM

Before you can run your application on your target system, you must adapt some parts of the runtime environment, typically the system initialization and the DLIB low-level I/O interface functions.

### To adapt your runtime environment for your target system:

- I Adapt system initialization.

It is likely that you must adapt the system initialization, for example, your application might need to initialize interrupt handling, I/O handling, watchdog timers, etc. You do this by implementing the routine `__low_level_init`, which is executed before the data sections are initialized. See *System startup and termination*, page 153 and *System initialization*, page 157.

**Note:** You can find device-specific examples on this in the example projects provided in the product installation, see the Information Center.

- 2 Adapt the runtime library for your target system. To implement such functions, you need a good understanding of the DLIB low-level I/O interface, see *Briefly about retargeting*, page 134.

Typically, you must implement your own functions if your application uses:

- Standard streams for input and output
 

If any of these streams are used by your application, for example by the functions `printf` and `scanf`, you must implement your versions of the low-level functions `__read` and `__write`.

The low-level functions identify I/O streams, such as an open file, with a file handle that is a unique integer. The I/O streams normally associated with `stdin`, `stdout`, and `stderr` have the file handles 0, 1, and 2, respectively. When the handle is -1, all streams should be flushed. Streams are defined in `stdio.h`.
- File input and output
 

The library contains a large number of powerful functions for file I/O operations, such as `fopen`, `fclose`, `fprintf`, `fputs`, etc. All these functions call a small set of low-level functions, each designed to accomplish one particular task, for example, `__open` opens a file, and `__write` outputs characters. Implement your version of these low-level functions.
- `signal` and `raise`

If the default implementation of these functions does not provide the functionality you need, you can implement your own versions.
- Time and date
 

To make the time and date functions work, you must implement the functions `clock`, `__time32`, `__time64`, and `__getzone`. Whether you use `__time32` or `__time64` depends on which interface you use for `time_t`, see *time.h*, page 550.
- Assert, see `__aeabi_assert`, page 159.
- Environment interaction
 

If the default implementation of `system` or `getenv` does not provide the functionality you need, you can implement your own versions.

For more information about the functions, see *The DLIB low-level I/O interface*, page 158.

The library files that you can override with your own versions are located in the `arm\src\lib` directory.

- 3 When you have implemented your functions of the low-level I/O interface, you must add your version of these functions to your project. For information about this, see *Overriding library modules*, page 139.

**Note:** If you have implemented a DLIB low-level I/O interface function and added it to a project that you have built with support for C-SPY emulated I/O, your low-level function will be used and not the functions provided with C-SPY emulated I/O. For example, if you implement your own version of `__write`, output to the C-SPY

**Terminal I/O** window will not be supported. See *Briefly about C-SPY emulated I/O*, page 134.

- 4 Before you can execute your application on your target system, you must rebuild your project with a Release build configuration. This means that the linker will not include the C-SPY emulated I/O mechanism and the low-level I/O functions it provides. If your application calls any of the low-level functions of the standard I/O interface, either directly or indirectly, and your project does not contain these, the linker will issue an error for every missing low-level function.

**Note:** By default, the `NDEBUG` symbol is defined in a Release build configuration, which means asserts will no longer be checked. For more information, see `__aeabi_assert`, page 159.

## OVERRIDING LIBRARY MODULES

### To override a library function and replace it with your own implementation:

- 1 Use a template source file—a library source file or another template—and place a copy of it in your project directory.

The library files that you can override with your own versions are located in the `arm\src\lib` directory.

- 2 Modify the file.

**Note:** To override the functions in a module, you must provide alternative implementations for all the needed symbols in the overridden module. Otherwise you will get error messages about duplicate definitions.

- 3 Add the modified file to your project, like any other source file.

**Note:** If you have implemented a DLIB low-level I/O interface function and added it to a project that you have built with support for C-SPY emulated I/O, your low-level function will be used and not the functions provided with C-SPY emulated I/O. For example, if you implement your own version of `__write`, output to the C-SPY **Terminal I/O** window will not be supported. See *Briefly about C-SPY emulated I/O*, page 134.

You have now finished the process of overriding the library module with your version.

## CUSTOMIZING AND BUILDING YOUR OWN RUNTIME LIBRARY

If the prebuilt library configurations do not meet your requirements, you can customize your own library configuration, but that requires that you *rebuild* relevant parts of the library.

**Note:** Customizing and building your own runtime library requires access to the library source code, which is not available for all types of IAR Embedded Workbench licenses.

Building a customized library is a complex process. Therefore, consider carefully whether it is really necessary. You must build your own runtime library when:

- You want to define your own library configuration with support for locale, file descriptors, multibyte characters, etc. This will include or exclude certain parts of the DLIB runtime environment.

In those cases, you must:

- Make sure that you have installed the library source code (`src\lib`). If not already installed, you can install it using the IAR License Manager, see the *Licensing Guide*.
- Set up a library project
- Make the required library customizations
- Build your customized runtime library
- Finally, make sure your application project will use the customized runtime library.

Note that the customized library only replaces the part of the DLIB runtime environment implemented in the libraries for C and C++ library functions.

Rebuilding libraries for the following is not supported:

- math functions
- runtime support functions
- thread support functions
- timezone and daylight saving time functions
- debug support functions

### To set up a library project:

- I In the IDE, choose **Project>Create New Project** and use the library project template which can be used for customizing the runtime environment configuration. There is a library template for the Full library configuration, see *Runtime library configurations*, page 142

**Note:** When you create a new library project from a template, the majority of the files included in the new project are the original installation files. If you are going to modify these files, make copies of them first and replace the original files in the project with these copies.

### To customize the library functionality:

- 1 The library functionality is determined by a set of *configuration symbols*. The default values of these symbols are defined in the file `DLib_Defaults.h` which you can find in `arm\inc\c`. This read-only file describes the configuration possibilities. Note that you should not modify this file.

In addition, you can create your own *library configuration file* by making a copy of the file `DLib_Config_configuration.h`—which you can find in the `arm\inc\c` directory—and customize it by setting the values of the configuration symbols according to the application requirements.

For information about configuration symbols that you might want to customize, see:

- *Configuration symbols for file input and output*, page 168
- *Locale*, page 168
- *Managing a multithreaded environment*, page 169

- 2 When you are finished, build your library project with the appropriate project options.

After you build your library, you must make sure to use it in your application project.



To build IAR Embedded Workbench projects from the command line, use the IAR Command Line Build Utility (`iarbuild.exe`). However, no make or batch files for building the library from the command line are provided.

For information about the build process and the IAR Command Line Build Utility, see the *IDE Project Management and Building Guide for Arm*.

### To use the customized runtime library in your application project:

- 1 In the IDE, choose **Project>Options>General Options** and click the **Library Configuration** tab.
- 2 From the **Library** drop-down menu, choose **Custom**.
- 3 In the **Configuration file** text box, locate your library configuration file.
- 4 Click the **Library** tab, also in the **Linker** category. Use the **Additional libraries** text box to locate your library file.

---

## Additional information on the runtime environment

This section gives additional information on the runtime environment:

- *Bounds checking functionality*, page 142
- *Runtime library configurations*, page 142
- *Prebuilt runtime libraries*, page 143
- *Formatters for printf*, page 148
- *Formatters for scanf*, page 150
- *The C-SPY emulated I/O mechanism*, page 151
- *The semihosting mechanism*, page 151
- *Math functions*, page 152
- *System startup and termination*, page 153
- *System initialization*, page 157
- *The DLIB low-level I/O interface*, page 158
- *Configuration symbols for file input and output*, page 168
- *Locale*, page 168

### BOUNDS CHECKING FUNCTIONALITY

To enable the bounds checking functions specified in Annex K (*Bounds-checking interfaces*) of the C standard, define the preprocessor symbol `__STDC_WANT_LIB_EXT1__` to 1 prior to including any system headers. See *C bounds-checking interface*, page 549.

### RUNTIME LIBRARY CONFIGURATIONS

The runtime library is provided with different *library configurations*, where each configuration is suitable for different application requirements.

The runtime library configuration is defined in the *library configuration file*. It contains information about what functionality is part of the runtime environment. The less functionality you need in the runtime environment, the smaller the environment becomes.

These predefined library configurations are available:

Library configuration	Description
Normal DLIB (default)	C locale, but no locale interface, no file descriptor support, no multibyte characters in <code>printf</code> and <code>scanf</code> .
Full DLIB	Full locale interface, C locale, file descriptor support, and optionally multibyte characters in <code>printf</code> and <code>scanf</code> .

Table 6: Library configurations

**Note:** In addition to these predefined library configurations, you can provide your own configuration, see *Customizing and building your own runtime library*, page 140

If you do not specify a library configuration explicitly you will get the default configuration. If you use a prebuilt runtime library, a configuration file that matches the runtime library file will automatically be used. See *Setting up the runtime environment*, page 135.

**Note:** If you use the Libc++ library, you will automatically get the Full configuration. This is the only configuration that exists for Libc++.

### To override the default library configuration, use one of these methods:

- 1 Use a prebuilt configuration of your choice—to specify a runtime configuration explicitly:



Choose **Project>Options>General Options>Library Configuration>Library** and change the default setting.



Use the `--dlib_config` compiler option, see *--dlib\_config*, page 325.

The prebuilt libraries are based on the default configurations, see *Runtime library configurations*, page 142.

- 2 If you have built your own customized library, choose **Project>Options>General Options>Library Configuration>Library** and choose **Custom** to use your own configuration. For more information, see *Customizing and building your own runtime library*, page 140.

## PREBUILT RUNTIME LIBRARIES

The prebuilt runtime libraries are configured for different combinations of these options:

- Processor variant
- Data model
- Library configuration—Normal or Full.

The linker will automatically include the correct library files and library configuration file. To explicitly specify a library configuration, use the `--dlib_config` compiler option.

**Note:** If you use the Libc++ library, you will automatically get the Full library configuration. This is the only configuration that exists for Libc++. The `--dlib_config` compiler option cannot be used to specify another configuration.



## Library filename syntax

The names of the libraries are constructed from these elements:

<i>arch</i>	<p>Specifies the CPU architecture:</p> <p>4t = Armv4T</p> <p>5E = Armv5E</p> <p>6M or 6Mx = Armv6M (6Mx is built with <code>--no_literal_pool</code>)</p> <p>7M or 7Mx = Armv7M (7Mx is built with <code>--no_literal_pool</code>)</p> <p>7Sx = Armv7-A and Armv7-R, built with <code>--no_literal_pool</code></p> <p>4as = Generic Armv4, built with bounds-checking</p> <p>7as = Generic Armv7, built with bounds-checking</p> <p>8A = Armv8-A</p>
<i>mode</i>	<p>Specifies the default processor/execution mode:</p> <p>a = Arm mode</p> <p>t = Thumb mode</p> <p>x = 64-bit mode</p>
<i>endian</i>	<p>Specifies the byte order:</p> <p>l = little-endian</p> <p>b = big-endian</p>
<i>lib-config</i>	<p>Specifies the library configuration:</p> <p>n = Normal</p> <p>f = Full</p>
<i>rwpi</i>	<p>Specifies whether the library supports RWPI:</p> <p>s = RWPI supported, using offsets relative to the static base register (R9)</p> <p>g = RWPI supported, using offsets relative to the global offset table (GOT)</p> <p>not present = no RWPI support</p>
<i>fp</i>	<p>Specifies how floating-point operations are implemented:</p> <p>v = VFP</p> <p>s = VFP for single precision only</p> <p>not present = software implementation</p>

<i>abi</i>	Specifies the data model in <b>64-bit mode</b> : 44 = ILP32 (4-byte long, 4-byte pointers) 88 = LP64 (8-byte long, 8-byte pointers) not present = the library is for use in <b>32-bit mode</b>
<i>debug-interface</i>	Specifies a semihosting mechanism: s = SVC b = BKPT i = IAR-breakpoint
<i>pacbti</i>	Specifies whether the library supports branch protection (PACBTI): p = PACBTI supported not present = no support for PACBTI

You can find the library object files in the directory `arm\lib\` and the library configuration files in the directory `arm\inc\`.

### Groups of library files

The libraries are delivered in groups of library functions:

#### **Library files for C library functions**

These are the functions defined by Standard C, for example, functions like `printf` and `scanf`. Note that this library does not include math functions.

The names of the library files are constructed in the following way:

```
dl{arch}_{mode}{endian}{lib-config}[rwp][abi][pacbti].a
```

which more specifically means

```
dl{4t|5E|6M|6Mx|7M|7Mx|7Sx|8A}_{a|t|x}{l|b}{n|f}[s|g][44|88][p].a
```

#### **Library files for C++ library functions**

These are the functions defined by C++, compiled with support for Standard C++.

There are separate libraries for the Dinkumware C++14 library (`dlpp`) and the Libc++ C++17 library (`dllibcpp`).

The names of the library files are constructed in the following way:

```
dlpp{arch}_{mode}{endian}{fp}_{lib-config}c[rwp][abi][pacbti].a  
dllibcpp{arch}_{mode}{endian}{fp}_fc[rwp][abi][pacbti].a
```

which more specifically means:

```
dllib{4t|5E|6M|6Mx|7M|7Mx|7Sx|4as|7as|8A}_{a|t|x}{l|b}{v|s|}_{n|f}
c[s|g][44|88][p].a
dllibcpp{4t|5E|6M|6Mx|7M|7Mx|7Sx|4as|7as|8A}_{a|t|x}{l|b}{v|s|}_f
c[s|g][44|88][p].a
```

### **Library files for C++ runtime library functions**

These are the runtime functions needed for C++, used for both the Libc++ and the DLIB C++ libraries.

The names of the library files are constructed in the following way:

```
dllibrt{arch}_{mode}{endian}_{lib-config}c[rwpi][abi][pacbti].a
```

which more specifically means

```
dllibrt{4t|5E|6M|6Mx|7M|7Mx|7Sx|4as|7as|8A}_{a|t|x}{l|b}_{n|f}c[s|
g][44|88][p].a
```

### **Library files for math functions**

These are the functions for floating-point arithmetic and functions with a floating-point type in its signature as defined by Standard C, for example, functions like `sqrt`.

The names of the library files are constructed in the following way:

```
m{arch}_{mode}{endian}[fp][rwpi][abi][pacbti].a
```

which more specifically means

```
m{4t|5E|6M|6Mx|7M|7Mx|7Sx|8A}_{a|t|x}{l|b}{v|s}[g][44|88][p].a
```

### **Library files for thread support functions**

These are the functions for thread support.

The names of the library files are constructed in the following way:

```
th{arch}_{mode}{endian}{lib-config}[abi][pacbti].a
```

which more specifically means

```
th{4t|5E|6M|6Mx|7M|7Mx|7Sx|8A}_{a|t|x}{l|b}{n|f}[44|88][p].a
```

### **Library files for timezone and daylight saving time support functions**

These are the functions with support for timezone and daylight saving time functionality.

The names of the library files are constructed in the following way:

```
tz{arch}_{mode}{endian}[rwpi][abi][pacbti].a
```

which more specifically means

```
tz{4t|5E|6M|6Mx|7M|7Mx|7Sx|8A}_{a|t|x}{l|b}[s|g][44|88][p].a
```

### **Library files for runtime support functions**

These are functions for system startup, initialization, non floating-point AEABI support routines, and some of the functions that are part of Standard C and C++.

The names of the library files are constructed in the following way:

```
rt{arch}_{mode}{endian}[rwpi][abi][pacbti].a
```

which more specifically means

```
rt{4t|5E|6M|6Mx|7M|7Mx|7Sx|8A}_{a|t|x}{l|b}[g][44|88][p].a
```

### **Library files for debug support functions**

These are functions for debug support for the semihosting interface. The names of the library files are constructed in the following way:

```
sh{debug-interface}_{endian}[rwpi][pacbti].a
```

or

```
sh{arch}_{endian}[rwpi][abi][pacbti].a
```

which more specifically means

```
sh{s|b|i}_{l|b}[g][p].a
```

or

```
sh{6Mx|7Mx|7Sx|8A}_{l|b}[g][44|88][p].a
```

## **FORMATTERS FOR PRINTF**

The `printf` function uses a formatter called `_Printf`. The full version is quite large, and provides facilities not required in many embedded applications. To reduce the memory consumption, three smaller, alternative versions are also provided. Note that the `wprintf` variants are not affected.

This table summarizes the capabilities of the different formatters:

Formatting capabilities	Tiny	Small/ SmallNoMb†	Large/ LargeNoMb†	Full/ FullNoMb†
Basic specifiers <code>c</code> , <code>d</code> , <code>i</code> , <code>o</code> , <code>p</code> , <code>s</code> , <code>u</code> , <code>X</code> , <code>x</code> , and <code>%</code>	Yes	Yes	Yes	Yes
Multibyte support	No	Yes/No	Yes/No	Yes/No
Floating-point specifiers <code>a</code> , and <code>A</code>	No	No	No	Yes
Floating-point specifiers <code>e</code> , <code>E</code> , <code>f</code> , <code>F</code> , <code>g</code> , and <code>G</code>	No	No	Yes	Yes
Conversion specifier <code>n</code>	No	No	Yes	Yes
Format flag <code>+</code> , <code>-</code> , <code>#</code> , <code>0</code> , and space	No	Yes	Yes	Yes
Length modifiers <code>h</code> , <code>l</code> , <code>L</code> , <code>s</code> , <code>t</code> , and <code>Z</code>	No	Yes	Yes	Yes
Field width and precision, including <code>*</code>	No	Yes	Yes	Yes
<code>long long</code> support	No	No	Yes	Yes
<code>wchar_t</code> support	No	No	No	Yes

Table 7: Formatters for `printf`

† NoMb means without multibytes.

The compiler can automatically detect which formatting capabilities are needed in a direct call to `printf`, if the formatting string is a string literal. This information is passed to the linker, which combines the information from all modules to select a suitable formatter for the application. However, if the formatting string is a variable, or if the call is indirect through a function pointer, the compiler cannot perform the analysis, forcing the linker to select the Full formatter. In this case, you might want to override the automatically selected `printf` formatter.



### To override the automatically selected `printf` formatter in the IDE:

- 1 Choose **Project>Options>General Options** to open the **Options** dialog box.
- 2 On the **Library Options** page, select the appropriate formatter.



### To override the automatically selected `printf` formatter from the command line:

- 1 Use one of these ILink command line options:

```
--redirect _Printf=_PrintfFull
--redirect _Printf=_PrintfFullNoMb
--redirect _Printf=_PrintfLarge
--redirect _Printf=_PrintfLargeNoMb
--redirect _Printf=_PrintfSmall
--redirect _Printf=_PrintfSmallNoMb
--redirect _Printf=_PrintfTiny
--redirect _Printf=_PrintfTinyNoMb
```

If the compiler does not recognize multibyte support, you can enable it:



Select **Project>Options>General Options>Library Options 1>Enable multibyte support**.



Use the linker option `--printf_multibytes`.

## FORMATTERS FOR SCANF

In a similar way to the `printf` function, `scanf` uses a common formatter, called `_Scanf`. The full version is quite large, and provides facilities that are not required in many embedded applications. To reduce the memory consumption, two smaller, alternative versions are also provided. Note that the `wscanf` versions are not affected.

This table summarizes the capabilities of the different formatters:

Formatting capabilities	Small/ SmallNoMb†	Large/ LargeNoMb†	Full/ FullNoMb†
Basic specifiers <code>c</code> , <code>d</code> , <code>i</code> , <code>o</code> , <code>p</code> , <code>s</code> , <code>u</code> , <code>X</code> , <code>x</code> , and <code>%</code>	Yes	Yes	Yes
Multibyte support	Yes/No	Yes/No	Yes/No
Floating-point specifiers <code>a</code> , and <code>A</code>	No	No	Yes
Floating-point specifiers <code>e</code> , <code>E</code> , <code>f</code> , <code>F</code> , <code>g</code> , and <code>G</code>	No	No	Yes
Conversion specifier <code>n</code>	No	No	Yes
Scan set [ and ]	No	Yes	Yes
Assignment suppressing *	No	Yes	Yes
<code>long long</code> support	No	No	Yes
<code>wchar_t</code> support	No	No	Yes

Table 8: Formatters for `scanf`

† NoMb means without multibytes.

The compiler can automatically detect which formatting capabilities are needed in a direct call to `scanf`, if the formatting string is a string literal. This information is passed to the linker, which combines the information from all modules to select a suitable formatter for the application. However, if the formatting string is a variable, or if the call is indirect through a function pointer, the compiler cannot perform the analysis, forcing the linker to select the full formatter. In this case, you might want to override the automatically selected `scanf` formatter.



### To manually specify the `scanf` formatter in the IDE:

- 1 Choose **Project>Options>General Options** to open the **Options** dialog box.
- 2 On the **Library Options** page, select the appropriate formatter.

**To manually specify the scanf formatter from the command line:**

1 Use one of these ILINK command line options:

```
--redirect _Scanf=_ScanfFull
--redirect _Scanf=_ScanfFullNoMb
--redirect _Scanf=_ScanfLarge
--redirect _Scanf=_ScanfLargeNoMb
--redirect _Scanf=_ScanfSmall
--redirect _Scanf=_ScanfSmallNoMb
```

If the compiler does not recognize multibyte support, you can enable it:



Select **Project>Options>General Options>Library Options 1>Enable multibyte support**.



Use the linker option `--scanf_multibytes`.

**THE C-SPY EMULATED I/O MECHANISM**

- 1 The debugger will detect the presence of the function `__DebugBreak`, which will be part of the application if you linked it with the linker option for C-SPY emulated I/O.
- 2 In this case, the debugger will automatically set a breakpoint at the `__DebugBreak` function.
- 3 When your application calls a function in the DLIB low-level I/O interface, for example, `open`, the `__DebugBreak` function is called, which will cause the application to stop at the breakpoint and perform the necessary services.
- 4 The execution will then resume.

See also *Briefly about C-SPY emulated I/O*, page 134.

**THE SEMIHOSTING MECHANISM**

C-SPY emulated I/O is compatible with the semihosting interface provided by Arm Limited. When an application invokes a semihosting call, the execution stops at a debugger breakpoint. The debugger then handles the call, performs any necessary actions on the host computer and then resumes the execution.

There are three variants of semihosting mechanisms available:

- For Cortex-M, the interface uses `BKPT` instructions to perform semihosting calls
- For other Arm cores, `SVC` instructions are used for the semihosting calls **in 32-bit mode**
- **In 64-bit mode**, `HLT` instructions are used for the semihosting calls
- *IAR breakpoint*, which is an IAR-specific alternative to semihosting that uses `SVC`.

To support semihosting via SVC, the debugger must set its semihosting breakpoint on the Supervisor Call vector to catch SVC calls. If your application uses SVC calls for other purposes than semihosting, the handling of this breakpoint will cause a severe performance penalty for each such call. IAR breakpoint is a way to get around this. By using a special function call instead of an SVC instruction to perform semihosting, the semihosting breakpoint can be set on that special function instead. This means that semihosting will not interfere with other uses of the Supervisor Call vector.

**Note:** IAR breakpoint is an IAR-specific extension of the semihosting standard. If you link your application with libraries built with toolchains from other vendors than IAR and use IAR breakpoint, semihosting calls made from code in those libraries will not work.

## MATH FUNCTIONS

Some C/C++ standard library math functions are available in different versions:

- The default versions
- Smaller versions (but less accurate)
- More accurate versions (but larger).

### Smaller versions

The functions `cos`, `exp`, `log`, `log2`, `log10`, `pow`, `sin`, and `tan` exist in additional, smaller versions in the library. They are about 20% smaller and about 20% faster than the default versions. The functions handle INF and NaN values. The drawbacks are that they almost always lose some precision and they do not have the same input range as the default versions.

The names of the functions are constructed like:

```
__iar_xxx_small<f|l>
```

where `f` is used for `float` variants, `l` is used for `long double` variants, and no suffix is used for `double` variants.



### To specify smaller math functions on the command line:

- 1 Specify the command line option `--small_math` to the linker.
- 2 Link your application and the complete set will be used.

### More accurate versions

The functions `cos`, `pow`, `sin`, and `tan` exist in versions in the library that are more exact and can handle larger argument ranges. The drawback is that they are larger and slower than the default versions.



The names of the functions are constructed like:

```
__iar_xxx_accurate<f|l>
```

where `f` is used for `float` variants, `l` is used for `long double` variants, and no suffix is used for `double` variants.



### To specify more accurate math functions on the command line:

- 1 Specify the command line option `--accurate_math` to the linker.
- 2 Link your application and the complete set will be used.

## SYSTEM STARTUP AND TERMINATION

This section describes the runtime environment actions performed during startup and termination of your application.

The code for handling startup and termination is located in the source files `cstartup.s`, `cmain.s`, `cexit.s` located in the `arm\src\lib\arm`, `arm\src\lib\thumb` (for Cortex-M), or `arm\src\lib\arm64` directory, and `low_level_init.c` located in the `arm\src\lib\runtime` directory.


**Note:** To install some of these files, you must extract the IAR Library Source package.

For information about how to customize the system startup code, see *System initialization*, page 157.

### System startup


During system startup, an initialization sequence is executed before the `main` function is entered. This sequence performs initializations required for the target hardware and the C/C++ environment.

For the hardware initialization, it looks like this:

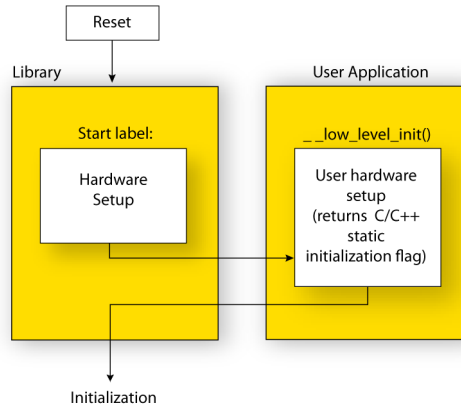

- When the CPU is reset it will start executing at the program entry label `__iar_program_start` in the system startup code. Note that **in 64-bit mode**, it is setup by the linker symbol `__Reset_address`.
- **In 64-bit mode**, the program is traversed from the exception level entered at hard reset to exception level 1.
- The stack pointer is initialized to the end of the `CSTACK` block
- For Arm7/9/11, Cortex-A, and Cortex-R devices, exception stack pointers are initialized to the end of each corresponding section
- The function `__low_level_init` is called if you defined it, giving the application a chance to perform early initializations.

For the C/C++ initialization, it looks like this:

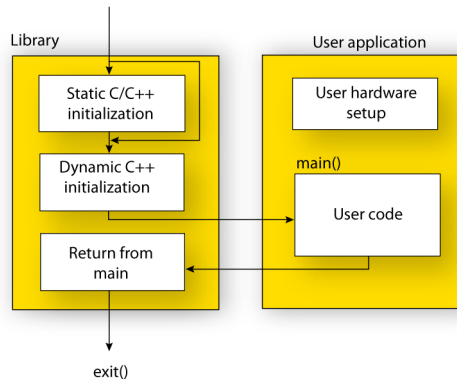


- Static and global variables are initialized. That is, zero-initialized variables are cleared and the values of other initialized variables are copied from ROM to RAM memory. This step is skipped if `__low_level_init` returns zero. For more information, see *Initialization at system startup*, page 104.
- Static C++ objects are constructed
- The `main` function is called, which starts the application.

For information about the initialization phase, see *Application execution—an overview*, page 66.

## System termination

This illustration shows the different ways an embedded application can terminate in a controlled way:

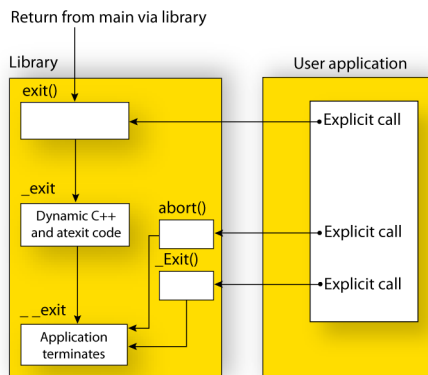

An application can terminate normally in two different ways:

- Return from the `main` function
- Call the `exit` function.

Because the C standard states that the two methods should be equivalent, the system startup code calls the `exit` function if `main` returns. The parameter passed to the `exit` function is the return value of `main`.

The default `exit` function is written in C. It calls a small assembler function `_exit` that will:

- Call functions registered to be executed when the application ends. This includes C++ destructors for static and global variables, and functions registered with the standard function `atexit`. See also *Setting up the atexit limit*, page 120.
- Close all open files
- Call `__exit`
- When `__exit` is reached, stop the system.

An application can also exit by calling the `abort`, the `_Exit`, or the `quick_exit` function. The `abort` function just calls `__exit` to halt the system, and does not perform any type of cleanup. The `_Exit` function is equivalent to the `abort` function, except for the fact that `_Exit` takes an argument for passing exit status information. The `quick_exit` function is equivalent to the `_Exit` function, except that it calls each function passed to `at_quick_exit` before calling `__exit`.

If you want your application to do anything extra at exit, for example, resetting the system (and if using `atexit` is not sufficient), you can write your own implementation of the `__exit(int)` function.

The library files that you can override with your own versions are located in the `arm\src\lib` directory. See *Overriding library modules*, page 139.

### C-SPY debugging support for system termination

If you have enabled C-SPY emulated I/O during linking, the normal `__exit` function is replaced with a special one. C-SPY will then recognize when this function is called and can take appropriate actions to emulate program termination. For more information, see *Briefly about C-SPY emulated I/O*, page 134.

## SYSTEM INITIALIZATION

It is likely that you need to adapt the system initialization. For example, your application might need to initialize memory-mapped special function registers (SFRs), or omit the default initialization of data sections performed by the system startup code.

You can do this by implementing your own version of the routine `__low_level_init`, which is called from the `cmain.s` file before the data sections are initialized. Modifying the `cmain.s` file directly should be avoided.

The code for handling system startup is located in the source files `cstartup.s` and `low_level_init.c`. `cstartup.s` is located in the `arm\src\lib\arm`, `arm\src\lib\thumb` (for Cortex-M), or `arm\src\lib\a64` directory, and `low_level_init.c` is located in the `arm\src\lib\runtime` directory.

Note that normally, you do not need to customize either of the files `cmain.s` or `cexit.s`.

**Note:** Regardless of whether you implement your own version of `__low_level_init` or the file `cstartup.s`, you do not have to rebuild the library.

### Customizing `__low_level_init`

A skeleton low-level initialization file is supplied with the product—`low_level_init.c`.

**Note:** Static initialized variables cannot be used within the file, because variable initialization has not been performed at this point.

The value returned by `__low_level_init` determines whether or not data sections should be initialized by the system startup code. If the function returns 0, the data sections will not be initialized.

## Modifying the `cstartup` file

As noted earlier, you should not modify the `cstartup.s` file if implementing your own version of `__low_level_init` is enough for your needs. However, if you do need to modify the `cstartup.s` file, we recommend that you follow the general procedure for creating a modified copy of the file and adding it to your project, see *Overriding library modules*, page 139.

**Note:** You must make sure that the linker uses the start label used in your version of `cstartup.s`. For information about how to change the start label used by the linker, see *--entry*, page 384.

For Cortex-M, you must create a modified copy of `cstartup_M.s` or `cstartup_M.c` to use interrupts or other exception handlers.

## THE DLIB LOW-LEVEL I/O INTERFACE

The runtime library uses a set of low-level functions—which are referred to as the *DLIB low-level I/O interface*—to communicate with the target system. Most of the low-level functions have no implementation.

For more information, see *Briefly about input and output (I/O)*, page 132.

These are the functions in the DLIB low-level I/O interface:

- `abort`
- `__acabi_assert`
- `clock`
- `__close`
- `__exit`
- `getenv`
- `__getzone`
- `__lseek`
- `__open`
- `raise`
- `__read`
- `remove`
- `rename`
- `signal`
- `system`
- `__time32`, `__time64`
- `__write`

**Note:** You should normally not use the low-level functions prefixed with `__` directly in your application. Instead you should use the standard library functions that use these functions. For example, to write to `stdout`, you should use standard library functions like `printf` or `puts`, which in turn calls the low-level function `__write`. If you have forgot to implement a low-level function and your application calls that function via a standard library function, the linker issues an error when you link in release build configuration.

**Note:** If you implement your own variants of the functions in this interface, your variants will be used even though you have enabled C-SPY emulated I/O, see *Briefly about C-SPY emulated I/O*, page 134.

## abort

Source file	<code>arm\src\lib\runtime\abort.c</code>
Declared in	<code>stdlib.h</code>
Description	Standard C library function that aborts execution.
C-SPY debug action	Exits the application.
Default implementation	Calls <code>__exit(EXIT_FAILURE)</code> .
See also	<i>Briefly about retargeting</i> , page 134 <i>System termination</i> , page 156.

## \_\_aeabi\_assert

Source file	<code>arm\src\lib\runtime\assert.c</code>
Declared in	<code>assert.h</code>
Description	Low-level function that handles a failed assert.
C-SPY debug action	Notifies the C-SPY debugger about the failed assert.
Default implementation	Failed asserts are reported by the function <code>__aeabi_assert</code> . By default, it prints an error message and calls <code>abort</code> . If this is not the behavior you require, you can implement your own version of the function.

The assert macro is defined in the header file `assert.h`. To turn off assertions, define the symbol `NDEBUG`.



In the IDE, the symbol `NDEBUG` is by default defined in a Release project and *not* defined in a Debug project. If you build from the command line, you must explicitly define the symbol according to your needs. See *NDEBUG*, page 536.

See also *Briefly about retargeting*, page 134.

## clock

Source file	<code>arm\src\lib\time\clock.c</code>
Declared in	<code>time.h</code>
Description	Standard C library function that accesses the processor time.  It is assumed that <code>clock</code> counts seconds. If this is not the case, and <code>CLOCKS_PER_SEC</code> is used, <code>CLOCKS_PER_SEC</code> should be set to the actual number of ticks per second prior to using <code>time.h</code> . The C++ header <code>chrono</code> uses <code>CLOCKS_PER_SEC</code> when implementing the function <code>now()</code> .
C-SPY debug action	Returns the clock on the host computer.
Default implementation	Returns <code>-1</code> to indicate that processor time is not available.
See also	<i>Briefly about retargeting</i> , page 134.

## \_\_close

Source file	<code>arm\src\lib\file\close.c</code>
Declared in	<code>LowLevelIOInterface.h</code>
Description	Low-level function that closes a file.
C-SPY debug action	Closes the associated host file on the host computer.
Default implementation	None.
See also	<i>Briefly about retargeting</i> , page 134.



## \_\_exit

Source file	arm\src\lib\runtime\xxexit.c
Declared in	LowLevelIOInterface.h
Description	Low-level function that halts execution.
C-SPY debug action	Notifies that the end of the application was reached.
Default implementation	Loops forever.
See also	<i>Briefly about retargeting</i> , page 134 <i>System termination</i> , page 156.

## getenv

Source file	arm\src\lib\runtime\getenv.c arm\src\lib\runtime\environ.c
Declared in	Stdlib.h and LowLevelIOInterface.h
C-SPY debug action	Accesses the host environment.
Default implementation	<p>The <code>getenv</code> function in the library searches the string pointed to by the global variable <code>__environ</code>, for the key that was passed as argument. If the key is found, the value of it is returned, otherwise 0 (zero) is returned. By default, the string is empty.</p> <p>To create or edit keys in the string, you must create a sequence of null-terminated strings where each string has the format:</p> <pre>key=value\0</pre> <p>End the string with an extra null character (if you use a C string, this is added automatically). Assign the created sequence of strings to the <code>__environ</code> variable.</p> <p>For example:</p> <pre>const char MyEnv[] = "Key=Value\0Key2=Value2\0"; __environ = MyEnv;</pre> <p>If you need a more sophisticated environment variable handling, you should implement your own <code>getenv</code>, and possibly <code>putenv</code> function.</p> <p><b>Note:</b> The <code>putenv</code> function is not required by the standard, and the library does not provide an implementation of it.</p>

See also *Briefly about retargeting*, page 134.

## **\_\_getzone**

Source file	arm\src\lib\time\getzone.c
Declared in	LowLevelIOInterface.h
Description	Low-level function that returns the current time zone. <b>Note:</b> You must enable the time zone functionality in the library by using the linker option <code>--timezone_lib</code> .
C-SPY debug action	Not applicable.
Default implementation	Returns " : ".
See also	<i>Briefly about retargeting</i> , page 134 and <code>--timezone_lib</code> , page 408. For more information, see the source file <code>getzone.c</code> .

## **\_\_lseek**

Source file	arm\src\lib\file\lseek.c
Declared in	LowLevelIOInterface.h
Description	Low-level function for changing the location of the next access in an open file.
C-SPY debug action	Searches in the associated host file on the host computer.
Default implementation	None.
See also	<i>Briefly about retargeting</i> , page 134.

## **\_\_open**

Source file	arm\src\lib\file\open.c
Declared in	LowLevelIOInterface.h
Description	Low-level function that opens a file.

C-SPY debug action      Opens a file on the host computer.

Default implementation    None.

See also                    *Briefly about retargeting*, page 134.

## raise

Source file                `arm\src\lib\runtime\raise.c`

Declared in                `signal.h`

Description                Standard C library function that raises a signal.

C-SPY debug action      Not applicable.

Default implementation    Calls the signal handler for the raised signal, or terminates with call to `__exit(EXIT_FAILURE)`.

See also                    *Briefly about retargeting*, page 134.

## \_\_read

Source file                `arm\src\lib\file\read.c`

Declared in                `LowLevelIOInterface.h`

Description                Low-level function that reads characters from `stdin` and from files.

C-SPY debug action      Directs `stdin` to the **Terminal I/O** window. All other files will read the associated host file.

Default implementation    None.

**Example**

The code in this example uses memory-mapped I/O to read from a keyboard, whose port is assumed to be located at 0x1000:

```
#include <stddef.h>
#include <LowLevelIOInterface.h>

__no_init volatile unsigned char kbIO @ 0x1000;

size_t __read(int handle,
              unsigned char *buf,
              size_t bufSize)
{
    size_t nChars = 0;

    /* Check for stdin
       (only necessary if FILE descriptors are enabled) */
    if (handle != 0)
    {
        return -1;
    }

    for (/*Empty*/; bufSize > 0; --bufSize)
    {
        unsigned char c = kbIO;
        if (c == 0)
            break;

        *buf++ = c;
        ++nChars;
    }

    return nChars;
}
```

For information about the handles associated with the streams, see *Retargeting—Adapting for your target system*, page 137.

For information about the @ operator, see *Controlling data and function placement in memory*, page 252.

**See also**

*Briefly about retargeting*, page 134.

## remove

Source file	<code>arm\src\lib\file\remove.c</code>
Declared in	<code>stdio.h</code>
Description	Standard C library function that removes a file.
C-SPY debug action	Removes a file on the host computer.
Default implementation	Returns 0 to indicate success, but without removing a file.
See also	<i>Briefly about retargeting</i> , page 134.

## rename

Source file	<code>arm\src\lib\file\rename.c</code>
Declared in	<code>stdio.h</code>
Description	Standard C library function that renames a file.
C-SPY debug action	Renames a file on the host computer.
Default implementation	Returns -1 to indicate failure.
See also	<i>Briefly about retargeting</i> , page 134.

## signal

Source file	<code>arm\src\lib\runtime\signal.c</code>
Declared in	<code>signal.h</code>
Description	Standard C library function that changes signal handlers.
C-SPY debug action	Not applicable.
Default implementation	As specified by Standard C. You might want to modify this behavior if the environment supports some kind of asynchronous signals.
See also	<i>Briefly about retargeting</i> , page 134.

**system**

Source file	arm\src\lib\runtime\system.c
Declared in	stdlib.h
Description	Standard C library function that executes commands.
C-SPY debug action	Notifies the C-SPY debugger that <code>system</code> has been called and then returns <code>-1</code> .
Default implementation	The <code>system</code> function available in the library returns <code>0</code> if a null pointer is passed to it to indicate that there is no command processor, otherwise it returns <code>-1</code> to indicate failure. If this is not the functionality that you require, you can implement your own version. This does not require that you rebuild the library.
See also	<i>Briefly about retargeting</i> , page 134.

**\_\_time32, \_\_time64**

Source file	arm\src\lib\time\time.c arm\src\lib\time\time64.c
Declared in	time.h
Description	Low-level functions that return the current calendar time.
C-SPY debug action	Returns the time on the host computer.
Default implementation	Returns <code>-1</code> to indicate that calendar time is not available.
See also	<i>Briefly about retargeting</i> , page 134.

**\_\_write**

Source file	arm\src\lib\file\write.c
Declared in	LowLevelIOInterface.h
Description	Low-level function that writes to <code>stdout</code> , <code>stderr</code> , or a file.
C-SPY debug action	Directs <code>stdout</code> and <code>stderr</code> to the <b>Terminal I/O</b> window. All other files will write to the associated host file.

Default implementation

None.

Example

The code in this example uses memory-mapped I/O to write to an LCD display, whose port is assumed to be located at address 0x1000:

```
#include <stddef.h>
#include <LowLevelIOInterface.h>

__no_init volatile unsigned char lcdIO @ 0x1000;

size_t __write(int handle,
               const unsigned char *buf,
               size_t bufSize)
{
    size_t nChars = 0;

    /* Check for the command to flush all handles */
    if (handle == -1)
    {
        return 0;
    }

    /* Check for stdout and stderr
       (only necessary if FILE descriptors are enabled.) */
    if (handle != 1 && handle != 2)
    {
        return -1;
    }

    for (/* Empty */; bufSize > 0; --bufSize)
    {
        lcdIO = *buf;
        ++buf;
        ++nChars;
    }

    return nChars;
}
```

For information about the handles associated with the streams, see *Retargeting—Adapting for your target system*, page 137.

See also

*Briefly about retargeting*, page 134.

## CONFIGURATION SYMBOLS FOR FILE INPUT AND OUTPUT

File I/O is only supported by libraries with the Full library configuration, see *Runtime library configurations*, page 142, or in a customized library when the configuration symbol `__DLIB_FILE_DESCRIPTOR` is defined. If this symbol is not defined, functions taking a `FILE *` argument cannot be used.

To customize your library and rebuild it, see *Customizing and building your own runtime library*, page 140.

## LOCALE

*Locale* is a part of the C language that allows language and country-specific settings for several areas, such as currency symbols, date and time, and multibyte character encoding.

Depending on which library configuration you are using, you get different levels of locale support. However, the more locale support, the larger your code will get. It is therefore necessary to consider what level of support your application needs. See *Runtime library configurations*, page 142.

The DLIB runtime library can be used in two main modes:

- Using a full library configuration that has a locale interface, which makes it possible to switch between different locales during runtime  
The application starts with the C locale. To use another locale, you must call the `setlocale` function or use the corresponding mechanisms in C++. The locales that the application can use are set up at linkage.
- Using a normal library configuration that does not have a locale interface, where the C locale is hardwired into the application.

**Note:** If multibytes are to be printed, you must make sure that the implementation of `__write` in the DLIB low-level I/O interface can handle them.

## Specifying which locales that should be available in your application



Choose **Project>Options>General Options>Library Options 2>Locale support**.



Use the linker option `--keep` with the tag of the locale as the parameter, for example:

```
--keep _Locale_cs_CZ_iso8859_2
```

The available locales are listed in the file `SupportedLocales.json` in the `arm\config` directory, for example:

```
['Czech language locale for Czech Republic', 'iso8859-2',  
'cs_CZ.iso8859-2', '_Locale_cs_CZ_iso8859_2']
```



The line contains the full locale name, the encoding for the locale, the abbreviated locale name, and the tag to be used as parameter to the linker option `--keep`.

### Changing locales at runtime

The standard library function `setlocale` is used for selecting the appropriate portion of the application's locale when the application is running.

The `setlocale` function takes two arguments. The first one is a locale category that is constructed after the pattern `LC_CATEGORY`. The second argument is a string that describes the locale. It can either be a string previously returned by `setlocale`, or it can be a string constructed after the pattern:

`lang_REGION`

or

`lang_REGION.encoding`

The `lang` part specifies the language code, and the `REGION` part specifies a region qualifier, and `encoding` specifies the multibyte character encoding that should be used. The available encodings are ISO-8859-1, ISO-8859-2, ISO-8859-4, ISO-8859-5, ISO-8859-7, ISO-8859-8, ISO-8859-9, ISO-8859-15, CP932, and UTF-8.

For a complete list of the available locales and their respective encoding, see the file `SupportedLocales.json` in the `arm\config` directory.

#### Example

This example sets the locale configuration symbols to Swedish to be used in Finland and UTF8 multibyte character encoding:

```
setlocale (LC_ALL, "sv_FI.UTF8");
```

---

## Managing a multithreaded environment

This section contains information about:

- *Multithread support in the DLIB runtime environment*, page 170
- *Enabling multithread support*, page 171
- *C++ exceptions in threads*, page 171
- *Setting up thread-local storage (TLS)*, page 171

In a multithreaded environment, the standard library must treat all library objects according to whether they are global or local to a thread. If an object is a true global object, any updates of its state must be guarded by a locking mechanism to make sure that only one thread can update it at any given time. If an object is local to a thread, the

static variables containing the object state must reside in a variable area local to that thread. This area is commonly named *thread-local storage* (TLS).

The low-level implementations of locks and TLS are system-specific, and is not included in the DLIB runtime environment. If you are using an RTOS, check if it provides some or all of the required functions. Otherwise, you must provide your own.

## MULTITHREAD SUPPORT IN THE DLIB RUNTIME ENVIRONMENT

The DLIB runtime environment uses two kinds of locks—*system locks* and *file stream locks*. The file stream locks are used as guards when the state of a file stream is updated, and are only needed in the Full library configuration. The following objects are guarded with system locks:

- The heap (in other words when `malloc`, `new`, `free`, `delete`, `realloc`, or `calloc` is used).
- The C file system (only available in the Full library configuration), but not the file streams themselves. The file system is updated when a stream is opened or closed, in other words when `fopen`, `fclose`, `fdopen`, `fflush`, or `freopen` is used.
- The signal system (in other words when `signal` is used).
- The temporary file system (in other words when `tmpnam` is used).
- C++ dynamically initialized function-local objects with static storage duration.
- C++ locale facet handling
- C++ regular expression handling
- C++ terminate and unexpected handling

These library objects use TLS:

Library objects using TLS	When these functions are used
Error functions	<code>errno</code> , <code>strerror</code>
C++ exception engine	Not applicable

Table 9: Library objects using TLS

**Note:** If you are using `printf/scanf` (or any variants) with formatters, each individual formatter will be guarded, but the complete `printf/scanf` invocation will not be guarded.

If C++ is used in a runtime environment with multithread support, the compiler option `--guard_calls` must be used to make sure that function-static variables with dynamic initializers are not initialized simultaneously by several threads.

## ENABLING MULTITHREAD SUPPORT

### To configure multithread support for use with threaded applications:

- 1 To enable multithread support:



On the command line, use the linker option `--threaded_lib`.

If C++ is used, the compiler option `--guard_calls` should be used as well to make sure that function-static variables with dynamic initializers are not initialized simultaneously by several threads.



In the IDE, choose **Project>Options>General Options>Library Configuration>Enable thread support in the library**. This will invoke the linker option `--threaded_lib` and if C++ is used, the IDE will automatically use the compiler option `--guard_calls` to make sure that function-static variables with dynamic initializers are not initialized simultaneously by several threads.

- 2 To complement the built-in multithread support in the runtime library, you must also:
  - Implement code for the library's system locks interface.
  - If file streams are used, implement code for the library's file stream locks interface.
  - Implement code that handles thread creation, thread destruction, and TLS access methods for the library.

You can find the required declaration of functions in the `DLib_Threads.h` file. There you will also find more information.

- 3 Build your project.

**Note:** If you are using a third-party RTOS, check their guidelines for how to enable multithread support with IAR tools.

## C++ EXCEPTIONS IN THREADS

Using exceptions in threads works as long as the `main` function for the thread has the `noexcept` exception specification. Otherwise non-caught exceptions will not correctly terminate the application.

## SETTING UP THREAD-LOCAL STORAGE (TLS)

Thread-local storage (TLS) is supported in both C (via the `_Thread_local` type specifier introduced in C11) and C++ (via the `thread_local` type specifier introduced in C++11). TLS variables reside in the thread-local storage area, a memory area that must be set up when the thread is created. Any resources used must be returned when the thread is destroyed. In a C++ environment, any TLS object must be created after the thread-local storage area has been set up, and destroyed before the thread-local storage area is destroyed.

If you are using an operating system, refer to the relevant TLS documentation. Additional information can be found in the IAR library header file `DLib_Threads.h`. Information from such specific sources takes precedence over this general overview.

### The main thread

If the linker option `--threaded_lib` has been specified, TLS is active. The regular system startup handles the initialization of the main thread's thread-local storage area. The initialized TLS variables in the main thread are placed in the linker section `.tdata` and the zero-initialized TLS variables are placed in the section `.tbss`. All other threads must set up their thread-local storage area when they are created. If `--threaded_lib` was not specified, content in the `.tdata` and `.tbss` sections is handled as if they were `.data` and `.bss`. However, accesses to such variables are still TLS accesses.

### Acquiring memory for TLS

TLS variables must be placed in memory. Exactly how this is handled does not matter as long as the memory remains available for the duration of the thread's lifetime. The size of the thread-local storage area can be obtained by calling the function `__iar_tls_size` (declared in `DLib_Threads.h`).

Some options for acquiring memory for TLS are:

- Acquire memory from the OS
- Allocate heap memory
- Use space on the stack of a function that does not return until the thread is done
- Use space in a dedicated section.

### Initializing TLS memory

To initialize the TLS memory, call the function `__iar_tls_init` (declared in `DLib_Threads.h`) with a pointer to the memory area.

The initialization function copies the contents of the linker section `__iar_tls$$INIT_DATA` to the memory, and then zero-initializes the remaining memory up to the size of the section `__iar_tls$$DATA`. In a C++ environment, the function `__iar_call_tls_ctors` is also called—it executes all constructors in the section `__iar_tls$$PREINIT_ARRAY`. When the initialization has been performed, the thread-local storage area is ready to use, all TLS variables have their initial values, and in a C++ environment all thread-local objects have been constructed.

### Deallocating TLS memory

When it is time to destroy the thread, the thread-local storage area must also be handled. In a C++ environment, the thread-local objects must be destroyed before the memory

itself is processed. This is achieved by calling the function `__call_thread_dtors` (declared in `DLib_Threads.h`). If the memory was acquired from a handler (like the heap or the OS), that memory must be returned.

As an example, this code snippet allocates the thread-local storage area on the heap. `tp` is a pointer to a thread-control object:

```
/* creating a new thread */
...
/* initialize TLS */
void * tls_mem = malloc(__iar_tls_size()); /* get memory */
__iar_tls_init(tls_mem);                  /* init TLS in the */
                                          /* new memory */
tp->tls_area = tls_mem;                    /* set the thread's */
                                          /* TLS area to the new memory */

...
/* destroying a thread */
...
/* destroy the TLS area */
__call_thread_dtors();                    /* only if C++ is used */
free(tp->tls_area);                        /* return memory */
...
```



# Assembler language interface

- Mixing C and assembler
- Calling assembler routines from C
- Calling assembler routines from C++
- Calling convention
- Call frame information

---

## Mixing C and assembler

The IAR C/C++ Compiler for Arm provides several ways to access low-level resources:

- Modules written entirely in assembler
- Intrinsic functions (the C alternative)
- Inline assembler.

It might be tempting to use simple inline assembler. However, you should carefully choose which method to use.

### INTRINSIC FUNCTIONS

The compiler provides a few predefined functions that allow direct access to low-level processor operations without having to use the assembler language. These functions are known as intrinsic functions. They can be useful in, for example, time-critical routines.

An intrinsic function looks like a normal function call, but it is really a built-in function that the compiler recognizes. The intrinsic functions compile into inline code, either as a single instruction, or as a short sequence of instructions.

For more information about the available intrinsic functions, see the chapter *Intrinsic functions*.

### MIXING C AND ASSEMBLER MODULES

It is possible to write parts of your application in assembler and mix them with your C or C++ modules.

This causes some overhead in the form of function call and return instruction sequences, and the compiler will regard some registers as scratch registers. In many cases, the overhead of the extra instructions can be removed by the optimizer.

An important advantage is that you will have a well-defined interface between what the compiler produces and what you write in assembler. When using inline assembler, you will not have any guarantees that your inline assembler lines do not interfere with the compiler generated code.

When an application is written partly in assembler language and partly in C or C++, you are faced with several questions:

- How should the assembler code be written so that it can be called from C?
- Where does the assembler code find its parameters, and how is the return value passed back to the caller?
- How should assembler code call functions written in C?
- How are global C variables accessed from code written in assembler language?
- Why does not the debugger display the call stack when assembler code is being debugged?

The first question is discussed in the section *Calling assembler routines from C*, page 186. The following two are covered in the section *Calling convention*, page 189.

The answer to the final question is that the call stack can be displayed when you run assembler code in the debugger. However, the debugger requires information about the call frame, which must be supplied as annotations in the assembler source file. For more information, see *Call frame information*, page 199.

The recommended method for mixing C or C++ and assembler modules is described in *Calling assembler routines from C*, page 186, and *Calling assembler routines from C++*, page 189, respectively.

## INLINE ASSEMBLER

Inline assembler can be used for inserting assembler instructions directly into a C or C++ function. Typically, this can be useful if you need to:

- Access hardware resources that are not accessible in C (in other words, when there is no definition for an SFR or there is no suitable intrinsic function available).
- Manually write a time-critical sequence of code that if written in C will not have the right timing.
- Manually write a speed-critical sequence of code that if written in C will be too slow.

An inline assembler statement is similar to a C function in that it can take input arguments (input operands), have return values (output operands), and read or write to



C symbols (via the operands). An inline assembler statement can also declare *clobbered resources*, that is, values in registers and memory that have been overwritten.

### Limitations

Most things you can do in normal assembler language are also possible with inline assembler, with the following differences:

- Alignment cannot be controlled—this means, for example, that `DC32` directives might be misaligned.
- The only accepted register synonyms **in 32-bit mode** are `SP` (for `R13`), `LR` (for `R14`), and `PC` (for `R15`).
- The only accepted register synonyms **in 64-bit mode** are `IP0` (for `X16`), `IP1` (for `X17`), `FP` (for `X29`), and `LR` (for `X30`).
- In general, assembler directives will cause errors or have no meaning. However, data definition directives will work as expected.
- Resources used (registers, memory, etc) that are also used by the C compiler must be declared as operands or clobbered resources.
- If you do not want to risk that the inline assembler statement to be optimized away by the compiler, you must declare it `volatile`.
- Accessing a C symbol or using a constant expression requires the use of operands.
- Dependencies between the expressions for the operands might result in an error.
- The pseudo-instruction `LDR Rd, =expr` is not available from inline assembler.

### Risks with inline assembler

Without operands and clobbered resources, inline assembler statements have no interface with the surrounding C source code. This makes the inline assembler code fragile, and might also become a maintenance problem if you update the compiler in the future. There are also several limitations to using inline assembler without operands and clobbered resources:

- The compiler's various optimizations will disregard any effects of the inline statements, which will not be optimized at all.
- Inlining of functions with assembler statements without declared side-effects will not be done.
- The inline assembler statement will be `volatile` and *clobbered memory* is not implied. This means that the compiler will not remove the assembler statement. It will simply be inserted at the given location in the program flow. The consequences or side-effects that the insertion might have on the surrounding code are not taken into consideration. If, for example, registers or memory locations are altered, they

might have to be restored within the sequence of inline assembler instructions for the rest of the code to work properly.



The following example—for Arm mode—demonstrates the risks of using the `asm` keyword without operands and clobbers:

```
int Add(int term1, int term2)
{
    asm("adds r0,r0,r1");
    return term1;
}
```

In this example:

- The function `Add` assumes that values are passed and returned in registers in a way that they might not always be, for example, if the function is inlined.
- The `s` in the `adds` instruction implies that the condition flags are updated, which you specify using the `cc` clobber operand. Otherwise, the compiler will assume that the condition flags are not modified.

Inline assembler without using operands or clobbered resources is therefore often best avoided. The compiler will issue a remark for them.

## Reference information for inline assembler

The `asm` and `__asm` keywords both insert inline assembler instructions. However, when you compile C source code, the `asm` keyword is not available when the option `--strict` is used. The `__asm` keyword is always available.

### Syntax

The syntax of an inline assembler statement is (similar to the one used by GNU GCC):

```
asm [volatile]( string [assembler-interface])
```

A *string* can contain one or more operations, separated by `\n`. Each operation can be a valid assembler instruction or a data definition assembler directive prefixed by an optional label. There can be no whitespace before the label and it must be followed by `:.`

For example:

```
asm("label:nop\n"
    "b label");
```

**Note:** Any labels you define in the inline assembler statement will be local to that statement. You can use this for loops or conditional code.

If you define a label in an inline assembler statement using two colons—for example, `"label:: nop\n"`—instead of one, the label will be public, not only in the inline assembler statement, but in the module as well. This feature is intended for testing only.

An assembler statement without declared side-effects will be treated as a volatile assembler statement, which means it cannot be optimized at all. The compiler will issue a remark for such an assembler statement.

*assembler-interface* is:

```
: comma-separated list of output operands      /* optional */
: comma-separated list of input operands       /* optional */
: comma-separated list of clobbered resources /* optional */
```

## Operands

An inline assembler statement can have one input and one output comma-separated list of operands. Each operand consists of an optional symbolic name in brackets, a quoted constraint, followed by a C expression in parentheses.

## Syntax of operands

```
[ [ symbolic-name ] ] " [modifiers] constraint" (expr)
```

For example:

```
int Add(int term1, int term2)
{
    int sum;

    asm("add %0,%1,%2"
        : "=r"(sum)
        : "r" (term1), "r" (term2));

    return sum;
}
```

In this example, the assembler instruction uses one output operand, `sum`, two input operands, `term1` and `term2`, and no clobbered resources.

It is possible to omit any list by leaving it empty. For example:

```
int matrix[M][N];

void MatrixPreloadRow(int row)
{
    asm volatile ("pld [%0]" : : "r" (&matrix[row][0]));
}
```

## Operand constraints

The operand constraints define how to pass an operand between inline assembler code and the surrounding C or C++ code.

These are the constraint codes **in 32-bit mode**:

<b>Constraint</b>	<b>Description</b>
r	Uses a general purpose register for the expression: R0–R12, R14 (for Arm and Thumb2) R0–R7 (for Thumb1)
l	R0–R7 (only valid for Thumb1)
Rp	Uses a pair of general purpose registers, for example R0, R1.
Te	Uses an even-numbered general purpose register for the expression.
To	Uses an odd-numbered general purpose register for the expression.
i	An immediate integer operand with a constant value. Symbolic constants are allowed.
j	A 16-bit constant suitable for a MOVW instruction (valid for Arm and Thumb2).
n	An immediate operand, alias for i.
I	A constant valid for a data processing instruction (for Arm and Thumb2), or a constant in the range 0 to 255 (for Thumb1).
J	An immediate constant in the range -4095 to 4095 (for Arm and Thumb2), or a constant in the range -255 to -1 (for Thumb1).
K	An immediate constant that satisfies the I constraint if inverted (for Arm and Thumb2), or a constant that satisfies the I constraint multiplied by any power of 2 (for Thumb1).
L	An immediate constant that satisfies the I constraint if negated (for Arm and Thumb2), or a constant in the range -7 to 7 (for Thumb1).
M	An immediate constant that is a multiple of 4 in the range 0 to 1020 (only valid for Thumb1).
N	An immediate constant in the range 0 to 31 (only valid for Thumb1).
O	An immediate constant that is a multiple of 4 in the range -508 to 508 (only valid for Thumb1).
t	An S register.
w	A D register.
q	A Q register.
Dv	A 32-bit floating-point immediate constant for the VMOV.F32 instruction.
Dy	A 64-bit floating-point immediate constant for the VMOV.F64 instruction.

Table 10: Inline assembler operand constraints in 32-bit mode

Constraint	Description
<code>v2S ... v4Q</code>	A vector of 2, 3, or 4 consecutive S, D, or Q registers. For example, <code>v4Q</code> is a vector of four Q registers. The vectors do not overlap, so the available <code>v4Q</code> register vectors are Q0-Q3, Q4-Q7, Q8-Q11, and Q12-Q15.
<code>digit</code>	The input must be in the same location as the output operand <code>digit</code> . The first output operand is 0, the second 1, etc. (Not valid as output)

Table 10: Inline assembler operand constraints in 32-bit mode (Continued)

These are the constraint codes **in 64-bit mode**:

Constraint	Description
<code>r</code>	Uses a 64-bit general purpose register for the expression: <code>X0-X30</code> . If you want the compiler to use the 32-bit general purpose registers <code>W0-W31</code> instead, use the <code>w</code> operand modifier.
<code>i</code>	An immediate integer operand with a constant value. Symbolic constants are allowed.
<code>n</code>	An immediate operand, alias for <code>i</code> .
<code>I</code>	A constant in the range 0-4095, with an optional left shift by 12. The range that the ADD and SUB instructions accept.
<code>J</code>	A constant in the range -4095 to 0, with an optional left shift by 12.
<code>K</code>	An immediate constant that is valid for 32-bit logical instructions. For example, AND, ORR, EOR.
<code>L</code>	An immediate constant that is valid for 64-bit logical instructions. For example, AND, ORR, EOR.
<code>M</code>	An immediate constant that is valid for a MOV instruction with a destination of a 32-bit register. Valid values are all values that the K constraint accepts, plus the values that the MOVZ, MOVN, and MOVK instructions accept.
<code>N</code>	An immediate constant that is valid for a MOV instruction with a destination of a 64-bit register. Valid values are all values that the L constraint accepts, plus the values that the MOVZ, MOVN, and MOVK instructions accept.
<code>w</code>	Uses a SIMD or floating-point register, <code>V0-V31</code> . The <code>b</code> , <code>h</code> , <code>s</code> , <code>d</code> , and <code>q</code> operand modifiers can override this behavior.
<code>x</code>	The operand must be a 128-bit vector type. The compiler uses a low SIMD register, <code>V0-V15</code> .
<code>digit</code>	The input must be in the same location as the output operand <code>digit</code> . The first output operand is 0, the second 1, etc. (Not valid as output)

Table 11: Inline assembler operand constraints in 64-bit mode

## Constraint modifiers

Constraint modifiers can be used together with a constraint to modify its meaning. This table lists the supported constraint modifiers:

Modifier	Description
=	Write-only operand
+	Read-write operand
&	Early clobber output operand which is written to before the instruction has processed all the input operands.

Table 12: Supported constraint modifiers

## Referring to operands

Assembler instructions refer to operands by prefixing their order number with %. The first operand has order number 0 and is referred to by %0.

If the operand has a symbolic name, you can refer to it using the syntax %[operand.name]. Symbolic operand names are in a separate namespace from C/C++ code and can be the same as a C/C++ variable names. Each operand name must however be unique in each assembler statement. For example:

```
int Add(int term1, int term2)
{
    int sum;

    asm("add %[Rd], %[Rn], %[Rm] "
        : [Rd] "=r" (sum)
        : [Rn] "r" (term1), [Rm] "r" (term2));

    return sum;
}
```

## Input operands

Input operands cannot have any constraint modifiers, but they can have any valid C expression as long as the type of the expression fits the register.

The C expression will be evaluated just before any of the assembler instructions in the inline assembler statement and assigned to the constraint, for example, a register.

## Output operands

Output operands must have = as a constraint modifier and the C expression must be an l-value and specify a writable location. For example, =r for a write-only general purpose register. The constraint will be assigned to the evaluated C expression (as an l-value) immediately after the last assembler instruction in the inline assembler statement. Input operands are assumed to be consumed before output is produced and the compiler may use the same register for an input and output operand. To prohibit this, prefix the output constraint with & to make it an early clobber resource, for example, =&r. This will ensure that the output operand will be allocated in a different register than the input operands.

**Input/output operands**

An operand that should be used both for input and output must be listed as an output operand and have the + modifier. The C expression must be an l-value and specify a writable location. The location will be read immediately before any assembler instructions and it will be written to right after the last assembler instruction.

This is an example of using a read-write operand:

```
int Double(int value)
{
    asm("add %0,%0,%0" : "+r"(value));

    return value;
}
```

In the example above, the input value for `value` will be placed in a general purpose register. After the assembler statement, the result from the `ADD` instruction will be placed in the same register.

**Clobbered resources**

An inline assembler statement can have a list of clobbered resources.

```
"resource1", "resource2", ...
```

Specify clobbered resources to inform the compiler about which resources the inline assembler statement destroys. Any value that resides in a clobbered resource and that is needed after the inline assembler statement will be reloaded.

Clobbered resources will not be used as input or output operands.

This is an example of how to use clobbered resources:

```
int Add(int term1, int term2)
{
    int sum;

    asm("adds %0,%1,%2"
        : "=r"(sum)
        : "r" (term1), "r" (term2)
        : "cc");

    return sum;
}
```

In this example, the condition codes will be modified by the `ADDS` instruction. Therefore, `"cc"` must be listed in the clobber list.

This table lists valid clobbered resources:

Clobber	Description
R0–R12, R14 for Arm mode and Thumb2 R0–R7, R12, R14 for Thumb1 X0–X30, W0–W30 for A64	General purpose registers
S0–S31, D0–D31, Q0–Q15 for Arm mode and Thumb2 V0–V31, B0–B31, H0–H31, S0–S31, D0–D31, Q0–Q31 for A64	Floating-point registers
cc	The condition flags (N, Z, V, and C)
memory	To be used if the instructions modify any memory. This will avoid keeping memory values cached in registers across the inline assembler statement.

Table 13: List of valid clobbers

### Operand modifiers

An operand modifier is a single letter between the % and the operand number, which is used for transforming the operand.

In the example below, the modifiers L and H are used for accessing the least and most significant 16 bits, respectively, of an immediate operand:

```
int Mov32()
{
    int a;
    asm("movw %0,%L1 \n"
        "movt %0,%H1 \n" : "=r" (a) : "i" (0x12345678UL));
    return a;
}
```

Some operand modifiers can be combined, in which case each letter will transform the result from the previous modifier.

This table describes the transformation performed by each valid modifier in 32-bit mode:

Modifier	Description
L	The lowest-numbered register of a register pair, or the low 16 bits of an immediate constant.
H	The highest-numbered register of a register pair, or the high 16 bits of an immediate constant.

Table 14: Operand modifiers and transformations in 32-bit mode



Modifier	Description
c	For an immediate operand, an integer or symbol address without a preceding # sign. Cannot be transformed by additional operand modifiers.
B	For an immediate operand, the bitwise inverse of integer or symbol without a preceding # sign. Cannot be transformed by additional operand modifiers.
Q	The least significant register of a register pair.
R	The most significant register of a register pair.
M	For a register or a register pair, the register list suitable for <code>ldm</code> or <code>stm</code> . Cannot be transformed by additional operand modifiers.
a	Transforms a register <code>Rn</code> into a memory operand <code>[Rn, #0]</code> suitable for <code>pld</code> .
b	The low <code>S</code> register part of a <code>D</code> register.
p	The high <code>S</code> register part of a <code>D</code> register.
e	The low <code>D</code> register part of a <code>Q</code> register, or the low register in a vector of Neon registers.
f	The high <code>D</code> register part of a <code>Q</code> register, or the high register in a vector of Neon registers.
h	For a (vector of) <code>D</code> or <code>Q</code> registers, the corresponding list of <code>D</code> registers within curly braces. For example, <code>Q0</code> becomes <code>{D0, D1}</code> . Cannot be transformed by additional operand modifiers.
y	<code>S</code> register as indexed <code>D</code> register, for example <code>S7</code> becomes <code>D3[1]</code> . Cannot be transformed by additional operand modifiers.

Table 14: Operand modifiers and transformations in 32-bit mode (Continued)

This table describes the transformation performed by each valid modifier **in 64-bit mode**:

Modifier	Description
c	For an immediate operand, an integer, or symbol address without a preceding # sign. Cannot be transformed by additional operand modifiers.
a	The operand constraint must be <code>r</code> . Prints the register name surrounded by square brackets. Suitable for use as a memory operand.
n	For an immediate operand. Prints the arithmetic negation of the value without a preceding #.

Table 15: Operand modifiers and transformations in 64-bit mode

Modifier	Description
w	The operand constraint must be <i>r</i> . Prints the register using its 32-bit <i>W</i> name.
x	The operand constraint must be <i>r</i> . Prints the register using its 64-bit <i>X</i> name.
b	The operand constraint must be <i>w</i> or <i>x</i> . Prints the register using its 8-bit <i>B</i> name.
h	The operand constraint must be <i>w</i> or <i>x</i> . Prints the register using its 16-bit <i>H</i> name.
s	The operand constraint must be <i>w</i> or <i>x</i> . Prints the register using its 32-bit <i>S</i> name.
d	The operand constraint must be <i>w</i> or <i>x</i> . Prints the register using its 64-bit <i>D</i> name.
q	The operand constraint must be <i>w</i> or <i>x</i> . Prints the register using its 128-bit <i>Q</i> name.

Table 15: Operand modifiers and transformations in 64-bit mode (Continued)

## AN EXAMPLE OF HOW TO USE CLOBBERED MEMORY

```
int StoreExclusive(unsigned long * location, unsigned long value)
{
    int failed;

    asm("strex %0,%2, [%1]"
        : "=&r" (failed)
        : "r" (location), "r" (value)
        : "memory");

    /* Note: 'strex' requires Armv6 (Arm) or Armv6T2 (THUMB) */

    return failed;
}
```

## Calling assembler routines from C

An assembler routine that will be called from C must:

- Conform to the calling convention
- Have a `PUBLIC` entry-point label
- Be declared as external before any call, to allow type checking and optional promotion of parameters, as in these examples:

```
extern int foo(void);
```

```

or
extern int foo(int i, int j);

```

One way of fulfilling these requirements is to create skeleton code in C, compile it, and study the assembler list file.

## CREATING SKELETON CODE

The recommended way to create an assembler language routine with the correct interface is to start with an assembler language source file created by the C compiler.

**Note:** You must create skeleton code for each function prototype.

The following example shows how to create skeleton code to which you can easily add the functional body of the routine. The skeleton source code only needs to declare the variables required and perform simple accesses to them. In this example, the assembler routine takes an `int` and a `char`, and then returns an `int`:

```

extern int gInt;
extern char gChar;

int Func(int arg1, char arg2)
{
    int locInt = arg1;
    gInt = arg1;
    gChar = arg2;
    return locInt;
}

int main()
{
    int locInt = gInt;
    gInt = Func(locInt, gChar);
    return 0;
}

```

**Note:** In this example, we use a low optimization level when compiling the code to show local and global variable access. If a higher level of optimization is used, the required references to local variables could be removed during the optimization. The actual function declaration is not changed by the optimization level.

## COMPILING THE SKELETON CODE



In the IDE, specify list options on file level. Select the file in the workspace window. Then choose **Project>Options**. In the **C/C++ Compiler** category, select **Override inherited settings**. On the **List** page, deselect **Output list file**, and instead select the **Output assembler file** option and its suboption **Include source**. Also, be sure to specify a low level of optimization.



Use these options to compile the skeleton code:

```
iccarm skeleton.c -lA . -On -e
```

The `-lA` option creates an assembler language output file including C or C++ source lines as assembler comments. The `.` (period) specifies that the assembler file should be named in the same way as the C or C++ module (`skeleton`), but with the filename extension `s`. The `-On` option means that no optimization will be used and `-e` enables language extensions. In addition, make sure to use relevant compiler options, usually the same as you use for other C or C++ source files in your project.

The result is the assembler source output file `skeleton.s`.

**Note:** The `-lA` option creates a list file containing call frame information (CFI) directives, which can be useful if you intend to study these directives and how they are used. If you only want to study the calling convention, you can exclude the CFI directives from the list file.



In the IDE, to exclude the CFI directives from the list file, choose **Project>Options>C/C++ Compiler>List** and deselect the suboption **Include call frame information**.



On the command line, to exclude the CFI directives from the list file, use the option `-lB` instead of `-lA`.

**Note:** CFI information must be included in the source code to make the **C-SPY Call Stack** window work.

### The output file

The output file contains the following important information:

- The calling convention
- The return values
- The global variables
- The function parameters
- How to create space on the stack (auto variables)
- Call frame information (CFI).

The CFI directives describe the call frame information needed by the **Call Stack** window in the debugger. For more information, see *Call frame information*, page 199.

---

## Calling assembler routines from C++

The C calling convention does not apply to C++ functions. Most importantly, a function name is not sufficient to identify a C++ function. The scope and the type of the function are also required to guarantee type-safe linkage, and to resolve overloading.

Another difference is that non-static member functions get an extra, hidden argument, the `this` pointer.

However, when using C linkage, the calling convention conforms to the C calling convention. An assembler routine can therefore be called from C++ when declared in this manner:

```
extern "C"
{
    int MyRoutine(int);
}
```

The following example shows how to achieve the equivalent to a non-static member function, which means that the implicit `this` pointer must be made explicit. It is also possible to “wrap” the call to the assembler routine in a member function. Use an inline member function to remove the overhead of the extra call—this assumes that function inlining is enabled:

```
class MyClass;

extern "C"
{
    void DoIt(MyClass *ptr, int arg);
}

class MyClass
{
public:
    inline void DoIt(int arg)
    {
        ::DoIt(this, arg);
    }
};
```

---

## Calling convention

A calling convention is the way a function in a program calls another function. The compiler handles this automatically, but, if a function is written in assembler language, you must know where and how its parameters can be found, how to return to the program location from where it was called, and how to return the resulting value.

It is also important to know which registers an assembler-level routine must preserve. If the program preserves too many registers, the program might be ineffective. If it preserves too few registers, the result would be an incorrect program.

This section describes the calling convention used by the compiler. These items are examined:

- Function declarations
- Using C linkage in C++ source code
- Preserved versus scratch registers
- Function entrance
- Function exit
- 32-bit mode—Return address handling

At the end of the section, some examples are shown to describe the calling convention in practice.

The calling convention used by the compiler adheres to the Procedure Call Standard for the Arm architecture, AAPCS, a part of AEABI, see *AEABI compliance*, page 238. AAPCS is not fully described here. For example, the use of floating-point coprocessor registers when using the VFP calling convention is not covered.

## FUNCTION DECLARATIONS

In C, a function must be declared in order for the compiler to know how to call it. A declaration could look as follows:

```
int MyFunction(int first, char * second);
```

This means that the function takes two parameters: an integer and a pointer to a character. The function returns a value, an integer.

In the general case, this is the only knowledge that the compiler has about a function. Therefore, it must be able to deduce the calling convention from this information.

## USING C LINKAGE IN C++ SOURCE CODE

In C++, a function can have either C or C++ linkage. To call assembler routines from C++, it is easiest if you make the C++ function have C linkage.

This is an example of a declaration of a function with C linkage:

```
extern "C"
{
    int F(int);
}
```

It is often practical to share header files between C and C++. This is an example of a declaration that declares a function with C linkage in both C and C++:

```
#ifndef __cplusplus
extern "C"
{
#endif

int F(int);

#ifdef __cplusplus
}
#endif
```

## PRESERVED VERSUS SCRATCH REGISTERS

The general Arm CPU registers are divided into three separate sets, which are described in this section.

### Scratch registers

Any function is permitted to destroy the contents of a scratch register. If a function needs the register value after a call to another function, it must store it during the call, for example, on the stack.

**In 32-bit mode**, any of the registers R0 to R3, and R12, can be used as a scratch register by the function. **In 64-bit mode**, the registers that can be used as scratch registers are the registers X0 to X15.

**Note:** **In 32-bit mode**, R12, and **in 64-bit mode**, X16 and X17, are also scratch registers when calling between assembler functions because of automatically inserted instructions for veneers.

### Preserved registers

Preserved registers, on the other hand, are preserved across function calls. The called function can use the register for other purposes, but must save the value before using the register and restore it at the exit of the function.

**In 32-bit mode**, the registers R4 through to R11 are preserved registers. They are preserved by the called function. **In 64-bit mode**, the registers X18 to X30 are preserved registers.

### Special registers in 32-bit mode

For these 32-bit mode registers, you must consider these prerequisites:

- The stack pointer register,  $R13/SP$ , must at all times point to or below the last element on the stack. In the eventuality of an interrupt, everything below the point the stack pointer points to, can be destroyed. At function entry and exit, the stack pointer must be 8-byte aligned. In the function, the stack pointer must always be word aligned. At exit,  $SP$  must have the same value as it had at the entry.
- The register  $R15/PC$  is dedicated for the Program Counter.
- The link register,  $R14/LR$ , holds the return address at the entrance of the function.

### Special registers in 64-bit mode

For these 64-bit mode registers, you must consider certain prerequisites:

- The stack pointer register,  $SP$ , must at all times point to or below the last element on the stack. In the eventuality of an interrupt, everything below the point the stack pointer points to, can be destroyed. At function entry and exit, the stack pointer must be 16-byte aligned. In the function, the stack pointer must always be word aligned. At exit,  $SP$  must have the same value that it had at entry.
- The link register,  $LR/X30$ , holds the return address at the entrance of the function.

## FUNCTION ENTRANCE

Parameters can be passed to a function using one of these basic methods:

- In registers
- On the stack

It is much more efficient to use registers than to take a detour via memory, so the calling convention is designed to use registers as much as possible. Only a limited number of registers can be used for passing parameters—when no more registers are available, the remaining parameters are passed on the stack. These exceptions to the rules apply:

- Interrupt functions cannot take any parameters, except software interrupt functions that accept parameters and have return values
- Software interrupt functions cannot use the stack in the same way as ordinary functions. When an `SVC` instruction is executed, the processor switches to supervisor mode where the supervisor stack is used. Arguments can therefore not be passed on the stack if your application is not running in supervisor mode previous to the interrupt.



## Hidden parameters

In addition to the parameters visible in a function declaration and definition, there can be hidden parameters:

- If the function returns a structure larger than 32 bits, the memory location where the structure is to be stored is passed as an extra parameter. Notice that it is always treated as the *first parameter*.
- If the function is a non-static C++ member function, then the `this` pointer is passed as the first parameter (but placed after the return structure pointer, if there is one). For more information, see *Calling assembler routines from C*, page 186.

## Register parameters in 32-bit mode

The registers available in 32-bit mode for passing parameters are:

Parameters	Passed in registers
Scalar and floating-point values no larger than 32 bits, and single-precision (32-bits) floating-point values	Passed using the first free register: R0–R3
<code>long long</code> and double-precision (64-bit) values	Passed in the first available register pair: R0 : R1 or R2 : R3

Table 16: Registers used in 32-bit mode for passing parameters

The assignment of registers to parameters is a straightforward process. Traversing the parameters from left to right, the first parameter is assigned to the available register or registers. Should there be no more available registers, the parameter is passed on the stack in reverse order.

When functions that have parameters smaller than 32 bits are called, the values are sign or zero extended to ensure that the unused bits have consistent values. Whether the values will be sign or zero extended depends on their type—`signed` or `unsigned`.

## Register parameters in 64-bit mode

The registers available in 64-bit mode for passing parameters are:

Parameters	Passed in registers
Integers, pointers, small structures (up to 8 bytes)	Passed using the first free register: X0–X7
Small structures (9–16 bytes)	Passed using the first free register pair: X0–X7
Floating-point values	Passed using the first free register: V0–V7
Homogeneous structures (1–4 elements of the same floating-point or vector type)	Passed using the first free registers: V0–V7 (one element in each register)
Large structures	Pointer is passed using the first free register: X0–X7

*Table 17: Registers used in 64-bit mode for passing parameters*


The assignment of registers to parameters is a straightforward process. Traversing the parameters from left to right, the first parameter is assigned to the available register or registers. Should there be no more available registers, the parameter is passed on the stack in reverse order.

**In 64-bit mode**, only the bits that are consistent with a parameter's size can be accessed. Therefore, the called function normally sign- or zero-extends parameters that have a size smaller than 32 bits.

## Stack parameters and layout

Stack parameters are stored in memory, starting at the location pointed to by the stack pointer. Below the stack pointer (towards low memory) there is free space that the called function can use. The first stack parameter is stored at the location pointed to by the stack pointer. The next one is stored at the next location on the stack that is divisible by four, etc. It is the responsibility of the caller to clean the stack after the called function has returned.

This figure illustrates how parameters are stored on the stack:

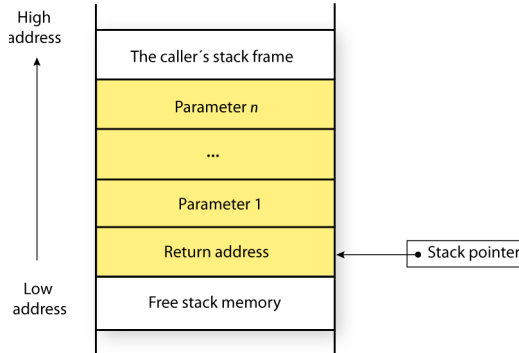

## FUNCTION EXIT

A function can return a value to the function or program that called it, or it can have the return type `void`.

The return value of a function, if any, can be scalar (such as integers and pointers), floating-point, or a structure.

## Registers used in 32-bit mode for returning values

The registers available in 32-bit mode for returning values are `R0` and `R0:R1`.

Return values	Passed in registers
Scalar and structure return values no larger than 32 bits, and single-precision (32-bit) floating-point return values	<code>R0</code>
The memory address of a structure return value larger than 32 bits	<code>R0</code>
<code>long long</code> and double-precision (64-bit) return values	<code>R0:R1</code>

Table 18: Registers used in 32-bit mode for returning values

If the returned value is smaller than 32 bits, the value is sign or zero-extended to 32 bits.

## Registers used in 64-bit mode for returning values

Return values	Passed in registers
Integers, pointers, small structures (up to 8 bytes)	X0
Small structures (9–16 bytes)	X0–X1
Floating-point values	V0
Homogeneous structures (1–4 elements of the same floating-point or vector type)	V0–V3 (one element in each register)
Large structures	Pointer is passed by caller in X8

Table 19: Registers used in 64-bit mode for returning values

Only the bits of the return value that are consistent with the size of the return value can be accessed.

### Stack layout at function exit

It is the responsibility of the caller to clean the stack after the called function has returned.

### 32-bit mode—Return address handling

A function written in assembler language should, when finished, return to the caller, by jumping to the address pointed to by the register LR.

At function entry, non-scratch registers and the LR register can be pushed with one instruction. At function exit, all these registers can be popped with one instruction. The return address can be popped directly to PC.

The following example shows what this can look like:

```

name      call
section  .text:CODE
extern   func

push     {r4-r6,lr}    ; Preserve stack alignment 8
bl      func

; Do something here.

pop     {r4-r6,pc}    ; return

end

```

## 64-bit mode—Return address handling

A function written in assembler language should, when finished, return to the caller, by jumping to the address pointed to by the register LR.

At function entry, non-scratch registers and the LR register can be pushed on the stack. At function exit, all these registers must be restored from the stack.

The following example shows what this can look like:

```

name    call
section .text:CODE
extern func

strp    x9, lr, [sp, #16]! ; Preserve stack alignment 16
bl      func

; Do something here.

ldrp    x9, x7, [sp, #16]
ret

end

```

## EXAMPLES

The following section shows a series of declaration examples and the corresponding calling conventions. The complexity of the examples increases toward the end.

### Example 1

Assume this function declaration:

```
int add1(int);
```

**In 32-bit mode**, this function takes one parameter in the register R0, and the return value is passed back to its caller in the register R0.

This assembler routine is compatible with the declaration—it will return a value that is one number higher than the value of its parameter:

```

name    return
section .text:CODE
add     r0, r0, #1
bx      lr
end

```

**In 64-bit mode**, the function takes one parameter in register `x0`, and the return value is passed back to its caller in register `x0`. A corresponding assembler routine that is compatible with the declaration looks like this:

```

name      return
section  .text:CODE
add      x0, x0, #1
ret
end

```

## Example 2

This example shows how structures are passed on the stack. Assume these declarations:

```

struct MyStruct
{
    short a;
    short b;
    short c;
    short d;
    short e;
};

int MyFunction(struct MyStruct x, int y);

```

**In 32-bit mode**, the values of the structure members `a`, `b`, `c`, and `d` are passed in registers `R0-R3`. The last structure member `e` and the integer parameter `y` are passed on the stack. The calling function must reserve eight bytes on the top of the stack and copy the contents of the two stack parameters to that location. The return value is passed back to its caller in the register `R0`.

**In 64-bit mode**, the value of `x` is passed in `X0` and `X1`, and `y` is passed in `X2`. The return value is passed in `X0`.

## Example 3

The function below will return a structure of type `struct MyStruct`.

```

struct MyStruct
{
    int mA[20];
};

struct MyStruct MyFunction(int x);

```

It is the responsibility of the calling function to allocate a memory location for the return value and pass a pointer to it as a hidden first parameter. **In 32-bit mode**, the pointer to the location where the return value should be stored is passed in `R0`. The parameter `x` is

passed in `R1`. **In 64-bit mode**, the pointer to the location where the return value should be stored is passed in `X8`. The parameter `x` is passed in `X0`.

Assume that the function instead was declared to return a pointer to the structure:

```
struct MyStruct *MyFunction(int x);
```

In this case, the return value is a scalar, so there is no hidden parameter. **In 32-bit mode**, the parameter `x` is passed in `R0`, and the return value is returned in `R0`. **In 64-bit mode**, the parameter `x` is passed in `X0`, and the return value is returned in `X0`.

---

## Call frame information

When you debug an application using C-SPY, you can view the *call stack*, that is, the chain of functions that called the current function. To make this possible, the compiler supplies debug information that describes the layout of the call frame, in particular information about where the return address is stored.

If you want the call stack to be available when debugging a routine written in assembler language, you must supply equivalent debug information in your assembler source using the assembler directive `CFI`. This directive is described in detail in the *IAR Assembler User Guide for Arm*.

### CFI DIRECTIVES

The `CFI` directives provide C-SPY with information about the state of the calling function(s). Most important of this is the return address, and the value of the stack pointer at the entry of the function or assembler routine. Given this information, C-SPY can reconstruct the state for the calling function, and thereby unwind the stack.

A full description about the calling convention might require extensive call frame information. In many cases, a more limited approach will suffice.

When describing the call frame information, the following three components must be present:

- A *names block* describing the available resources to be tracked
- A *common block* corresponding to the calling convention
- A *data block* describing the changes that are performed on the call frame. This typically includes information about when the stack pointer is changed, and when permanent registers are stored or restored on the stack.

**32-bit mode** call frame information resources:

Resource	Description
CFA R13	The call frames of the stack
R0–R12	Processor general-purpose 32-bit registers
R13	Stack pointer, SP
R14	Link register, LR
D0–D31	Vector Floating Point (VFP) 64-bit coprocessor register
CPSR	Current program status register
SPSR	Saved program status register

*Table 20: 32-bit mode call frame information resources defined in a names block*

**64-bit mode** call frame information resources:

Resource	Description
X0–X29	Processor general-purpose 64-bit registers
X30	Link register, LR
SP	Stack pointer
CFA SP	The call frames of the stack
ELR_mode	Exception level
V0–V31	Vector Floating Point (VFP) 64-bit registers (in reality, they are 128 bits, but the ABI cannot handle this)

*Table 21: 64-bit mode call frame information resources defined in a names block*

## CREATING ASSEMBLER SOURCE WITH CFI SUPPORT

The recommended way to create an assembler language routine that handles call frame information correctly is to start with an assembler language source file created by the compiler.

- 1 Start with suitable C source code, for example:

```
int F(int);
int cfiExample(int i)
{
    return i + F(i);
}
```

- 2 Compile the C source code, and make sure to create a list file that contains call frame information—the CFI directives.



On the command line, use the option `-lA`.





In the IDE, choose **Project>Options>C/C++ Compiler>List** and make sure the suboption **Include call frame information** is selected.

For the source code in this example, the list file in **32-bit mode** looks like this.

```

NAME Cfi

RTMODEL "__SystemLibrary", "DLib"

EXTERN F

PUBLIC cfiExample

CFI Names cfiNames0
CFI StackFrame CFA R13 DATA
CFI Resource R0:32, R1:32, R2:32, R3:32, R4:32, R5:32,
R6:32, R7:32
CFI Resource R8:32, R9:32, R10:32, R11:32, R12:32,
R13:32, R14:32
CFI EndNames cfiNames0

CFI Common cfiCommon0 Using cfiNames0
CFI CodeAlign 4
CFI DataAlign 4
CFI ReturnAddress R14 CODE
CFI CFA R13+0
CFI R0 Undefined
CFI R1 Undefined
CFI R2 Undefined
CFI R3 Undefined
CFI R4 SameValue
CFI R5 SameValue
CFI R6 SameValue
CFI R7 SameValue
CFI R8 SameValue
CFI R9 SameValue
CFI R10 SameValue
CFI R11 SameValue
CFI R12 Undefined
CFI R14 SameValue
CFI EndCommon cfiCommon0

SECTION `.text`:CODE:NOROOT(2)
CFI Block cfiBlock0 Using cfiCommon0
CFI Function cfiExample
ARM

```

```
cfiExample:
    PUSH    {R4,LR}
    CFI R14 Frame(CFA, -4)
    CFI R4 Frame(CFA, -8)
    CFI CFA R13+8
    MOVS    R4,R0
    MOVS    R0,R4
    BL     F
    ADDS    R0,R0,R4
    POP     {R4,PC}        ;; return
    CFI EndBlock cfiBlock0

    END
```

**Note:** The header file `Common.i` contains the macros `CFI_NAMES_BLOCK`, `CFI_COMMON_ARM`, and `CFI_COMMON_Thumb`, which declare a typical names block and a typical common block. These two macros declare several resources, both concrete and virtual.

# Using C

- C language overview
- Extensions overview
- IAR C language extensions

---

## C language overview

The IAR C/C++ Compiler for Arm supports the INCITS/ISO/IEC 9899:2018 standard, also known as C18. C18 addresses defects in C11 (INCITS/ISO/IEC 9899:2012) without introducing any new language features. This means that the C11 standard is also supported. In this guide, the C18 standard is referred to as *Standard C* and is the default standard used in the compiler. This standard is stricter than C89.

The compiler will accept source code written in the C18 standard or a superset thereof.

In addition, the compiler also supports the ISO 9899:1990 standard (including all technical corrigenda and addenda), also known as C94, C90, C89, and ANSI C. In this guide, this standard is referred to as *C89*. Use the `--c89` compiler option to enable this standard.

With Standard C enabled, the IAR C/C++ Compiler for Arm can compile all C18/C11 source code files, except for those that depend on thread-related system header files.

The floating-point standard that Standard C binds to is IEC 60559—known as ISO/IEC/IEEE 60559—which is nearly identical to the IEEE 754 format.

Annex K (*Bounds-checking interfaces*) of the C standard is supported. See *Bounds checking functionality*, page 142.

For an overview of the differences between the various versions of the C standard, see the Wikipedia articles *C18 (C standard revision)*, *C11 (C standard revision)*, or *C99*.

---

## Extensions overview

The compiler offers the features of Standard C and a wide set of extensions, ranging from features specifically tailored for efficient programming in the embedded industry to the relaxation of some minor standards issues.

This is an overview of the available extensions:

- *IAR C language extensions*

For information about available language extensions, see *IAR C language extensions*, page 205. For more information about the extended keywords, see the chapter *Extended keywords*. For information about C++, the two levels of support for the language, and C++ language extensions, see the chapter *Using C++*.

- *Pragma directives*

The `#pragma` directive is defined by Standard C and is a mechanism for using vendor-specific extensions in a controlled way to make sure that the source code is still portable.

The compiler provides a set of predefined pragma directives, which can be used for controlling the behavior of the compiler, for example, how it allocates memory, whether it allows extended keywords, and whether it outputs warning messages.

Most pragma directives are preprocessed, which means that macros are substituted in a pragma directive. The pragma directives are always enabled in the compiler. For several of them there is also a corresponding C/C++ language extension. For information about available pragma directives, see the chapter *Pragma directives*.

- *Preprocessor extensions*

The preprocessor of the compiler adheres to Standard C. The compiler also makes several preprocessor-related extensions available to you. For more information, see the chapter *The preprocessor*.

- *Intrinsic functions*

The intrinsic functions provide direct access to low-level processor operations and can be useful in, for example, time-critical routines. The intrinsic functions compile into inline code, either as a single instruction or as a short sequence of instructions. For more information about using intrinsic functions, see *Mixing C and assembler*, page 175. For information about available functions, see the chapter *Intrinsic functions*.

- *Library functions*

The DLIB runtime environment provides the C and C++ library definitions in the C/C++ standard library that apply to embedded systems. For more information, see *DLIB runtime environment—implementation details*, page 541.

**Note:** Any use of these extensions, except for the pragma directives, makes your source code inconsistent with Standard C.

## ENABLING LANGUAGE EXTENSIONS

You can choose different levels of language conformance by means of project options:

Command line	IDE*	Description
<code>--strict</code>	<b>Strict</b>	All IAR C language extensions are disabled—errors are issued for anything that is not part of Standard C.
None	<b>Standard</b>	All <i>relaxations to Standard C</i> are enabled, but no <i>extensions for embedded systems programming</i> . For information about extensions, see <i>IAR C language extensions</i> , page 205.
<code>-e</code>	<b>Standard with IAR extensions</b>	All <i>IAR C language extensions</i> are enabled.

Table 22: Language extensions

\* In the IDE, choose **Project>Options>C/C++ Compiler>Language 1>Language conformance** and select the appropriate option. Note that language extensions are enabled by default.

## IAR C language extensions

The compiler provides a wide set of C language extensions. To help you to find the extensions required by your application, they are grouped like this in this section:

- *Extensions for embedded systems programming*—extensions specifically tailored for efficient embedded programming for the specific core you are using, typically to meet memory restrictions
- *Relaxations to Standard C*—that is, the relaxation of some minor Standard C issues and also some useful but minor syntax extensions, see *Relaxations to Standard C*, page 207.

### EXTENSIONS FOR EMBEDDED SYSTEMS PROGRAMMING

The following language extensions are available both in the C and the C++ programming languages and they are well suited for embedded systems programming:

- *Type attributes and object attributes*  
For information about the related concepts, the general syntax rules, and for reference information, see the chapter *Extended keywords*.
- *Placement at an absolute address or in a named section*

The @ operator or the directive `#pragma location` can be used for placing global and static variables at absolute addresses, or placing a variable or function in a named

section. For more information about using these features, see *Controlling data and function placement in memory*, page 252, and *location*, page 456.

- *Alignment control*

Each data type has its own alignment. For more information, see *Alignment*, page 407. If you want to change the alignment, the `__packed` data type attribute, the `#pragma pack` directive, and the `#pragma data_alignment` directive are available. If you want to check the alignment of an object, use the `__ALIGNOF__()` operator.

The `__ALIGNOF__` operator is used for accessing the alignment of an object. It takes one of two forms:

- `__ALIGNOF__ (type)`
- `__ALIGNOF__ (expression)`

In the second form, the expression is not evaluated.

See also the Standard C file `stdalign.h`.

- *Bitfields and non-standard types*

In Standard C, a bitfield must be of the type `int` or `unsigned int`. Using IAR C language extensions, any integer type or enumeration can be used. The advantage is that the struct will sometimes be smaller. For more information, see *Bitfields*, page 410.

## Dedicated section operators

The compiler supports getting the start address, end address, and size for a section with these built-in section operators:

<code>__section_begin</code>	Returns the address of the first byte of the named section or block.
<code>__section_end</code>	Returns the address of the first byte <i>after</i> the named section or block.
<code>__section_size</code>	Returns the size of the named section or block in bytes.

**Note:** The aliases `__segment_begin/__sfb`, `__segment_end/__sfe`, and `__segment_size/__sfs` can also be used.

The operators can be used on named sections or on named blocks defined in the linker configuration file.

These operators behave syntactically as if declared like:

```
void * __section_begin(char const * section)
void * __section_end(char const * section)
size_t __section_size(char const * section)
```

When you use the @ operator or the #pragma location directive to place a data object or a function in a user-defined section, or when you use named blocks in the linker configuration file, the section operators can be used for getting the start and end address of the memory range where the sections or blocks were placed.

The named *section* must be a string literal and it must have been declared earlier with the #pragma section directive. The type of the \_\_section\_begin operator is a pointer to void. Note that you must enable language extensions to use these operators.

The operators are implemented in terms of *symbols* with dedicated names, and will appear in the linker map file under these names:

Operator	Symbol
__section_begin(sec)	sec\$\$Base
__section_end(sec)	sec\$\$Limit
__section_size(sec)	sec\$\$Length

Table 23: Section operators and their symbols

**Note:** The linker will not necessarily place sections with the same name consecutively when these operators are not used. Using one of these operators (or the equivalent symbols) will cause the linker to behave as if the sections were in a named block. This is to assure that the sections are placed consecutively, so that the operators can be assigned meaningful values. If this is in conflict with the section placement as specified in the linker configuration file, the linker will issue an error.

### Example

In this example, the type of the \_\_section\_begin operator is void \*.

```
#pragma section="MYSECTION"
...
section_start_address = __section_begin("MYSECTION");
```

See also *section*, page 464, and *location*, page 456.

## RELAXATIONS TO STANDARD C

This section lists and briefly describes the relaxation of some Standard C issues and also some useful but minor syntax extensions:

- Arrays of incomplete types

An array can have an incomplete struct, union, or enum type as its element type. The types must be completed before the array is used (if it is), or by the end of the compilation unit (if it is not).

- Zero-length arrays
 

A zero-length array as the last member of a structure has similar behavior as the ISO C99 flexible array member. This is an extension found in the GNU C compiler.
- Structures with flexible array members
 

A structure with a flexible array member can appear as a member of another structure or as an array element. This is an extension found in the GNU C compiler.
- Forward declaration of `enum` types
 

The extensions allow you to first declare the name of an `enum` and later resolve it by specifying the brace-enclosed list.
- Accepting missing semicolon at the end of a `struct` or `union` specifier
 

A warning—instead of an error—is issued if the semicolon at the end of a `struct` or `union` specifier is missing.
- Null and `void`

In operations on pointers, a pointer to `void` is always implicitly converted to another type if necessary, and a null pointer constant is always implicitly converted to a null pointer of the right type if necessary. In Standard C, some operators allow this kind of behavior, while others do not allow it.
- Casting pointers to integers in static initializers
 

In an initializer, a pointer constant value can be cast to an integral type if the integral type is large enough to contain it. For more information about casting pointers, see *Casting*, page 418.
- Taking the address of a register variable
 

In Standard C, it is illegal to take the address of a variable specified as a register variable. The compiler allows this, but a warning is issued.
- `long float` means `double`

The type `long float` is accepted as a synonym for `double`.
- Binary integer literals (0b...) are supported.
- Digit separators for integer literals (1'000'000) are supported.
- Repeated `typedef` declarations
 

Redeclarations of `typedef` that occur in the same scope are allowed, but a warning is issued.
- Mixing pointer types
 

Assignment and pointer difference is allowed between pointers to types that are interchangeable but not identical, for example, `unsigned char *` and `char *`. This includes pointers to integral types of the same size. A warning is issued.

Assignment of a string constant to a pointer to any kind of character is allowed, and no warning is issued.



- `Non-lvalue` arrays

A `non-lvalue` array expression is converted to a pointer to the first element of the array when it is used.

- Comments at the end of preprocessor directives

This extension, which makes it legal to place text after preprocessor directives, is enabled unless the strict Standard C mode is used. The purpose of this language extension is to support compilation of legacy code—we do not recommend that you write new code in this fashion.

- An extra comma at the end of `enum` lists

Placing an extra comma is allowed at the end of an `enum` list. In strict Standard C mode, a warning is issued.

- A label preceding a `}`

In Standard C, a label must be followed by at least one statement. Therefore, it is illegal to place the label at the end of a block. The compiler allows this, but issues a warning. Note that this also applies to the labels of `switch` statements.

- Empty declarations

An empty declaration (a semicolon by itself) is allowed, but a remark is issued (provided that remarks are enabled).

- Single-value initialization

Standard C requires that all initializer expressions of static arrays, structs, and unions are enclosed in braces.

Single-value initializers are allowed to appear without braces, but a warning is issued. The compiler accepts this expression:

```
struct str
{
    int a;
} x = 10;
```

- Declarations in other scopes

External and static declarations in other scopes are visible. In the following example, the variable `y` can be used at the end of the function, even though it should only be visible in the body of the `if` statement. A warning is issued.

```
int test(int x)
{
    if (x)
    {
        extern int y;
        y = 1;
    }

    return y;
}
```

- Static functions in function and block scopes

Static functions may be declared in function and block scopes. Their declarations are moved to the file scope.

- Numbers scanned according to the syntax for numbers

Numbers are scanned according to the syntax for numbers rather than the `pp-number` syntax. Therefore, `0x123e+1` is scanned as three tokens instead of one valid token. (If the `--strict` option is used, the `pp-number` syntax is used instead.)

- Empty translation unit

A translation unit (input file) might be empty of declarations.

- Assignment of pointer types

Assignment of pointer types is allowed in cases where the destination type has added type qualifiers that are not at the top level, for example, `int **` to `const int **`. Comparisons and pointer difference of such pairs of pointer types are also allowed. A warning is issued.

- Pointers to different function types

Pointers to different function types might be assigned or compared for equality (`==`) or inequality (`!=`) without an explicit type cast. A warning is issued. This extension is not allowed in C++ mode.

- Assembler statements

Assembler statements are accepted. This is disabled in strict C mode because it conflicts with the C standard for a call to the implicitly declared `asm` function.

- `#include_next`

The non-standard preprocessing directive `#include_next` is supported. This is a variant of the `#include` directive. It searches for the named file only in the directories on the search path that follow the directory in which the current source

file (the one containing the `#include_next` directive) is found. This is an extension found in the GNU C compiler.

- `#warning`

The non-standard preprocessing directive `#warning` is supported. It is similar to the `#error` directive, but results in a warning instead of a catastrophic error when processed. This directive is not recognized in strict mode. This is an extension found in the GNU C compiler.

- Concatenating strings

Mixed string concatenations are accepted.

```
wchar_t * str="a" L "b";
```

- GNU style statement expressions (a sequence of statements enclosed by braces) are accepted.

- GNU style case ranges are accepted (case 1..5:).

- GNU style designated initializer ranges are accepted.

Example: `int widths[] = {[0..9] = 1, [10..99] = 2, [100] = 3};`

- `typeof`

The non-standard operator `typeof` is supported when IAR extensions are enabled, as a way of referring to the type of an expression. The syntax is like that of `sizeof`, but it behaves semantically like a type name defined with `typedef`. This is an extension found in the GNU C compiler.

- `__auto_type`

The non-standard keyword `__auto_type` is supported when IAR extensions are enabled. Declaring a variable with the `__auto_type` keyword automatically causes its type to be derived based on the type of its initializer. `__auto_type` is similar to the `auto` keyword in C++11, but more limited in when it can be used. This is an extension found in the GNU C compiler.



# Using C++

- Overview—Standard C++
- Enabling support for C++
- C++ feature descriptions
- C++ language extensions
- Migrating from the DLIB C++ library to the Libc++ C++ library
- Porting code from EC++ or EEC++

---

## Overview—Standard C++

The IAR C++ implementation fully complies with the ISO/IEC 14882:2014 C++ (“C++14”) or 14882:2017 C++ (“C++17”) standard, except for source code that depends on thread-related system headers, or the `filesystem` header. In this guide, the ISO/IEC 14882:2017 C++ standard is referred to as Standard C++.

Atomic operations are available for cores where the instruction set supports them. See *Atomic operations*, page 548.

The IAR C/C++ compiler accepts source code written in the C++17 standard or a superset thereof.

- When using the DLIB C++14 library, those features of C++17 that require library support are not available.
- When using the Libc++ C++17 library, all features of C++17 are available, unless otherwise noted.

For an overview of the differences between the various versions of the C++ standard, see the Wikipedia articles *C++17*, *C++14*, *C++11*, or *C++* (for information about C++98).

**Note:** There is also a set of C++ Standard Template Library (STL) headers from an older version of the DLIB library (DLIB5). They have fewer features, but can in some cases result in significantly smaller code for `map/set` and `vector`. See the documentation in the file `arm/doc/HelpDLIB5.html`.

## MODES FOR EXCEPTIONS AND RTTI SUPPORT

Both exceptions and runtime type information result in increased code size simply by being included in your application. You might want to disable either or both of these features to avoid this increase:

- Support for runtime type information constructs can be disabled by using the compiler option `--no_rtti`
- Support for exceptions can be disabled by using the compiler option `--no_exceptions`

Even if support is enabled while compiling, the linker can avoid including the extra code and tables in the final application. If no part of your application actually throws an exception, the code and tables supporting the use of exceptions are not included in the application code image. Also, if dynamic runtime type information constructs (`dynamic_cast/typeid`) are not used with polymorphic types, the objects needed to support them are not included in the application code image. To control this behavior, use the linker options `--no_exceptions`, `--force_exceptions`, and `--no_dynamic_rtti_elimination`.

### Disabling exception support

When you use the compiler option `--no_exceptions`, the following will generate a compiler error:

- `throw` expressions
- `try-catch` statements
- Exception specifications on function definitions.

In addition, the extra code and tables needed to handle destruction of objects with auto storage duration when an exception is propagated through a function will not be generated when the compiler option `--no_exceptions` is used.

All functionality in system header files not directly involving exceptions is supported when the compiler option `--no_exceptions` is used.

The linker will produce an error if you try to link C++ modules compiled with exception support with modules compiled without exception support

For more information, see `--no_exceptions`, page 338.

### Disabling RTTI support

When you use the compiler option `--no_rtti`, the following will generate a compiler error:

- The `typeid` operator

- The `dynamic_cast` operator.

**Note:** If `--no_rtti` is used but exception support is enabled, most RTTI support is still included in the compiler output object file because it is needed for exceptions to work.

For more information, see `--no_rtti`, page 341.

## EXCEPTION HANDLING

Exception handling can be divided into three parts:

- *Exception raise mechanisms*—in C++ they are the `throw` and `rethrow` expressions.
- *Exception catch mechanisms*—in C++ they are the `try-catch` statements, the exception specifications for a function, and the implicit catch to prevent an exception leaking out from `main`.
- *Information about currently active functions*—if they have `try-catch` statements and the set of auto objects whose destructors need to be run if an exception is propagated through the function.

When an exception is raised, the function call stack is unwound, function by function, block by block. For each function or block, the destructors of auto objects that need destruction are run, and a check is made whether there is a catch handler for the exception. If there is, the execution will continue from that catch handler.

An application that mixes C++ code with assembler and C code, and that throws exceptions from one C++ function to another via assembler routines and C functions must use the linker option `--exception_tables` with the argument `unwind`.

### The implementation of exceptions

Exceptions are implemented using a table method. For each function, the tables describe:

- How to unwind the function, that is, how to find its caller on the stack and restore registers that need restoring
- Which catch handlers that exist in the function
- Whether the function has an exception specification and which exceptions it allows to propagate
- The set of auto objects whose destructors must be run.

When an exception is raised, the runtime will proceed in two phases. The first phase will use the exception tables to search the stack for a function invocation containing a catch handler or exception specification that would cause stack unwinding to halt at that point. Once this point is found, the second phase is entered, doing the actual unwinding, and running the destructors of auto objects where that is needed.

The table method results in virtually no overhead in execution time or RAM usage when an exception is not actually thrown. It does incur a significant penalty in read-only memory usage for the tables and the extra code, and throwing and catching an exception is a relatively expensive operation.

The destruction of auto objects when the stack is being unwound as a result of an exception is implemented in code separated from the code that handles the normal operation of a function. This code, together with the code in catch handlers, is placed in a separate section (`.exc.text`) from the normal code (normally placed in `.text`). In some cases, for instance when there is fast and slow ROM memory, it can be advantageous to select on this difference when placing sections in the linker configuration file.

---

## Enabling support for C++



In the compiler, the default language is C.

To compile files written in Standard C++, use the `--c++` compiler option. See `--c++`, page 319.



To enable C++ in the IDE, choose

**Project>Options>C/C++ Compiler>Language 1>Language>C++.**

---

## C++ feature descriptions

When you write C++ source code for the IAR C/C++ Compiler for Arm, you must be aware of some benefits and some possible quirks when mixing C++ features—such as classes, and class members—with IAR language extensions, such as IAR-specific attributes.

### USING IAR ATTRIBUTES WITH CLASSES

Static data members of C++ classes are treated the same way global variables are, and can have any applicable IAR type and object attribute.

Member functions are in general treated the same way free functions are, and can have any applicable IAR type and object attributes. Virtual member functions can only have attributes that are compatible with default function pointers, and constructors and destructors cannot have any such attributes.

The location operator `@` and the `#pragma location` directive can be used on static data members and with all member functions.



## TEMPLATES

C++ supports templates according to the C++ standard. The implementation uses a two-phase lookup which means that the keyword `typename` must be inserted wherever needed. Furthermore, at each use of a template, the definitions of all possible templates must be visible. This means that the definitions of all templates must be in include files or in the actual source file.

## FUNCTION TYPES

A function type with `extern "C"` linkage is compatible with a function that has C++ linkage.

### Example

```
extern "C"
{
    typedef void (*FpC)(void);    // A C function typedef
}

typedef void (*FpCpp)(void);    // A C++ function typedef

FpC F1;
FpCpp F2;
void MyF(FpC);

void MyG()
{
    MyF(F1);                      // Always works
    MyF(F2);                      // FpCpp is compatible with FpC
}
```

## USING STATIC CLASS OBJECTS IN INTERRUPTS

If interrupt functions use static class objects that need to be constructed (using constructors) or destroyed (using destructors), your application will not work properly if the interrupt occurs before the objects are constructed, or, during or after the objects are destroyed.

To avoid this, make sure that these interrupts are not enabled until the static objects have been constructed, and are disabled when returning from `main` or calling `exit`. For information about system startup, see *System startup and termination*, page 153.

Function local static class objects are constructed the first time execution passes through their declaration, and are destroyed when returning from `main` or when calling `exit`.

## USING NEW HANDLERS

To handle memory exhaustion, you can use the `set_new_handler` function.

### New handlers in Standard C++ with exceptions enabled

If you do not call `set_new_handler`, or call it with a `NULL` new handler, and `operator new` fails to allocate enough memory, `operator new` will throw `std::bad_alloc` if exceptions are enabled. If exceptions are not enabled, `operator new` will instead call `abort`.

If you call `set_new_handler` with a non-`NULL` new handler, the provided new handler will be called by `operator new` if the `operator new` fails to allocate enough memory. The new handler must then make more memory available and return, or abort execution in some manner. If exceptions are enabled, the new handler can also throw a `std::bad_alloc` exception. The `nothrow` variant of `operator new` will only return `NULL` in the presence of a new handler if exceptions are enabled and the new handler throws `std::bad_alloc`.

### New handlers in Standard C++ with exceptions disabled

If you do not call `set_new_handler`, or call it with a `NULL` new handler, and `operator new` fails to allocate enough memory, it will call `abort`. The `nothrow` variant of the new operator will instead return `NULL`.

If you call `set_new_handler` with a non-`NULL` new handler, the provided new handler will be called by `operator new` if `operator new` fails to allocate memory. The new handler must then make more memory available and return, or abort execution in some manner. The `nothrow` variant of `operator new` will never return `NULL` in the presence of a new handler.

This is the same behavior as using the `nothrow` variants of `new`.

## DEBUG SUPPORT IN C-SPY

The C-SPY debugger has built-in display support for the STL containers. The logical structure of containers is presented in the watch views in a comprehensive way that is easy to understand and follow.

Using C++, you can make C-SPY stop at a `throw` statement or if a raised exception does not have any corresponding `catch` statement.

For more information, see the *C-SPY® Debugging Guide for Arm*.

## C++ language extensions

When you use the compiler in C++ mode and enable IAR language extensions, the following C++ language extensions are available in the compiler:

- In a `friend` declaration of a class, the `class` keyword can be omitted, for example:

```
class B;
class A
{
    friend B;           //Possible when using IAR language
                       //extensions
    friend class B; //According to the standard
};
```

- In the declaration of a class member, a qualified name can be used, for example:

```
struct A
{
    int A::F(); // Possible when using IAR language extensions
    int G();   // According to the standard
};
```

- It is permitted to use an implicit type conversion between a pointer to a function with C linkage (`extern "C"`) and a pointer to a function with C++ linkage (`extern "C++"`), for example:

```
extern "C" void F(); // Function with C linkage
void (*PF)()        // PF points to a function with C++ linkage
                   = &F; // Implicit conversion of function pointer.
```

According to the standard, the pointer must be explicitly converted.

- If the second or third operands in a construction that contains the `?` operator are string literals or wide string literals—which in C++ are constants—the operands can be implicitly converted to `char *` or `wchar_t *`, for example:

```
bool X;

char *P1 = X ? "abc" : "def";           //Possible when using IAR
                                         //language extensions
char const *P2 = X ? "abc" : "def"; //According to the standard
```

- Default arguments can be specified for function parameters not only in the top-level function declaration, which is according to the standard, but also in `typedef` declarations, in pointer-to-function function declarations, and in pointer-to-member function declarations.
- In a function that contains a non-static local variable and a class that contains a non-evaluated expression—for example a `sizeof` expression—the expression can reference the non-static local variable. However, a warning is issued.

- An anonymous union can be introduced into a containing class by a `typedef` name. It is not necessary to first declare the union. For example:

```
typedef union
{
    int i,j;
} U; // U identifies a reusable anonymous union.

class A
{
public:
    U; // OK -- references to A::i and A::j are allowed.
};
```

In addition, this extension also permits *anonymous classes* and *anonymous structs*, as long as they have no C++ features—for example, no static data members or member functions, and no non-public members—and have no nested types other than other anonymous classes, structs, or unions. For example:

```
struct A
{
    struct
    {
        int i,j;
    }; // OK -- references to A::i and A::j are allowed.
};
```

- The friend class syntax allows non-class types as well as class types expressed through a `typedef` without an elaborated type name. For example:

```
typedef struct S ST;

class C
{
public:
    friend S; // Okay (requires S to be in scope)
    friend ST; // Okay (same as "friend S;")
    // friend S const; // Error, cv-qualifiers cannot
                       // appear directly
};
```

- It is allowed to specify an array with no size or size 0 as the last member of a struct. For example:

```
typedef struct
{
    int i;
    char ir[0]; // Zero-length array
};
```

```
typedef struct
{
    int i;
    char ir[]; // Zero-length array
};
```

- Arrays of incomplete types

An array can have an incomplete `struct`, `union`, `enum`, or `class` type as its element type. The types must be completed before the array is used—if it is— or by the end of the compilation unit—if it is not.

- Concatenating strings

Mixed string literal concatenations are accepted.

```
wchar_t * str = "a" L "b";
```

- Trailing comma

A trailing comma in the definition of an enumeration type is silently accepted.

Except where noted, all of the extensions described for C are also allowed in C++ mode.

**Note:** If you use any of these constructions without first enabling language extensions, errors are issued.

---

## Migrating from the DLIB C++ library to the Libc++ C++ library

There is no Normal configuration of the Libc++ library. Support for locale, file descriptors, etc, is always included.

The Libc++ library is a C++17 library. In C++17, some functionality that was deprecated in C++14 is now removed. Examples include `std::auto_ptr`, `std::random_shuffle`, and `std::mem_fun`. You can define the preprocessor symbol `_LIBCPP_ENABLE_CXX17_REMOVED_FEATURES` to enable support for these features when using the Libc++ library.

**Note:** Some system headers from the DLIB C++14 library are not supported in Libc++, and vice versa, see the descriptions in *C++ header files*, page 543.

---

## Porting code from EC++ or EEC++

Apart from the fact that Standard C++ is a much larger language than EC++ or EEC++, there are two issues that might prevent EC++ and EEC++ code from compiling:

- The library is placed in `namespace std`.

There are two remedy options:

- Prefix each used library symbol with `std::`.
- Insert `using namespace std;` after the last include directive for a C++ system header file.
- Some library symbols have changed names or parameter passing.

To resolve this, look up the new names and parameter passing.

# Application-related considerations

- Output format considerations
- Stack considerations
- Heap considerations
- Interaction between the tools and your application
- Checksum calculation for verifying image integrity
- AEABI compliance
- CMSIS integration (32-bit mode)
- Arm TrustZone®
- Branch protection (PACBTI) — 32-bit mode only
- Patching symbol definitions using `$$Super$$` and `$$Sub$$`

---

## Output format considerations

The linker produces an absolute executable image in the ELF/DWARF object file format.

You can use the IAR ELF Tool—`ielftool`— to convert an absolute ELF image to a format more suitable for loading directly to memory, or burning to a PROM or flash memory etc.

`ielftool` can produce these output formats:

- Plain binary
- Motorola S-records
- Intel hex.

For a complete list of supported output formats, run `ielftool` without options.

**Note:** `ielftool` can also be used for other types of transformations, such as filling and calculating checksums in the absolute image.

The source code for `ielftool` is provided in the `arm/src` directory. For more information about `ielftool`, see *The IAR ELF Tool—ielftool*, page 613.

---

## Stack considerations

To make your application use stack memory efficiently, there are some considerations to be made.

### STACK SIZE CONSIDERATIONS

The required stack size depends heavily on the application's behavior. If the given stack size is too large, RAM will be wasted. If the given stack size is too small, one of two things can happen, depending on where in memory you located your stack:

- Variable storage will be overwritten, leading to undefined behavior
- The stack will fall outside of the memory area, leading to an abnormal termination of your application.

Both alternatives are likely to result in application failure. Because the second alternative is easier to detect, you should consider placing your stack so that it grows toward the end of the memory.

For more information about the stack size, see *Setting up stack memory*, page 120, and *Saving stack space and RAM memory*, page 263.

### STACK ALIGNMENT

**In 32-bit mode**, the default `cstartup` code automatically initializes all stacks to an 8-byte aligned address.

**In 64-bit mode**, the default `cstartup` code automatically initializes all stacks to a 16-byte aligned address.

For more information about aligning the stack, see *Calling convention*, page 189 and more specifically *Special registers in 32-bit mode*, page 192 and *Stack parameters and layout*, page 194.

### PROCESSOR MODES AND STACKS

The various processor modes need separate stacks. Knowing the names of the linker blocks for these can be necessary in some cases, for example when making settings on the **Stack** page of the **IDE Options** dialog box.



The Arm 7/9/11, Cortex-A, and Cortex-R devices support five exception modes which are entered when different exceptions occur. Each exception mode has its own stack to avoid corrupting the System/User mode stack.

**Note:** 64-bit Arm cores and Cortex-M do not have individual exception stacks. By default, all exception stacks are placed in the `CSTACK` section.

The table shows default stack block names for the various stacks, but you can define your own names. Be aware, however, that the stack checking features that you can set on the **Stack** page of the **IDE Options** dialog box only work if the stack blocks are using these default names.

Processor mode	Default stack block name	Description
Supervisor	<code>SVC_STACK</code>	Operation system stack for Arm 7/9/11, Cortex-A, and Cortex-R.
IRQ	<code>IRQ_STACK</code>	Stack for general-purpose (IRQ) interrupt handlers for Arm 7/9/11, Cortex-A, and Cortex-R.
FIQ	<code>FIQ_STACK</code>	Stack for high-speed (FIQ) interrupt handlers for Arm 7/9/11, Cortex-A, and Cortex-R.
Undefined	<code>UND_STACK</code>	Stack for undefined instruction interrupts for Arm 7/9/11, Cortex-A, and Cortex-R. Supports software emulation of hardware coprocessors and instruction set extensions.
Abort	<code>ABT_STACK</code>	Stack for instruction fetch and data access memory abort interrupt handlers for Arm 7/9/11, Cortex-A, and Cortex-R.
User	<code>CSTACK</code> or <code>USR_STACK</code>	Stack for User mode.
Monitor	<code>MON_STACK</code>	Stack for context switching between Secure and Non-Secure states.
Hypervisor	<code>HYP_STACK</code>	Stack for access to facilities for virtualization.

Table 24: Stacks for Arm processor modes

For each processor mode where a stack is needed, a separate stack pointer must be initialized in your startup code, and section placement should be done in the linker configuration file. The IRQ and FIQ stacks are the only exception stacks which are preconfigured in the supplied `cstartup.s` and `lnkarm.icf` files, but other exception stacks can easily be added.



To view any of these stacks in the **Stack** window available in the IDE, the default block names must be used instead of user-defined block names.

---

## Heap considerations

The heap contains dynamic data allocated by use of the C function `malloc` (or a corresponding function) or the C++ operator `new`.

If your application uses dynamic memory allocation, you should be familiar with:

- The use of basic, advanced, and no-free heap memory allocation
- Linker sections used for the heap
- Allocating the heap size, see *Setting up heap memory*, page 120.

### HEAP MEMORY HANDLERS

The system library contains three separate heap memory handlers—the *basic*, the *advanced*, and the *no-free* heap handler.

You can use a linker option to explicitly specify which handler you want to use:

- The basic heap (`--basic_heap`) is a simple heap allocator, suitable for use in applications that do not use the heap very much. In particular, it can be used in applications that only allocate heap memory and never free it. The basic heap is not particularly speedy, and using it in applications that repeatedly free memory is quite likely to lead to unneeded fragmentation of the heap. The code for the basic heap is significantly smaller than that for the advanced heap. See *--basic\_heap*, page 375.
- The advanced heap (`--advanced_heap`) provides efficient memory management for applications that use the heap extensively. In particular, applications that repeatedly allocate and free memory will likely get less overhead in both space and time. The code for the advanced heap is significantly larger than that for the basic heap. See *--advanced\_heap*, page 374. For information about the definition, see *iar\_dmalloc.h*, page 549.
- The no-free heap (`--no_free_heap`) is the smallest possible heap implementation. This heap does not support `free` or `realloc`. See *--no\_free\_heap*, page 397.

If no heap option has been specified, the linker automatically chooses a heap handler:

- If there are calls to heap memory allocation routines in your application, but no calls to heap deallocation routines, the linker automatically chooses the no-free heap.
- If there are calls to heap memory allocation routines in your application, the linker automatically chooses the advanced heap if the majority of the modules are optimized for speed (Medium, High Balanced, or High Speed).
- If there are calls to heap memory allocation routines in, for example, the library, or if the majority of the application modules use optimization level None or are optimized for size (Low or High Size), the linker automatically chooses the basic heap.

The optimization goal used for selecting a heap handler is not always available to the linker—particularly not in object files that were not compiled with an IAR compiler. Such modules are ignored for the decision.

**Note:** If your product has a size-limited KickStart license, the basic heap is automatically chosen.

## HEAP SIZE AND STANDARD I/O



If you excluded `FILE` descriptors from the DLIB runtime environment, as in the Normal configuration, there are no input and output buffers at all. Otherwise, as in the Full configuration, be aware that the size of the input and output buffers is set to 512 bytes in the `stdio` library header file. If the heap is too small, I/O will not be buffered, which is considerably slower than when I/O is buffered. If you execute the application using the simulator driver of the IAR C-SPY® Debugger, you are not likely to notice the speed penalty, but it is quite noticeable when the application runs on an Arm core. If you use the standard I/O library, you should set the heap size to a value which accommodates the needs of the standard I/O buffer.

## HEAP ALIGNMENT

**In 32-bit mode**, the heap is aligned to an 8-byte aligned address.

**In 64-bit mode**, the heap is aligned to a 16-byte aligned address.

For more information about aligning the heap, see *Setting up heap memory*, page 120.

---

## Interaction between the tools and your application

The linking process and the application can interact symbolically in four ways:

- Creating a symbol by using the linker command line option `--define_symbol`. The linker will create a public absolute constant symbol that the application can use as a label, as a size, as setup for a debugger, etc.
- Creating an exported configuration symbol by using the command line option `--config_def` or the configuration directive `define symbol`, and exporting the symbol using the `export symbol` directive. ILINK will create a public absolute constant symbol that the application can use as a label, as a size, as setup for a debugger, etc.

One advantage of this symbol definition is that this symbol can also be used in expressions in the configuration file, for example, to control the placement of sections into memory ranges.

- Using the compiler operators `__section_begin`, `__section_end`, or `__section_size`, or the assembler operators `SFB`, `SFE`, or `SIZEOF` on a named

section or block. These operators provide access to the start address, end address, and size of a contiguous sequence of sections with the same name, or of a linker block specified in the linker configuration file.

- The command line option `--entry` informs the linker about the start label of the application. It is used by the linker as a root symbol and to inform the debugger where to start execution.

The following lines illustrate how to use `-D` to create a symbol. If you need to use this mechanism, add these options to your command line like this:

```
--define_symbol NrOfElements=10
--config_def MY_HEAP_SIZE=1024
```

The linker configuration file can look like this:

```
define memory Mem with size = 4G;
define region ROM = Mem:[from 0x00000 size 0x10000];
define region RAM = Mem:[from 0x20000 size 0x10000];

/* Export of symbol */
export symbol MY_HEAP_SIZE;

/* Setup a heap area with a size defined by an ILINK option */
define block MyHEAP with size = MY_HEAP_SIZE, alignment = 8 {};

place in RAM { block MyHEAP };
```

Add these lines to your application source code:

```
#include <stdlib.h>

/* Use symbol defined by ILINK option to dynamically allocate an
array of elements with specified size. The value takes the form
of a label.
*/
extern int NrOfElements;

typedef char Elements;
Elements *GetElementArray()
{
    return malloc(sizeof(Elements) * (long) &NrOfElements);
}

/* Use a symbol defined by ILINK option, a symbol that in the
* configuration file was made available to the application.
*/
extern char MY_HEAP_SIZE;
```

```

/* Declare the section that contains the heap. */
#pragma section = "MYHEAP"

char *MyHeap()
{
    /* First get start of statically allocated section, */
    char *p = __section_begin("MYHEAP");

    /* ...then we zero it, using the imported size. */
    for (int i = 0; i < (int) &MY_HEAP_SIZE; ++i)
    {
        p[i] = 0;
    }
    return p;
}

```

---

## Checksum calculation for verifying image integrity

This section contains information about checksum calculation:

- Briefly about checksum calculation
- Calculating and verifying a checksum
- Checksums of address-translated ranges
- Troubleshooting checksum calculation

For more information, see also *The IAR ELF Tool—ielftool*, page 613.

### BRIEFLY ABOUT CHECKSUM CALCULATION

You can use a checksum to verify that the image is the same at runtime as when the image's original checksum was generated. In other words, to verify that the image has not been corrupted.

This works as follows:

- You need an initial checksum.  
You can either use the IAR ELF Tool—*ielftool*—to generate an initial checksum or you might have a third-party checksum available.
- You must generate a second checksum during runtime.  
You can either add specific code to your application source code for calculating a checksum during runtime or you can use some dedicated hardware on your device for calculating a checksum during runtime.
- You must add specific code to your application source code for comparing the two checksums and take an appropriate action if they differ.

If the two checksums have been calculated in the same way, and if there are no errors in the image, the checksums should be identical. If not, you should first suspect that the two checksums were not generated in the same way.

No matter which solutions you use for generating the two checksum, you must make sure that both checksums are calculated *in the exact same way*. If you use `ieleftool` for the initial checksum and use a software-based calculation during runtime, you have full control of the generation for both checksums. However, if you are using a third-party checksum for the initial checksum or some hardware support for the checksum calculation during runtime, there might be additional requirements that you must consider.

For the two checksums, there are some choices that you must always consider and there are some choices to make only if there are additional requirements. Still, all of the details must be the same for both checksums.

Always consider:

- *Checksum range*

The memory range (or ranges) that you want to verify by means of checksums. Typically, you might want to calculate a checksum for all ROM memory. However, you might want to calculate a checksum only for specific ranges. Remember that:

- It is OK to have several ranges for one checksum.
- The checksum must be calculated from the lowest to the highest address for every memory range.
- Each memory range must be verified in the same order as defined, for example, `0x100-0x1FF,0x400-0x4FF` is not the same as `0x400-0x4FF,0x100-0x1FF`.
- If several checksums are used, you should place them in sections with unique names and use unique symbol names.
- A checksum should never be calculated on a memory range that contains a checksum or a software breakpoint.

- *Algorithm and size of checksum*

You should consider which algorithm is most suitable in your case. There are two basic choices, Sum—a simple arithmetic algorithm—or CRC—which is the most commonly used algorithm. For CRC there are different sizes to choose for the checksum, 2, 4, or 8 bytes where the predefined polynomials are wide enough to suit the size, for more error detecting power. The predefined polynomials work well for most, but possibly not for all data sets. If not, you can specify your own polynomial. If you just want a decent error detecting mechanism, use the predefined CRC algorithm for your checksum size, typically CRC16 or CRC32.

**Note:** For an  $n$ -bit polynomial, the  $n$ :th bit is always considered to be set. For a 16-bit polynomial—for example, CRC16—this means that `0x11021` is the same as `0x1021`.

For more information about selecting an appropriate polynomial for data sets with non-uniform distribution, see for example section 3.5.3 in *Tannenbaum, A.S., Computer Networks, Prentice Hall 1981, ISBN: 0131646990*.

- *Fill*

Every byte in the checksum range must have a well-defined value before the checksum can be calculated. Typically, bytes with unknown values are *pad bytes* that have been added for alignment. This means that you must specify which fill pattern to be used during calculation, typically `0xFF` or `0x00`.

- *Initial value*

The checksum must always have an explicit initial value.

In addition to these mandatory details, there might be other details to consider. Typically, this might happen when you have a third-party checksum, you want the checksum be compliant with the Rocksoft™ checksum model, or when you use hardware support for generating a checksum during runtime. `ie1ftool` also provides support for controlling alignment, complement, bit order, byte order within words, and checksum unit size.

## CALCULATING AND VERIFYING A CHECKSUM

In this example procedure, a checksum is calculated for ROM memory from `0x8002` up to `0x8FFF` and the 2-byte calculated checksum is placed at `0x8000`.

- I If you are using `ie1ftool` from the command line, you must first allocate a memory location for the calculated checksum.

**Note:** If you instead are using the IDE (and not the command line), the `__checksum`, `__checksum_begin`, and `__checksum_end` symbols, and the `.checksum` section are *automatically* allocated when you calculate the checksum, which means that you can skip this step.

You can allocate the memory location in two ways:


- By creating a global C/C++ or assembler constant symbol with a proper size, residing in a specific section—in this example, `.checksum`
- By using the linker option `--place_holder`.

For example, to allocate a 2-byte space for the symbol `__checksum` in the section `.checksum`, with alignment 4, specify:

```
--place_holder __checksum, 2, .checksum, 4
```

- 2 The `.checksum` section will only be included in your application if the section appears to be needed. If the checksum is not needed by the application itself, use the linker option `--keep=__checksum` (or the linker directive `keep`) to force the section to be included.

Alternatively, choose **Project>Options>Linker>Input** and specify `__checksum`:

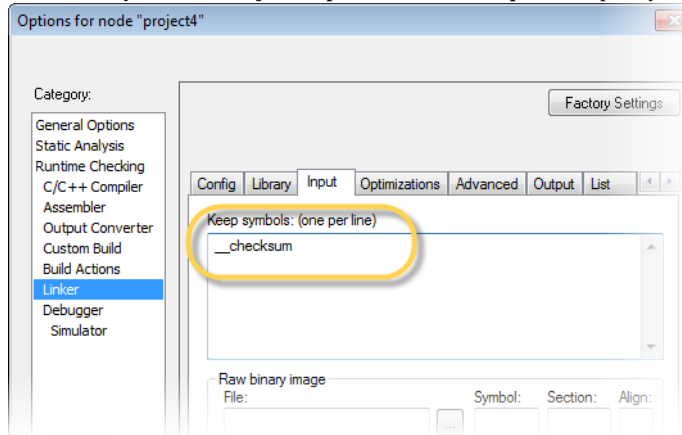

- 3 To control the placement of the `.checksum` section, you must modify the linker configuration file. For example, it can look like this (note the handling of the block `CHECKSUM`):

```
define block CHECKSUM      { ro section .checksum };
place in ROM_region { ro, first block CHECKSUM };
```

**Note:** It is possible to skip this step, but in that case the `.checksum` section will automatically be placed with other read-only data.

- 4 When configuring `ielftool` to calculate a checksum, there are some basic choices to make:
- Checksum algorithm  
Choose which checksum algorithm you want to use. In this example, the CRC16 algorithm is used.
  - Memory range  
Using the IDE, you can specify one memory range for which the checksum should be calculated. From the command line, you can specify any ranges.
  - Fill pattern  
Specify a fill pattern—typically `0xFF` or `0x00`—for bytes with unknown values. The fill pattern will be used in all checksum ranges.



For more information, see *Briefly about checksum calculation*, page 229.



To run `ielftool` from the IDE, choose **Project>Options>Linker>Checksum** and make your settings, for example:

In the simplest case, you can ignore (or leave with default settings) these options: **Complement**, **Bit order**, **Reverse byte order within word**, and **Checksum unit size**.



To run `ielftool` from the command line, specify the command, for example, like this:

```
ielftool --fill=0x00;0x8002-0x8FFF
--checksum=__checksum:2,crc16;0x8002-0x8FFF sourceFile.out
destinationFile.out
```

**Note:** `ielftool` needs an unstripped input ELF image. If you use the linker option `--strip`, remove it and use the `ielftool` option `--strip` instead.

The checksum will be created later on when you build your project and will be automatically placed in the specified symbol `__checksum` in the section `.checksum`.

## 5 You can specify several ranges instead of only one range.




If you are using the IDE, perform these steps:

- Choose **Project>Options>Linker>Checksum** and make sure to deselect **Fill unused code memory**.
- Choose **Project>Options>Build Actions** and specify the ranges together with the rest of the required commands in the **Post-build command line** text field, for example like this:

```
$TOOLKIT_DIR$\bin\ielftool "$TARGET_PATH$" "$TARGET_PATH$"
--fill 0x00;0x0-0x3FF;0x8002-0x8FFF
--checksum=__checksum:2,crc16;0x0-0x3FF;0x8002-0x8FFF
```

In your example, replace *output.out* with the name of your output file.

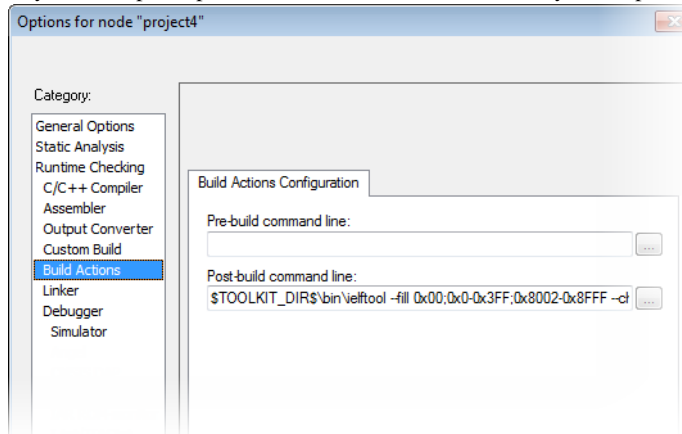

If you are using the command line, specify the ranges, for example like this:

```
ielftool output.out output.out
--fill 0x00;0x0-0x3FF;0x8002-0x8FFF
--checksum=__checksum:2,crc16;0x0-0x3FF;0x8002-0x8FFF
```

In your example, replace *output.out* with the name of your output file.

- 6** Add a function for checksum calculation to your source code. Make sure that the function uses the same algorithm and settings as for the checksum calculated by `ielftool`. For example, a variant of the `crc16` algorithm with small memory footprint (in contrast to the fast variant that uses more memory):

```

unsigned short SmallCrc16(uint16_t
    sum,
                                unsigned char *p,
                                unsigned int len)
{
    while (len--)
    {
        int i;
        unsigned char byte = *(p++);

        for (i = 0; i < 8; ++i)
        {
            unsigned long oSum = sum;
            sum <<= 1;
            if (byte & 0x80)
                sum |= 1;
            if (oSum & 0x8000)
                sum ^= 0x1021;
            byte <<= 1;
        }
    }
    return sum;
}

```

You can find the source code for this checksum algorithm in the `arm\src\linker` directory of your product installation.

- 7** Make sure that your application also contains a call to the function that calculates the checksum, compares the two checksums, and takes appropriate action if the checksum values do not match.

This code gives an example of how the checksum can be calculated for your application and to be compared with the `ielftool` generated checksum:

```

/* The calculated checksum */

/* Linker generated symbols */
extern unsigned short const __checksum;
extern int __checksum_begin;
extern int __checksum_end;

void TestChecksum()
{
    unsigned short calc = 0;
    unsigned char zeros[2] = {0, 0};

    /* Run the checksum algorithm */
    calc = SmallCrc16(0,
                    (unsigned char *) &__checksum_begin,
                    ((unsigned char *) &__checksum_end -
                    ((unsigned char *) &__checksum_begin)+1));

    /* Fill the end of the byte sequence with zeros. */
    calc = SmallCrc16(calc, zeros, 2);

    /* Test the checksum */
    if (calc != __checksum)
    {
        printf("Incorrect checksum!\n");
        abort(); /* Failure */
    }

    /* Checksum is correct */
}

```

- 8** Build your application project and download it.

During the build, `ielftool` creates a checksum and places it in the specified symbol `__checksum` in the section `.checksum`.

- 9** Choose **Download and Debug** to start the C-SPY Debugger.

During execution, the checksum calculated by `ielftool` and the checksum calculated by your application should be identical.

## CHECKSUMS OF ADDRESS-TRANSLATED RANGES

In most cases `ielftool` can be used as if the tool operates on virtual (or execution/logical) addresses—the memory addresses that your application uses. However, this is not strictly true, because `ielftool` operates on ELF files. It is actually using the physical addresses of the ELF file.

In most cases this does not matter, because the physical and the logical address are almost always the same. However, if your application is linked with address translation (see *logical directive*, page 557), the content has two addresses: a logical address (where it resides during execution) and a physical address (where it resides before execution).

Because the symbol table in an ELF file only uses logical addresses, there are no symbols that have physical addresses, so the usual convenience of using symbols in the checksum range does not work for translated checksum ranges. Instead, you must use explicit physical checksum ranges.

An example:

You want to calculate a checksum for the address range `0x5'0000–0x5'FFFF`. You have two symbols: `__checksum_start=0x5'0000` and `__checksum_end=0x5'FFFF`.

If your application is linked without address translation, you can use:

```
--checksum __checksum:4,crc32;__checksum_start-__checksum_end
```

However, if your application is linked with address translation, assuming the range `0x5'0000–0x5'FFFF` was, for example, translated to `0x1000'0000–0x1000'FFFF`, you must use:

```
--checksum __checksum:4,crc32;0x1000'0000-0x1000'FFFF
```

**Note:** The checksum symbol `__checksum` is a normal symbol—it has a virtual address and can be used as is. `ielftool` processes the physical bytes specified by the checksum range and stores them at the virtual address of the checksum symbol, so that the application can access it.

## TROUBLESHOOTING CHECKSUM CALCULATION

If the two checksums do not match, there are several possible causes. These are some troubleshooting hints:

- If possible, start with a small example when trying to get the checksums to match.
- Verify that the exact same memory range or ranges are used in both checksum calculations.

To help you do this, `ielftool` lists the ranges for which the checksum is calculated on `stdout` about the exact addresses that were used and the order in which they were accessed.

- Make sure that all checksum symbols are excluded from all checksum calculations. Compare the checksum placement with the checksum range and make sure they do not overlap. You can find information in the **Build** message window after `ielftool` has generated a checksum.
- Verify that the checksum calculations use the same polynomial.
- Verify that the bits in the bytes are processed in the same order in both checksum calculations, from the least to the most significant bit or the other way around. You control this with the **Bit order** option (or from the command line, the `-m` parameter of the `--checksum` option).
- If you are using the small variant of CRC, check whether you need to feed additional bytes into the algorithm.

The number of zeros to add at the end of the byte sequence must match the size of the checksum, in other words, one zero for a 1-byte checksum, two zeros for a 2-byte checksum, four zeros for a 4-byte checksum, and eight zeros for an 8-byte checksum.

- Any breakpoints in flash memory change the content of the flash. This means that the checksum which is calculated by your application will no longer match the initial checksum calculated by `ielftool`. To make the two checksums match again, you must disable all your breakpoints in flash and any breakpoints set in flash by C-SPY internally. The stack plugin and the debugger option **Run to** both require C-SPY to set breakpoints. Read more about possible breakpoint consumers in the *C-SPY® Debugging Guide for Arm*.
- By default, a symbol that you have allocated in memory by using the linker option `--place_holder` is considered by C-SPY to be of the type `int`. If the size of the checksum is different than the size of an `int`, you can change the display format of the checksum symbol to match its size.  
In the C-SPY **Watch** window, select the symbol and choose **Show As** from the context menu. Choose the display format that matches the size of the checksum symbol.
- If your application is linked with address translation (see *logical directive*, page 557), make sure that any checksums are calculated using explicit physical checksum ranges, see *Checksums of address-translated ranges*, page 237.

---

## AEABI compliance

The IAR build tools for Arm support the Embedded Application Binary Interface for Arm, AEABI, defined by Arm Limited. This interface is based on the Intel IA64 ABI

interface. The advantage of adhering to AEABI is that any such module can be linked with any other AEABI-compliant module, even modules produced by tools provided by other vendors.

The IAR build tools for Arm support the following parts of the AEABI:

AAPCS	Procedure Call Standard for the 32-bit Arm architecture
CPPABI	C++ ABI for the 32-bit Arm architecture
AAELF	ELF for the 32-bit Arm architecture
AADWARF	DWARF for the 32-bit Arm architecture
RTABI	Runtime ABI for the 32-bit Arm architecture
CLIBABI	C library ABI for the 32-bit Arm architecture
AAPCS64	Procedure Call Standard for the 64-bit Arm architecture
VFABIA64	Vector function application binary interface specification for the 64-bit Arm architecture
ELF64	ELF for the 64-bit Arm architecture
DWARF64	DWARF for the 64-bit Arm architecture
CPPABI64	C++ ABI for the 64-bit Arm architecture

The IAR build tools only support a *bare metal* platform, that is a ROM-based system that lacks an explicit operating system.

**Note:**

- The AEABI is specified for C89 only
- The AEABI does not specify C++ library compatibility
- Neither the size of an `enum` or of `wchar_t` is constant in the AEABI.
- 64-bit Arm has no runtime ABI or a C ABI. Therefore, the compiler option `--aeabi` has no effect **in 64-bit mode**.

If AEABI compliance is enabled, certain preprocessor constants become real constant variables instead.

## LINKING AEABI-COMPLIANT MODULES USING THE IAR ILINK LINKER

When building an application using the IAR ILINK Linker, the following types of modules can be combined:

- Modules produced using IAR build tools, both AEABI-compliant modules as well as modules that are not AEABI-compliant
- AEABI-compliant modules produced using build tools from another vendor.

**Note:** To link a module produced by a compiler from another vendor, extra support libraries from that vendor might be required.

The IAR ILINK Linker automatically chooses the appropriate standard C/C++ libraries to use based on attributes from the object files. Imported object files might not have all these attributes. Therefore, you might need to help ILINK choose the standard library by verifying one or more of the following details:

- Include at least one module built with the IAR C/C++ Compiler for Arm.
- The used CPU by specifying the `--cpu` linker option
- If full I/O is needed, make sure to link with a Full library configuration in the standard library

Potential incompatibilities include but are not limited to:

- The size of `enum`
- The size of `wchar_t`
- The calling convention
- The instruction set used.

When linking AEABI-compliant modules, also consider the information in the chapters *Linking using ILINK* and *Linking your application*.

## LINKING AEABI-COMPLIANT MODULES USING A THIRD-PARTY LINKER

If you have a module produced using the IAR C/C++ Compiler and you plan to link that module using a linker from a different vendor, that module must be AEABI-compliant, see *Enabling AEABI compliance in the compiler*, page 241.

In addition, if that module uses any of the IAR-specific compiler extensions, you must make sure that those features are also supported by the tools from the other vendor. Note specifically:

- Support for the following extensions must be verified: `#pragma pack`, `__no_init`, `__root`, and `__ramfunc`



- The following extensions are harmless to use: `#pragma location/@`, `__arm`, `__thumb`, `__svc`, `__irq`, `__fiq`, and `__nested`.

### ENABLING AEABI COMPLIANCE IN THE COMPILER

You can enable AEABI compliance in the compiler by setting the `--aeabi` option. In this case, you must also use the `--guard_calls` option.



In the IDE, use the **Project>Options>C/C++ Compiler>Extra Options** page to specify the `--aeabi` and `--guard_calls` options.



On the command line, use the options `--aeabi` and `--guard_calls` to enable AEABI support in the compiler.

Alternatively, to enable support for AEABI for a specific system header file, you must define the preprocessor symbol `_AEABI_PORTABILITY_LEVEL` to non-zero prior to including a system header file, and make sure that the symbol `AEABI_PORTABLE` is set to non-zero after the inclusion of the header file:

```
#define _AEABI_PORTABILITY_LEVEL 1
#undef _AEABI_PORTABLE
#include <header.h>
#ifdef _AEABI_PORTABLE
    #error "header.h not AEABI compatible"
#endif
```

---

## CMSIS integration (32-bit mode)



This mechanism is deprecated and might be removed in future versions. To set up new projects with CMSIS support, use the CMSIS-Pack Manager.

The `arm\CMSIS` subdirectory contains CMSIS (Cortex Microcontroller Software Interface Standard) and CMSIS DSP header and library files, and documentation. For more information, see [developer.arm.com/tools-and-software/embedded/cmsis](http://developer.arm.com/tools-and-software/embedded/cmsis).

The special header file `inc\c\CMSIS_IAR.h` is provided as a CMSIS adaptation of the current version of the IAR C/C++ Compiler.

**Note:** CMSIS is not supported in **64-bit mode**.

### CMSIS DSP LIBRARY

IAR Embedded Workbench comes with prebuilt CMSIS DSP libraries in the `arm\CMSIS\Lib\IAR` directory.

The names of the library files for Armv7-M MCUs are constructed in this way:

```
iar_cortexM{0|3|4|7}{1|b}[s|f]_math.a
```

where `{0|3|4|7}` selects the Cortex-M variant, `{1|b}` selects the byte order, and `[s|f]` indicates that the library is built for a single/double precision FPU (Cortex-M4 and Cortex-M7 only).

The names of the library files for Armv8-M MCUs are constructed in this way:

```
iar_MCU1[d][fsp|fdp]_math.a
```

where `MCU` selects MCU variant (ARMv8MBL (M23) or ARMv8MML (M33/M35P), `1` indicates little-endian, `[d]` selects support for DSP instructions, and `[fsp|fdp]` indicates that the library is built for a single/double precision FPU.

**Note:** The Armv81 (M55) MCU is not supported by this mechanism.

## CUSTOMIZING THE CMSIS DSP LIBRARY

The source code of the CMSIS DSP library is provided in the `arm\CMSIS\DSP_Lib\Source` directory. You can find an IAR Embedded Workbench project which is prepared for building a customized DSP library in the `arm\CMSIS\DSP_Lib\Source\IAR` directory.



### BUILDING WITH CMSIS ON THE COMMAND LINE

This section contains examples of how to build your CMSIS-compatible application on the command line.

#### CMSIS only (that is without the DSP library)

```
iccarm -I $EW_DIR$\arm\CMSIS\Include
```

#### With the DSP library, for Cortex-M4, little-endian, and with FPU

```
iccarm --endian=little --cpu=Cortex-M4 --fpu=VFPv4_sp -I
$EW_DIR$\arm\CMSIS\Include $EW_DIR$\arm\CMSIS\DSP\Include -D
ARM_MATH_CM4
```

```
ilinkarm $EW_DIR$\arm\CMSIS\Lib\IAR\iar_cortexM31_math.a
```



### BUILDING WITH CMSIS IN THE IDE

Choose **Project>Options>General Options>Library Configuration** to enable CMSIS support.

When enabled, CMSIS include paths and the DSP library will automatically be used. For more information, see the *IDE Project Management and Building Guide for Arm*.

---

## Arm TrustZone®

The Arm TrustZone® technology is a System on Chip (SOC) and CPU system-wide approach to security.

Arm TrustZone was introduced in Armv6KZ and is supported also in Armv7-A and Armv8-A. It does not require any specific tool support. Similar capabilities were introduced for Cortex-M as Arm TrustZone for Armv8-M, also known as CMSE (Cortex-M Security Extension). CMSE does require tool support, and there is a standard interface for development tools that target CMSE. This extension includes two modes of execution—secure and non-secure. It also adds memory protection and instructions for validating memory access and controlled transition between the two modes.

### IN 32-BIT MODE

To use TrustZone for Armv8-M, build two separate images—one for secure mode and one for non-secure mode. The secure image can export function entries that can be used by the non-secure image.

The IAR build tools support TrustZone by means of intrinsic functions, linker options, compiler options, predefined preprocessor symbols, extended keywords, and the section `Veneer$$CMSE`.

You can find the data types and utility functions needed for working with TrustZone in the header file `arm_cmse.h`.

The function type attributes `__cmse_nonsecure_call` and `__cmse_nonsecure_entry` add code to clear the used registers when calling from secure code to non-secure code.

The IAR build tools follow the standard interface for development tools targeting Cortex-M Security Extensions (CMSE), with the following exceptions:

- Variadic secure entry functions are not allowed.
- Secure entry functions with parameters or return values that do not fit in registers are not allowed.
- Non-secure calls with parameters or return values that do not fit in registers are not allowed.
- Non-secure calls with parameters or return values in floating-point registers.
- The compiler option `--cmse` requires the architecture Armv8-M with security extensions, and is not supported when building ROPI (read-only position-independent) images or RWPI (read-write position-independent) images.

For more information about Arm TrustZone, see [www.arm.com](http://www.arm.com).

## An example using the Armv8-M Security Extensions (CMSE)

In the `arm\src\ARMv8M_Secure` directory, you can find an example project that demonstrates the use of Arm TrustZone and CMSE.

The example consists of two projects:

- `hello_s`: The secure part of the application
- `hello_ns`: The non-secure part of the application

**Note:** You must build the secure project before building the non-secure project.

There are two entry functions in `hello_s`, available to `hello_ns` via secure gateways in a non-secure callable region:

- `secure_hello`: Prints a greeting, in the style of the classic Hello world example.
- `register_secure_goodbye`: A callback that returns a string printed on exiting the secure part.

The linker will automatically generate the code for the needed secure gateways and place them in the section `Veneers$$CMSE`.

### To set up and build the example:

- 1 Open the example workspace `hello_s.eww` located in `arm\src\ARMv8M_Secure\Hello_Secure`.
- 2 Set up the project `hello_s` to run in secure mode by choosing **Project>Options>General Options>32-bit** and then selecting the options **TrustZone** and **Mode: Secure**.
- 3 Set up the project `hello_ns` to run in non-secure mode by choosing **Project>Options>General Options>32-bit** and then selecting the options **TrustZone** and **Mode: Non-secure**.

The non-secure part must populate a small vector at `0x200000` with addresses to the initialization routine, non-secure top of stack, and non-secure `main`. This vector is used by the secure part to set up and interact with the non-secure part. In this example, this is done with the following code in `nonsecure_hello.c`:

```
/* Interface towards the secure part */
#pragma location=NON_SECURE_ENTRY_TABLE
__root const non_secure_init_t init_table =
{
    __iar_data_init3,          /* initialization function */
    __section_end("CSTACK"), /* non-secure stack */
    main_ns                   /* non-secure main */
};
```

- 4 When the secure project is built, the linker will automatically generate an import library file for the non-secure part that only includes references to functions in the secure part that can be called from the non-secure part. Specify this file by using **Project>Options>Linker>Output>TrustZone import library**.
- 5 Build the secure project.
- 6 Include the TrustZone import library file manually in the project `hello_ns` by specifying an additional library: **Project>Options>Linker>Library>Additional libraries**.
- 7 Build the non-secure project.
- 8 The secure project must specify the non-secure project output file as an extra image that should be loaded by the debugger. To do this, use **Project>Options>Debugger>Images>Download extra images**.

#### To debug the example:

- 1 To debug in the simulator, set the `hello_s` project as the active project by right-clicking on the project and choosing **Set as Active**.
- 2 Choose **Project>Options>Debugger>Driver** and select **Simulator**.
- 3 Choose **Simulator>Memory Configuration**. Make sure that the option **Use ranges based on** is deselected.
- 4 Select **Use manual ranges** and add the following new ranges:

Access type	Start address	End address
RAM	0x0000'0000	0x003F'FFFF
RAM	0x2000'0000	0x203F'FFFF
SFR	0x4000'0000	0x5FFF'FFFF
SFR	0xE000'0000	0xE00F'FFFF

Table 25: Memory ranges for TrustZone example

- 5 Click **OK** to close the **Memory Configuration** dialog box.
- 6 Start C-SPY by choosing **Project>Download and Debug**.
- 7 Choose **View>Terminal I/O** to open the **Terminal I/O** window.
- 8 Choose **Debug>Go** to start the execution.
- 9 The **Terminal I/O** window should now print this text:

```
Hello from secure World!
Hello from non-secure World!
Goodbye, for now.
```

## IN 64-BIT MODE

TrustZone support is automatic in 64-bit mode.

---

## Branch protection (PACBTI) — 32-bit mode only

IAR Embedded Workbench for Arm supports branch protection—the Pointer Authentication and Branch Target Identification extension (PACBTI) for Armv8.1-M—for cores and devices that support it. To enable branch protection, use the compiler option `--branch_protection`, see *--branch\_protection*, page 315.



In the IDE, use the **Project>Options>General Options>32-bit>Pointer authentication (PACBTI)** page to enable branch protection.

PACBTI protects against two types of security exploits, called Return-Oriented Programming (ROP) and Jump-Oriented Programming (JOP). Both these attacks use existing pieces of code in the user application. The attacker takes control of the call stack using, for example, stack smashing, and then overwrites the pointers stored on the stack to point to existing vulnerable pieces of code the attacker has identified as useful. The attacker can use this to increase the operating privileges and take full control of the system.

Pointer authentication creates a cryptographic signature of a pointer and stores it in a register separate from the pointer. The return address is then authenticated using this signature before returning.

The second type of attack, Jump-Oriented Programming (JOP), works in a similar fashion. In an ROP attack, the attacker scans the software stack for pieces of code to exploit, looking for sequences that end in a function return. JOP, on the other hand, attacks target code sequences that end in other forms of indirect branches, like function pointers, exploiting the fact that `BL` or `B` instructions can target any executable address, and not just the addresses you have defined as entry points.

To protect against JOP attacks, the instruction set includes Branch Target Identification instructions (BTIs). If the target of an indirect branch is not a BTI instruction, a Branch Target Exception is generated.

**Note:** PACBTI is designed to catch common exploitable software errors, but it requires good software development practices to be effective.

## USING BRANCH PROTECTION IN YOUR APPLICATION

To use branch protection, you must make a couple of small modifications to the application startup code. You can also control how the linker checks that all linked application modules support branch protection.

## Branch Target Identification

To use Branch Target Identification (BTI), you must compile your application with `--branch_protection=bti` or `--branch_protection=bti+pac-ret`, and enable BTI in the startup code by setting the `BTI_EN` bit in the processor `CONTROL` register. If you are using the `cstartup.s` file, the best way of implementing this is by defining the function `__low_level_init`. For more information about `cstartup.s` and `__low_level_init`, see *System startup and termination*, page 153.

```
#include <arm_acle.h>
void __low_level_init(void)
{
    unsigned int old_ctrl = __arm_rsr("CONTROL");
    __arm_wsr("CONTROL", old_ctrl | 0x10);
    // Enables BTI by setting bit #4 in CONTROL
}
```



In the IDE, use the **Project>Options>C/C++ Compiler>Code>Branch target identification** to enable BTI.

## Pointer Authentication

To use Pointer Authentication (PAC), you must compile your application with `--branch_protection=pac-ret` or `--branch_protection=bti+pac-ret`, and initialize an authentication key and enable PAC in the startup code. If you are using the `cstartup.s` file, the best way of implementing this is by defining the function `__low_level_init`. For more information about `cstartup.s` and `__low_level_init`, see *System startup and termination*, page 153.

```
void __low_level_init(void)
{
    // Set up a 128-bit key in 4 parts:
    __arm_wsr("PAC_KEY_P_0", key[0]);
    __arm_wsr("PAC_KEY_P_1", key[1]);
    __arm_wsr("PAC_KEY_P_2", key[2]);
    __arm_wsr("PAC_KEY_P_3", key[3]);
    unsigned int old_ctrl = __arm_rsr("CONTROL");
    __arm_wsr("CONTROL", old_ctrl | 0x40);
    // Enables PAC by setting bit #6 in CONTROL
}
```



In the IDE, use the **Project>Options>C/C++ Compiler>Code>Pointer authentication** to enable PAC.

## Linking

To ensure that all modules of the application use PAC, BTI, or both, you can use one or more of these options to control how the linker checks the modules at link time:

- `--library_security`, see `--library_security`, page 391
- `--require_bti`, see `--require_bti`, page 404
- `--require_pac`, see `--require_pac`, page 404

---

## Patching symbol definitions using `$$Super$$` and `$$Sub$$`

Using the `$$Sub$$` and `$$Super$$` special patterns, you can patch existing symbol definitions in situations where you would otherwise not be able to modify the symbol, for example, when a symbol is located in an external library or in ROM code.

The `$$Super$$` special pattern identifies the original unpatched function used for calling the original function directly.

The `$$Sub$$` special pattern identifies the new function that is called instead of the original function. You can use the `$$Sub$$` special pattern to add processing before or after the original function.

### AN EXAMPLE USING THE `$$SUPER$$` AND `$$SUB$$` PATTERNS

The following example shows how to use the `$$Super$$` and `$$Sub$$` patterns to insert a call to the function `ExtraFunc()` before the call to the legacy function `foo()`.

```
extern void ExtraFunc(void);
extern void $$Super$$foo(void);

/* this function is called instead of the original foo() */
void $$Sub$$foo(void)
{
    ExtraFunc();    /* does some extra setup work */
    $$Super$$foo(); /* calls the original foo() function */
    /* To avoid calling the original foo() function
       * omit the $$Super$$foo(); function call.
       */
}
```



# Efficient coding for embedded applications

- Selecting data types
- Controlling data and function placement in memory
- Controlling compiler optimizations
- Facilitating good code generation

---

## Selecting data types

For efficient treatment of data, you should consider the data types used and the most efficient placement of the variables.

### USING EFFICIENT DATA TYPES

The data types you use should be considered carefully, because this can have a large impact on code size and code speed.

- Use `int` or `long` instead of `char` or `short` whenever possible, to avoid sign extension or zero extension. In particular, loop indexes should always be `int` or `long` to minimize code generation. Also, in Thumb mode, accesses through the stack pointer (`SP`) is restricted to 32-bit data types, which further emphasizes the benefits of using one of these data types.
- Use unsigned data types, unless your application really requires signed values.
- **In 32-bit mode**, be aware of the costs of using 64-bit data types, such as `double` and `long long`.
- Bitfields and packed structures generate large and slow code.
- Using floating-point types on a microprocessor without a math co-processor is inefficient, both in terms of code size and execution speed.
- Declaring a pointer to `const` data tells the calling function that the data pointed to will not change, which opens for better optimizations.

For information about representation of supported data types, pointers, and structures types, see the chapter *Data representation*.

## FLOATING-POINT TYPES

Using floating-point types on a microprocessor without a math coprocessor is inefficient, both in terms of code size and execution speed. Therefore, you should consider replacing code that uses floating-point operations with code that uses integers, because these are more efficient.

The compiler supports three floating-point formats—16, 32, and 64 bits. The 32-bit floating-point type `float` is more efficient in terms of code size and execution speed. The 64-bit format `double` supports higher precision and larger numbers. The 16-bit format is mainly useful for some specific situations.

In the compiler, the floating-point type `float` always uses the 32-bit format, and the type `double` always uses the 64-bit format.

Unless the application requires the extra precision that 64-bit floating-point numbers give, we recommend using 32-bit floating-point numbers instead.

By default, a *floating-point constant* in the source code is treated as being of the type `double`. This can cause innocent-looking expressions to be evaluated in double precision. In the example below `a` is converted from a `float` to a `double`, the `double` constant `1.0` is added and the result is converted back to a `float`:

```
double Test(float a)
{
    return a + 1.0;
}
```

To treat a floating-point constant as a `float` rather than as a `double`, add the suffix `f` to it, for example:

```
double Test(float a)
{
    return a + 1.0f;
}
```

For more information about floating-point types, see *Basic data types—floating-point types*, page 415.

## ALIGNMENT OF ELEMENTS IN A STRUCTURE

Some Arm cores require that when accessing data in memory, the data must be aligned. Each element in a structure must be aligned according to its specified type requirements. This means that the compiler might need to insert *pad bytes* to keep the alignment correct.

There are situations when this can be a problem:

- There are external demands, for example, network communication protocols are usually specified in terms of data types with no padding in between
- You need to save data memory.

For information about alignment requirements, see *Alignment*, page 407.

Use the `#pragma pack` directive or the `__packed` data type attribute for a tighter layout of the structure. The drawback is that each access to an unaligned element in the structure will use more code.

Alternatively, write your own customized functions for *packing* and *unpacking* structures. This is a more portable way, which will not produce any more code apart from your functions. The drawback is the need for two views on the structure data—packed and unpacked.

For more information about the `#pragma pack` directive, see *pack*, page 461.

## ANONYMOUS STRUCTS AND UNIONS

When a structure or union is declared without a name, it becomes anonymous. The effect is that its members will only be seen in the surrounding scope.

### Example

In this example, the members in the anonymous `union` can be accessed, in function `F`, without explicitly specifying the `union` name:

```
struct S
{
    char mTag;
    union
    {
        long mL;
        float mF;
    };
} St;

void F(void)
{
    St.mL = 5;
}
```

The member names must be unique in the surrounding scope. Having an anonymous struct or union at file scope, as a global, external, or static variable is also allowed. This could for instance be used for declaring I/O registers, as in this example:

```
__no_init volatile
union
{
    unsigned char IOPORT;
    struct
    {
        unsigned char way: 1;
        unsigned char out: 1;
    };
} @ 0x1000;

/* The variables are used here. */
void Test(void)
{
    IOPORT = 0;
    way = 1;
    out = 1;
}
```

This declares an I/O register byte `IOPORT` at address `0x1000`. The I/O register has 2 bits declared, `way` and `out`—both the inner structure and the outer union are anonymous.

Anonymous structures and unions are implemented in terms of objects named after the first field, with a prefix `_A_` to place the name in the implementation part of the namespace. In this example, the anonymous union will be implemented through an object named `_A_IOPORT`.

---

## Controlling data and function placement in memory

The compiler provides different mechanisms for controlling placement of functions and data objects in memory. To use memory efficiently, you should be familiar with these mechanisms and know which one is best suited for different situations. You can use:

- The `@` operator and the `#pragma location` directive for absolute placement. Using the `@` operator or the `#pragma location` directive, you can place individual global and static variables at absolute addresses. Note that it is not possible to use this notation for absolute placement of individual functions. For more information, see *Data placement at an absolute location*, page 253.

- The @ operator and the #pragma location directive for section placement.  
Using the @ operator or the #pragma location directive, you can place individual functions, variables, and constants in named sections. The placement of these sections can then be controlled by linker directives. For more information, see *Data and function placement in sections*, page 254.
- The @ operator and the #pragma location directive for register placement  
Use the @ operator or the #pragma location directive to place individual global and static variables in registers. The variables must be declared \_\_no\_init. This is useful for individual data objects that must be located in a specific register.
- Using the --section option, you can set the default segment for functions, variables, and constants in a particular module. For more information, see *--section*, page 353.

## DATA PLACEMENT AT AN ABSOLUTE LOCATION

The @ operator, alternatively the #pragma location directive, can be used for placing global and static variables at absolute addresses.

To place a variable at an absolute address, the argument to the @ operator and the #pragma location directive should be a literal number, representing the actual address. The absolute location must fulfill the alignment requirement for the variable that should be located.

**Note:** All declarations of \_\_no\_init variables placed at an absolute address are *tentative definitions*. Tentatively defined variables are only kept in the output from the compiler if they are needed in the module being compiled. Such variables will be defined in all modules in which they are used, which will work as long as they are defined in the same way. The recommendation is to place all such declarations in header files that are included in all modules that use the variables.

Other variables placed at an absolute address use the normal distinction between declaration and definition. For these variables, you must provide the definition in only one module, normally with an initializer. Other modules can refer to the variable by using an extern declaration, with or without an explicit address.

### Examples

In this example, a \_\_no\_init declared variable is placed at an absolute address. This is useful for interfacing between multiple processes, applications, etc:

```
__no_init volatile char alpha @ 0xFF2000; /* OK */
```

The next example contains two const declared objects. The first one is not initialized, and the second one is initialized to a specific value. (The first case is useful for configuration parameters, because they are accessible from an external interface.) Both

objects are placed in ROM. Note that in the second case, the compiler is not obliged to actually read from the variable, because the value is known.

```
#pragma location=0xFF2004
__no_init const int beta;           /* OK */

const int gamma @ 0xFF2004 = 3;     /* OK */
```

In the first case, the value is not initialized by the compiler—the value must be set by other means. The typical use is for configurations where the values are loaded to ROM separately, or for special function registers that are read-only.

This shows incorrect usage:

```
__no_init int epsilon @ 0xFF2007; /* Error, misaligned. */
```

### C++ considerations

In C++, module scoped `const` variables are static (module local), whereas in C they are global. This means that each module that declares a certain `const` variable will contain a separate variable with this name. If you link an application with several such modules all containing (via a header file), for instance, the declaration:

```
volatile const __no_init int x @ 0x100; /* Bad in C++ */
```

the linker will report that more than one variable is located at address 0x100.

To avoid this problem and make the process the same in C and C++, you should declare these variables `extern`, for example:

```
/* The extern keyword makes x public. */
extern volatile const __no_init int x @ 0x100;
```

**Note:** C++ static member variables can be placed at an absolute address just like any other static variable.

### DATA AND FUNCTION PLACEMENT IN SECTIONS

The following method can be used for placing data or functions in named sections other than default:

- The `@` operator, alternatively the `#pragma location` directive, can be used for placing individual variables or individual functions in named sections. The named section can either be a predefined section, or a user-defined section.
- The `--section` option can be used for placing variables and functions, which are parts of the whole compilation unit, in named sections.

C++ static member variables can be placed in named sections just like any other static variable.

If you use your own sections, in addition to the predefined sections, the sections must also be defined in the linker configuration file.

**Note:** Take care when explicitly placing a variable or function in a predefined section other than the one used by default. This is useful in some situations, but incorrect placement can result in anything from error messages during compilation and linking to a malfunctioning application. Carefully consider the circumstances—there might be strict requirements on the declaration and use of the function or variable.

The location of the sections can be controlled from the linker configuration file.

For more information about sections, see the chapter *Section reference*.

### Examples of placing variables in named sections

In the following examples, a data object is placed in a user-defined section. Note that you must as always ensure that the section is placed in the appropriate memory area when linking.

```
__no_init int alpha @ "MY_NOINIT";          /* OK */

#pragma location="MY_CONSTANTS"
const int beta = 42;                        /* OK */

const int gamma @ "MY_CONSTANTS" = 17;     /* OK */
int theta @ "MY_ZEROS";                    /* OK */
int phi @ "MY_INITED" = 4711;              /* OK */
```

The linker will normally arrange for the correct type of initialization for each variable. If you want to control or suppress automatic initialization, you can use the `initialize` and `do not initialize` directives in the linker configuration file.

### Examples of placing functions in named sections

```
void f(void) @ "MY_FUNCTIONS";

void g(void) @ "MY_FUNCTIONS"
{
}

#pragma location="MY_FUNCTIONS"
void h(void);
```

## DATA PLACEMENT IN REGISTERS (32-BIT MODE)

In **32-bit mode**, the `@` operator, alternatively the `#pragma location` directive, can be used for placing global and static variables in a register.

To place a variable in a register, the argument to the @ operator and the #pragma location directive should be an identifier that corresponds to an Arm core register in the range R4-R11 (R9 cannot be specified in combination with the --rwdi command line option).

A variable can be placed in a register only if it is declared as \_\_no\_init, has file scope, and its size is four bytes. A variable placed in a register does not have a memory address, so the address operator & cannot be used.

Within a module where a variable is placed in a register, the specified register will only be used for accessing that variable. The value of the variable is preserved across function calls to other modules because the registers R4-R11 are callee saved, and as such they are restored when execution returns. However, the value of a variable placed in a register is not always preserved as expected:

- In an exception handler or library callback routine (such as the comparator function passed to qsort) the value might not be preserved. The value will be preserved if the command line option --lock\_regs is used for locking the register in all modules of the application, including library modules.
- In a fast interrupt handler, the value of a variable in R8-R11 is not preserved from outside the handler, because these registers are banked.
- The longjmp function and C++ exceptions might restore variables placed in registers to old values, unlike other variables with static storage duration which are not restored.

The linker does not prevent modules from placing different variables in the same register. Variables in different modules can be placed in the same register, and another module could use the register for other purposes.

**Note:** A variable placed in a register should be defined in an include file, to be included in every module that uses the variable. An unused definition in a module will cause the register to not be used in that module.

---

## Controlling compiler optimizations

The compiler performs many transformations on your application to generate the best possible code. Examples of such transformations are storing values in registers instead of memory, removing superfluous code, reordering computations in a more efficient order, and replacing arithmetic operations by cheaper operations.

The linker should also be considered an integral part of the compilation system, because some optimizations are performed by the linker. For instance, all unused functions and variables are removed and not included in the final output.



## SCOPE FOR PERFORMED OPTIMIZATIONS

You can decide whether optimizations should be performed on your whole application or on individual files. By default, the same types of optimizations are used for an entire project, but you should consider using different optimization settings for individual files. For example, put code that must execute quickly into a separate file and compile it for minimal execution time, and the rest of the code for minimal code size. This will give a small program, which is still fast enough where it matters.

You can also exclude individual functions from the performed optimizations. The `#pragma optimize` directive allows you to either lower the optimization level, or specify another type of optimization to be performed. See *optimize*, page 459, for information about the pragma directive.

## MULTI-FILE COMPILATION UNITS

In addition to applying different optimizations to different source files or even functions, you can also decide what a compilation unit consists of—one or several source code files.

By default, a compilation unit consists of one source file, but you can also use multi-file compilation to make several source files in a compilation unit. The advantage is that interprocedural optimizations such as inlining and cross jump have more source code to work on. Ideally, the whole application should be compiled as one compilation unit. However, for large applications this is not practical because of resource restrictions on the host computer. For more information, see `--mfc`, page 335.

**Note:** Only one object file is generated, and therefore all symbols will be part of that object file.

If the whole application is compiled as one compilation unit, it is useful to make the compiler also discard unused public functions and variables before the interprocedural optimizations are performed. Doing this limits the scope of the optimizations to functions and variables that are actually used. For more information, see `--discard_unused_publics`, page 324.

## OPTIMIZATION LEVELS

The compiler supports different levels of optimizations. This table lists optimizations that are typically performed on each level:

Optimization level	Description
None (Best debug support)	Variables live through their entire scope Dead code elimination Redundant label elimination Redundant branch elimination
Low	Same as above but variables only live for as long as they are needed, not necessarily through their entire scope
Medium	Same as above, and: Live-dead analysis and optimization Dead code elimination Redundant label elimination Redundant branch elimination Code hoisting Peephole optimization Some register content analysis and optimization Common subexpression elimination Code motion Static clustering
High (Balanced)	Same as above, and: Instruction scheduling Cross jumping Advanced register content analysis and optimization Loop unrolling Function inlining Type-based alias analysis

Table 26: Compiler optimization levels

**Note:** Some of the performed optimizations can be individually enabled or disabled. For more information, see *Fine-tuning enabled transformations*, page 259.

A high level of optimization might result in increased compile time, and will also most likely make debugging more difficult, because it is less clear how the generated code relates to the source code. For example, at the low, medium, and high optimization levels, variables do not live through their entire scope, which means processor registers used for storing variables can be reused immediately after they were last used. Due to this, the C-SPY **Watch** window might not be able to display the value of the variable throughout its scope, or even occasionally display an incorrect value. At any time, if you experience difficulties when debugging your code, try lowering the optimization level.

## SPEED VERSUS SIZE

At the high optimization level, the compiler balances between size and speed optimizations. However, it is possible to fine-tune the optimizations explicitly for either size or speed. They only differ in what thresholds that are used—speed will trade size for speed, whereas size will trade speed for size.

If you use the optimization level High speed, the `--no_size_constraints` compiler option relaxes the normal restrictions for code size expansion and enables more aggressive optimizations.

You can choose an optimization goal for each module, or even individual functions, using command line options and pragma directives (see `-O`, page 346 and `optimize`, page 459). For a small embedded application, this makes it possible to achieve acceptable speed performance while minimizing the code size—Typically, only a few places in the application need to be fast, such as the most frequently executed inner loops, or the interrupt handlers.

Rather than compiling the whole application with High (Balanced) optimization, you can use High (Size) in general, but override this to get High (Speed) optimization only for those functions where the application needs to be fast.

**Note:** Because of the unpredictable way in which different optimizations interact, where one optimization can enable other optimizations, sometimes a function becomes smaller when compiled with High (Speed) optimization than if High (Size) is used. Also, using multi-file compilation (see `--mfc`, page 335) can enable many optimizations to improve both speed and size performance. It is recommended that you experiment with different optimization settings so that you can pick the best ones for your project.

## FINE-TUNING ENABLED TRANSFORMATIONS

At each optimization level you can disable some of the transformations individually. To disable a transformation, use either the appropriate option, for instance the command line option `--no_inline`, alternatively its equivalent in the IDE **Function inlining**, or the `#pragma optimize` directive. These transformations can be disabled individually:

- Common subexpression elimination
- Loop unrolling
- Function inlining
- Code motion
- Type-based alias analysis
- Static clustering
- Instruction scheduling
- Vectorization

### Common subexpression elimination

Redundant re-evaluation of common subexpressions is by default eliminated at optimization levels Medium and High. This optimization normally reduces both code size and execution time. However, the resulting code might be difficult to debug.

**Note:** This option has no effect at optimization levels None and Low.



For more information about the command line option, see `--no_cse`, page 337.

### Loop unrolling

Loop unrolling means that the code body of a loop, whose number of iterations can be determined at compile time, is duplicated. Loop unrolling reduces the loop overhead by amortizing it over several iterations.

This optimization is most efficient for smaller loops, where the loop overhead can be a substantial part of the total loop body.

Loop unrolling, which can be performed at optimization level High, normally reduces execution time, but increases code size. The resulting code might also be difficult to debug.

The compiler heuristically decides which loops to unroll. Only relatively small loops where the loop overhead reduction is noticeable will be unrolled. Different heuristics are used when optimizing for speed, size, or when balancing between size and speed.

**Note:** This option has no effect at optimization levels None, Low, and Medium.



To disable loop unrolling, use the command line option `--no_unroll`, see `--no_unroll`, page 344.

### Function inlining

Function inlining means that a function, whose definition is known at compile time, is integrated into the body of its caller to eliminate the overhead of the call. This optimization normally reduces execution time, but might increase the code size.

For more information, see *Inlining functions*, page 92.



To disable function inlining, use the command line option `--no_inline`, see `--no_inline`, page 338.

### Code motion

Evaluation of loop-invariant expressions and common subexpressions are moved to avoid redundant re-evaluation. This optimization, which is performed at optimization level Medium and above, normally reduces code size and execution time. The resulting code might however be difficult to debug.

**Note:** This option has no effect at optimization levels below Medium.



For more information about the command line option, see `--no_code_motion`, page 336.

### Type-based alias analysis

When two or more pointers reference the same memory location, these pointers are said to be *aliases* for each other. The existence of aliases makes optimization more difficult because it is not necessarily known at compile time whether a particular value is being changed.

Type-based alias analysis optimization assumes that all accesses to an object are performed using its declared type or as a `char` type. This assumption lets the compiler detect whether pointers can reference the same memory location or not.

Type-based alias analysis is performed at optimization level High. For application code conforming to standard C or C++ application code, this optimization can reduce code size and execution time. However, non-standard C or C++ code might result in the compiler producing code that leads to unexpected behavior. Therefore, it is possible to turn this optimization off.

**Note:** This option has no effect at optimization levels None, Low, and Medium.



For more information about the command line option, see `--no_tbaa`, page 343.

### Example

```
short F(short *p1, long *p2)
{
    *p2 = 0;
    *p1 = 1;
    return *p2;
}
```

With type-based alias analysis, it is assumed that a write access to the `short` pointed to by `p1` cannot affect the `long` value that `p2` points to. Therefore, it is known at compile time that this function returns 0. However, in non-standard-conforming C or C++ code these pointers could overlap each other by being part of the same union. If you use explicit casts, you can also force pointers of different pointer types to point to the same memory location.

### Static clustering

When static clustering is enabled, static and global variables that are defined within the same module are arranged so that variables that are accessed in the same function are stored close to each other. This makes it possible for the compiler to use the same base pointer for several accesses.

**Note:** This option has no effect at optimization levels None and Low.



For more information about the command line option, see `--no_clustering`, page 336.

### Instruction scheduling

The compiler features an instruction scheduler to increase the performance of the generated code. To achieve that goal, the scheduler rearranges the instructions to minimize the number of pipeline stalls emanating from resource conflicts within the microprocessor.



For more information about the command line option, see `--no_scheduling`, page 341.

### Vectorization

Vectorization transforms sequential loops into NEON vector operations, without the need to write assembler code or use intrinsic functions. This enhances portability. Loops will only be vectorized if the target processor has NEON capability and auto-vectorization is enabled. Auto-vectorization is not supported **in 64-bit mode**.

Vectorization, which can be performed at optimization level High, favoring Speed, normally reduces execution time, but increases code size. The resulting code might also be difficult to debug.

**Note:** This option has no effect at optimization levels None, Low, and Medium, or for High Balanced or High Size. To disable vectorization for individual functions, use one of the pragma directives `optimize` or `vectorize`, see *optimize*, page 459 and *vectorize*, page 468.



For information about the command line option, see `--vectorize`, page 359.

---

## Facilitating good code generation

This section contains hints on how to help the compiler generate good code:

- Writing optimization-friendly source code
- Saving stack space and RAM memory
- Function prototypes
- Integer types and bit negation
- Protecting simultaneously accessed variables
- Accessing special function registers
- Passing values between C and assembler objects
- Non-initialized variables

## WRITING OPTIMIZATION-FRIENDLY SOURCE CODE

The following is a list of programming techniques that will, when followed, enable the compiler to better optimize the application.

- Local variables—auto variables and parameters—are preferred over static or global variables. The reason is that the optimizer must assume, for example, that called functions can modify non-local variables. When the life spans for local variables end, the previously occupied memory can then be reused. Globally declared variables will occupy data memory during the whole program execution.
- Avoid taking the address of local variables using the `&` operator. This is inefficient for two main reasons. First, the variable must be placed in memory, and therefore cannot be placed in a processor register. This results in larger and slower code. Second, the optimizer can no longer assume that the local variable is unaffected over function calls.
- Module-local variables—variables that are declared static—are preferred over global variables (non-static). Also, avoid taking the address of frequently accessed static variables.
- The compiler is capable of inlining functions, see *Function inlining*, page 260. To maximize the effect of the inlining transformation, it is good practice to place the definitions of small functions called from more than one module in the header file rather than in the implementation file. Alternatively, you can use multi-file compilation. For more information, see *Multi-file compilation units*, page 257.
- Avoid using inline assembler without operands and clobbered resources. Instead, use SFRs or intrinsic functions if available. Otherwise, use inline assembler *with* operands and clobbered resources or write a separate module in assembler language. For more information, see *Mixing C and assembler*, page 175.

## SAVING STACK SPACE AND RAM MEMORY

The following is a list of programming techniques that save memory and stack space:

- If stack space is limited, avoid long call chains and recursive functions.
- Avoid using large non-scalar types, such as structures, as parameters or return type. To save stack space, you should instead pass them as pointers or, in C++, as references.

## FUNCTION PROTOTYPES

It is possible to declare and define functions using one of two different styles:

- Prototyped
- Kernighan & Ritchie C (K&R C)

Both styles are valid C, however it is strongly recommended to use the prototyped style, and provide a prototype declaration for each public function in a header that is included both in the compilation unit defining the function and in all compilation units using it.

The compiler will not perform type checking on parameters passed to functions declared using K&R style. Using prototype declarations will also result in more efficient code in some cases, as there is no need for type promotion for these functions.

To make the compiler require that all function definitions use the prototyped style, and that all public functions have been declared before being defined, use the **Project>Options>C/C++ Compiler>Language 1>Require prototypes** compiler option (`--require_prototypes`).

### Prototyped style

In prototyped function declarations, the type for each parameter must be specified.

```
int Test(char, int); /* Declaration */

int Test(char ch, int i) /* Definition */
{
    return i + ch;
}
```

### Kernighan & Ritchie style

In K&R style—pre-Standard C—it is not possible to declare a function prototyped. Instead, an empty parameter list is used in the function declaration. Also, the definition looks different.

For example:

```
int Test(); /* Declaration */

int Test(ch, i) /* Definition */
char ch;
int i;
{
    return i + ch;
}
```

## INTEGER TYPES AND BIT NEGATION

In some situations, the rules for integer types and their conversion lead to possibly confusing behavior. Things to look out for are assignments or conditionals (test expressions) involving types with different size, and logical operations, especially bit negation. Here, *types* also includes types of constants.



In some cases there might be warnings—for example, for constant conditional or pointless comparison—in others just a different result than what is expected. Under certain circumstances the compiler might warn only at higher optimizations, for example, if the compiler relies on optimizations to identify some instances of constant conditionals. In this example, an 8-bit character, a 32-bit integer, and two’s complement is assumed:

```
void F1(unsigned char c1)
{
    if (c1 == ~0x80)
        ;
}
```

Here, the test is always false. On the right hand side, `0x80` is `0x00000080`, and `~0x00000080` becomes `0xFFFFFFFF7F`. On the left hand side, `c1` is an 8-bit unsigned character in the range 0–255, which can never be equal to `0xFFFFFFFF7F`. Furthermore, it cannot be negative, which means that the integral promoted value can never have the topmost 24 bits set.

## PROTECTING SIMULTANEOUSLY ACCESSED VARIABLES

Variables that are accessed asynchronously, for example, by interrupt routines or by code executing in separate threads, must be properly marked and have adequate protection. The only exception to this is a variable that is always *read-only*.

To mark a variable properly, use the `volatile` keyword. This informs the compiler, among other things, that the variable can be changed from other threads. The compiler will then avoid optimizing on the variable—for example, keeping track of the variable in registers—will not delay writes to it, and be careful accessing the variable only the number of times given in the source code.

For more information about the `volatile` type qualifier and the rules for accessing volatile objects, see *Declaring objects volatile*, page 420.

## ACCESSING SPECIAL FUNCTION REGISTERS

Specific header files for several Arm devices are included in the IAR product installation. The header files are named `iodevice.h` and define the processor-specific special function registers (SFRs).

**Note:** Each header file contains one section used by the compiler, and one section used by the assembler.

SFRs with bitfields are declared in the header file. This example is from `ioks32c5000a.h`:

```

__no_init volatile union
{
    unsigned short mwctl2;
    struct
    {
        unsigned short edr: 1;
        unsigned short edw: 1;
        unsigned short lee: 2;
        unsigned short lemd: 2;
        unsigned short lepl: 2;
    } mwctl2bit;
} @ 0x1000;

/* By including the appropriate include file in your code,
 * it is possible to access either the whole register or any
 * individual bit (or bitfields) from C code as follows.
 */

void Test()
{
    /* Whole register access */
    mwctl2 = 0x1234;

    /* Bitfield accesses */
    mwctl2bit.edw = 1;
    mwctl2bit.lepl = 3;
}

```

You can also use the header files as templates when you create new header files for other Arm devices.

## PASSING VALUES BETWEEN C AND ASSEMBLER OBJECTS

The following example shows how you in your C source code can use inline assembler to set and get values from a special purpose register:

```
static unsigned long get_APSR( void )
{
    unsigned long value;
    asm volatile( "MRS %0, APSR" : "=r"(value) );
    return value;
}

static void set_APSR( unsigned long value)
{
    asm volatile( "MSR APSR, %0" :: "r"(value) );
}
```

The general purpose register is used for getting and setting the value of the special purpose register `APSR`. The same method can also be used for accessing other special purpose registers and specific instructions.

To read more about inline assembler, see *Inline assembler*, page 176.

## NON-INITIALIZED VARIABLES

Normally, the runtime environment will initialize all global and static variables when the application is started.

The compiler supports the declaration of variables that will not be initialized, using the `__no_init` type modifier. They can be specified either as a keyword or using the `#pragma object_attribute` directive. The compiler places such variables in a separate section.

For `__no_init`, the `const` keyword implies that an object is read-only, rather than that the object is stored in read-only memory. It is not possible to give a `__no_init` object an initial value.

Variables declared using the `__no_init` keyword could, for example, be large input buffers or mapped to special RAM that keeps its content even when the application is turned off.

For more information, see `__no_init`, page 434.

**Note:** To use this keyword, language extensions must be enabled, see `-e`, page 326. For more information, see `object_attribute`, page 458.



# Shared objects (32-bit mode only)

- Introduction to shared objects
- Working with shared objects
- Shared object layout
- Troubleshooting shared objects
- Reference information on command line options for shared objects
- Reference information on linker directives for shared objects
- Reference information on linker blocks for shared objects

---

## Introduction to shared objects

These topics are covered:

- Briefly about shared objects
- Reasons for generating shared objects
- Requirements for generating and using shared objects

### BRIEFLY ABOUT SHARED OBJECTS

In addition to creating executable files—files that either construct their own execution environment, or are loaded onto a running system—the ILINK linker can also generate *shared objects* (shared libraries).

Shared objects are loaded into the execution environment of another, already executing, process through a call to the function `dlopen`. Shared objects are always loaded into RAM. The loading process can then access the shared object and use its symbols.

The loading process can open several shared objects, and the shared objects can refer to each other's exported content. Once a shared object has served its purpose, it can be unloaded and the memory it was loaded into can be reused for other purposes, including by other shared objects.

**Note:** Shared objects are only supported on the 32-bit Arm architecture.

## REASONS FOR GENERATING SHARED OBJECTS

Shared objects are designed to be used by multiple applications or other shared objects at runtime, under an operating system. If an application uses a shared object, the operating system loads the object from a file into memory at load time, using a dynamic linker or something that can act like a dynamic linker.

## REQUIREMENTS FOR GENERATING AND USING SHARED OBJECTS

To be able to generate shared objects with ILINK, and to use them with your application, the following requirements apply:

### Position-independent code and data

Code and data in a shared object must be able to reside anywhere in memory—it must be position-independent. For this reason the command line option `--shared`, that specifies shared object output, also has the same effect as specifying the compiler options `--ropi` and `--rwp=got`. There is no need for setting these options separately. Shared objects cannot contain code or data on absolute addresses.

Assembler code used in shared objects must also be position-independent, and all code accesses to global data must use the global offset table (GOT)—just like the code generated by the compiler using the option `--rwp=got`.

**Note:** The options `--rwp` and `--rwp=sb` cannot be used with shared objects.

### Dynamic linking

Use of shared objects requires the use of a dynamic linker—or something that can act like a dynamic linker. A dynamic linker can load shared objects into available memory and resolve references to and from them. Dynamic linkers are typically part of an operating system—IAR does not supply a dynamic linker.

The shared objects generated by ILINK adhere to the sequence SVr4 DSO-like PLT Linkage defined in section 7.3 in AAELF32, *ELF for the Arm<sup>®</sup> Architecture 2022Q3*. Dynamic linkers that handle such shared objects should be able to handle the shared objects generated by ILINK.

### C source code

C++ is not fully supported for shared objects—in particular, central C++ features like `virtual` (virtual functions), dynamic initialization, and exceptions cannot be used. However, most other C++ constructs will work, so you can use some C++ and still generate a working shared object.

## Working with shared objects

These tasks are covered:

- Linking a shared object
- Locating a shared object
- Loading and unloading a shared object
- Using a shared object
- Debugging a shared object

### LINKING A SHARED OBJECT

A shared object is linked with the command line option `--shared`, see *--shared (linker option)*, page 282.

The principal differences between a shared object and an executable file are:

- A shared object can contain undefined external symbols—symbols that are needed by the shared object, but not defined in it. This is similar to how the `extern` keyword works in C/C++.
- A shared object must contain supplementary sections that are normally not loaded onto the target processor: the ELF file header, the program headers, the dynamic symbol table, the dynamic string table. These sections and a few others are all needed by the dynamic linker. Because they are effectively a part of the application, they will consume space on the target.
- A shared object contains a centralized place where all addresses are stored—the global offset table (GOT). All global data accesses from inside the shared object use the GOT.
- Calls and jumps inside the shared object use relative addressing—the address where the shared object is loaded does not matter in this case. Calls and jumps to destinations outside the shared object must use the addresses in the GOT. The instructions cannot use the GOT directly, so there is a helper section—the procedure linkage table (PLT). The PLT works like this:
  - 1 Control is transferred to the PLT entry for the final target
  - 2 The PLT reads the addresses from the GOT
  - 3 Control is transferred to the final target

This allows the code section to remain unchanged—the jump/call is just redirected to the corresponding PLT entry. This is similar to how veneer functions work for an executable file.

**Note:** All input object files—including all standard and third-party libraries—must be built with the `--shared` compiler option.

## LOCATING A SHARED OBJECT

When you generate a shared object, you do not have full control over where content is placed—a shared object is always linked on address 0. The shared object will always be loaded into memory, so this is just a convenient way to get the offsets and addresses. If a symbol is generated at offset `0x420` in the shared object and the shared object is loaded on `0x8000`, the symbol will have the value `0x8420`.

The normal `place in` and `place at` directives are not available when you generate a shared object. In a shared object, there are four blocks that must be defined using the `define block` directive: `so_code`, `so_const`, `so_data`, and `so_bss`, see *Reference information on linker blocks for shared objects*, page 291.

You can use blocks in blocks as usual:

```
define block so_code with fixed_order {
    block myFirstBlock,
    block mySecondBlock,
    block myThirdBlock
};
```

As long as you have defined all four blocks (you can define empty blocks), and your linked application does not contain any sections that do not match in any of the blocks, the shared object will have the specified layout.

## LOADING AND UNLOADING A SHARED OBJECT

When the shared object is loaded by a call to `dlopen`, the dynamic linker checks which symbols that the new shared object supplies and which symbols the dynamic linker requires (the undefined externals). With this knowledge of the currently loaded symbols and their addresses, the dynamic linker updates the loaded object and all previously loaded shared objects by updating the addresses in the GOT sections.

The loading can be *lazy* or *eager*. Eager loading resolves all symbol addresses at load time. Lazy loading resolves all data symbols at load time, but code symbols not until they are first accessed. The choice is typically handled through the use of a flag in the call to `dlopen`. All ILINK generated shared objects work with both lazy and eager loading.

A shared object is unloaded with a call to `dlclose`. When this happens, the symbols that the shared object supplied are removed from the system. Note that this can invalidate the environment of other shared objects that rely upon those symbols being available.



## USING A SHARED OBJECT

After a shared object has been loaded using `dlopen`, the function `dlsym` can be used to access content from the shared object. Refer to the documentation for the operating system you are using for exactly how this is done.

The C interface can be found in the header file `dlfcn.h` (not supplied by IAR).

Accessing a data variable in a shared object might look like this:

```
void * handle = dlopen("myObject.so", FLAGS);
int * dataPtr = (int *)dlsym(handle, "myVariable");
...
dlclose(handle);
```

This acquires a pointer to the symbol `myVariable` in the shared object `myObject.so`.

Accessing a function in a shared object might look like this:

```
void * handle = dlopen("myObject.so", FLAGS);
typedef int (*function)(int, int);
function myFunc = (function)dlsym(handle, "myFunction");
...
dlclose(handle);
```

This acquires a function pointer—a function that takes two `int` parameters and returns an `int`—to the function `myFunction` in the object `myObject.so`.

`FLAGS` is a system-dependent value that controls various aspects of loading shared objects. The choice between lazy and eager loading is typically made using this flag—refer to the documentation for the operating system you are using.

## DEBUGGING A SHARED OBJECT

An object file generated by the compiler contains regular debug information. The ILINK linker will locate all debug information on the content's offset in the shared object (the shared object always starts on offset 0).

When the shared object is loaded into memory at some offset—the *load offset*—the debug information will work as long as the debugger can offset all debug information with the load offset. The IAR C-SPY Debugger can offset a debug file with a specific offset.

---

## Shared object layout

This is the ordered layout of shared objects generated by ILINK

ELF header	ELF file header
Program headers	A sort of table of contents
<code>.hash</code>	Used for searching <code>.dynsym</code> more efficiently
<code>.dynsym</code>	Contains the shared object's interface
<code>.dynstr</code>	Contains the dynamic names
<code>.rel.dyn</code>	Relocations for the global offset table (GOT)
<code>.rel.plt</code>	Relocations for the PLT (procedure linkage table) part of the GOT
<code>.plt</code>	The procedure linkage table (PLT) for external code references
<code>.text</code>	A regular read-only output section
<code>.dynamic</code>	Contains various data for the dynamic linker
<code>.got</code>	The global offset table (GOT)
<code>.data</code>	A regular initialized data output section
<code>.bss</code>	A regular zero-initialized data output section
<code>.uninit</code>	A regular uninitialized output section

### ELF HEADER

A regular standards-compliant ELF file header. It always consists of the first bytes in the file, and it is not a section. This header is downloaded to the target processor because the dynamic linker needs it.

### PROGRAM HEADERS

The program headers are part of all executable and shared ELF files, and they are not a section. They are downloaded to the target processor because the dynamic linker needs them.

There are typically three program headers:

- One header for read-only content (code and constants)
- One header for read/write content (initialized and zero-initialized)

- One header for the `.dynamic` section

The `.dynamic` section is a part of the read/write segment. It is a separate entry so that a dynamic linker can find it fast.

There are other segment types, but the IAR implementation only supports two: *load* (ROM/RAM) and *dynamic*.

### **.HASH**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It is used for more efficient searching for symbols in the `.dynsym` section. `.hash` is a standard ELF hash section and should work with all standards-compliant dynamic linkers.

### **.DYNSYM**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It is used for keeping track of the interface of the shared object, symbols that it needs (externals) and symbols that it exports (globals). `.dynsym` is a standard ELF symbol table section.

### **.DYNSTR**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It contains all the dynamic names in the shared object (names in ELF are indices into a string table). `.dynstr` is a standard ELF string table section.

### **.REL.DYN**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It contains the relocation directives that the dynamic linker needs to perform eager loading of GOT entries. `.rel.dyn` is a standard ELF relocation section.

See also *Loading and unloading a shared object*, page 272.

### **.REL.PLT**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It contains the relocation directives that the dynamic linker needs to perform lazy loading of PLT entries in the GOT. `.rel.plt` is a standard ELF relocation section.

See also *Loading and unloading a shared object*, page 272.

### **.PLT**

An ELF section in the shared object. It is downloaded to the target processor because the code transfers control to this section when external code is accessed by the shared object. All external code symbols have their own PLT entry. The PLT entry fetches the address of the external symbol from the GOT and transfers control to that address. The call/jump in the `.text` section is redirected to the corresponding PLT entry. `.plt` is a standard ELF `SHT_PROGBITS` section.

### **.TEXT**

An ELF section in the shared object. This section typically contains the shared object's code and constants, and is downloaded to the target processor. `.text` is a standard ELF `SHT_PROGBITS` section.

### **.DYNAMIC**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It contains information that the dynamic linker needs to access the shared object—where the GOT is located and what kind of relocations that are used. `.dynamic` is a standard ELF dynamic section.

The shared objects generated by ILINK use the standard ELF `DT` tags, and some GCC extensions.

### **.GOT**

An ELF section in the shared object. It is downloaded to the target processor because the dynamic linker needs it. It is accessed every time data or external code is accessed. The GOT is stored here—basically an array of addresses. The dynamic linker writes addresses into the GOT, and all accesses use those addresses. `.got` is a standard ELF `SHT_PROGBITS` section.

### **.DATA**

An ELF section in the shared object. This section typically contains the shared object's initialized data, and is downloaded to the target processor. (The dynamic linker is responsible for initializing the content.) `.data` is a standard ELF `SHT_PROGBITS` section.

### **.BSS**

An ELF section in the shared object. This section contains the shared object's zero-initialized data, and is downloaded to the target processor. (The dynamic linker is responsible for zero-initializing the content.) `.bss` is a standard ELF `SHT_NOBITS` section.

## .UNINIT

An ELF section in the shared object. This section contains the shared object's uninitialized data. It is not a part of any segment—its addresses are not covered in a program header, see *Program headers*, page 274—so the bytes of the `.uninit` section are not touched by the dynamic linker. This means that this uninitialized section contains undefined bytes, which is potentially hazardous—it is the responsibility of your application to manage this safely. `.uninit` is a standard ELF `SHT_NOBITS` section that is treated in a non-standard way—writable content is typically initialized or zero-initialized.

## SAMPLE CONTENTS LISTING

This is a sample listing of (dump) the contents of a shared object, created using `ielfdumparm`:

```
32-bit little-endian shared object ELF file for Advanced RISC
Machines ARM

    File version 1, header size 52, section header string section
#28.
    Flags 0x500'0000 (ARM ELF revision 5 [AAELF 2.0])
    Entry 0x0

    3 program headers, each 32 bytes, at offset 0x34
    29 section headers, each 40 bytes, at offset 0x10ec

SEGMENTS:
```

Type	Offset	Virtual	Physical	File Sz	Mem Sz	Flags	Align
----	-----	-----	-----	-----	-----	-----	-----
0: load	0x0	0x0	0x0	0x1c4	0x1c4	0x5 X R	0x1000
1: load	0x1c4	0x11c4	0x11c4	0x88	0x90	0x6 WR	0x1000
2: dynamic	0x1c4	0x11c4	0x11c4	0x68	0x68	0x6 WR	0x4

## SECTIONS:

Name	Type	Addr	Offset	Size	Aln	Lnk	Inf	ESz
Flags								
----	----	----	-----	----	---	---	---	---
-----								
1: .hash	hash	0x94	0x94	0x2c	0x4	2		4
0x2 A								
2: .dynsym	dynsym	0xc0	0xc0	0x70	0x4	3	3	16
0x2 A								
3: .dynstr	strtab	0x130	0x130	0x13	0x4			
0x2 A								
4: .rel.dyn	rel	0x144	0x144	0x18	0x4	2	9	8
0x2 A								
5: .rel.plt	rel	0x15c	0x15c	0x8	0x4	2	9	8
0x2 A								
6: .plt	pbits	0x164	0x164	0x20	0x4			4
0x6 AX								
7: .text	pbits	0x184	0x184	0x3e	0x4			1
0x6 AX								
8: .dynamic	dyn	0x11c4	0x1c4	0x68	0x4	3		8
0x3 WA								
9: .got	pbits	0x122c	0x22c	0x1c	0x4			4
0x3 WA								
10: .data	pbits	0x1248	0x248	0x4	0x4			1
0x3 WA								
11: .bss	nobits	0x124c	0x24c	0x8	0x4			1
0x3 WA								
12: .noinit	nobits	0x1254	0x24c	0x8	0x4			1
0x3 WA								
13: .debug_abbrev	pbits		0x24c	0x81				1
14: .debug_aranges	pbits		0x2d0	0x40				1
15: .debug_frame	pbits		0x310	0x55				1
16: .debug_info	pbits		0x368	0x4b6				1
17: .debug_line	pbits		0x820	0xd9				1
18: .debug_loc	pbits		0x8fc	0x34				1
19: .debug_macinfo	pbits		0x930	0x5				1
20: .debug_pubnames	pbits		0x938	0x7e				1
21: .iar.debug_frame	pbits		0x9b8	0x24				1
22: .iar.debug_line	pbits		0x9dc	0xb8				1
23: .comment	pbits		0xa94	0x184				1
24: .iar.rtmodel	pbits		0xc18	0x25				1
25: .ARM.attributes	arm_attr		0xc40	0x2c				1
26: .symtab	syntab		0xc6c	0x240	0x4	27	20	16
27: .strtab	strtab		0xeac	0x11a	0x4			
28: .shstrtab	strtab		0xfc8	0x122	0x4			

Note the following:

- There are three segments here: a ROM segment (no `w` flag), a RAM segment (a `w` flag) and a dynamic segment. The dynamic segment (the `.dynamic` section) resides inside the RAM segment, but that is not a problem.
- `.dynamic` is the first writable section (the first section with the `w` flag set) so it is the first section to have the alignment of the load segments—`so_alignment`, `0x1000` in this file—added to its offset. See *so\_alignment directive*, page 286.
- The address of all ROM sections is the same as the offset, and the address of all `pbits` RAM sections is the offset + `so_alignment`. (The `nobits` RAM sections have no bytes in the file, so their address is not necessarily equal to offset + `so_alignment`.)

Sections without the `A` flag (for `ALLOC`) set are not downloaded to the target. They contain supplementary information (like debug information) that is not needed during execution.

---

## Troubleshooting shared objects

This section describes some problems you might run into, and possible solutions for them.

### THERE ARE NO SYMBOLS IN THE SHARED OBJECT

The generated shared object does not contain any symbols (error Li068).

To solve this, you must export symbols from the shared object. Symbols are exported by using the `--so_export` option or the `so_export` directive. See *--so\_export*, page 282 and *so\_export directive*, page 286.

### SYMBOLS ARE MISSING FROM THE SHARED OBJECT

The shared object does not contain symbols that should be there. Symbols that are neither exported nor referenced by content in the shared object are discarded by the ILINK linker.

To solve this, you can force their inclusion by exporting them, keeping them, or using the `#pragma required` directive. Note that the shared object can contain symbols that are not exported. To see which symbols that are imported or exported, you can use `ielfdumparm` to produce a listing of the contents (dump) of the section `.dynsym` (which is accessed by the dynamic linker). To see *all* symbols in the shared object, dump the section `.symtab` (which is not transferred to the target).

See *--so\_export*, page 282, *so\_export directive*, page 286, *--keep*, page 390, *keep directive*, page 574, *required*, page 462, and *The IAR ELF Dumper—ielfdump*, page 615.

## **SYMBOLS ARE UNDEFINED IN THE SHARED OBJECT**

Error Li066 is produced, with a list of symbols that are undefined in the shared object.

By default, the linker generates this error if the shared object contains references to symbols that are not defined in the shared object. Use the `--so_import` option or the `so_import` linker directive to allow the specified symbols—those symbols will be declared as external in the shared object. You can also allow *all* undefined symbols by specifying `so_import *`; (note the `*` wildcard).

Another option is to use the `--diag_suppress` or `--diag_warning` option to suppress the error or reduce it to a warning.

See `--so_import`, page 283 and `so_import directive`, page 287.

## **SYMBOLS ARE BOTH DEFINED AND DECLARED AS IMPORTED**

Error Li067 is produced, with a list of symbols that are both defined in the shared object and declared as imported.

The shared object cannot both import and define the same symbol. A definition might be included by mistake, or you might be using an `so_import` directive that is not up to date.

## **A HIDDEN SYMBOL IS EXPORTED**

Warning Li069 is produced, naming a symbol that is exported with its visibility set to `hidden`. The issue is that the code was generated under the assumption that it would not be called from outside the shared object. When a `hidden` symbol is exported, the function can be called by “anyone”.

This is not necessarily a problem, but a warning is produced to alert you that this is potentially unsafe. You must either suppress the warning with the `--diag_suppress` option or change the visibility of symbol to `interposable` or `protected` and recompile the code.

See `--visibility`, page 285.

## **LOCAL SYMBOLS IN .DYNYSM CAUSE PROBLEMS FOR THE DYNAMIC LINKER**

There are local symbols in the `.dynsym` section, and the dynamic linker ignores them, or issues a diagnostic message for them.

The linker will output non-exported symbols as local symbols in the `.dynsym` section. Some dynamic linkers cannot handle this. You must export the symbols to get them to work. Export these symbols with the `--so_export` option or the `so_export` directive,



or export *all* included public symbols by specifying `so_export *`; (note the \* wildcard).

See `--so_export`, page 282 and `so_export directive`, page 286.

## Reference information on command line options for shared objects

The following section gives detailed reference information about each compiler and linker option available for generating shared objects.

For reference information about other command line options, see *Compiler options*, page 305 and *Linker options*, page 369.



If you use the options page **Extra Options** to specify specific command line options, the IDE does not perform an instant check for consistency problems like conflicting options, duplication of options, or use of irrelevant options.

### --plt\_mode

Syntax	<code>--plt_mode={auto arm thumb}</code>	
Parameters	auto (default)	The ILINK linker selects the instruction set mode automatically.
	arm	PLT entries use Arm mode.
	thumb	PLT entries use Thumb mode.
Description	This is a linker option. Use this option to set the instruction set mode that the ILINK linker uses for entries in the procedure linkage table (PLT).	
See also	<i>Shared objects (32-bit mode only)</i> , page 269.	



To set this option, use **Project>Options>Linker>Extra Options**

### --shared (compiler option)

Syntax	<code>--shared</code>
Description	This is a compiler option.

Use this option to generate code that can be linked into a shared object output file, instead of an executable output file. Specifying this option also has the same effect as specifying the compiler options `--ropi`, `--rwpi=got`, and `--visibility=hidden`.

The option also makes the compiler handle visibility attributes—when not compiling for shared objects, the visibility attributes are ignored.

**Note:** This option is not available for Armv8-M baseline, Armv6-M, or in **64-bit mode** (the implementation requires the Arm or Thumb2 instruction set).

See also

*Shared objects (32-bit mode only)*, page 269 and *--shared (linker option)*, page 282.



**Project>Options>General Options>Output>Shared object**

## --shared (linker option)

Syntax `--shared`

Description This is a linker option.

Use this option to generate an object file that can be linked into a shared object output file, instead of an executable output file. Input files from the compiler must be compiled with the compiler options `--ropi`, `--rwpi=got` or the compiler option `--shared`.

**Note:** This option is not available for Armv8-M baseline, Armv6-M, or in **64-bit mode** (the implementation requires the Arm or Thumb2 instruction set).

See also

*Shared objects (32-bit mode only)*, page 269 and *--shared (compiler option)*, page 281.



**Project>Options>General Options>Output>Shared object**

## --so\_export

Syntax `--so_export symbol[, symbol, ...]`

Parameters `symbol` The name of a symbol in the shared object to export.

Description This is a linker option.

By default, symbols in the shared object are not exported. Use this option or the `so_export` linker directive to export symbols from the shared object.

An exported symbol is always kept by the linker. The linker will remove unreferenced content that is not declared `root` or given as an argument to `--so_export`.

See also

*Shared objects (32-bit mode only)*, page 269.

*so\_export directive*, page 286.



To set this option, use **Project>Options>Linker>Extra Options**

## --so\_import

Syntax

```
--so_import symbol[,symbol,...]
```

Parameters

*symbol*

The name of a symbol to import to the shared object.

Description

This is a linker option.

By default, the linker generates an error if the shared object contains references to symbols that are not defined in the shared object. Use this option or the `so_import` linker directive to allow the specified symbols—those symbols will be declared as external in the shared object. This gives you exact control over which symbols that the shared object refers to. All external references must be specified with the `--so_import` option.

To make all imported symbols become external symbols in the shared object, without having to specify them one by one, do not use the `--so_import` option—just use the `--diag_suppress` or `--diag_warning` option to suppress the linker error or reduce it to a warning.

See also

*Shared objects (32-bit mode only)*, page 269.

*so\_import directive*, page 287.



To set this option, use **Project>Options>Linker>Extra Options**

## --so\_internalize

Syntax	<code>--so_internalize symbol[,symbol,...]</code>
Parameters	<i>symbol</i> The name of a symbol in the standard library to add to the shared object.
Description	<p>This is a linker option.</p> <p>Use this option or the <code>so_internalize</code> linker directive for exact control over which symbols from the standard library to add to the shared object. The specified symbols will become part of the shared object. Standard library references that are not specified with this option will become external references in the shared object.</p> <p>If the added symbols refer to other symbols, those symbols are not automatically added as well. They must be added in the same way if you do not want them to become external symbols.</p> <p>To fulfill <i>all</i> references to the standard library from the shared object, use the linker option <code>--so_internalize_stdlib</code> instead, see <i>--so_internalize_stdlib</i>, page 284. The <code>--so_internalize</code> option allows you choose some symbols from the standard library and let others become external references. You might, for instance, want a shared object that contains a specialized version of <code>memcpy</code>, but are happy with any version of <code>strlen</code>.</p>
See also	<p><i>Shared objects (32-bit mode only)</i>, page 269.</p> <p><i>so_internalize directive</i>, page 288.</p>



To set this option, use **Project>Options>Linker>Extra Options**

## --so\_internalize\_stdlib

Syntax	<code>--so_internalize_stdlib</code>
Description	<p>This is a linker option.</p> <p>This option generates a shared object that contains all references to the standard library.</p> <p>If neither of the options <code>--so_internalize</code> or <code>--so_internalize_stdlib</code> is used, all external references to the standard library will become external references in the shared object.</p>

**Note:** Use this option with care. If two or more shared objects contain the same content, that content should be shared between them, not be included multiple times. Having several shared objects that all include parts of the standard library is not recommended.

See also

*Shared objects (32-bit mode only)*, page 269.



To set this option, use **Project>Options>Linker>Extra Options**

## --visibility

Syntax

```
--visibility={hidden|interposable|protected}
```

Parameters

hidden (default)	The symbol is not part of the interface of the shared object, so no other executable file or shared object can reference it directly.
interposable	All global symbols that are not declared with the <code>hidden</code> or <code>protected</code> visibility attribute are public and correspond to external linkage. External or local symbols are not affected.
protected	The symbol is part of the interface of the shared object, but references within the defining module bind to the local symbol. That is, another module cannot override the symbol.

Description

This is a compiler option.

Use this option to set the default visibility of global symbol definitions. Local symbols and `extern` object declarations, without a corresponding definition or tentative definition, are not affected.

**Note:** `--visibility=interposable` corresponds to the default ELF visibility type. *Interposable* is used because another module can override the symbol, and because it is not a reasonable default value for this setting.

See also

*Shared objects (32-bit mode only)*, page 269 and *visibility*, page 442.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**

---

## Reference information on linker directives for shared objects

This section describes the linker directives to use in the linker configuration file to configure the linker to generate shared objects.

For reference information about other directives used in the linker configuration file, see *The linker configuration file*, page 553.

### so\_alignment directive

Syntax	<code>so_alignment alignment;</code>	
Parameters	<code>alignment</code>	The alignment to add to the address of the first byte of the RAM part of the shared object.
Description	<p>A shared object consists of two parts, a ROM part that starts on offset 0, and a RAM part that starts after the last ROM byte. The address of the first RAM byte has a constant—<code>so_alignment</code>—added to it. Use this directive to set the value of this constant. By default, the value is <code>0x1000</code>.</p> <p>Some operating systems require a specific alignment for their shared objects. Refer to the documentation for the operating system you are using.</p>	
Example	<code>so_alignment 0x2000;</code>	<p>If the last ROM byte was placed on offset <code>0x133</code>, the first RAM byte will be placed on offset <code>0x134</code>. If the alignment is <code>0x2000</code>, the address of the first RAM byte will be <code>0x2134</code>—the offset plus the alignment.</p>

### so\_export directive

Syntax	<code>so_export symbol [-&gt; alias][,symbol...];</code>	
Parameters	<code>alias</code>	The name that the symbol will be exported as.
	<code>symbol</code>	The name of a symbol in the shared object to export. Two wildcards can be used: <ul style="list-style-type: none"> <li>? – matches any single character</li> <li>* – matches zero or more characters</li> </ul>

Description	<p>By default, symbols in the shared object are not exported. Use this directive or the <code>--so_export</code> linker option to export symbols from the shared object.</p> <p>The <code>--so_export</code> linker option can only export a named symbol. This directive makes it possible to export symbols under another name, and wildcards can be used in the name of the symbol. In other respects, this directive works exactly the same way as the option.</p> <p>If wildcards are used, the symbol will not be kept by the linker. You must make sure it is included using one of these options:</p> <ul style="list-style-type: none"> <li>● Make sure it is referenced from the shared object, by direct reference in the source code, or by using the <code>#pragma required</code> directive, see <i>required</i>, page 462.</li> <li>● Make it <code>__root</code>, see <i>__root</i>, page 437.</li> <li>● Use the <code>--keep</code> linker option, see <i>--keep</i>, page 390.</li> </ul>
Example	<pre>so_export mySymbol;</pre> <p>This exports the symbol <code>mySymbol</code> from the shared object, and makes sure that it is included.</p> <pre>so_export myInternal -&gt; myExternal;</pre> <p>This has the effect that the symbol <code>myInternal</code> is kept and will be exported under the name <code>myExternal</code>. (<code>myInternal</code> is the name used inside the shared object, <code>myExternal</code> is the name that everyone outside the shared object will see.)</p> <pre>so_export mp3*;</pre> <p>This exports all publicly visible symbols that begin with <code>mp3</code>. The directive will not include any of them—you must make sure that they are included some other way.</p>
See also	<code>--so_export</code> , page 282.

## so\_import directive

Syntax	<code>so_import symbol [-&gt; alias][, symbol...];</code>
Parameters	<p><i>alias</i>                   The name that the symbol will be imported as.</p> <p><i>symbol</i>                   The name of a symbol to import to the shared object. Two wildcards can be used:</p> <ul style="list-style-type: none"> <li>? – matches any single character</li> <li>* – matches zero or more characters</li> </ul>

Description	<p>Use this directive or the <code>--so_import</code> linker option to import symbols to the shared object.</p> <p>The <code>--so_import</code> linker option can only import a named symbol. This directive makes it possible to import symbols under another name, and wildcards can be used in the name of the symbol.</p> <p>By default, the linker generates an error if the shared object uses symbols that are not defined in the shared object. Use this option to allow the specified symbols—those symbols will be declared as external in the shared object. This gives you exact control over which symbols that the shared object can access.</p> <p>To make all imported symbols become external symbols in the shared object, without having to specify them one by one, do not use the <code>so_import</code> directive—just use the <code>--diag_suppress</code> option to suppress the linker error.</p>
Example	<pre>so_import myExternal;</pre> <p>This allows the use of the undefined external <code>myExternal</code>.</p> <pre>so_import myImport -&gt; somebodyExport;</pre> <p>This imports the symbol <code>myImport</code> into the shared object as an undefined external under the name <code>somebodyExport</code>. (<code>somebodyExport</code> is the name used inside the shared object, <code>myImport</code> is the name that everyone outside the shared object sees.)</p> <pre>so_import jpg*;</pre> <p>This allows all undefined externals that begin with <code>jpg</code>.</p>
See also	<code>--so_import</code> , page 283.

## **so\_internalize directive**

Syntax	<code>so_internalize symbol [,symbol...];</code>
Parameters	<p><i>symbol</i>                      The name of a symbol in the standard library to add to the shared object—not just refer to.</p>
Description	<p>Use this directive or the <code>--so_internalize</code> linker option to add symbols from the standard library to the shared object—instead of relying on someone else to supply those symbols.</p> <p>Symbols that are undefined in the shared object normally become imported symbols—they will trigger errors unless they have been specified using the <code>--so_import</code> linker option or the <code>so_import</code> directive.</p>



If the added symbols refer to other symbols, those symbols are not automatically added as well. They must be added in the same way if you do not want them to become external symbols.

This directive gives you exact control over which symbols from the standard library to add to the shared object. The specified symbols will become a part of the shared object. Standard library references that are not specified with this directive will become external references in the shared object.

**Example**

```
so_internalize memcpy;
```

This adds the standard library symbol `memcpy` to the shared object. The effect will be as if the input files contained the code. A symbol that has been added this way can be exported using the `so_export` directive.

**See also**

`--so_internalize`, page 284 and `--so_internalize_stdlib`, page 284.

**so\_name directive****Syntax**

```
so_name objectname;
```

**Parameters**

*objectname*                      The name of a shared object.

**Description**

By default, shared objects do not get a name when generated (but the output file gets a name, of course). Use this directive to give the shared object a name.

The `.dynstr` section of the shared object will contain the name, and the `.dynamic` section of the shared object will contain a `DT_SONAME` key whose value is the index (in `.dynstr`) of the name.

Naming a shared object is not strictly necessary, but being able to identify it is practical.

**Example**

```
so_name myShared;
```

This gives the shared object the name `myShared` in the `.dynamic` section. It has no effect on the name of the output file generated by the linker.

## so\_needed directive

Syntax	<code>so_needed { <i>objectname</i> };</code>
Parameters	<i>objectname</i> The name of a shared object that this shared object depends on.
Description	<p>Use this directive to set up a dependency for a shared object (referred to as the <i>current shared object</i>).</p> <p>The <code>.dynstr</code> section of the current shared object will contain the name of the other shared object, and the <code>.dynamic</code> section of the current shared object will contain a <code>DT_NEEDED</code> key whose value is the index (in <code>.dynstr</code>) of the other shared object's name.</p> <p>The dependency information is used by the dynamic linker to ensure that a shared object operates in an environment where it has access to everything it needs.</p>
Example	<pre>so_needed { otherLibrary.so };</pre> <p>This configures a dependency so that the generated shared object needs the shared object <code>otherLibrary.so</code>. Exactly what happens if <code>otherLibrary.so</code> is not available when the shared object is loaded depends on the dynamic linker.</p>

## so\_rpath directive

Syntax	<code>so_rpath "<i>path</i>";</code>
Parameters	<i>path</i> The <code>rpath</code> of the shared object.
Description	Use this directive to set up where the dynamic linker searches for shared objects. <code>rpath</code> is searched before the standard include paths.
Example	<pre>so_rpath "usr/bin";</pre> <p>This sets <code>rpath</code> to <code>usr/bin</code>. See the documentation for the dynamic linker for the exact details of how to set up <code>rpath</code>.</p>

## so\_runpath directive

Syntax	<code>so_runpath "path";</code>
Parameters	<i>path</i> The runpath of the shared object.
Description	Use this directive to set up where the dynamic linker searches for shared objects. <code>runpath</code> is searched after the standard include paths.
Example	<code>so_runpath "./shared";</code> This sets <code>runpath</code> to <code>./shared</code> . See the documentation for the dynamic linker for the exact details of how to set up <code>runpath</code> .

---

## Reference information on linker blocks for shared objects

This section gives reference information about each block needed for shared objects, where the:

- *Description* describes what type of content the block is holding.
- *Default definition* describes the default definition of the block.

For reference information about other sections and blocks used by the ILINK linker, see *Section reference, page 593*.

### so\_bss

Description	Holds zero-initialized variables.
Default definition	<code>define block so_bss with alignment = 4, end alignment = 4 { zi };</code>

### so\_code

Description	Holds read-only executable code.
Default definition	<code>define block so_code with alignment = 4, end alignment = 4 { ro code };</code>

## **so\_const**

Description	Holds read-only variables.
Default definition	<pre>define block so_const with alignment = 4, end alignment = 4 { ro data };</pre>


## **so\_data**


Description	Holds initialized variables.
Default definition	<pre>define block so_data with alignment = 4, end alignment = 4 { rw data };</pre>

# Part 2. Reference information

This part of the *IAR C/C++ Development Guide for Arm* contains these chapters:

- External interface details
- Compiler options
- Linker options
- Data representation
- Extended keywords
- Pragma directives
- Intrinsic functions
- The preprocessor
- C/C++ standard library functions
- The linker configuration file
- Section reference
- The stack usage control file
- IAR utilities
- Implementation-defined behavior for Standard C++
- Implementation-defined behavior for Standard C
- Implementation-defined behavior for C89

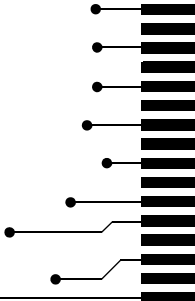

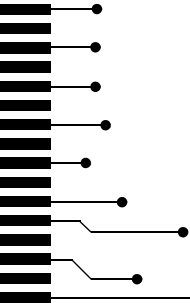

# External interface details

- Invocation syntax
- Include file search procedure
- Compiler output
- Linker output
- Text encodings
- Reserved identifiers
- Diagnostics

---

## Invocation syntax

You can use the compiler and linker either from the IDE or from the command line. See the *IDE Project Management and Building Guide for Arm* for information about using the build tools from the IDE.

### COMPILER INVOCATION SYNTAX

The invocation syntax for the compiler is:

```
iccarm [options] [sourcefile] [options]
```

For example, when compiling the source file `prog.c`, use this command to generate an object file with debug information:

```
iccarm prog.c --debug
```

The source file can be a C or C++ file, typically with the filename extension `c` or `cpp`, respectively. If no filename extension is specified, the file to be compiled must have the extension `c`.

Generally, the order of options on the command line, both relative to each other and to the source filename, is not significant. There is, however, one exception: when you use the `-I` option, the directories are searched in the same order as they are specified on the command line.

If you run the compiler from the command line without any arguments, the compiler version number and all available options including brief descriptions are directed to `stdout` and displayed on the screen.

## LINKER INVOCATION SYNTAX

The invocation syntax for the linker is:

```
ilinkarm [arguments]
```

Each argument is either a command line option, an object file, or a library.

For example, when linking the object file `prog.o`, use this command:

```
ilinkarm prog.o --config configfile
```

If no filename extension is specified for the linker configuration file, the configuration file must have the extension `icf`.

Generally, the order of arguments on the command line is not significant. There is, however, one exception: when you supply several libraries, the libraries are searched in the same order that they are specified on the command line. Any default libraries are always searched last.

The output executable image will be placed in a file named `a.out`, unless the linker option `--output` or `-o` is used.

If you run `ILINK` from the command line without any arguments, the `ILINK` version number and all available options including brief descriptions are directed to `stdout` and displayed on the screen.

## PASSING OPTIONS

There are three different ways of passing options to the compiler and linker:

- Directly from the command line
  - Specify the options on the command line after the `iccarm` or `ilinkarm` commands, see *Invocation syntax*, page 295.
- Via environment variables
  - The compiler or linker automatically appends the value of the environment variables to every command line, see *Environment variables*, page 297.
- Via a text file, using the `-f` option, see *-f*, page 328.

For general guidelines for the options syntax, an options summary, and a detailed description of each option, see *Compiler options*, page 305 and *Linker options*, page 369.



## ENVIRONMENT VARIABLES

These environment variables can be used with the compiler:

Environment variable	Description
C_INCLUDE	Specifies directories to search for include files, for example: C_INCLUDE=c:\my_programs\embedded workbench_9.n\arm\inc;c:\headers
QCCARM	Specifies command line options, for example: QCCARM=-lA asm.lst

Table 27: Compiler environment variables

This environment variable can be used with ILINK:

Environment variable	Description
ILINKARM_CMD_LINE	Specifies command line options, for example: ILINKARM_CMD_LINE=--config full.icf --silent

Table 28: ILINK environment variables

## Include file search procedure

This is a detailed description of the compiler's `#include` file search procedure:

- The string found between the " " and `<>` in the `#include` directive is used verbatim as a source file name.
- If the name of the `#include` file is an absolute path specified in angle brackets or double quotes, that file is opened.
- If the compiler encounters the name of an `#include` file in angle brackets, such as:  
`#include <stdio.h>`  
it searches these directories for the file to include:
  - 1 The directories specified with the `-I` option, in the order that they were specified, see `-I`, page 331.
  - 2 The directories specified using the `C_INCLUDE` environment variable, if any, see *Environment variables*, page 297.
  - 3 The automatically set up library system include directories. See `--dlib_config`, page 325.
- If the compiler encounters the name of an `#include` file in double quotes, for example:  
`#include "vars.h"`

it searches the directory of the source file in which the `#include` statement occurs, and then performs the same sequence as for angle-bracketed filenames.

If there are nested `#include` files, the compiler starts searching the directory of the file that was last included, iterating upwards for each included file, searching the source file directory last. For example:

```
src.c in directory dir\src
#include "src.h"
...
src.h in directory dir\include
#include "config.h"
...
```

When `dir\exe` is the current directory, use this command for compilation:

```
iccarm ..\src\src.c -I..\include -I..\debugconfig
```

Then the following directories are searched in the order listed below for the file `config.h`, which in this example is located in the `dir\debugconfig` directory:

<code>dir\include</code>	Current file is <code>src.h</code> .
<code>dir\src</code>	File including current file ( <code>src.c</code> ).
<code>dir\include</code>	As specified with the first <code>-I</code> option.
<code>dir\debugconfig</code>	As specified with the second <code>-I</code> option.

Use angle brackets for standard header files, like `stdio.h`, and double quotes for files that are part of your application.

**Note:** Both `\` and `/` can be used as directory delimiters.

For more information, see *Overview of the preprocessor*, page 519.

---

## Compiler output

The compiler can produce the following output:

- A linkable object file  
The object files produced by the compiler use the industry-standard format ELF. By default, the object file has the filename extension `.o`.
- Optional list files  
Various kinds of list files can be specified using the compiler option `-l`, see `-l`, page 332. By default, these files will have the filename extension `lst`.

- Optional preprocessor output files

A preprocessor output file is produced when you use the `--preprocess` option. The file will have the filename extension `i`, by default.
- Diagnostic messages

Diagnostic messages are directed to the standard error stream and displayed on the screen, and printed in an optional list file. For more information about diagnostic messages, see *Diagnostics*, page 302.
- Error return codes

These codes provide status information to the operating system which can be tested in a batch file, see *Error return codes*, page 304.
- Size information

Information about the generated amount of bytes for functions and data for each memory is directed to the standard output stream and displayed on the screen.

Functions or data objects that can be shared between modules are reported as *shared*. If any of these occur in more than one module, only one copy is retained. For example, in some cases inline functions are not inlined, which means that they are marked as shared, because only one instance of each function will be included in the final application. This mechanism is sometimes also used for compiler-generated code or data not directly associated with a particular function or variable, and when only one instance is required in the final application.

---

## Linker output

The linker can produce the following output:

- An absolute executable image

The final output produced by the linker is an absolute object file containing the executable image that can be put into an EPROM, downloaded to a hardware emulator, or executed on your PC using the IAR C-SPY Debugger Simulator. By default, the file has the filename extension `out`. The output format is always in ELF, which optionally includes debug information in the DWARF format.
- Optional logging information

During operation, the linker logs its decisions on `stdout`, and optionally to a file. For example, if a library is searched, whether a required symbol is found in a library module, or whether a module will be part of the output. Timing information for each ILINK subsystem is also logged.

- **Optional map files**  
A linker map file—containing summaries of linkage, runtime attributes, memory, and placement, as well as an entry list—can be generated by the linker option `--map`, see `--map`, page 394. By default, the map file has the filename extension `map`.
- **Diagnostic messages**  
Diagnostic messages are directed to `stderr` and displayed on the screen, as well as printed in the optional map file. For more information about diagnostic messages, see *Diagnostics*, page 302.
- **Error return codes**  
The linker returns status information to the operating system which can be tested in a batch file, see *Error return codes*, page 304.
- **Size information about used memory and amount of time**  
Information about the generated number of bytes for functions and data for each memory is directed to `stdout` and displayed on the screen.
- **An import library for use when building a non-secure image, a relocatable ELF object module containing symbols and their addresses.** See the linker option `--import_cmse_lib_out`, page 390.

---

## Text encodings

Text files read or written by IAR tools can use a variety of text encodings:

- **Raw**  
This is a backward-compatibility mode for C/C++ source files. Only 7-bit ASCII characters can be used in symbol names. Other characters can only be used in comments, literals, etc. This is the default source file encoding if there is no Byte Order Mark (BOM).
- **The system default locale**  
The locale that you have configured your Windows OS to use.
- **UTF-8**  
Unicode encoded as a sequence of 8-bit bytes, with or without a Byte Order Mark.
- **UTF-16**  
Unicode encoded as a sequence of 16-bit words using a big-endian or little-endian representation. These files always start with a Byte Order Mark.

In any encoding other than Raw, you can use Unicode characters of the appropriate kind (alphabetic, numeric, etc) in the names of symbols.

When an IAR tool reads a text file with a Byte Order Mark, it will use the appropriate Unicode encoding, regardless of the any options set for input file encoding.

For source files without a Byte Order Mark, the compiler will use the Raw encoding, unless you specify the compiler option `--source_encoding`. See `--source_encoding`, page 355.

For source files without a Byte Order Mark, the assembler will use the Raw encoding unless you specify the assembler option `--source_encoding`.

For other text input files, like the extended command line (`.xcl` files), without a Byte Order Mark, the IAR tools will use the system default locale unless you specify the compiler option `--utf8_text_in`, in which case UTF-8 will be used. See `--utf8_text_in`, page 359.

For compiler list files and preprocessor output, the same encoding as the main source file will be used by default. Other tools that generate text output will use the UTF-8 encoding by default. You can change this by using the compiler options `--text_out` and `--no_bom`. See `--text_out`, page 356 and `--no_bom`, page 335.

## CHARACTERS AND STRING LITERALS

When you compile source code, characters (`x`) and string literals (`xx`) are handled as follows:

<code>'x', "xx"</code>	Characters in untyped character and string literals are copied verbatim, using the same encoding as in the source file.
<code>u8 "xx"</code>	Characters in UTF-8 string literals are converted to UTF-8.
<code>u'x', u"xx"</code>	Characters in UTF-16 character and string literals are converted to UTF-16.
<code>U'x', U"xx"</code>	Characters in UTF-32 character and string literals are converted to UTF-32.
<code>L'x', L"xx"</code>	Characters in wide character and string literals are converted to UTF-32.

---

## Reserved identifiers

Some identifiers are reserved for use by the implementation. Some of the more important identifiers that the C/C++ standards reserve for any use are:

- Identifiers that contain a double underscore (`__`)
- Identifiers that begin with an underscore followed by an uppercase letter

In addition to this, the IAR tools reserve for any use:

- Identifiers that contain a double dollar sign (`$$`)

- Identifiers that contain a question mark (?)

More specific reservations are in effect in particular circumstances, see the C/C++ standards for more information.

---

## Diagnostics

This section describes the format of the diagnostic messages and explains how diagnostic messages are divided into different levels of severity.

### MESSAGE FORMAT FOR THE COMPILER

All diagnostic messages are issued as complete, self-explanatory messages. A typical diagnostic message from the compiler is produced in the form:

```
filename, linenumber level[tag]: message
```

with these elements:

<i>filename</i>	The name of the source file in which the issue was encountered
<i>linenumber</i>	The line number at which the compiler detected the issue
<i>level</i>	The level of seriousness of the issue
<i>tag</i>	A unique tag that identifies the diagnostic message
<i>message</i>	An explanation, possibly several lines long

Diagnostic messages are displayed on the screen, as well as printed in the optional list file.

Use the option `--diagnostics_tables` to list all possible compiler diagnostic messages.

### MESSAGE FORMAT FOR THE LINKER

All diagnostic messages are issued as complete, self-explanatory messages. A typical diagnostic message from ILINK is produced in the form:

```
level[tag]: message
```

with these elements:

<i>level</i>	The level of seriousness of the issue
<i>tag</i>	A unique tag that identifies the diagnostic message
<i>message</i>	An explanation, possibly several lines long

Diagnostic messages are displayed on the screen and printed in the optional map file.

Use the option `--diagnostics_tables` to list all possible linker diagnostic messages.

## SEVERITY LEVELS

The diagnostic messages are divided into different levels of severity:

### Remark

A diagnostic message that is produced when the compiler or linker finds a construct that can possibly lead to erroneous behavior in the generated code. Remarks are by default not issued, but can be enabled, see `--remarks`, page 350.

### Warning

A diagnostic message that is produced when the compiler or linker finds a potential problem which is of concern, but which does not prevent completion of the compilation or linking. Warnings can be disabled by use of the command line option `--no_warnings`.

### Error

A diagnostic message that is produced when the compiler or linker finds a serious error. An error will produce a non-zero exit code.

### Fatal error

A diagnostic message produced when the compiler or linker finds a condition that not only prevents code generation, but also makes further processing pointless. After the message is issued, compilation or linking terminates. A fatal error will produce a non-zero exit code.

## SETTING THE SEVERITY LEVEL

The diagnostic messages can be suppressed or the severity level can be changed for all diagnostics messages, except for fatal errors and some of the regular errors.

For information about the compiler options that are available for setting severity levels, see the chapter *Compiler options*.

For information about the pragma directives that are available for setting severity levels for the compiler, see the chapter *Pragma directives*.

## INTERNAL ERROR

An internal error is a diagnostic message that signals that there was a serious and unexpected failure due to a fault in the compiler or linker. It is produced using this form:

```
Internal error: message
```

where *message* is an explanatory message. If internal errors occur, they should be reported to your software distributor or IAR Technical Support. Include enough information to reproduce the problem, typically:

- The product name
- The version number of the compiler or linker, which can be seen in the header of the list or map files generated by the compiler or linker, respectively
- Your license number
- The exact internal error message text
- The files involved of the application that generated the internal error
- A list of the options that were used when the internal error occurred.

## ERROR RETURN CODES

The compiler and linker return status information to the operating system that can be tested in a batch file.

These command line error codes are supported:

Code	Description
0	Compilation or linking successful, but there might have been warnings.
1	Warnings were produced and the option <code>--warnings_affect_exit_code</code> was used.
2	Errors occurred.
3	Fatal errors occurred, making the tool abort.
4	Internal errors occurred, making the tool abort.

*Table 29: Error return codes*



# Compiler options

- Options syntax
- Summary of compiler options
- Descriptions of compiler options

---

## Options syntax

Compiler options are parameters you can specify to change the default behavior of the compiler. You can specify options from the command line—which is described in more detail in this section—and from within the IDE.



See the online help system for information about the compiler options available in the IDE and how to set them.

### TYPES OF OPTIONS

There are two *types of names* for command line options, *short* names and *long* names. Some options have both.

- A short option name consists of one character, and it can have parameters. You specify it with a single dash, for example `-e`
- A long option name consists of one or several words joined by underscores, and it can have parameters. You specify it with double dashes, for example `--char_is_signed`.

For information about the different methods for passing options, see *Passing options*, page 296.

### RULES FOR SPECIFYING PARAMETERS

There are some general syntax rules for specifying option parameters. First, the rules depending on whether the parameter is *optional* or *mandatory*, and whether the option has a short or a long name, are described. Then, the rules for specifying filenames and directories are listed. Finally, the remaining rules are listed.

#### Rules for optional parameters

For options with a short name and an optional parameter, any parameter should be specified without a preceding space, for example:

```
-O or -Oh
```

For options with a long name and an optional parameter, any parameter should be specified with a preceding equal sign (=), like this:

```
--example_option=value
```

### Rules for mandatory parameters

For options with a short name and a mandatory parameter, the parameter can be specified either with or without a preceding space, for example:

```
-I..\src or -I ..\src\
```

For options with a long name and a mandatory parameter, the parameter can be specified either with a preceding equal sign (=) or with a preceding space, for example:

```
--diagnostics_tables=MyDiagnostics.lst
```

or

```
--diagnostics_tables MyDiagnostics.lst
```

### Rules for options with both optional and mandatory parameters

For options taking both optional and mandatory parameters, the rules for specifying the parameters are:

- For short options, optional parameters are specified without a preceding space
- For long options, optional parameters are specified with a preceding equal sign (=)
- For short and long options, mandatory parameters are specified with a preceding space.

For example, a short option with an optional parameter followed by a mandatory parameter:

```
-lA MyList.lst
```

For example, a long option with an optional parameter followed by a mandatory parameter:

```
--preprocess=n PreprocOutput.lst
```

### Rules for specifying a filename or directory as parameters

These rules apply for options taking a filename or directory as parameters:

- Options that take a filename as a parameter can optionally take a file path. The path can be relative or absolute. For example, to generate a listing to the file `List.lst` in the directory `..\listings\`:

```
iccarm prog.c -l ..\listings\List.lst
```

- For options that take a filename as the destination for output, the parameter can be specified as a path without a specified filename. The compiler stores the output in that directory, in a file with an extension according to the option. The filename will be the same as the name of the compiled source file, unless a different name was specified with the option `-o`, in which case that name is used. For example:

```
iccarm prog.c -l ..\listings\
```

The produced list file will have the default name `..\listings\prog.lst`

- The *current directory* is specified with a period (`.`). For example:
- ```
iccarm prog.c -l .
```
- `/` can be used instead of `\` as the directory delimiter.
  - By specifying `-`, input files and output files can be redirected to the standard input and output stream, respectively. For example:

```
iccarm prog.c -l -
```

### Additional rules

These rules also apply:

- When an option takes a parameter, the parameter cannot start with a dash (`-`) followed by another character. Instead, you can prefix the parameter with two dashes—this example will create a list file called `-r`:

```
iccarm prog.c -l ---r
```

- For options that accept multiple arguments of the same type, the arguments can be provided as a comma-separated list (without a space), for example:

```
--diag_warning=Be0001,Be0002
```

Alternatively, the option can be repeated for each argument, for example:

```
--diag_warning=Be0001
```

```
--diag_warning=Be0002
```

---

## Summary of compiler options

This table summarizes the compiler command line options:

| Command line option    | Description                                                              |
|------------------------|--------------------------------------------------------------------------|
| <code>--aapcs</code>   | Specifies the calling convention                                         |
| <code>--aarch64</code> | Generates code using the A64 instruction set                             |
| <code>--abi</code>     | Specifies a data model for generating code using the A64 instruction set |
| <code>--aeabi</code>   | Enables AEABI-compliant code generation                                  |

Table 30: Compiler options summary

| Command line option                                   | Description                                                                                                 |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <code>--align_sp_on_irq</code>                        | Generates code to align SP on entry to <code>__irq</code> functions                                         |
| <code>--arm</code>                                    | Sets the default function mode to Arm                                                                       |
| <code>--branch_protection</code>                      | Generates code with support for branch protection using BTI, PAC, or both                                   |
| <code>--c89</code>                                    | Specifies the C89 dialect                                                                                   |
| <code>--char_is_signed</code>                         | Treats <code>char</code> as signed                                                                          |
| <code>--char_is_unsigned</code>                       | Treats <code>char</code> as unsigned                                                                        |
| <code>--cmse</code>                                   | Enables CMSE secure object generation                                                                       |
| <code>--cpu</code>                                    | Specifies a processor variant                                                                               |
| <code>--cpu_mode</code>                               | Specifies the default CPU mode for functions                                                                |
| <code>--c++</code>                                    | Specifies Standard C++                                                                                      |
| <code>-D</code>                                       | Defines preprocessor symbols                                                                                |
| <code>--debug</code>                                  | Generates debug information                                                                                 |
| <code>--dependencies</code>                           | Lists file dependencies                                                                                     |
| <code>--deprecated_feature_warnings</code>            | Enables/disables warnings for deprecated features                                                           |
| <code>--diag_error</code>                             | Treats these as errors                                                                                      |
| <code>--diag_remark</code>                            | Treats these as remarks                                                                                     |
| <code>--diag_suppress</code>                          | Suppresses these diagnostics                                                                                |
| <code>--diag_warning</code>                           | Treats these as warnings                                                                                    |
| <code>--diagnostics_tables</code>                     | Lists all diagnostic messages                                                                               |
| <code>--discard_unused_publics</code>                 | Discards unused public symbols                                                                              |
| <code>--dlib_config</code>                            | Uses the system include files for the DLIB library and determines which configuration of the library to use |
| <code>--do_explicit_zero_opt_in_named_sections</code> | For user-named sections, treats explicit initializations to zero as zero initializations                    |
| <code>-e</code>                                       | Enables language extensions                                                                                 |
| <code>--enable_hardware_workaround</code>             | Enables a specific hardware workaround                                                                      |
| <code>--enable_restrict</code>                        | Enables the Standard C keyword <code>restrict</code>                                                        |
| <code>--endian</code>                                 | Specifies the byte order of the generated code and data                                                     |
| <code>--enum_is_int</code>                            | Sets the minimum size on enumeration types                                                                  |

Table 30: Compiler options summary (Continued)

| Command line option                            | Description                                                                                                                                       |
|------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--error_limit</code>                     | Specifies the allowed number of errors before compilation stops                                                                                   |
| <code>-f</code>                                | Extends the command line                                                                                                                          |
| <code>--f</code>                               | Extends the command line, optionally with a dependency.                                                                                           |
| <code>--fpu</code>                             | Selects the type of floating-point unit                                                                                                           |
| <code>--generate_entries_without_bounds</code> | Generates extra functions for use from non-instrumented code. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .          |
| <code>--guard_calls</code>                     | Enables guards for function static variable initialization                                                                                        |
| <code>--header_context</code>                  | Lists all referred source files and header files                                                                                                  |
| <code>-I</code>                                | Specifies include file path                                                                                                                       |
| <code>--ignore_uninstrumented_pointers</code>  | Disables checking of accesses via pointers from non-instrumented code. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> . |
| <code>-l</code>                                | Creates a list file                                                                                                                               |
| <code>--libc++</code>                          | Makes the compiler and linker use the Libc++ library.                                                                                             |
| <code>--lock_regs</code>                       | Prevents the compiler from using specified registers                                                                                              |
| <code>--macro_positions_in_diagnostics</code>  | Obtains positions inside macros in diagnostic messages                                                                                            |
| <code>--make_all_definitions_weak</code>       | Turns all variable and function definitions into weak definitions.                                                                                |
| <code>--max_cost_constexpr_call</code>         | Specifies the limit for <code>constexpr</code> evaluation cost                                                                                    |
| <code>--max_depth_constexpr_call</code>        | Specifies the limit for <code>constexpr</code> recursion depth                                                                                    |
| <code>--mfc</code>                             | Enables multi-file compilation                                                                                                                    |
| <code>--no_alignment_reduction</code>          | Disables alignment reduction for simple Thumb functions                                                                                           |
| <code>--no_bom</code>                          | Omits the Byte Order Mark for UTF-8 output files                                                                                                  |
| <code>--no_call_frame_info</code>              | Disables output of call frame information                                                                                                         |

Table 30: Compiler options summary (Continued)

| Command line option                        | Description                                                                                                    |
|--------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <code>--no_clustering</code>               | Disables static clustering optimizations                                                                       |
| <code>--no_code_motion</code>              | Disables code motion optimization                                                                              |
| <code>--no_const_align</code>              | Disables the alignment optimization for constants.                                                             |
| <code>--no_cse</code>                      | Disables common subexpression elimination                                                                      |
| <code>--no_default_fp_contract</code>      | Sets the default value for STDC FP_CONTRACT to OFF.                                                            |
| <code>--no_exceptions</code>               | Disables C++ exception support                                                                                 |
| <code>--no_fragments</code>                | Disables section fragment handling                                                                             |
| <code>--no_inline</code>                   | Disables function inlining                                                                                     |
| <code>--no_literal_pool</code>             | Generates code that should run from a memory region where it is not allowed to read data, only to execute code |
| <code>--no_loop_align</code>               | Disables the alignment of labels in loops                                                                      |
| <code>--no_mem_idioms</code>               | Makes the compiler not optimize certain memory access patterns                                                 |
| <code>--no_normalize_file_macros</code>    | Disables normalization of paths in the symbols <code>__FILE__</code> and <code>__BASE_FILE__</code>            |
| <code>--no_path_in_file_macros</code>      | Removes the path from the return value of the symbols <code>__FILE__</code> and <code>__BASE_FILE__</code>     |
| <code>--no_rtti</code>                     | Disables C++ RTTI support                                                                                      |
| <code>--no_rw_dynamic_init</code>          | Disables runtime initialization of static C variables.                                                         |
| <code>--no_scheduling</code>               | Disables the instruction scheduler                                                                             |
| <code>--no_size_constraints</code>         | Relaxes the normal restrictions for code size expansion when optimizing for speed.                             |
| <code>--no_static_destruction</code>       | Disables destruction of C++ static variables at program exit                                                   |
| <code>--no_system_include</code>           | Disables the automatic search for system include files                                                         |
| <code>--no_tbaa</code>                     | Disables type-based alias analysis                                                                             |
| <code>--no_typedefs_in_diagnostics</code>  | Disables the use of typedef names in diagnostics                                                               |
| <code>--no_unaligned_access</code>         | Avoids unaligned accesses                                                                                      |
| <code>--no_uniform_attribute_syntax</code> | Specifies the default syntax rules for IAR type attributes                                                     |
| <code>--no_unroll</code>                   | Disables loop unrolling                                                                                        |

Table 30: Compiler options summary (Continued)

| Command line option                      | Description                                                                                                                     |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <code>--no_var_align</code>              | Aligns variable objects based on the alignment of their type.                                                                   |
| <code>--no_warnings</code>               | Disables all warnings                                                                                                           |
| <code>--no_wrap_diagnostics</code>       | Disables wrapping of diagnostic messages                                                                                        |
| <code>--nonportable_path_warnings</code> | Generates a warning when the path used for opening a source header file is not in the same case as the path in the file system. |
| <code>-O</code>                          | Sets the optimization level                                                                                                     |
| <code>-o</code>                          | Sets the object filename. Alias for <code>--output</code> .                                                                     |
| <code>--only_stdout</code>               | Uses standard output only                                                                                                       |
| <code>--output</code>                    | Sets the object filename                                                                                                        |
| <code>--pending_instantiations</code>    | Sets the maximum number of instantiations of a given C++ template.                                                              |
| <code>--predef_macros</code>             | Lists the predefined symbols.                                                                                                   |
| <code>--preinclude</code>                | Includes an include file before reading the source file                                                                         |
| <code>--preprocess</code>                | Generates preprocessor output                                                                                                   |
| <code>--public_equ</code>                | Defines a global named assembler label                                                                                          |
| <code>-r</code>                          | Generates debug information. Alias for <code>--debug</code> .                                                                   |
| <code>--relaxed_fp</code>                | Relaxes the rules for optimizing floating-point expressions                                                                     |
| <code>--remarks</code>                   | Enables remarks                                                                                                                 |
| <code>--require_prototypes</code>        | Verifies that functions are declared before they are defined                                                                    |
| <code>--ropi</code>                      | Generates code that uses PC-relative references to address code and read-only data.                                             |
| <code>--ropi_cb</code>                   | Makes all accesses to constant data, base-addressed relative to the register R8                                                 |
| <code>--runtime_checking</code>          | Enables runtime error checking. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .                      |
| <code>--rwpi</code>                      | Generates code that uses an offset from the static base register to address-writable data.                                      |

Table 30: Compiler options summary (Continued)

| Command line option                                  | Description                                                                                                                   |
|------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <code>--rwp_i_near</code>                            | Generates code that uses an offset from the static base register to address-writable data. Addresses max 64 Kbytes of memory. |
| <code>--section</code>                               | Changes a section name                                                                                                        |
| <code>--section_prefix</code>                        | Adds a prefix to section names                                                                                                |
| <code>--shared</code>                                | See <i>Reference information on command line options for shared objects</i> , page 281.                                       |
| <code>--silent</code>                                | Sets silent operation                                                                                                         |
| <code>--source_encoding</code>                       | Specifies the encoding for source files                                                                                       |
| <code>--stack_protection</code>                      | Enables stack protection                                                                                                      |
| <code>--strict</code>                                | Checks for strict compliance with Standard C/C++                                                                              |
| <code>--system_include_dir</code>                    | Specifies the path for system include files                                                                                   |
| <code>--text_out</code>                              | Specifies the encoding for text output files                                                                                  |
| <code>--thumb</code>                                 | Sets default function mode to Thumb                                                                                           |
| <code>--uniform_attribute_syntax</code>              | Specifies the same syntax rules for IAR type attributes as for <code>const</code> and <code>volatile</code>                   |
| <code>--use_c++_inline</code>                        | Use C++ inline semantics in C                                                                                                 |
| <code>--use_paths_as_written</code>                  | Use paths as written in debug information                                                                                     |
| <code>--use_unix_directory_separators</code>         | Uses / as directory separator in paths                                                                                        |
| <code>--utf8_text_in</code>                          | Uses the UTF-8 encoding for text input files                                                                                  |
| <code>--vectorize</code>                             | Enables generation of NEON vector instructions                                                                                |
| <code>--version</code>                               | Sends compiler output to the console and then exits.                                                                          |
| <code>--visibility</code>                            | See <i>Reference information on command line options for shared objects</i> , page 281.                                       |
| <code>--vla</code>                                   | Enables VLA support                                                                                                           |
| <code>--warn_about_c_style_casts</code>              | Makes the compiler warn when C-style casts are used in C++ source code                                                        |
| <code>--warn_about_incomplete_constructors</code>    | Makes the compiler warn about constructors that do not initialize all members                                                 |
| <code>--warn_about_missing_field_initializers</code> | Makes the compiler warn about fields without explicit initializers                                                            |

Table 30: Compiler options summary (Continued)



| Command line option                      | Description                    |
|------------------------------------------|--------------------------------|
| <code>--warnings_affect_exit_code</code> | Warnings affect exit code      |
| <code>--warnings_are_errors</code>       | Warnings are treated as errors |

Table 30: Compiler options summary (Continued)

## Descriptions of compiler options

The following section gives detailed reference information about each compiler option.



If you use the options page **Extra Options** to specify specific command line options, the IDE does not perform an instant check for consistency problems like conflicting options, duplication of options, or use of irrelevant options.

### --aapcs

|             |                                                                                                                      |                                                                                                                                                                                                |
|-------------|----------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>aapcs={std vfp}</code>                                                                                         |                                                                                                                                                                                                |
| Parameters  | <code>std</code>                                                                                                     | Processor registers are used for floating-point parameters and return values in function calls according to standard AAPCS. <code>std</code> is the default when the software FPU is selected. |
|             | <code>vfp</code>                                                                                                     | VFP registers are used for floating-point parameters and return values. The generated code is not compatible with AEABI code. <code>vfp</code> is the default when a VFP unit is used.         |
| Description | Use this option to specify the floating-point calling convention. <b>In 64-bit mode</b> , this option has no effect. |                                                                                                                                                                                                |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

### --aarch64

|             |                                                                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--aarch64</code>                                                                                                                                                                                                             |
| Description | Use this option to generate code using the A64 instruction set in the AArch64 state for the assembler directive <code>CODE</code> .<br><b>Note:</b> This option has the same effect as the <code>--cpu_mode=aarch64</code> option. |
| See also    | <code>--abi</code> , page 314 and <code>--cpu_mode</code> , page 319.                                                                                                                                                              |



To set this option, use **Project>Options>General Options>Target>Execution mode**

## --abi

|             |                                                                                                                        |                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| Syntax      | <code>--abi={ilp32 lp64}</code>                                                                                        |                                                                                          |
| Parameters  | <code>ilp32</code>                                                                                                     | Generates A64 code for the ILP32 data model. Defines the symbol <code>__ILP32__</code> . |
|             | <code>lp64</code>                                                                                                      | Generates A64 code for the LP64 data model. Defines the symbol <code>__LP64__</code> .   |
| Description | Use this option to specify a data model for the generation of code using the A64 instruction set in the AArch64 state. |                                                                                          |
| See also    | <code>--aarch64</code> , page 313 and <code>--cpu_mode</code> , page 319.                                              |                                                                                          |



To set related options, choose:

**Project>Options>General Options>Target>Execution mode**

and

**Project>Options>General Options>64-bit>Data model**

## --aeabi

|             |                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--aeabi</code>                                                                                                                                                                                                                                                                     |
| Description | Use this option to generate AEABI-compliant object code. <b>In 64-bit mode</b> , this option has no effect.<br><br><b>Note:</b> This option must be used together with the <code>--guard_calls</code> option.<br><b>Note:</b> This option cannot be used together with C++ header files. |
| See also    | <i>AEABI compliance</i> , page 238 and <code>--guard_calls</code> , page 331.                                                                                                                                                                                                            |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --align\_sp\_on\_irq

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--align_sp_on_irq</code>                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Description | Use this option to align the stack pointer (SP) on entry to <code>__irq</code> declared functions. <b>In 64-bit mode</b> , this option has no effect.<br><br>This is especially useful for nested interrupts, where the interrupted code uses the same SP as the interrupt handler. This means that the stack might only have 4-byte alignment, instead of the 8-byte alignment required by AEABI (and some instructions generated by the compiler for some cores). |
| See also    | <code>__irq</code> , page 430.                                                                                                                                                                                                                                                                                                                                                                                                                                      |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --arm

|             |                                                                                                                                                                                                                             |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--arm</code>                                                                                                                                                                                                          |
| Description | Use this option to set default function mode to Arm (A32 in 32-bit mode). <b>In 64-bit mode</b> , this option has no effect.<br><br><b>Note:</b> This option has the same effect as the <code>--cpu_mode=arm</code> option. |



**Project>Options>C/C++ Compiler>Code>Processor mode>Arm**

## --branch\_protection

|            |                                                            |                                                                                               |
|------------|------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| Syntax     | <code>--branch_protection={bti pac-ret bti+pac-ret}</code> |                                                                                               |
| Parameters | <code>bti</code>                                           | Enables branch protection using Branch Target Identification.                                 |
|            | <code>pac-ret</code>                                       | Enables branch protection using Pointer Authentication for function return addresses.         |
|            | <code>bti+pac-ret</code>                                   | Enables branch protection using both Branch Target Identification and Pointer Authentication. |

**Description** Use this option to make the compiler generate code with support for branch protection using Branch Target Identification (BTI), Pointer Authentication (PAC), or both (PACBTI). **In 64-bit mode**, this option has no effect.

**See also** *Branch protection (PACBTI) — 32-bit mode only*, page 246.



**Project>Options>C/C++ Compiler>Code>Pointer authentication**  
**Project>Options>C/C++ Compiler>Code>Branch target identification**

## **--c89**

**Syntax** `--c89`

**Description** Use this option to enable the C89 C dialect instead of Standard C.

**See also** *C language overview*, page 203.



**Project>Options>C/C++ Compiler>Language 1>C dialect>C89**

## **--char\_is\_signed**

**Syntax** `--char_is_signed`

**Description** By default, the compiler interprets the plain `char` type as unsigned. Use this option to make the compiler interpret the plain `char` type as signed instead. This can be useful when you, for example, want to maintain compatibility with another compiler.

**Note:** The runtime library is compiled without the `--char_is_signed` option and cannot be used with code that is compiled with this option.



**Project>Options>C/C++ Compiler>Language 2>Plain ‘char’ is**

## **--char\_is\_unsigned**

**Syntax** `--char_is_unsigned`

**Description** Use this option to make the compiler interpret the plain `char` type as unsigned. This is the default interpretation of the plain `char` type.



**Project>Options>C/C++ Compiler>Language 2>Plain ‘char’ is**

## --cmse

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | --cmse                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Description | <p>This option enables language extensions for TrustZone for Armv8-M. <b>In 64-bit mode</b>, this option has no effect. Use this option for object files that are to be linked in a secure image. The option allows the use of instructions, keywords, and types that are not available for non-secure code:</p> <ul style="list-style-type: none"> <li>• The function attributes <code>_cmse_nonsecure_call</code> and <code>_cmse_nonsecure_entry</code>.</li> <li>• The functions for CMSE have names with the prefix <code>cmse_</code>, and are defined in the header file <code>arm_cmse.h</code>.</li> </ul> <p><b>Note:</b> To use this option, you must first select the option <b>Project&gt;Options&gt;General Options&gt;32-bit&gt;TrustZone</b>.</p> |
| See also    | <i>Arm TrustZone®</i> , page 243 and <i>ARMv8-M Security Extensions: Requirements on Development Tools</i> (ARM-ECM-0359818).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --cpu

|             |                                                                                                                                                                                                                                                                                                                                                                |                                                 |     |     |      |     |     |     |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|-----|-----|------|-----|-----|-----|
| Syntax      | --cpu={ <i>core</i>   <i>list</i> }                                                                                                                                                                                                                                                                                                                            |                                                 |     |     |      |     |     |     |
| Parameters  | <i>core</i>                                                                                                                                                                                                                                                                                                                                                    | Specifies a specific processor variant          |     |     |      |     |     |     |
|             | <i>list</i>                                                                                                                                                                                                                                                                                                                                                    | Lists all supported values for the option --cpu |     |     |      |     |     |     |
| Description | <p>Use this option to select the architecture or processor variant for which the code is to be generated.</p> <p>The default core is Cortex-M3.</p> <p><b>In 32-bit mode:</b> Some of the supported values for the --cpu option are:</p> <table> <tr> <td>6-M</td> <td>7-A</td> <td>7E-M</td> </tr> <tr> <td>7-M</td> <td>7-R</td> <td>7-S</td> </tr> </table> |                                                 | 6-M | 7-A | 7E-M | 7-M | 7-R | 7-S |
| 6-M         | 7-A                                                                                                                                                                                                                                                                                                                                                            | 7E-M                                            |     |     |      |     |     |     |
| 7-M         | 7-R                                                                                                                                                                                                                                                                                                                                                            | 7-S                                             |     |     |      |     |     |     |

|                                                                                          |                                                                        |                                                                              |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------------|
| 8-A.AArch32                                                                              | 8-M.baseline                                                           | 8-M.mainline                                                                 |
| 8-R.AArch32                                                                              | Cortex-A5                                                              | Cortex-A7                                                                    |
| Cortex-A8                                                                                | Cortex-A9                                                              | Cortex-A12                                                                   |
| Cortex-A15                                                                               | Cortex-A17                                                             | Cortex-M0                                                                    |
| Cortex-M0+                                                                               | Cortex-M23                                                             | Cortex-M23.no_se<br>(core without support for TrustZone)                     |
| Cortex-M3                                                                                | Cortex-M33                                                             | Cortex-M33.no_dsp<br>(core without integer DSP extension)                    |
| Cortex-M33.fp<br>(floating-point unit with support for single precision)                 | Cortex-M33.no_se<br>(core without support for TrustZone)               | Cortex-M4                                                                    |
| Cortex-M4F                                                                               | Cortex-M52                                                             | Cortex-M52.no_mve<br>(core without support for MVE)                          |
| Cortex-M52.no_se<br>(core without support for TrustZone)                                 | Cortex-M52.no_se.no_mve<br>(core without support for TrustZone or MVE) | Cortex-M52.no_pacbti.no_se<br>(core without support for PACBTI or TrustZone) |
| Cortex-M52.no_pacbti.no_se.no_mve<br>(core without support for PACBTI, TrustZone or MVE) | Cortex-M52.no_pacbti<br>(core without support for PACBTI)              | Cortex-M52.no_pacbti.no_mve<br>(core without support for PACBTI or MVE)      |
| Cortex-M55                                                                               | Cortex-M7                                                              | Cortex-M7.fp.dp<br>(floating-point unit with support for double precision)   |

|                                                                            |                      |                    |
|----------------------------------------------------------------------------|----------------------|--------------------|
| Cortex-M7.fp.sp<br>(floating-point unit with support for single precision) | Cortex-R4            | Cortex-R5          |
| Cortex-R52                                                                 | Cortex-R52.no_neon   | Cortex-R7          |
| Cortex-A32                                                                 | Cortex-A32.no_crypto | Cortex-A32.no_neon |

**In 64-bit mode:** Some of the supported values for the `--cpu` option are:

|             |            |            |
|-------------|------------|------------|
| 8-a.AArch64 | Cortex-A35 | Cortex-A53 |
| Cortex-A55  | Cortex-A57 | Cortex-A72 |

See also

*Processor variant*, page 72.



**Project>Options>General Options>Target>Processor variant**

## --cpu\_mode

Syntax

`--cpu_mode={arm|a|thumb|t|a64}`

Parameters

|                  |                                                      |
|------------------|------------------------------------------------------|
| arm, a (default) | Selects the A32 instruction set in 32-bit mode.      |
| thumb, t         | Selects the T32 or T instruction set in 32-bit mode. |
| a64              | Selects the A64 instruction set in 64-bit mode.      |

Description

Use this option to select the default mode for functions.

See also

`--aarch64`, page 313.



**Project>Options>General Options>Target>Processor variant**

## --c++

Syntax

`--c++`

Description

By default, the language supported by the compiler is C. If you use Standard C++, you must use this option to set the language the compiler uses to C++.

See also

*Using C++*, page 213.



**Project>Options>C/C++ Compiler>Language 1>C++**

## **-D**

Syntax

`-D symbol[=value]`

Parameters

|               |                                      |
|---------------|--------------------------------------|
| <i>symbol</i> | The name of the preprocessor symbol  |
| <i>value</i>  | The value of the preprocessor symbol |

Description

Use this option to define a preprocessor symbol. If no value is specified, 1 is used. This option can be used one or more times on the command line.

The option `-D` has the same effect as a `#define` statement at the top of the source file:

`-Dsymbol`

is equivalent to:

`#define symbol 1`

To get the equivalence of:

`#define FOO`

specify the = sign but nothing after, for example:

`-DFOO=`



**Project>Options>C/C++ Compiler>Preprocessor>Defined symbols**

## **--debug, -r**

Syntax

`--debug`  
`-r`

Description

Use the `--debug` or `-r` option to make the compiler include information in the object modules required by the IAR C-SPY® Debugger and other symbolic debuggers.

**Note:** Including debug information will make the object files larger than otherwise.



**Project>Options>C/C++ Compiler>Output>Generate debug information**



## --dependencies

|            |                                                                              |                                                                                           |
|------------|------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Syntax     | <code>--dependencies [= [i m n] [s] [l w] [b]] {filename directory +}</code> |                                                                                           |
| Parameters |                                                                              |                                                                                           |
|            | <code>i</code> (default)                                                     | Lists only the names of files                                                             |
|            | <code>m</code>                                                               | Lists in makefile style (multiple rules)                                                  |
|            | <code>n</code>                                                               | Lists in makefile style (one rule)                                                        |
|            | <code>s</code>                                                               | Suppresses system files                                                                   |
|            | <code>l</code>                                                               | Uses the locale encoding instead of UTF-8                                                 |
|            | <code>w</code>                                                               | Uses little-endian UTF-16 instead of UTF-8                                                |
|            | <code>b</code>                                                               | Uses a Byte Order Mark (BOM) in UTF-8 output                                              |
|            | <code>+</code>                                                               | Gives the same output as <code>-o</code> , but with the filename extension <code>d</code> |

See also *Rules for specifying a filename or directory as parameters*, page 306.

**Description** Use this option to make the compiler list the names of all source and header files opened for input into a file with the default filename extension `i`.

**Example** If `--dependencies` or `--dependencies=i` is used, the name of each opened input file, including the full path, if available, is output on a separate line. For example:

```
c:\iar\product\include\stdio.h
d:\myproject\include\foo.h
```

If `--dependencies=m` is used, the output is in makefile style. For each input file, one line containing a makefile dependency rule is produced. Each line consists of the name of the object file, a colon, a space, and the name of an input file. For example:

```
foo.o: c:\iar\product\include\stdio.h
foo.o: d:\myproject\include\foo.h
```

An example of using `--dependencies` with a popular make utility, such as GMake (GNU make):

- 1 Set up the rule for compiling files to be something like:

```
%o : %.c
$(ICC) $(ICCFLAGS) $< --dependencies=m $*.d
```

That is, in addition to producing an object file, the command also produces a dependency file in makefile style—in this example, using the extension `.d`.

- 2 Include all the dependency files in the makefile using, for example:

```
-include $(sources:.c=.d)
```

Because of the dash (-) it works the first time, when the .d files do not yet exist.



This option is not available in the IDE.

## --deprecated\_feature\_warnings

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                  |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| Syntax      | <code>--deprecated_feature_warnings=[+ -] feature[, [+ -] feature, ...]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                                                                                  |
| Parameters  | <i>feature</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | A feature can be <code>attribute_syntax</code> or <code>segment_pragmas</code> . |
| Description | <p>Use this option to disable or enable warnings for the use of a deprecated feature. The deprecated features are:</p> <ul style="list-style-type: none"> <li>● <code>attribute_syntax</code><br/>See <i>--uniform_attribute_syntax</i>, page 357, <i>--no_uniform_attribute_syntax</i>, page 344, and <i>Syntax for type attributes used on data objects</i>, page 424.</li> <li>● <code>segment_pragmas</code><br/>See the pragma directives <code>dataseg</code>, <code>constseg</code>, and <code>memory</code>. Use the <code>#pragma location</code> and <code>#pragma default_variable_attributes</code> directives instead.</li> </ul> <p>Because the deprecated features will be removed in a future version of the IAR C/C++ compiler, it is prudent to remove the use of them in your source code. To do this, enable warnings for a deprecated feature. For each warning, rewrite your code so that the deprecated feature is no longer used.</p> |                                                                                  |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --diag\_error

|             |                                                                                                                                                                                          |                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_error=tag[, tag, ...]</code>                                                                                                                                                |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                                               | The number of a diagnostic message, for example, the message number <code>Pe117</code> |
| Description | <p>Use this option to reclassify certain diagnostic messages as errors. An error indicates a violation of the C or C++ language rules, of such severity that object code will not be</p> |                                                                                        |

generated. The exit code will be non-zero. This option may be used more than once on the command line.



**Project>Options>C/C++ Compiler>Diagnostics>Treat these as errors**

## --diag\_remark

|             |                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_remark=tag[, tag, ...]</code>                                                                                                                                                                                                                                                                                                                                                                 |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                                                                                                                                                                                                                                                                 | The number of a diagnostic message, for example, the message number <code>Pe177</code> |
| Description | Use this option to reclassify certain diagnostic messages as remarks. A remark is the least severe type of diagnostic message and indicates a source code construction that may cause strange behavior in the generated code. This option may be used more than once on the command line.<br><br><b>Note:</b> By default, remarks are not displayed—use the <code>--remarks</code> option to display them. |                                                                                        |



**Project>Options>C/C++ Compiler>Diagnostics>Treat these as remarks**

## --diag\_suppress

|             |                                                                                                                                                            |                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_suppress=tag[, tag, ...]</code>                                                                                                               |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                 | The number of a diagnostic message, for example, the message number <code>Pe117</code> |
| Description | Use this option to suppress certain diagnostic messages. These messages will not be displayed. This option may be used more than once on the command line. |                                                                                        |



**Project>Options>C/C++ Compiler>Diagnostics>Suppress these diagnostics**

## --diag\_warning

|             |                                                                                                                                                                                                                                                                                |                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_warning=tag[, tag, ...]</code>                                                                                                                                                                                                                                    |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                                                                                                                                     | The number of a diagnostic message, for example, the message number <code>Pe826</code> |
| Description | Use this option to reclassify certain diagnostic messages as warnings. A warning indicates an error or omission that is of concern, but which will not cause the compiler to stop before compilation is completed. This option may be used more than once on the command line. |                                                                                        |



**Project>Options>C/C++ Compiler>Diagnostics>Treat these as warnings**

## --diagnostics\_tables

|             |                                                                                                                                                                                                                                                     |  |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--diagnostics_tables {filename directory}</code>                                                                                                                                                                                              |  |
| Parameters  | See <i>Rules for specifying a filename or directory as parameters</i> , page 306.                                                                                                                                                                   |  |
| Description | Use this option to list all possible diagnostic messages to a named file. This can be convenient, for example, if you have used a pragma directive to suppress or change the severity level of any diagnostic messages, but forgot to document why. |  |
|             | Typically, this option cannot be given together with other options.                                                                                                                                                                                 |  |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --discard\_unused\_publics

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                 |  |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--discard_unused_publics</code>                                                                                                                                                                                                                                                                                                                                                                                           |  |
| Description | Use this option to discard unused public functions and variables when compiling with the <code>--mfc</code> compiler option.                                                                                                                                                                                                                                                                                                    |  |
|             | <b>Note:</b> Do not use this option only on parts of the application, as necessary symbols might be removed from the generated output. Use the object attribute <code>__root</code> to keep symbols that are used from outside the compilation unit, for example, interrupt handlers. If the symbol does not have the <code>__root</code> attribute and is defined in the library, the library definition will be used instead. |  |

See also

*--mfc*, page 335 and *Multi-file compilation units*, page 257.



**Project>Options>C/C++ Compiler>Discard unused publics**

## --dlib\_config

Syntax

```
--dlib_config filename.h|config
```

Parameters

|                 |                                                                                                                                                                                                                                                                                                                                              |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>filename</i> | A DLIB configuration header file, see below the table.                                                                                                                                                                                                                                                                                       |
| <i>config</i>   | The default configuration file for the specified configuration will be used. Choose between: <ul style="list-style-type: none"> <li><i>none</i>, no configuration will be used</li> <li><i>normal</i>, the normal library configuration will be used (default)</li> <li><i>full</i>, the full library configuration will be used.</li> </ul> |

See also *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to specify which library configuration to use, either by specifying an explicit file or by specifying a library configuration—in which case the default file for that library configuration will be used. Make sure that you specify a configuration that corresponds to the library you are using. If you do not specify this option, the default library configuration file will be used.

**Note:** This option cannot be used if the compiler option `--libc++` has been specified.

You can find the library object files in the directory `arm\lib` and the library configuration files in the directory `arm\inc\c`. For examples and information about prebuilt runtime libraries, see *Prebuilt runtime libraries*, page 143.

If you build your own customized runtime library, you can also create a corresponding customized library configuration file to specify to the compiler. For more information, see *Customizing and building your own runtime library*, page 140.



To set related options, choose:

**Project>Options>General Options>Library Configuration**

## --do\_explicit\_zero\_opt\_in\_named\_sections

Syntax `--do_explicit_zero_opt_in_named_sections`

Description By default, the compiler treats static initialization of variables explicitly and implicitly initialized to zero the same, except for variables which are to be placed in user-named sections. For these variables, an explicit zero initialization is treated as a copy initialization, that is the same way as variables statically initialized to something other than zero.

Use this option to disable the exception for variables in user-named sections, and thus treat explicit initializations to zero as zero initializations, not copy initializations.

Example

```
int var1;                // Implicit zero init -> zero inited
int var2 = 0;           // Explicit zero init -> zero inited
int var3 = 7;           // Not zero init -> copy inited
int var4 @ "MYDATA";    // Implicit zero init -> zero inited
int var5 @ "MYDATA" = 0; // Explicit zero init -> copy inited
                        // If option specified, then zero inited
int var6 @ "MYDATA" = 7; // Not zero init -> copy inited
```



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## -e

Syntax `-e`

Description In the command line version of the compiler, language extensions are disabled by default. If you use language extensions such as extended keywords and anonymous structs and unions in your source code, you must use this option to enable them.

**Note:** The `-e` option and the `--strict` option cannot be used at the same time.

See also *Enabling language extensions, page 205.*



**Project>Options>C/C++ Compiler>Language 1>Standard with IAR extensions**

**Note:** By default, this option is selected in the IDE.

## --enable\_hardware\_workaround

|             |                                                                                             |                                                                                                                  |
|-------------|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--enable_hardware_workaround=<i>waid</i>[,<i>waid</i>...]</code>                      |                                                                                                                  |
| Parameters  | <i>waid</i>                                                                                 | The ID number of the workaround to enable. For a list of available workarounds to enable, see the release notes. |
| Description | Use this option to make the compiler generate a workaround for a specific hardware problem. |                                                                                                                  |
| See also    | The release notes for the compiler for a list of available parameters.                      |                                                                                                                  |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --enable\_restrict

|             |                                                                                                                                                                                      |  |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--enable_restrict</code>                                                                                                                                                       |  |
| Description | Enables the Standard C keyword <code>restrict</code> in C89 and C++. By default, <code>restrict</code> is recognized in Standard C and <code>__restrict</code> is always recognized. |  |
|             | This option can be useful for improving analysis precision during optimization.                                                                                                      |  |



To set this option, use **Project>Options>C/C++ Compiler>Extra options**

## --endian

|             |                                                                                                                                                                                                                     |                                                                                                          |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--endian={big b little l}</code>                                                                                                                                                                              |                                                                                                          |
| Parameters  | <i>big</i> , <i>b</i>                                                                                                                                                                                               | Specifies big-endian as the default byte order. (This byte order cannot be used <b>in 64-bit mode</b> .) |
|             | <i>little</i> , <i>l</i> (default)                                                                                                                                                                                  | Specifies little-endian as the default byte order.                                                       |
| Description | Use this option to specify the byte order of the generated code and data. By default, the compiler generates code in little-endian byte order. <b>In 64-bit mode</b> , this is the only byte order you can specify. |                                                                                                          |
| See also    | <i>Byte order (32-bit mode only)</i> , page 408.                                                                                                                                                                    |                                                                                                          |



**Project>Options>General Options>32-bit>Byte order**

**--enum\_is\_int**

Syntax

--enum\_is\_int

Description

Use this option to force the size of all enumeration types to be at least 4 bytes. If you use this option when you compile a source file that uses a specific `enum` type, each source file that uses that `enum` type must be compiled using this option.

**Note:** This option will not consider the fact that an `enum` type can be larger than an integer type.

See also

*The enum type*, page 410.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

**--error\_limit**

Syntax

--error\_limit=*n*

Parameters

*n*

The number of errors before the compiler stops the compilation. *n* must be a positive integer. 0 indicates no limit.

Description

Use the `--error_limit` option to specify the number of errors allowed before the compiler stops the compilation. By default, 100 errors are allowed.



This option is not available in the IDE.

**-f**

Syntax

-f *filename*

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to make the compiler read command line options from the named file, with the default filename extension `.xcl`.



In the command file, you format the items exactly as if they were on the command line itself, except that you may use multiple lines, because the newline character acts just as a space or tab character.

Both C and C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.

If you use the compiler option `--dependencies`, extended command line files specified using `-f` will not generate a dependency, but those specified using `--f` will generate a dependency.

See also

`--dependencies`, page 321 and `--f`, page 329.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--f**

Syntax

`--f filename`

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to make the compiler read command line options from the named file, with the default filename extension `.xcl`.

In the command file, you format the items exactly as if they were on the command line itself, except that you may use multiple lines, because the newline character acts just as a space or tab character.

Both C and C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.

If you use the compiler option `--dependencies`, extended command line files specified using `--f` will generate a dependency, but those specified using `-f` will not generate a dependency.

See also

`--dependencies`, page 321 and `-f`, page 328.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --fpu

|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |             |                              |             |                                                               |                       |         |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|------------------------------|-------------|---------------------------------------------------------------|-----------------------|---------|
| Syntax                | <code>--fpu={name list none}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |             |                              |             |                                                               |                       |         |
| Parameters            | <table> <tr> <td><i>name</i></td> <td>The target FPU architecture.</td> </tr> <tr> <td><i>list</i></td> <td>Lists all supported values for the <code>--fpu</code> option.</td> </tr> <tr> <td><i>none</i> (default)</td> <td>No FPU.</td> </tr> </table>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <i>name</i> | The target FPU architecture. | <i>list</i> | Lists all supported values for the <code>--fpu</code> option. | <i>none</i> (default) | No FPU. |
| <i>name</i>           | The target FPU architecture.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |             |                              |             |                                                               |                       |         |
| <i>list</i>           | Lists all supported values for the <code>--fpu</code> option.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |             |                              |             |                                                               |                       |         |
| <i>none</i> (default) | No FPU.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |             |                              |             |                                                               |                       |         |
| Description           | <p>Use this option to generate code that performs floating-point operations using a Floating Point Unit (FPU). By selecting an FPU, you will override the use of the software floating-point library for all supported floating-point operations.</p> <p>The name of a target FPU is constructed in one of these ways:</p> <ul style="list-style-type: none"> <li>● <i>none</i>: No FPU (default)</li> <li>● <i>fp-architecture</i>: Base variant of the specified architecture</li> <li>● <i>fp-architecture-SP</i>: Single-precision variant</li> <li>● <i>fp-architecture_D16</i>: Variant with 16 D registers</li> <li>● <i>fp-architecture_Fp16</i>: Variant with half-precision extensions</li> </ul> <p>The available combinations include:</p> <ul style="list-style-type: none"> <li>● {VFPv2 VFPv3 VFPv4 VFPv5}</li> <li>● {VFPv3 VFPv4 VFPv5}_D16</li> <li>● {VFPv4 VFPv5}-SP</li> <li>● VFPv3_Fp16</li> <li>● VFPv3_D16_Fp16</li> </ul> <p><b>Note:</b> In 64-bit mode, and when a 64-bit device is used in 32-bit mode, this option has no effect.</p> |             |                              |             |                                                               |                       |         |
| See also              | <i>VFP and floating-point arithmetic</i> , page 72.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |             |                              |             |                                                               |                       |         |



Project>Options>General Options>32-bit>Floating-point settings

## --guard\_calls

|             |                                                                                                                                         |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | --guard_calls                                                                                                                           |
| Description | Use this option to enable guards for function static variable initialization. This option should be used in a threaded C++ environment. |

See also *Managing a multithreaded environment*, page 169.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --header\_context

|             |                                                                                                                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | --header_context                                                                                                                                                                                                                                                                     |
| Description | Occasionally, to find the cause of a problem it is necessary to know which header file that was included from which source line. Use this option to list, for each diagnostic message, not only the source position of the problem, but also the entire include stack at that point. |



This option is not available in the IDE.

## -I

|             |                                                                                                                             |
|-------------|-----------------------------------------------------------------------------------------------------------------------------|
| Syntax      | -I <i>path</i>                                                                                                              |
| Parameters  | <i>path</i> The search path for #include files                                                                              |
| Description | Use this option to specify the search paths for #include files. This option can be used more than once on the command line. |

See also *Include file search procedure*, page 297.



**Project>Options>C/C++ Compiler>Preprocessor>Additional include directories**

## -l

**Syntax** `-l [a|A|b|B|c|C|D] [N] [H] {filename|directory}`

**Parameters**

|             |                                                                                                                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| a           | Assembler list file                                                                                                                                                                                                                                     |
| A           | Assembler list file with C or C++ source as comments                                                                                                                                                                                                    |
| b           | Basic assembler list file. This file has the same contents as a list file produced with <code>-la</code> , except that no extra compiler-generated information (runtime model attributes, call frame information, frame size information) is included * |
| B           | Basic assembler list file. This file has the same contents as a list file produced with <code>-lA</code> , except that no extra compiler generated information (runtime model attributes, call frame information, frame size information) is included * |
| c           | C or C++ list file                                                                                                                                                                                                                                      |
| C (default) | C or C++ list file with assembler source as comments                                                                                                                                                                                                    |
| D           | C or C++ list file with assembler source as comments, but without instruction offsets and hexadecimal byte values                                                                                                                                       |
| N           | No diagnostics in file                                                                                                                                                                                                                                  |
| H           | Include source lines from header files in output. Without this option, only source lines from the primary source file are included                                                                                                                      |

\* This makes the list file less useful as input to the assembler, but more useful for reading by a human.

See also *Rules for specifying a filename or directory as parameters*, page 306.

**Description** Use this option to generate an assembler or C/C++ listing to a file.

**Note:** This option can be used one or more times on the command line.



To set related options, choose:

**Project>Options>C/C++ Compiler>List**

## --libc++

|             |                                                                                                                                                                                                                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--libc++</code>                                                                                                                                                                                                                                                                                                                                                 |
| Description | Use this option to make the compiler use Libc++ system headers and to make the linker use the Libc++ library, with support for C++17. A Full library configuration will be used and the header file <code>DLib_Config_Full.h</code> will be referenced.<br><br><b>Note:</b> This option cannot be used together with the compiler option <code>--dlib_config</code> . |
| See also    | <i>Overview—Standard C++</i> , page 213.                                                                                                                                                                                                                                                                                                                              |



**Project>Options>General Options>Library Configuration>Library>Libc++**

## --lock\_regs

|             |                                                                                                                                                                                                                                   |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--lock_regs=register</code>                                                                                                                                                                                                 |
| Parameters  | <i>registers</i> A comma-separated list of register names and register intervals to be locked.<br><br><b>In 32-bit mode:</b> registers in the range R4–R11.<br><b>In 64-bit mode:</b> registers in the ranges X9–X15 and X18–X29. |
| Description | Use this option to prevent the compiler from generating code that uses the specified registers.                                                                                                                                   |
| Example     | <code>--lock_regs=R4</code><br><code>--lock_regs=R8–R11</code><br><code>--lock_regs=R4, R8–R11</code>                                                                                                                             |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --macro\_positions\_in\_diagnostics

|             |                                                                                                                                                              |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--macro_positions_in_diagnostics</code>                                                                                                                |
| Description | Use this option to obtain position references inside macros in diagnostic messages. This is useful for detecting incorrect source code constructs in macros. |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--make\_all\_definitions\_weak**

|             |                                                                                                                                                                                                                                                             |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--make_all_definitions_weak</code>                                                                                                                                                                                                                    |
| Description | Turns all variable and function definitions in the compilation unit into weak definitions.<br><b>Note:</b> Normally, it is better to use extended keywords or pragma directives to turn individual variable and function definitions into weak definitions. |
| See also    | <code>__weak</code> , page 440.                                                                                                                                                                                                                             |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--max\_cost\_constexpr\_call**

|             |                                                                                                                                                                                                                                                                                                      |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--max_cost_constexpr_call=<i>limit</i></code>                                                                                                                                                                                                                                                  |
| Parameters  | <i>limit</i> The number of calls and loop iterations. The default is 2000000.                                                                                                                                                                                                                        |
| Description | Use this option to specify an upper limit for the <i>cost</i> for folding a top-level <code>constexpr</code> call (function or constructor). The cost is a combination of the number of calls interpreted and the number of loop iterations performed during the interpretation of a top-level call. |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--max\_depth\_constexpr\_call**

|             |                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--max_depth_constexpr_call=<i>limit</i></code>                                                                                     |
| Parameters  | <i>limit</i> The depth of recursion. The default is 1000.                                                                                |
| Description | Use this option to specify the maximum depth of recursion for folding a top-level <code>constexpr</code> call (function or constructor). |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --mfc

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--mfc</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Description | Use this option to enable <i>multi-file compilation</i> . This means that the compiler compiles one or several source files specified on the command line as one unit, which enhances interprocedural optimizations.<br><br><b>Note:</b> The compiler will generate one object file per input source code file, where the first object file contains all relevant data and the other ones are empty. If you want only the first file to be produced, use the <code>-o</code> compiler option and specify a certain output file. |
| Example     | <code>iccarm myfile1.c myfile2.c myfile3.c --mfc</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| See also    | <code>--discard_unused_publics</code> , page 324, <code>--output, -o</code> , page 347, and <i>Multi-file compilation units</i> , page 257.                                                                                                                                                                                                                                                                                                                                                                                     |



**Project>Options>C/C++ Compiler>Multi-file compilation**

## --no\_alignment\_reduction

|             |                                                                                                                                                                                 |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_alignment_reduction</code>                                                                                                                                           |
| Description | Some simple Thumb/Thumb2 functions can be 2-byte aligned. Use this option to keep those functions 4-byte aligned.<br><br>This option has no effect when compiling for Arm mode. |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --no\_bom

|             |                                                                                        |
|-------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--no_bom</code>                                                                  |
| Description | Use this option to omit the Byte Order Mark (BOM) when generating a UTF-8 output file. |
| See also    | <code>--text_out</code> , page 356, and <i>Text encodings</i> , page 300.              |



**Project>Options>C/C++ Compiler>Encodings>Text output file encoding**

## **--no\_call\_frame\_info**

Syntax

`--no_call_frame_info`

Description

Normally, the compiler always generates call frame information in the output, to enable the debugger to display the call stack even in code from modules with no debug information. Use this option to disable the generation of call frame information.

See also

*Call frame information*, page 199.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--no\_clustering**

Syntax

`--no_clustering`

Description

Use this option to disable static clustering optimizations.

**Note:** This option has no effect at optimization levels below Medium.

See also

*Static clustering*, page 261.



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Static clustering**

## **--no\_code\_motion**

Syntax

`--no_code_motion`

Description

Use this option to disable code motion optimizations.

**Note:** This option has no effect at optimization levels below Medium.

See also

*Code motion*, page 260.



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Code motion**



## --no\_const\_align

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_const_align</code>                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Description | By default, the compiler uses alignment 4 for objects with a size of 4 bytes or more. Use this option to make the compiler align <code>const</code> objects based on the alignment of their type.<br><br>For example, a string literal will get alignment 1, because it is an array with elements of the type <code>const char</code> which has alignment 1. Using this option might save ROM space, possibly at the expense of processing speed. |
| See also    | <i>Alignment</i> , page 407.                                                                                                                                                                                                                                                                                                                                                                                                                      |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --no\_cse

|             |                                                              |
|-------------|--------------------------------------------------------------|
| Syntax      | <code>--no_cse</code>                                        |
| Description | Use this option to disable common subexpression elimination. |
| See also    | <i>Common subexpression elimination</i> , page 260.          |



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Common subexpression elimination**

## --no\_default\_fp\_contract

|             |                                                                                                                                                                                                                                                                                                            |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_default_fp_contract</code>                                                                                                                                                                                                                                                                      |
| Description | The pragma directive <code>STDC FP_CONTRACT</code> specifies whether the compiler is allowed to contract floating-point expressions. The default for this pragma directive is <code>ON</code> (allowing contraction). Use this option to change the default to <code>OFF</code> (disallowing contraction). |
| See also    | <i>STDC FP_CONTRACT</i> , page 466.                                                                                                                                                                                                                                                                        |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--no\_exceptions**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_exceptions</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Description | Use this option to disable exception support in the C++ language. Exception statements like <code>throw</code> and <code>try-catch</code> , and exception specifications on function definitions will generate an error message. Exception specifications on function declarations are ignored. The option is only valid when used together with the <code>--c++</code> compiler option.<br><br>If exceptions are not used in your application, it is recommended to disable support for them by using this option, because exceptions cause a rather large increase in code size. |
| See also    | <i>Exception handling</i> , page 215 and <code>__EXCEPTIONS</code> , page 531.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



**Project>Options>C/C++ Compiler>Language 1>C++**

and deselect

**Project>Options>C/C++ Compiler>Language 1>C++ options>Enable exceptions**

## **--no\_fragments**

|             |                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_fragments</code>                                                                                                                                                                                                                                                                                                                                                     |
| Description | Use this option to disable section fragment handling. Normally, the toolset uses IAR proprietary information for transferring section fragment information to the linker. The linker uses this information to remove unused code and data, and further minimize the size of the executable image. When you use this option, this information is not output in the object files. |
| See also    | <i>Keeping symbols and sections</i> , page 119.                                                                                                                                                                                                                                                                                                                                 |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**

## **--no\_inline**

|             |                                               |
|-------------|-----------------------------------------------|
| Syntax      | <code>--no_inline</code>                      |
| Description | Use this option to disable function inlining. |
| See also    | <i>Inlining functions</i> , page 92.          |



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Function inlining**

## --no\_literal\_pool

Syntax

`--no_literal_pool`

Description

Use this option to generate code that should run from a memory region where it is not allowed to read data, only to execute code. **In 64-bit mode**, this option has no effect.

When this option is used, the compiler will construct addresses and large constants with the `MOV32` pseudo instruction instead of using a literal pool: switch statements are no longer translated using tables, and constant data is placed in the `.rodata` section.

This option also affects the automatic library selection performed by the linker. An IAR-specific ELF attribute is used for determining whether libraries compiled with this option should be used.

This option is only allowed for Armv6-M and Armv7 cores, and can be combined with the options `--ropi` or `--rwp_i` only for Armv7 cores (includes Armv8-M, Armv8.1-M, Armv8-A, and Armv8-R cores).

**Note:** For the M architecture profile (Cortex-M cores), this option is only available when you use the little-endian byte order.

See also

`--no_literal_pool`, page 398.



**Project>Options>C/C++ Compiler>Code>No data reads in code memory**

## --no\_loop\_align

Syntax

`--no_loop_align`

Description

Use this option to disable the 4-byte alignment of labels in loops. This option is only useful in Thumb2 mode.

In Arm/Thumb1 mode, this option is enabled but does not perform anything.

See also

*Alignment*, page 407.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

**--no\_mem\_idioms**

|             |                                                                                                                                                                                                                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_mem_idioms</code>                                                                                                                                                                                                                                                                                       |
| Description | Use this option to make the compiler not optimize code sequences that clear, set, or copy a memory region. These memory access patterns (idioms) can otherwise be aggressively optimized, in some cases using calls to the runtime library. In principle, the transformation can involve more than a library call. |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

**--no\_normalize\_file\_macros**

|             |                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_normalize_file_macros</code>                                                                                                                                                                                                                |
| Description | Normally, apparently unneeded uses of <code>..</code> and <code>.</code> components are collapsed in the paths returned by the predefined preprocessor symbols <code>__FILE__</code> and <code>__BASE_FILE__</code> . Use this option to prevent this. |
| Example     | The path <code>"D:\foo\..\bar\baz.c"</code> will be returned as <code>"D:\bar\baz.c"</code> by the symbols <code>__FILE__</code> and <code>__BASE_FILE__</code> unless this option is used.                                                            |
| See also    | <i>Description of predefined preprocessor symbols</i> , page 520.                                                                                                                                                                                      |



This option is not available in the IDE.

**--no\_path\_in\_file\_macros**

|             |                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_path_in_file_macros</code>                                                                                                                   |
| Description | Use this option to exclude the path from the return value of the predefined preprocessor symbols <code>__FILE__</code> and <code>__BASE_FILE__</code> . |
| See also    | <i>Description of predefined preprocessor symbols</i> , page 520.                                                                                       |



This option is not available in the IDE.

## --no\_rtti

|             |                                                                                                                                                                                                                                                                                              |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_rtti</code>                                                                                                                                                                                                                                                                       |
| Description | Use this option to disable the runtime type information (RTTI) support in the C++ language. RTTI statements like <code>dynamic_cast</code> and <code>typeid</code> will generate an error message. This option is only valid when used together with the <code>--c++</code> compiler option. |

See also *Using C++*, page 213 and `__RTTI__`, page 533.



**Project>Options>C/C++ Compiler>Language 1>C++**

and deselect

**Project>Options>C/C++ Compiler>Language 1>C++ options>Enable RTTI**

## --no\_rw\_dynamic\_init

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_rw_dynamic_init</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Description | Use this option to disable runtime initialization of static C variables.<br><br>C source code that is compiled with <code>--ropi</code> or <code>--rwpi</code> cannot have static pointer variables and constants initialized to addresses of objects that do not have a known address at link time. To solve this for writable static variables, the compiler generates code that performs the initialization at program startup (in the same way as dynamic initialization in C++). |

See also `--ropi`, page 351 and `--rwpi`, page 352.



**Project>Options>C/C++ Compiler>Code>No dynamic read/write/initialization**

## --no\_scheduling

|             |                                                                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_scheduling</code>                                                                                                           |
| Description | Use this option to disable the instruction scheduler.<br><br><b>Note:</b> This option has no effect at optimization levels below High. |

See also *Instruction scheduling*, page 262.



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Instruction scheduling**

## **--no\_size\_constraints**

|             |                                                                                                                                                                                             |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_size_constraints</code>                                                                                                                                                          |
| Description | Use this option to relax the normal restrictions for code size expansion when optimizing for high speed.<br><br><b>Note:</b> This option has no effect unless used with <code>-Ohs</code> . |
| See also    | <i>Speed versus size</i> , page 259.                                                                                                                                                        |



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>No size constraints**

## **--no\_static\_destruction**

|             |                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_static_destruction</code>                                                                                                                                                                                 |
| Description | Normally, the compiler emits code to destroy C++ static variables that require destruction at program exit. Sometimes, such destruction is not needed.<br><br>Use this option to suppress the emission of such code. |
| See also    | <i>Setting up the atexit limit</i> , page 120.                                                                                                                                                                       |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--no\_system\_include**

|             |                                                                                                                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_system_include</code>                                                                                                                                                                                                                        |
| Description | By default, the compiler automatically locates the system include files. Use this option to disable the automatic search for system include files. In this case, you might need to set up the search path by using the <code>-I</code> compiler option. |
| See also    | <code>--dlib_config</code> , page 325, and <code>--system_include_dir</code> , page 356.                                                                                                                                                                |



**Project>Options>C/C++ Compiler>Preprocessor>Ignore standard include directories**

## --no\_tbaa

Syntax `--no_tbaa`

Description Use this option to disable type-based alias analysis.

**Note:** This option has no effect at optimization levels below High.

See also *Type-based alias analysis*, page 261.



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Type-based alias analysis**

## --no\_typedefs\_in\_diagnostics

Syntax `--no_typedefs_in_diagnostics`

Description Use this option to disable the use of typedef names in diagnostics. Normally, when a type is mentioned in a message from the compiler, most commonly in a diagnostic message of some kind, the typedef names that were used in the original declaration are used whenever they make the resulting text shorter.

Example

```
typedef int (*MyPtr)(char const *);
MyPtr p = "My text string";
```

will give an error message like this:

```
Error[Pe144]: a value of type "char *" cannot be used to
initialize an entity of type "MyPtr"
```

If the `--no_typedefs_in_diagnostics` option is used, the error message will be like this:

```
Error[Pe144]: a value of type "char *" cannot be used to
initialize an entity of type "int (*)(char const *)"
```



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --no\_unaligned\_access

Syntax `--no_unaligned_access`

Description Use this option to make the compiler avoid unaligned accesses. Data accesses are usually performed aligned for improved performance. However, some accesses, most

notably when reading from or writing to packed data structures, might be unaligned. When using this option, all such accesses will be performed using a smaller data size to avoid any unaligned accesses. This option is only useful for Armv6 architectures and higher.

For the architectures Armv7-M, Armv8-A, and Armv8-M.mainline, the hardware support for unaligned access can be controlled by software. There are variants of library routines for these architectures that are faster when unaligned access is supported in hardware (symbols with the prefix `__iar_unaligned_`). The IAR linker will not use these variants if any of the input modules does not allow unaligned access.

See also

*Alignment*, page 407.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--no\_uniform\_attribute\_syntax**

Syntax

`--no_uniform_attribute_syntax`

Description

Use this option to apply the default syntax rules to IAR type attributes specified before a type specifier.

See also

*--uniform\_attribute\_syntax*, page 357 and *Syntax for type attributes used on data objects*, page 424.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--no\_unroll**

Syntax

`--no_unroll`

Description

Use this option to disable loop unrolling.

**Note:** This option has no effect at optimization levels below High.

See also

*Loop unrolling*, page 260.



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Loop unrolling**



## **--no\_var\_align**

Syntax `--no_var_align`

Description By default, the compiler uses alignment 4 for variable objects with a size of 4 bytes or more. Use this option to make the compiler align variable objects based on the alignment of their type.

For example, a `char` array will get alignment 1, because its elements of the type `char` have alignment 1. Using this option might save RAM space, possibly at the expense of processing speed.

See also *Alignment*, page 407 and *--no\_const\_align*, page 337.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## **--no\_warnings**

Syntax `--no_warnings`

Description By default, the compiler issues warning messages. Use this option to disable all warning messages.



This option is not available in the IDE.

## **--no\_wrap\_diagnostics**

Syntax `--no_wrap_diagnostics`

Description By default, long lines in diagnostic messages are broken into several lines to make the message easier to read. Use this option to disable line wrapping of diagnostic messages.



This option is not available in the IDE.

## --nonportable\_path\_warnings

|             |                                                                                                                                                                                                                                   |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | --nonportable_path_warnings                                                                                                                                                                                                       |
| Description | Use this option to make the compiler generate a warning when characters in the path used for opening a source file or header file are lower case instead of upper case, or vice versa, compared with the path in the file system. |



This option is not available in the IDE.

## -O

|        |                              |
|--------|------------------------------|
| Syntax | -O [n   1   m   h   hs   hz] |
|--------|------------------------------|

### Parameters

|             |                            |
|-------------|----------------------------|
| n           | None* (Best debug support) |
| 1 (default) | Low*                       |
| m           | Medium                     |
| h           | High, balanced             |
| hs          | High, favoring speed       |
| hz          | High, favoring size        |

\*All optimizations performed at level Low will be performed also at None. The only difference is that at level None, all non-static variables will live during their entire scope.

### Description

Use this option to set the optimization level to be used by the compiler when optimizing the code. If no optimization option is specified, the optimization level Low is used by default. If only -O is used without any parameter, the optimization level High balanced is used.

A low level of optimization makes it relatively easy to follow the program flow in the debugger, and, conversely, a high level of optimization makes it relatively hard.

At high optimization levels, when favoring speed or size (-Ohs or -Ohz), the compiler will emit AEABI attributes indicating the requested optimization goal. This information can be used by the linker to select smaller or faster variants of DLIB library functions.

- If a module referencing a function is compiled with -Ohs, and the DLIB library contains a fast variant, that variant is used.

- If all modules referencing a function are compiled with `-Ohz`, and the DLIB library contains a small variant, that variant is used.

For example, using `-Ohz` for Cortex-M0 will result in the use of a smaller AEABI library routine for integer division.

See also

*Controlling compiler optimizations*, page 256.



**Project>Options>C/C++ Compiler>Optimizations**

## --only\_stdout

Syntax `--only_stdout`

Description Use this option to make the compiler use the standard output stream (`stdout`), and messages that are normally directed to the error output stream (`stderr`).



This option is not available in the IDE.

## --output, -o

Syntax `--output {filename|directory}`  
`-o {filename|directory}`

Parameters See *Rules for specifying a filename or directory as parameters*, page 306.

Description By default, the object code output produced by the compiler is located in a file with the same name as the source file, but with the extension `o`. Use this option to explicitly specify a different output filename for the object code output.



This option is not available in the IDE.

## --pending\_instantiations

Syntax `--pending_instantiations number`

Parameters *number* An integer that specifies the limit, where 64 is default. If 0 is used, there is no limit.

Description

Use this option to specify the maximum number of instantiations of a given C++ template that is allowed to be in process of being instantiated at a given time. This is used for detecting recursive instantiations.



**Project>Options>C/C++ Compiler>Extra Options**

## --predef\_macros

Syntax

```
--predef_macros [=n] {filename|directory}
```

Parameters

n Suppresses compilation.

See also *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to list all symbols defined by the compiler or on the command line. (Symbols defined in the source code are not listed.) When using this option, make sure to also use the same options as for the rest of your project.

If a filename is specified, the compiler stores the output in that file. If a directory is specified, the compiler stores the output in that directory, in a file with the `predef` filename extension.

If you just want the list of symbols, but do not want to compile, specify the parameter `n`.

**Note:** This option requires that you specify a source file on the command line.



This option is not available in the IDE.

## --preinclude

Syntax

```
--preinclude includefile
```

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to make the compiler read the specified include file before it starts to read the source file. This is useful if you want to change something in the source code for the entire application, for instance if you want to define a new symbol.



**Project>Options>C/C++ Compiler>Preprocessor>Preinclude file**

## --preprocess

Syntax `--preprocess [= [c] [n] [s]] {filename|directory}`

### Parameters

|                |                                        |
|----------------|----------------------------------------|
| <code>c</code> | Include comments                       |
| <code>n</code> | Preprocess only                        |
| <code>s</code> | Suppress <code>#line</code> directives |

See also *Rules for specifying a filename or directory as parameters*, page 306.

### Description

Use this option to generate preprocessed output to a named file.



**Project>Options>C/C++ Compiler>Preprocessor>Preprocessor output to file**

## --public\_equ

Syntax `--public_equ symbol [=value]`

### Parameters

|                     |                                                   |
|---------------------|---------------------------------------------------|
| <code>symbol</code> | The name of the assembler symbol to be defined    |
| <code>value</code>  | An optional value of the defined assembler symbol |

### Description

This option is equivalent to defining a label in assembler language using the `EQU` directive and exporting it using the `PUBLIC` directive. This option can be used more than once on the command line.



This option is not available in the IDE.

## --relaxed\_fp

Syntax `--relaxed_fp`

### Description

Use this option to allow the compiler to relax the language rules and perform more aggressive optimization of floating-point expressions. This option improves performance for floating-point expressions that fulfill these conditions:

- The expression consists of both single and double-precision values

- The double-precision values can be converted to single precision without loss of accuracy
- The result of the expression is converted to single precision.

**Note:** Performing the calculation in single precision instead of double precision might cause a loss of accuracy.

**Example**

```
float F(float a, float b)
{
    return a + b * 3.0;
}
```

The C standard states that 3.0 in this example has the type `double` and therefore the whole expression should be evaluated in `double` precision. However, when the `--relaxed_fp` option is used, 3.0 will be converted to `float` and the whole expression can be evaluated in `float` precision.



To set related options, choose:

**Project>Options>C/C++ Compiler>Language 2>Floating-point semantics**

**--remarks**

Syntax

`--remarks`

Description

The least severe diagnostic messages are called remarks. A remark indicates a source code construct that may cause strange behavior in the generated code. By default, the compiler does not generate remarks. Use this option to make the compiler generate remarks.

See also

*Severity levels*, page 303.



**Project>Options>C/C++ Compiler>Diagnostics>Enable remarks**

**--require\_prototypes**

Syntax

`--require_prototypes`

Description

Use this option to force the compiler to verify that all functions have proper prototypes. Using this option means that code containing any of the following will generate an error:

- A function call of a function with no declaration, or with a Kernighan & Ritchie C declaration

- A function definition of a public function with no previous prototype declaration
- An indirect function call through a function pointer with a type that does not include a prototype.



Project>Options>C/C++ Compiler>Language 1>Require prototypes

## --ropi

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                             |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--ropi=[pc cb]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                             |
| Parameters  | pc (default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | The compiler uses PC-relative references to address code and read-only data.                                                                                |
|             | cb                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | The compiler uses offsets relative to the constant base register (R8). This corresponds to using <code>--ropi</code> together with <code>--ropi_cb</code> . |
| Description | Use this option to select which method the compiler uses for position-independent accesses to read-only data. <b>In 64-bit mode</b> , this option is not available.                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                             |
|             | When this option is used, these limitations apply: <ul style="list-style-type: none"> <li>● C++ constructions cannot be used</li> <li>● The object attribute <code>__ramfunc</code> cannot be used</li> <li>● Pointer constants cannot be initialized with the address of another constant, a string literal, or a function. However, writable variables can be initialized to constant addresses at runtime.</li> </ul> Consider using <code>movable</code> blocks in the linker configuration file. See <i>define block directive</i> , page 563. |                                                                                                                                                             |
| See also    | <code>--no_rw_dynamic_init</code> , page 341, and <i>Description of predefined preprocessor symbols</i> , page 520.                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                                                                             |



Project>Options>C/C++ Compiler>Code>Code and read-only data (ropi)

## --ropi\_cb

Syntax `--ropi_cb`

Description Use this option to make all accesses to constant data, base-addressed relative to the register R8. **In 64-bit mode**, this option has no effect.

Use `--ropi_cb` together with `--ropi` to activate a variant of ROPI that uses the Arm core register R8 as the base address for read-only data, instead of using the PC. This is useful, for example, when using ROPI in code that runs from execute-only memory, which is enabled if you compile and link with `--no_literal_pool`.

### Note:

- The use of `--ropi_cb` is not AEABI-compliant.
- There is no provided setup of the register R8. This must be handled by your application.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --rwpi

Syntax `--rwpi=[sb|sb_near|got]`

### Parameters

|                           |                                                                                                                                                                                                                                                                |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>sb</code> (default) | The compiler uses offsets relative to the static base register (R9).                                                                                                                                                                                           |
| <code>sb_near</code>      | The compiler uses offsets relative to the static base register (R9), with a restricted range (64 Kbytes). This corresponds to using <code>--rwpi_near</code> .                                                                                                 |
| <code>got</code>          | The compiler uses offsets relative to the global offset table (GOT). This setting is used when generating code for shared objects. Because this behavior is set implicitly by the option <code>--shared</code> , there is no need for setting this explicitly. |

Description Use this option to select which method the compiler uses for position-independent accesses to writable data. **In 64-bit mode**, this option is not available.

When this option is used, these limitations apply:

- The object attribute `__ramfunc` cannot be used



- Pointer constants cannot be initialized with the address of a writable variable. However, static writable variables can be initialized to writable addresses at runtime.

Consider using `movable` blocks in the linker configuration file. See *define block directive*, page 563.

See also

`--no_rw_dynamic_init`, page 341, and *Description of predefined preprocessor symbols*, page 520.



**Project>Options>C/C++ Compiler>Code>Read/write data (rwpi)**

## --rwpi\_near

Syntax

```
--rwpi_near
```

Description

Use this option to make the compiler generate code that uses the offset from the static base register (R9) to address-writable data. **In 64-bit mode**, this option has no effect.

When this option is used, these limitations apply

- The object attribute `__ramfunc` cannot be used.
- Pointer constants cannot be initialized with the address of a writable variable. However, static writable variables can be initialized to writable addresses at runtime.
- A maximum of 64 Kbytes of read/write memory can be addressed.

See also

`--no_rw_dynamic_init`, page 341 and *Description of predefined preprocessor symbols*, page 520.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --section

Syntax

```
--section OldName=NewName
```

Description

The compiler places functions and data objects into named sections which are referred to by the IAR ILINK Linker. Use this option to change the name of the section `OldName` to `NewName`.

This is useful if you want to place your code or data in different address ranges and you find the `@` notation, alternatively the `#pragma location` directive, insufficient.

**Note:** Any changes to the section names require corresponding modifications in the linker configuration file.

**Example** To place functions in the section `MyText`, use:

```
--section .text=MyText
```

**See also** *Controlling data and function placement in memory*, page 252.



**Project>Options>C/C++ Compiler>Output>Code section name**

## --section\_prefix

**Syntax** `--section_prefix=prefix`

**Description** The compiler places functions and data objects into named sections which are referred to by the IAR ILINK Linker. Use this option to change the name of sections that are not explicitly named using the @ notation or the `#pragma location` directive.

This option creates section names by putting a prefix before the default name for the section type. This makes it possible to use different section-selectors for different purposes. You can use `tcm.*` in the example below to match the prefix or, for example, `*.bss` to match sections with zero-initialized data.

**Note:** Any changes to the section names require corresponding modifications in the linker configuration file.

**Example** Specifying `--section_prefix=tcm` places:

- code in `tcm.text` instead of `.text`
- read-only data in `tcm.rodata` instead of `.rodata`
- zero-initialized data in `tcm.bss` instead of `.bss`
- other initialized data in `tcm.data` instead of `.data`

**See also** *Controlling data and function placement in memory*, page 252.



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --silent

|             |                                                                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--silent</code>                                                                                                                                                                                                 |
| Description | By default, the compiler issues introductory messages and a final statistics report. Use this option to make the compiler operate without sending these messages to the standard output stream (normally the screen). |

This option does not affect the display of error and warning messages.



This option is not available in the IDE.

## --source\_encoding

|                     |                                                                                                                                                                                                                                |                     |                                                            |                   |                                                    |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|------------------------------------------------------------|-------------------|----------------------------------------------------|
| Syntax              | <code>--source_encoding {locale utf8}</code>                                                                                                                                                                                   |                     |                                                            |                   |                                                    |
| Parameters          | <table> <tr> <td><code>locale</code></td> <td>The default source encoding is the system locale encoding.</td> </tr> <tr> <td><code>utf8</code></td> <td>The default source encoding is the UTF-8 encoding.</td> </tr> </table> | <code>locale</code> | The default source encoding is the system locale encoding. | <code>utf8</code> | The default source encoding is the UTF-8 encoding. |
| <code>locale</code> | The default source encoding is the system locale encoding.                                                                                                                                                                     |                     |                                                            |                   |                                                    |
| <code>utf8</code>   | The default source encoding is the UTF-8 encoding.                                                                                                                                                                             |                     |                                                            |                   |                                                    |
| Description         | When reading a source file with no Byte Order Mark (BOM), use this option to specify the encoding. If this option is not specified and the source file does not have a BOM, the Raw encoding will be used.                     |                     |                                                            |                   |                                                    |

See also *Text encodings*, page 300.



**Project>Options>C/C++ Compiler>Encodings>Default source file encoding**

## --stack\_protection

|             |                                                                                              |
|-------------|----------------------------------------------------------------------------------------------|
| Syntax      | <code>--stack_protection</code>                                                              |
| Description | Use this option to enable stack protection for the functions that are considered to need it. |
| See also    | <i>Stack protection</i> , page 94.                                                           |



**Project>Options>C/C++ Compiler>Code>Stack protection**

## --strict

|             |                                                                                                                                                                                              |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--strict</code>                                                                                                                                                                        |
| Description | By default, the compiler accepts a relaxed superset of Standard C and C++. Use this option to ensure that the source code of your application instead conforms to strict Standard C and C++. |
|             | <b>Note:</b> The <code>-e</code> option and the <code>--strict</code> option cannot be used at the same time.                                                                                |
| See also    | <i>Enabling language extensions, page 205.</i>                                                                                                                                               |



**Project>Options>C/C++ Compiler>Language 1>Language conformance>Strict**

## --system\_include\_dir

|             |                                                                                                                                                                                                                                                             |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--system_include_dir path</code>                                                                                                                                                                                                                      |
| Parameters  | To specify the path to the system include files, see <i>Rules for specifying a filename or directory as parameters, page 306.</i>                                                                                                                           |
| Description | By default, the compiler automatically locates the system include files. Use this option to explicitly specify a different path to the system include files. This might be useful if you have not installed IAR Embedded Workbench in the default location. |
| See also    | <i>--dlib_config, page 325, and --no_system_include, page 342.</i>                                                                                                                                                                                          |



This option is not available in the IDE.

## --text\_out

|            |                                                       |                                        |
|------------|-------------------------------------------------------|----------------------------------------|
| Syntax     | <code>--text_out {utf8 utf16le utf16be locale}</code> |                                        |
| Parameters | <code>utf8</code>                                     | Uses the UTF-8 encoding                |
|            | <code>utf16le</code>                                  | Uses the UTF-16 little-endian encoding |
|            | <code>utf16be</code>                                  | Uses the UTF-16 big-endian encoding    |
|            | <code>locale</code>                                   | Uses the system locale encoding        |

|             |                                                                                                                                                                                                                                                                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | Use this option to specify the encoding to be used when generating a text output file.<br><br>The default for the compiler list files is to use the same encoding as the main source file. The default for all other text files is UTF-8 with a Byte Order Mark (BOM).<br><br>If you want text output in UTF-8 encoding without a BOM, use the option <code>--no_bom</code> . |
| See also    | <code>--no_bom</code> , page 335 and <i>Text encodings</i> , page 300.                                                                                                                                                                                                                                                                                                        |



**Project>Options>C/C++ Compiler>Encodings>Text output file encoding**

## --thumb

|             |                                                                                                                                                                                   |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--thumb</code>                                                                                                                                                              |
| Description | Use this option to set default function mode to Thumb (T32 or T in 32-bit mode).<br><br><b>Note:</b> This option has the same effect as the <code>--cpu_mode=thumb</code> option. |



**Project>Options>C/C++ Compiler>Code>Processor mode>Thumb**

## --uniform\_attribute\_syntax

|             |                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--uniform_attribute_syntax</code>                                                                                                                                                                                                                                                                                                                                                                                  |
| Description | By default, an IAR type attribute specified before the type specifier applies to the object or typedef itself, and not to the type specifier, as <code>const</code> and <code>volatile</code> do. If you specify this option, IAR type attributes obey the same syntax rules as <code>const</code> and <code>volatile</code> .<br><br>The default for IAR type attributes is to <i>not</i> use uniform attribute syntax. |
| See also    | <code>--no_uniform_attribute_syntax</code> , page 344 and <i>Syntax for type attributes used on data objects</i> , page 424.                                                                                                                                                                                                                                                                                             |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --use\_c++\_inline

|             |                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--use_c++_inline</code>                                                                                                                                   |
| Description | Standard C uses slightly different semantics for the <code>inline</code> keyword than C++ does. Use this option if you want C++ semantics when you are using C. |
| See also    | <i>Inlining functions</i> , page 92.                                                                                                                            |



**Project>Options>C/C++ Compiler>Language 1>C dialect>C++ inline semantics**

## --use\_paths\_as\_written

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--use_paths_as_written</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Description | <p>By default, the compiler ensures that all paths in the debug information are absolute, even if not originally specified that way.</p> <p>If you use this option, paths that were originally specified as relative will be relative in the debug information.</p> <p>The paths affected by this option are:</p> <ul style="list-style-type: none"> <li>• the paths to source files</li> <li>• the paths to header files that are found using an include path that was specified as relative</li> </ul> |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --use\_unix\_directory\_separators

|             |                                                                                                                                                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--use_unix_directory_separators</code>                                                                                                                                                                                 |
| Description | <p>Use this option to make DWARF debug information use / (instead of \) as directory separators in file paths.</p> <p>This option can be useful if you have a debugger that requires directory separators in UNIX style.</p> |



To set this option, use **Project>Options>C/C++ Compiler>Extra Options**.

## --utf8\_text\_in

Syntax `--utf8_text_in`

Description Use this option to specify that the compiler shall use UTF-8 encoding when reading a text input file with no Byte Order Mark (BOM).

**Note:** This option does not apply to source files.

See also *Text encodings*, page 300.



**Project>Options>C/C++ Compiler>Encodings>Default input file encoding**

## --vectorize

Syntax `--vectorize`

Description Use this option to enable generation of NEON vector instructions **in 32-bit mode**. Loops will only be vectorized if the target processor has NEON capability and the optimization level is `-Ohs`. Auto-vectorization is not supported **in 64-bit mode**.



**Project>Options>C/C++ Compiler>Optimizations>Enable transformations>Vectorize**

## --version

Syntax `--version`

Description Use this option to make the compiler send version information to the console and then exit.



This option is not available in the IDE.

## --vla

Syntax `--vla`

Description Use this option to enable support for variable length arrays in C code. Such arrays are located on the heap. This option requires Standard C and cannot be used together with the `--c89` compiler option.

**Note:** `--vla` should not be used together with the `longjmp` library function, as that can lead to memory leakages.

See also

*C language overview*, page 203.



**Project>Options>C/C++ Compiler>Language 1>C dialect>Allow VLA**

## **--warn\_about\_c\_style\_casts**

Syntax `--warn_about_c_style_casts`

Description Use this option to make the compiler warn when C-style casts are used in C++ source code.



This option is not available in the IDE.

## **--warn\_about\_incomplete\_constructors**

Syntax `--warn_about_incomplete_constructors`

Description Use this option to make the compiler warn if a constructor does not provide an initializer for each data member.



This option is not available in the IDE.

## **--warn\_about\_missing\_field\_initializers**

Syntax `--warn_about_missing_field_initializers`

Description Use this option to make the compiler warn if the initializer for a structure does not provide explicit initializers for all fields in the structure.

No warning is emitted for the universal zero initializer `{ 0 }`, or—in C++—for the empty initializer `{}`.

In C, initializers that use one or more designated initializers are not checked.

In Standard C++17, designated initializers are not available. When language extensions are enabled (by using `-e` or `#pragma language`) they are supported, but, as in C++20,



only if the designated initializers are in field order. In this case, the structure is checked for missing initializers.



This option is not available in the IDE.

## --warnings\_affect\_exit\_code

Syntax

`--warnings_affect_exit_code`

Description

By default, the exit code is not affected by warnings, because only errors produce a non-zero exit code. With this option, warnings will also generate a non-zero exit code.



This option is not available in the IDE.

## --warnings\_are\_errors

Syntax

`--warnings_are_errors`

Description

Use this option to make the compiler treat all warnings as errors. If the compiler encounters an error, no object code is generated. Warnings that have been changed into remarks are not treated as errors.

**Note:** Any diagnostic messages that have been reclassified as warnings by the option `--diag_warning` or the `#pragma diag_warning` directive will also be treated as errors when `--warnings_are_errors` is used.

See also

`--diag_warning`, page 324.



**Project>Options>C/C++ Compiler>Diagnostics>Treat all warnings as errors**



# Linker options

- Summary of linker options
- Descriptions of linker options

For general syntax rules, see *Options syntax*, page 305.

---

## Summary of linker options

This table summarizes the linker options:

| Command line option         | Description                                                                                                               |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------|
| --abi                       | Specifies which data model to link for                                                                                    |
| --accurate_math             | Uses more accurate math functions                                                                                         |
| --advanced_heap             | Uses an advanced heap                                                                                                     |
| --basic_heap                | Uses a basic heap                                                                                                         |
| --BE8                       | Uses the big-endian format BE8                                                                                            |
| --BE32                      | Uses the big-endian format BE32                                                                                           |
| --bounds_table_size         | Specifies the size of the global bounds table. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> . |
| --call_graph                | Produces a call graph file in XML format                                                                                  |
| --config                    | Specifies the linker configuration file to be used by the linker                                                          |
| --config_def                | Defines symbols for the configuration file                                                                                |
| --config_search             | Specifies more directories to search for linker configuration files                                                       |
| --cpp_init_routine          | Specifies a user-defined C++ dynamic initialization routine                                                               |
| --cpu                       | Specifies a processor variant                                                                                             |
| --debug_heap                | Uses the checked heap. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .                         |
| --default_to_complex_ranges | Makes complex ranges the default decompressor in initialize directives                                                    |

Table 31: Linker options summary

| Command line option                           | Description                                                                                                                                                         |
|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--define_symbol</code>                  | Defines symbols that can be used by the application                                                                                                                 |
| <code>--dependencies</code>                   | Lists file dependencies                                                                                                                                             |
| <code>--diag_error</code>                     | Treats these message tags as errors                                                                                                                                 |
| <code>--diag_remark</code>                    | Treats these message tags as remarks                                                                                                                                |
| <code>--diag_suppress</code>                  | Suppresses these diagnostic messages                                                                                                                                |
| <code>--diag_warning</code>                   | Treats these message tags as warnings                                                                                                                               |
| <code>--diagnostics_tables</code>             | Lists all diagnostic messages                                                                                                                                       |
| <code>--do_segment_pad</code>                 | Pads each ELF segment to n-byte alignment                                                                                                                           |
| <code>--enable_hardware_workaround</code>     | Enables specified hardware workaround                                                                                                                               |
| <code>--enable_stack_usage</code>             | Enables stack usage analysis                                                                                                                                        |
| <code>--entry</code>                          | Treats the symbol as a root symbol and as the start of the application                                                                                              |
| <code>--entry_list_in_address_order</code>    | Generates an additional entry list in the map file sorted in address order                                                                                          |
| <code>--error_limit</code>                    | Specifies the allowed number of errors before linking stops                                                                                                         |
| <code>--exception_tables</code>               | Generates exception tables for C code                                                                                                                               |
| <code>--export_builtin_config</code>          | Produces an <code>icf</code> file for the default configuration                                                                                                     |
| <code>--extra_init</code>                     | Specifies an extra initialization routine that will be called if it is defined                                                                                      |
| <code>-f</code>                               | Extends the command line                                                                                                                                            |
| <code>--f</code>                              | Extends the command line, optionally with a dependency                                                                                                              |
| <code>--force_exceptions</code>               | Always includes exception runtime code                                                                                                                              |
| <code>--force_output</code>                   | Produces an output file even if errors occurred                                                                                                                     |
| <code>--fpu</code>                            | Selects the FPU to link your application for                                                                                                                        |
| <code>--ignore_uninstrumented_pointers</code> | Disables checking of accessing via pointers in memory for which no bounds have been set. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> . |
| <code>--image_input</code>                    | Puts an image file in a section                                                                                                                                     |
| <code>--import_cmse_lib_in</code>             | Reads previous version of import library for building a non-secure image                                                                                            |

Table 31: Linker options summary (Continued)

| Command line option                          | Description                                                                                                    |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <code>--import_cmse_lib_out</code>           | Produces an import library, for building a non-secure image                                                    |
| <code>--inline</code>                        | Inlines small routines                                                                                         |
| <code>--keep</code>                          | Forces a symbol to be included in the application                                                              |
| <code>-L</code>                              | Specifies more directories to search for object and library files. Alias for <code>--search</code> .           |
| <code>--library_security</code>              | Forces the linker to select a runtime library with or without support for PACBTI                               |
| <code>--log</code>                           | Enables log output for selected topics                                                                         |
| <code>--log_file</code>                      | Directs the log to a file                                                                                      |
| <code>--mangled_names_in_messages</code>     | Adds mangled names in messages                                                                                 |
| <code>--manual_dynamic_initialization</code> | Suppresses automatic initialization during system startup                                                      |
| <code>--map</code>                           | Produces a map file                                                                                            |
| <code>--merge_duplicate_sections</code>      | Merges equivalent read-only sections                                                                           |
| <code>--no_bom</code>                        | Omits the Byte Order Mark from UTF-8 output files                                                              |
| <code>--no_dynamic_rtti_elimination</code>   | Includes dynamic runtime type information even when it is not needed                                           |
| <code>--no_entry</code>                      | Sets the entry point to zero                                                                                   |
| <code>--no_exceptions</code>                 | Generates an error if exceptions are used                                                                      |
| <code>--no_fragments</code>                  | Disables section fragment handling                                                                             |
| <code>--no_free_heap</code>                  | Uses the smallest possible heap implementation                                                                 |
| <code>--no_inline</code>                     | Excludes functions from small function inlining                                                                |
| <code>--no_library_search</code>             | Disables automatic runtime library search                                                                      |
| <code>--no_literal_pool</code>               | Generates code that should run from a memory region where it is not allowed to read data, only to execute code |
| <code>--no_locals</code>                     | Removes local symbols from the ELF executable image                                                            |
| <code>--no_out_extension</code>              | Suppresses the filename extension for executable output                                                        |
| <code>--no_range_reservations</code>         | Disables range reservations for absolute symbols                                                               |
| <code>--no_remove</code>                     | Disables removal of unused sections                                                                            |

Table 31: Linker options summary (Continued)

| Command line option                | Description                                                                                                         |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <code>--no_vfe</code>              | Disables Virtual Function Elimination                                                                               |
| <code>--no_warnings</code>         | Disables generation of warnings                                                                                     |
| <code>--no_wrap_diagnostics</code> | Does not wrap long lines in diagnostic messages                                                                     |
| <code>-o</code>                    | Alias for <code>--output</code>                                                                                     |
| <code>--only_stdout</code>         | Uses standard output only                                                                                           |
| <code>--output</code>              | Sets the object filename                                                                                            |
| <code>--pi_veneers</code>          | Generates position independent veneers                                                                              |
| <code>--place_holder</code>        | Reserve a place in ROM to be filled by some other tool, for example, a checksum calculated by <code>ielftool</code> |
| <code>--plt_mode</code>            | See <i>Reference information on command line options for shared objects</i> , page 281.                             |
| <code>--preconfig</code>           | Reads the specified file before reading the linker configuration file                                               |
| <code>--printf_multibytes</code>   | Makes the <code>printf</code> formatter support multibytes                                                          |
| <code>--redirect</code>            | Redirects a reference to a symbol to another symbol                                                                 |
| <code>--remarks</code>             | Enables remarks                                                                                                     |
| <code>--require_bti</code>         | Generate an error if modules do not have the same support for BTI                                                   |
| <code>--require_pac</code>         | Generate a warning if modules do not have the same support for PAC                                                  |
| <code>--scanf_multibytes</code>    | Makes the <code>scanf</code> formatter support multibytes                                                           |
| <code>--search</code>              | Specifies more directories to search for object and library files                                                   |
| <code>--semihosting</code>         | Links with debug interface                                                                                          |
| <code>--shared</code>              | See <i>Reference information on command line options for shared objects</i> , page 281.                             |
| <code>--silent</code>              | Sets silent operation                                                                                               |
| <code>--small_math</code>          | Uses smaller math functions                                                                                         |
| <code>--so_export</code>           | See <i>Reference information on command line options for shared objects</i> , page 281.                             |
| <code>--so_import</code>           | See <i>Reference information on command line options for shared objects</i> , page 281.                             |

Table 31: Linker options summary (Continued)

| Command line option                         | Description                                                                             |
|---------------------------------------------|-----------------------------------------------------------------------------------------|
| <code>--so_internalize</code>               | See <i>Reference information on command line options for shared objects</i> , page 281. |
| <code>--so_internalize_stdlib</code>        | See <i>Reference information on command line options for shared objects</i> , page 281. |
| <code>--stack_usage_control</code>          | Specifies a stack usage control file                                                    |
| <code>--strip</code>                        | Removes debug information from the executable image                                     |
| <code>--text_out</code>                     | Specifies the encoding for text output files                                            |
| <code>--threaded_lib</code>                 | Configures the runtime library for use with threads                                     |
| <code>--timezone_lib</code>                 | Enables the time zone and daylight savings time functionality in the library            |
| <code>--treat_rvct_modules_as_softfp</code> | Treats all modules generated by RVCT as using the standard (non-VFP) calling convention |
| <code>--use_full_std_template_names</code>  | Enables full names for standard C++ templates                                           |
| <code>--use_optimized_variants</code>       | Controls the use of optimized variants of DLIB library functions                        |
| <code>--utf8_text_in</code>                 | Uses the UTF-8 encoding for text input files                                            |
| <code>--version</code>                      | Sends version information to the console and then exits                                 |
| <code>--vfe</code>                          | Controls Virtual Function Elimination                                                   |
| <code>--warnings_affect_exit_code</code>    | Warnings affects exit code                                                              |
| <code>--warnings_are_errors</code>          | Warnings are treated as errors                                                          |
| <code>--whole_archive</code>                | Treats every object file in the archive as if it was specified on the command line      |

Table 31: Linker options summary (Continued)

## Descriptions of linker options

The following section gives detailed reference information about each linker option.



If you use the options page **Extra Options** to specify specific command line options, the IDE does not perform an instant check for consistency problems like conflicting options, duplication of options, or use of irrelevant options.

## --abi

|             |                                                                                                                                                                                                                                                                |                                         |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|
| Syntax      | <code>--abi {ilp32 lp64}</code>                                                                                                                                                                                                                                |                                         |
| Parameters  | <code>ilp32</code>                                                                                                                                                                                                                                             | Links A64 code for the ILP32 data model |
|             | <code>lp64</code>                                                                                                                                                                                                                                              | Links A64 code for the LP64 data model  |
| Description | When linking for the A64 instruction set, the linker detects the data model from attributes in the object files. If you use this option to specify the intended data model, the linker issues an error if an object file does not have the expected attribute. |                                         |
| See also    | <code>--aarch64</code> , page 313 and <code>--cpu_mode</code> , page 319.                                                                                                                                                                                      |                                         |



To set related options, choose:

**Project>Options>General Options>Target>Execution mode**

and

**Project>Options>General Options>64-bit>Data model**

## --accurate\_math

|             |                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--accurate_math</code>                                                                                                       |
| Description | Use this option to use math library versions designed to provide better accuracy (but which are larger) than the default versions. |
| See also    | <i>Math functions</i> , page 152.                                                                                                  |



**Project>Options>General Options>Library Options 1>Math functions**

This option is not available in the IDE.

## --advanced\_heap

|             |                                          |
|-------------|------------------------------------------|
| Syntax      | <code>--advanced_heap</code>             |
| Description | Use this option to use an advanced heap. |
| See also    | <i>Heap memory handlers</i> , page 226.  |





**Project>Options>General Options>Library options 2>Heap selection**

## --basic\_heap

|             |                                                |
|-------------|------------------------------------------------|
| Syntax      | --basic_heap                                   |
| Description | Use this option to use the basic heap handler. |
| See also    | <i>Heap memory handlers</i> , page 226.        |



**Project>Options>General Options>Library options 2>Heap selection**

## --BE8

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | --BE8                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Description | Use this option to specify the Byte Invariant Addressing mode. <b>In 64-bit mode</b> , this option has no effect.<br><br>This means that the linker reverses the byte order of the instructions, resulting in little-endian code and big-endian data. This is the default byte addressing mode for Armv6 big-endian images. This is the only mode available for Arm v6M and Arm v7 with big-endian images.<br><br>Byte Invariant Addressing mode is only available on Arm processors that support Armv6, Arm v6M, and Arm v7. |
| See also    | <i>Byte order</i> , page 72, <i>Byte order (32-bit mode only)</i> , page 408, <i>--BE32</i> , page 375, and <i>--endian</i> , page 327.                                                                                                                                                                                                                                                                                                                                                                                       |



**Project>Options>General Options>32-bit>Byte order**

## --BE32

|             |                                                                                                           |
|-------------|-----------------------------------------------------------------------------------------------------------|
| Syntax      | --BE32                                                                                                    |
| Description | Use this option to specify the legacy big-endian mode. <b>In 64-bit mode</b> , this option has no effect. |

This produces big-endian code and data. This is the only byte-addressing mode for all big-endian images prior to Armv6. This mode is also available for Arm v6 with big-endian, but not for Arm v6M or Arm v7.

See also

*Byte order*, page 72, *Byte order (32-bit mode only)*, page 408, *--BE8*, page 375, and *--endian*, page 327.



**Project>Options>General Options>32-bit>Byte order**

## --call\_graph

Syntax

`--call_graph {filename|directory}`

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to produce a call graph file. If no filename extension is specified, the extension `cgx` is used. This option can only be used once on the command line.

Using this option enables stack usage analysis in the linker.

See also

*Stack usage analysis*, page 107



**Project>Options>Linker>Advanced>Enable stack usage analysis>Call graph output (XML)**

## --config

Syntax

`--config filename`

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to specify the configuration file to be used by the linker (the default filename extension is `icf`). If no configuration file is specified, a default configuration is used. This option can only be used once on the command line.

See also

The chapter *The linker configuration file*.



**Project>Options>Linker>Config>Linker configuration file**

## --config\_def

|             |                                                                                                                                                                                                                                                                           |                                                              |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| Syntax      | <code>--config_def symbol=constant_value</code>                                                                                                                                                                                                                           |                                                              |
| Parameters  | <i>symbol</i>                                                                                                                                                                                                                                                             | The name of the symbol to be used in the configuration file. |
|             | <i>constant_value</i>                                                                                                                                                                                                                                                     | The constant value of the configuration symbol.              |
| Description | Use this option to define a constant configuration symbol to be used in the configuration file. This option has the same effect as the <code>define symbol</code> directive in the linker configuration file. This option can be used more than once on the command line. |                                                              |
| See also    | <code>--define_symbol</code> , page 379 and <i>Interaction between ILINK and the application</i> , page 124.                                                                                                                                                              |                                                              |



**Project>Options>Linker>Config>Defined symbols for configuration file**


## --config\_search

|             |                                                                                                                                                                                                                                                                                                                                                |                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| Syntax      | <code>--config_search path</code>                                                                                                                                                                                                                                                                                                              |                                                                                              |
| Parameters  | <i>path</i>                                                                                                                                                                                                                                                                                                                                    | A path to a directory where the linker should search for linker configuration include files. |
| Description | Use this option to specify more directories to search for files when processing an <code>include</code> directive in a linker configuration file.<br><br>By default, the linker searches for configuration include files only in the system configuration directory. To specify more than one search directory, use this option for each path. |                                                                                              |
| See also    | <code>include directive</code> , page 591.                                                                                                                                                                                                                                                                                                     |                                                                                              |




To set this option, use **Project>Options>Linker>Extra Options**.

## --cpp\_init\_routine

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--cpp_init_routine routine</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Parameters  | <i>routine</i> A user-defined C++ dynamic initialization routine.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Description | <p>When using the IAR C/C++ compiler and the standard library, C++ dynamic initialization is handled automatically. In other cases you might need to use this option.</p> <p>If any sections with the section type <code>INIT_ARRAY</code> or <code>PREINIT_ARRAY</code> are included in your application, the C++ dynamic initialization routine is considered to be needed. By default, this routine is named <code>__iar_cstart_call_ctors</code> and is called by the startup code in the standard library. Use this option if you require another routine to handle the initialization, for instance if you are not using the standard library.</p> <p> To set this option, use <b>Project&gt;Options&gt;Linker&gt;Extra Options</b>.</p> |

## --cpu

|             |                                                                                                                                                                                                       |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--cpu=core list</code>                                                                                                                                                                          |
| Parameters  | <p><i>core</i>                              Specifies a specific processor variant</p> <p><i>list</i>                                Lists all supported values for the option <code>--cpu</code></p> |
| Description | Use this option to select the processor variant to link your application for. The default is to use a processor or architecture compatible with the object file attributes.                           |
| See also    | <code>--cpu</code> , page 317                                                                                                                                                                         |
|             |  <b>Project&gt;Options&gt;General Options&gt;Target&gt;Processor variant</b>                                       |

## --default\_to\_complex\_ranges

|             |                                                                                                                                                                                                                                                                               |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--default_to_complex_ranges</code>                                                                                                                                                                                                                                      |
| Description | Normally, if <code>initialize</code> directives in a linker configuration file do not specify <code>simple ranges</code> or <code>complex ranges</code> , the linker uses <code>simple ranges</code> if the associated section placement directives use single range regions. |

Use this option to make the linker always use `complex ranges` by default. This was the behavior of the linker before the introduction of `simple ranges` and `complex ranges`.

See also

*initialize directive*, page 570.



To set this option, use **Project>Options>Linker>Extra Options**

## --define\_symbol

Syntax

```
--define_symbol symbol=constant_value
```

Parameters

|                       |                                                                      |
|-----------------------|----------------------------------------------------------------------|
| <i>symbol</i>         | The name of the constant symbol that can be used by the application. |
| <i>constant_value</i> | The constant value of the symbol.                                    |

Description

Use this option to define a constant symbol, that is a label, that can be used by your application. This option can be used more than once on the command line.

**Note:** This option is different from the `define symbol` directive.

See also

*--config\_def*, page 377 and *Interaction between ILINK and the application*, page 124.



**Project>Options>Linker>#define>Defined symbols**

## --dependencies

Syntax

```
--dependencies [= [i|m|n] [s] [l|w] [b]] {filename|directory|+}
```

Parameters

|                          |                                            |
|--------------------------|--------------------------------------------|
| <code>i</code> (default) | Lists only the names of files              |
| <code>m</code>           | Lists in makefile style (multiple rules)   |
| <code>n</code>           | Lists in makefile style (one rule)         |
| <code>s</code>           | Suppresses system files                    |
| <code>l</code>           | Uses the locale encoding instead of UTF-8  |
| <code>w</code>           | Uses little-endian UTF-16 instead of UTF-8 |

- b Uses a Byte Order Mark (BOM) in UTF-8 output
- + Gives the same output as `-o`, but with the filename extension `i`

See also *Rules for specifying a filename or directory as parameters*, page 306.

**Description** Use this option to make the linker list the names of the linker configuration, object, and library files opened for input into a file with the default filename extension `i`.

**Example** If `--dependencies` or `--dependencies=i` is used, the name of each opened input file, including the full path, if available, is output on a separate line. For example:

```
c:\myproject\foo.o
d:\myproject\bar.o
```

If `--dependencies=m` is used, the output is in makefile style. For each input file, one line containing a makefile dependency rule is produced. Each line consists of the name of the output file, a colon, a space, and the name of an input file. For example:

```
a.out: c:\myproject\foo.o
a.out: d:\myproject\bar.o
```



This option is not available in the IDE.

## **--diag\_error**

**Syntax** `--diag_error=tag[, tag, ...]`

**Parameters**

`tag` The number of a diagnostic message, for example, the message number `Pe117`

**Description** Use this option to reclassify certain diagnostic messages as errors. An error indicates a problem of such severity that an executable image will not be generated. The exit code will be non-zero. This option may be used more than once on the command line.



**Project>Options>Linker>Diagnostics>Treat these as errors**

## --diag\_remark

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_remark=tag[, tag, ...]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | The number of a diagnostic message, for example, the message number <code>Go109</code> |
| Description | <p>Use this option to reclassify certain diagnostic messages as remarks. A remark is the least severe type of diagnostic message and indicates a construction that may cause strange behavior in the executable image.</p> <p><b>Note:</b> Not all diagnostic messages can be reclassified. This option may be used more than once on the command line.</p> <p><b>Note:</b> By default, remarks are not displayed—use the <code>--remarks</code> option to display them.</p> |                                                                                        |



**Project>Options>Linker>Diagnostics>Treat these as remarks**

## --diag\_suppress

|             |                                                                                                                                                                                                                                        |                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_suppress=tag[, tag, ...]</code>                                                                                                                                                                                           |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                                                                                             | The number of a diagnostic message, for example, the message number <code>Pa180</code> |
| Description | <p>Use this option to suppress certain diagnostic messages. These messages will not be displayed. This option may be used more than once on the command line.</p> <p><b>Note:</b> Not all diagnostic messages can be reclassified.</p> |                                                                                        |



**Project>Options>Linker>Diagnostics>Suppress these diagnostics**

## --diag\_warning

|             |                                                                                                                                                                                                                                                                          |                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| Syntax      | <code>--diag_warning=tag[, tag, ...]</code>                                                                                                                                                                                                                              |                                                                                        |
| Parameters  | <i>tag</i>                                                                                                                                                                                                                                                               | The number of a diagnostic message, for example, the message number <code>Li004</code> |
| Description | Use this option to reclassify certain diagnostic messages as warnings. A warning indicates an error or omission that is of concern, but which will not cause the linker to stop before linking is completed. This option may be used more than once on the command line. |                                                                                        |

**Note:** Not all diagnostic messages can be reclassified.



**Project>Options>Linker>Diagnostics>Treat these as warnings**

## --diagnostics\_tables

|             |                                                                                                                                                                                                                                                     |  |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--diagnostics_tables {filename directory}</code>                                                                                                                                                                                              |  |
| Parameters  | See <i>Rules for specifying a filename or directory as parameters</i> , page 306.                                                                                                                                                                   |  |
| Description | Use this option to list all possible diagnostic messages in a named file. This can be convenient, for example, if you have used a pragma directive to suppress or change the severity level of any diagnostic messages, but forgot to document why. |  |

This option cannot be given together with other options.



This option is not available in the IDE.

## --do\_segment\_pad

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |  |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--do_segment_pad</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |  |
| Description | Use this option to extend each ELF segment in the executable file with content, to make it an even multiple of 4 bytes long (if possible). Some runtime library routines might access memory in units of 4 bytes, and might, if the right data object is placed last in an ELF segment, access memory outside the strict bounds of the segment. If you are executing in an environment where this is a problem, you can use this option to extend the ELF segments appropriately so that this is not a problem. |  |





This option is not available in the IDE.

## --enable\_hardware\_workaround

|             |                                                                                           |                                                                                                                                                          |
|-------------|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--enable_hardware_workaround=<i>waid</i>[<i>waid</i>...]</code>                     |                                                                                                                                                          |
| Parameters  | <i>waid</i>                                                                               | The ID number of the workaround that you want to enable. For a list of available workarounds, see the release notes available in the Information Center. |
| Description | Use this option to make the linker generate a workaround for a specific hardware problem. |                                                                                                                                                          |
| See also    | The release notes for the linker for a list of available parameters.                      |                                                                                                                                                          |



To set this option, use **Project>Options>Linker>Extra Options**.

## --enable\_stack\_usage

|             |                                                                                                                                                                                                                                                                                                             |  |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--enable_stack_usage</code>                                                                                                                                                                                                                                                                           |  |
| Description | Use this option to enable stack usage analysis. If a linker map file is produced, a stack usage chapter is included in the map file.<br><b>Note:</b> If you use at least one of the <code>--stack_usage_control</code> or <code>--call_graph</code> options, stack usage analysis is automatically enabled. |  |
| See also    | <i>Stack usage analysis</i> , page 107.                                                                                                                                                                                                                                                                     |  |



**Project>Options>Linker>Advanced>Enable stack usage analysis**

## --entry

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                       |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| Syntax      | <code>--entry <i>symbol</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                       |
| Parameters  | <i>symbol</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | The name of the symbol to be treated as a root symbol and start label |
| Description | <p>Use this option to make a symbol be treated as a root symbol and the start label of the application. This is useful for loaders. If this option is not used, the default start symbol is <code>__iar_program_start</code>. A root symbol is kept whether or not it is referenced from the rest of the application, provided its module is included. A module in an object file is always included but a module part of a library is only included if needed.</p> <p><b>Note:</b> The label referred to must be available in your application. You must also make sure that the reset vector refers to the new start label, for example <code>--redirect __iar_program_start=_myStartLabel</code>.</p> |                                                                       |
| See also    | <code>--no_entry</code> , page 396.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                       |



**Project>Options>Linker>Library>Override default program entry**

## --entry\_list\_in\_address\_order

|             |                                                                                                                               |  |
|-------------|-------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--entry_list_in_address_order</code>                                                                                    |  |
| Description | <p>Use this option to generate an additional entry list in the map file. This entry list will be sorted in address order.</p> |  |



To set this option, use **Project>Options>Linker>Extra Options**

## --error\_limit

|            |                                     |                                                                                                                  |
|------------|-------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Syntax     | <code>--error_limit=<i>n</i></code> |                                                                                                                  |
| Parameters | <i>n</i>                            | The number of errors before the linker stops linking. <i>n</i> must be a positive integer. 0 indicates no limit. |

**Description** Use the `--error_limit` option to specify the number of errors allowed before the linker stops the linking. By default, 100 errors are allowed.



This option is not available in the IDE.

## --exception\_tables

**Syntax** `--exception_tables={ncreate|unwind|cantunwind}`

### Parameters

`ncreate` (default) Does not generate entries. Uses the least amount of memory, but the result is undefined if an exception is propagated through a function without exception information.

`unwind` Generates unwind entries that enable an exception to be correctly propagated through functions without exception information.

`cantunwind` Generates no-unwind entries so that any attempt to propagate an exception through the function will result in a call to `terminate`.

**Description** Use this option to determine what the linker should do with functions that do not have exception information but which do have correct call frame information.

The compiler ensures that C functions get correct call frame information. For functions written in assembler language you need to use assembler directives to generate call frame information.

**See also** *Using C++*, page 213.



To set this option, use **Project>Options>Linker>Extra Options**.

## --export\_builtin\_config

**Syntax** `--export_builtin_config filename`

**Parameters** See *Rules for specifying a filename or directory as parameters*, page 306.

**Description** Exports the configuration used by default to a file.



This option is not available in the IDE.

## **--extra\_init**

Syntax

`--extra_init routine`

Parameters

*routine*                      A user-defined initialization routine.

Description

Use this option to make the linker add an entry for the specified routine at the end of the initialization table. The routine will be called during system startup, after other initialization routines have been called and before `main` is called. No entry is added if the routine is not defined.

**Note:** The routine must preserve the value passed to it in register `R0`. For this reason, it is safest to write it in assembler language.



To set this option, use **Project>Options>Linker>Extra Options**.

## **-f**

Syntax

`-f filename`

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to make the linker read command line options from the named file, with the default filename extension `.xcl`.

In the command file, you format the items exactly as if they were on the command line itself, except that you may use multiple lines, because the newline character acts just as a space or tab character.

Both C and C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.

See also

`-f`, page 387.



To set this option, use **Project>Options>Linker>Extra Options**.

**--f**

Syntax `--f filename`

Parameters See *Rules for specifying a filename or directory as parameters*, page 306.

Description Use this option to make the linker read command line options from the named file, with the default filename extension `.xcl`.

In the command file, you format the items exactly as if they were on the command line itself, except that you may use multiple lines, because the newline character acts just as a space or tab character.

Both C and C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.

If you use the linker option `--dependencies`, extended command line files specified using `--f` will generate a dependency, but those specified using `-f` will not generate a dependency.

See also `--dependencies`, page 379 and `-f`, page 386.



To set this option, use **Project>Options>Linker>Extra Options**.

**--force\_exceptions**

Syntax `--force_exceptions`

Description Use this option to make the linker include exception tables and exception code even when the linker heuristics indicate that exceptions are not used.

The linker considers exceptions to be used if there is a `throw` expression that is not a `rethrow` in the included code. If there is no such `throw` expression in the rest of the code, the linker arranges for `operator new`, `dynamic_cast`, and `typeid` to call `abort` instead of throwing an exception on failure. If you need to catch exceptions from these constructs but your code contains no other throws, you might need to use this option.

See also *Using C++*, page 213.



**Project>Options>Linker>Advanced>Allow C++ exceptions>Always include**

## --force\_output

Syntax `--force_output`

Description Use this option to produce an output executable image regardless of any non-fatal linking errors.



To set this option, use **Project>Options>Linker>Extra Options**

## --fpu

Syntax `--fpu={name|none}`

Parameters

|             |                              |
|-------------|------------------------------|
| <i>name</i> | The target FPU architecture. |
| <i>none</i> | No FPU.                      |

Description

By default, the linker links your application for the FPU compatible with the object file attribute. Use this option to explicitly specify an FPU to link your application for.

**Note:** In **64-bit mode**, and when a 64-bit device is used in 32-bit mode, this option has no effect.

See also

`--fpu`, page 330



**Project>Options>General Options>32-bit>FPU**

## --image\_input

Syntax `--image_input filename[,symbol[,section[,alignment]]]`

Parameters

|                 |                                                                                                                                                   |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>filename</i> | The pure binary file containing the raw image you want to link. See <i>Rules for specifying a filename or directory as parameters</i> , page 306. |
| <i>symbol</i>   | The symbol which the binary data can be referenced with.                                                                                          |
| <i>section</i>  | The section where the binary data will be placed. The default is <code>.text</code> .                                                             |

|             |                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|             | <i>alignment</i> | The alignment of the section. The default is 1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Description |                  | Use this option to link pure binary files in addition to the ordinary input files. The file's entire contents are placed in the section, which means it can only contain pure binary data.<br><br><b>Note:</b> Just as for sections from object files, sections created by using the <code>--image_input</code> option are not included unless actually needed. You can either specify a symbol in the option and reference this symbol in your application (or use a <code>--keep</code> option), or you can specify a section name and use the <code>keep</code> directive in a linker configuration file to ensure that the section is included. |
| Example     |                  | <code>--image_input bootstrap.abs,Bootstrap,CSTARTUPCODE,4</code><br><br>The contents of the pure binary file <code>bootstrap.abs</code> are placed in the section <code>CSTARTUPCODE</code> . The section where the contents are placed is 4-byte aligned and will only be included if your application (or the command line option <code>--keep</code> ) includes a reference to the symbol <code>Bootstrap</code> .                                                                                                                                                                                                                              |
| See also    |                  | <code>--keep</code> , page 390.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



**Project>Options>Linker>Input>Raw binary image**

## **--import\_cmse\_lib\_in**

|             |  |                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      |  | <code>--import_cmse_lib_in filename</code>                                                                                                                                                                                                                                                                                                                                |
| Parameters  |  | See <i>Rules for specifying a filename or directory as parameters</i> , page 306.                                                                                                                                                                                                                                                                                         |
| Description |  | Reads a previous version of the import library and creates gateway veneers with the same address as given in the import library. Use this option to create a secure image where each entry function that exists in the provided import library is placed at the same address in the output import library.<br><br><b>Note:</b> In 64-bit mode, this option has no effect. |
| See also    |  | <code>--cmse</code> , page 317 and <code>--import_cmse_lib_out</code> , page 390                                                                                                                                                                                                                                                                                          |



To set this option, use **Project>Options>Linker>Extra Options**.

## --import\_cmse\_lib\_out

|             |                                                                                                                                                                                                                                                                                                                                                               |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--import_cmse_lib_out filename directory</code>                                                                                                                                                                                                                                                                                                         |
| Parameters  | See <i>Rules for specifying a filename or directory as parameters</i> , page 306.                                                                                                                                                                                                                                                                             |
| Description | Use this option when building a secure image to automatically create an import library for use in a corresponding non-secure image. The import library consists of a relocatable ELF object module that contains only a symbol table. Each symbol specifies an absolute address of a secure gateway for an entry in the section <code>Veneer\$\$CMSE</code> . |
|             | <b>Note:</b> In 64-bit mode, this option has no effect.                                                                                                                                                                                                                                                                                                       |
| See also    | <code>--cmse</code> , page 317 and <code>--import_cmse_lib_in</code> , page 389                                                                                                                                                                                                                                                                               |



To set this option, use **Project>Options>Linker>Extra Options**.

## --inline

|             |                                                                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--inline</code>                                                                                                                                                                                                 |
| Description | Some routines are so small that they can fit in the space of the instruction that calls the routine. Use this option to make the linker replace the call of a routine with the body of the routine, where applicable. |
| See also    | <i>Small function inlining</i> , page 129.                                                                                                                                                                            |



**Project>Options>Linker>Optimizations>Inline small routines**

## --keep


|             |                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--keep symbol[,symbol1,...]</code>                                                                                                                          |
| Parameters  | <i>symbol</i> The name of the global symbols to be treated as root symbols.                                                                                       |
| Description | Normally, the linker keeps a symbol only if it is needed by your application. Use this option to make global symbols always be included in the final application. |





Project>Options>Linker>Input>Keep symbols

## --library\_security

|             |                                                                                                                                                                                                                                 |                                                                    |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| Syntax      | <code>--library_security={none pacbti-m}</code>                                                                                                                                                                                 |                                                                    |
| Parameters  | <code>none</code>                                                                                                                                                                                                               | Uses a runtime library without PACBTI security features.           |
|             | <code>pacbti-m</code>                                                                                                                                                                                                           | Uses a runtime library compiled with support for both PAC and BTI. |
| Description | Use this option to force the linker to select a library that has the specified security profile. Using this option disables the linker checks for mixing PAC/BTI support.<br><b>In 64-bit mode</b> , this option has no effect. |                                                                    |
| See also    | <i>Branch protection (PACBTI) — 32-bit mode only</i> , page 246.                                                                                                                                                                |                                                                    |
|             |                                                                                                                                                | This option is not available in the IDE.                           |

**--log**

|                                    |                                                                                                                                                                                                                                                                                     |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                             | <code>--log topic[,topic,...]</code>                                                                                                                                                                                                                                                |
| Parameters                         | <code>topic</code> can be one of:                                                                                                                                                                                                                                                   |
| <code>call_graph</code>            | Lists the call graph as seen by stack usage analysis.                                                                                                                                                                                                                               |
| <code>crt_routine_selection</code> | Lists details of the selection process for runtime routines—what definitions were available, what the requirements were, and which decision the process resulted in.                                                                                                                |
| <code>demangle</code>              | Uses demangled names instead of mangled names for C/C++ symbols in the log output, for example, <code>void h(int, char)</code> instead of <code>_Z1hlc</code> .                                                                                                                     |
| <code>fragment_info</code>         | Lists all fragments by number. The information contains the section they correspond to (name, section number and file) and the fragment size.                                                                                                                                       |
| <code>initialization</code>        | Lists copy batches and the compression selected for each batch.                                                                                                                                                                                                                     |
| <code>inlining</code>              | Lists the functions that were inlined, and which sections (name, section number and file) they were inlined in. Note that inlining in the linker must be enabled by the <code>--inline</code> linker option. See <code>--inline</code> , page 390.                                  |
| <code>libraries</code>             | Lists all decisions made by the automatic library selector. This might include extra symbols needed ( <code>--keep</code> ), redirections ( <code>--redirect</code> ), as well as which runtime libraries that were selected.                                                       |
| <code>merging</code>               | Lists the sections (name, section number and file) that were merged and which symbol redirections this resulted in. Note that section merging must be enabled by the <code>--merge_duplicate_sections</code> linker option. See <code>--merge_duplicate_sections</code> , page 395. |
| <code>modules</code>               | Lists the modules that were selected for inclusion in the application, and which symbol that caused them to be included.                                                                                                                                                            |
| <code>redirects</code>             | Lists redirected symbols.                                                                                                                                                                                                                                                           |
| <code>sections</code>              | Lists the symbols and section fragments that were selected for inclusion in the application, and the dependence that caused them to be included.                                                                                                                                    |

|                               |                                                                          |
|-------------------------------|--------------------------------------------------------------------------|
| <code>veneers</code>          | Lists some veneer creation and usage statistics.                         |
| <code>unused_fragments</code> | Lists those section fragments that were not included in the application. |

**Description** Use this option to make the linker log information to `stdout`. The log information can be useful for understanding why an executable image became the way it is.

**See also** `--log_file`, page 393.



**Project>Options>Linker>List>Generate log**

## --log\_file

**Syntax** `--log_file filename`

**Parameters** See *Rules for specifying a filename or directory as parameters*, page 306.

**Description** Use this option to direct the log output to the specified file.

**See also** `--log`, page 392.



**Project>Options>Linker>List>Generate log**

## --mangled\_names\_in\_messages

**Syntax** `--mangled_names_in_messages`

**Description** Use this option to produce both mangled and demangled names for C/C++ symbols in messages. Mangling is a technique used for mapping a complex C name or a C++ name—for example, for overloading—into a simple name. For example, `void h(int, char)` becomes `_Z1hic`.



This option is not available in the IDE.

## --manual\_dynamic\_initialization

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--manual_dynamic_initialization</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Description | <p>Normally, dynamic initialization (typically initialization of C++ objects with static storage duration) is performed automatically during application startup. If you use <code>--manual_dynamic_initialization</code>, you must call <code>__iar_dynamic_initialization</code> at some later point for this initialization to be done.</p> <p>The function <code>__iar_dynamic_initialization</code> is declared in the header file <code>iar_dynamic_init.h</code>.</p> <p>In a threaded application, <code>--manual_dynamic_initialization</code> also suppresses the automatic initialization of thread-local variables for the main thread. In that case, you must call <code>__iar_cstart_tls_init(NULL)</code> before using any thread-local variables, and before calling <code>__iar_dynamic_initialization</code>.</p> <p>The function <code>__iar_cstart_tls_init</code> is declared in the header file <code>DLib_Threads.h</code>.</p> |



To set this option use **Project>Options>Linker>Extra Options**.

## --map

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--map {filename directory - +}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Parameters  | <p>- Sends the entire linker memory map to <code>stdout</code>.</p> <p>+ Generates a map file in the same directory as the output file and with the same name as the output file, but with the filename extension <code>.map</code></p>                                                                                                                                                                                                                                                                                                  |
|             | See also <i>Rules for specifying a filename or directory as parameters</i> , page 306.                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Description | <p>Use this option to produce a linker memory map file. The map file has the default filename extension <code>map</code>. The map file contains:</p> <ul style="list-style-type: none"> <li>● Linking summary in the map file header which lists the version of the linker, the current date and time, and the command line that was used.</li> <li>● Runtime attribute summary which lists runtime attributes.</li> <li>● Placement summary which lists each section/block in address order, sorted by placement directives.</li> </ul> |

- Initialization table layout which lists the data ranges, packing methods, and compression ratios.
- Module summary which lists contributions from each module to the image, sorted by directory and library.
- Entry list which lists all public and some local symbols in alphabetical order, indicating which module they came from.
- Some of the bytes might be reported as *shared*.

Shared objects are functions or data objects that are shared between modules. If any of these occur in more than one module, only one copy is retained. For example, in some cases inline functions are not inlined, which means that they are marked as shared, because only one instance of each function will be included in the final application. This mechanism is also sometimes used for compiler-generated code or data not directly associated with a particular function or variable, and when only one instance is required in the final application.

This option can only be used once on the command line.



**Project>Options>Linker>List>Generate linker map file**

## --merge\_duplicate\_sections

Syntax `--merge_duplicate_sections`

Description Use this option to keep only one copy of equivalent read-only sections.

**Note:** This can cause different functions or constants to have the same address, so an application that depends on the addresses being different will not work correctly with this option enabled.

See also *Duplicate section merging*, page 130.



**Project>Options>Linker>Optimizations>Merge duplicate sections**

## --no\_bom

Syntax `--no_bom`

Description Use this option to omit the Byte Order Mark (BOM) when generating a UTF-8 output file.

See also

`--text_out`, page 407 and *Text encodings*, page 300.



**Project>Options>Linker>Encodings>Text output file encoding**

## **--no\_dynamic\_rtti\_elimination**

Syntax

`--no_dynamic_rtti_elimination`

Description

Use this option to make the linker include dynamic (polymorphic) runtime type information (RTTI) data in the application image even when the linker heuristics indicate that it is not needed.

The linker considers dynamic runtime type information to be needed if there is a `typeid` or `dynamic_cast` expression for a polymorphic type in the included code. By default, if the linker detects no such expression, RTTI data will not be included just to make dynamic RTTI requests work.

**Note:** A `typeid` expression for a *non*-polymorphic type results in a direct reference to a particular RTTI object and will not cause the linker to include any potentially unneeded objects.

See also

*Using C++*, page 213.



To set this option, use **Project>Options>Linker>Extra Options**.

## **--no\_entry**

Syntax

`--no_entry`

Description

Use this option to set the entry point field to zero for produced ELF files.

See also

`--entry`, page 384.



**Project>Options>Linker>Library>Override default program entry**

## --no\_exceptions

|             |                                                                                                                                                                                     |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_exceptions</code>                                                                                                                                                        |
| Description | Use this option to make the linker generate an error if there is a throw in the included code. This option is useful for making sure that your application does not use exceptions. |
| See also    | <i>Using C++</i> , page 213.                                                                                                                                                        |



To set related options, choose:

**Project>Options>Linker>Advanced>Allow C++ exceptions**

## --no\_fragments

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_fragments</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Description | Use this option to disable section fragment handling. Normally, the toolset uses IAR proprietary information for transferring section fragment information to the linker. The linker uses this information to remove unused code and data, and further minimize the size of the executable image. Use this option to disable the removal of fragments of sections, instead including or not including each section in its entirety, usually resulting in a larger application. |
| See also    | <i>Keeping symbols and sections</i> , page 119.                                                                                                                                                                                                                                                                                                                                                                                                                                |



To set this option, use **Project>Options>Linker>Extra Options**

## --no\_free\_heap

|             |                                                                                                                                                                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_free_heap</code>                                                                                                                                                                                                                                                                                       |
| Description | Use this option to use the smallest possible heap implementation. Because this heap does not support <code>free</code> or <code>realloc</code> , it is only suitable for applications that in the startup phase allocate heap memory for various buffers, etc, and for applications that never deallocate memory. |
| See also    | <i>Heap memory handlers</i> , page 226                                                                                                                                                                                                                                                                            |



**Project>Options>General Options>Library Options 2>Heap selection**

## --no\_inline

|             |                                                                         |
|-------------|-------------------------------------------------------------------------|
| Syntax      | <code>--no_inline func[, func...]</code>                                |
| Parameters  | <i>func</i> The name of a function symbol                               |
| Description | Use this option to exclude some functions from small function inlining. |
| See also    | <code>--inline</code> , page 390.                                       |



To set this option, use **Project>Options>Linker>Extra Options**.

## --no\_library\_search

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_library_search</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Description | Use this option to disable the automatic runtime library search. This option turns off the automatic inclusion of the correct standard libraries. This is useful, for example, if the application needs a user-built standard library, etc.<br><br><b>Note:</b> The option disables all steps of the automatic library selection, some of which might need to be reproduced if you are using the standard libraries. Use the <code>--log libraries</code> linker option together with automatic library selection enabled to determine which the steps are. |



**Project>Options>Linker>Library>Automatic runtime library selection**

## --no\_literal\_pool

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--no_literal_pool</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Description | Use this option for code that should run from a memory region where it is not allowed to read data, only to execute code.<br><br>When this option is used, the linker will use the <code>MOV32</code> pseudo instruction in a mode-changing veneer, to avoid using the data bus to load the destination address. The option also means that libraries compiled with this option will be used.<br><br>The option <code>--no_literal_pool</code> is only allowed for Armv6-M and Armv7-M cores (includes Armv8-M, Armv8.1-M, Armv8-A and Armv8-R cores). |



See also `--no_literal_pool`, page 339.



To set this option, use **Project>Options>Linker>Extra Options**.

## --no\_locals

Syntax `--no_locals`

Description Use this option to remove all local symbols from the ELF executable image.

**Note:** This option does not remove any local symbols from the DWARF information in the executable image.



**Project>Options>Linker>Output**

## --no\_out\_extension

Syntax `--no_out_extension`

Description By default, executable files are produced with the filename extension `.out`. Use this option to suppress that for files whose name do not contain a `.` (period) character. Such files will be produced without a filename extension.

Example `-o myApp --no_out_extension` produces the file `myApp`.  
`-o my.App --no_out_extension` produces the file `my.App.out`.

See also `--output`, `-o`, page 401.



To set this option, use **Project>Options>Linker>Extra Options**.

## --no\_range\_reservations

Syntax `--no_range_reservations`

Description Normally, the linker reserves any ranges used by absolute symbols with a non-zero size, excluding them from consideration for `place in` commands.

When this option is used, these reservations are disabled, and the linker is free to place sections in such a way as to overlap the extent of absolute symbols.



To set this option, use **Project>Options>Linker>Extra Options**.

## **--no\_remove**

Syntax

`--no_remove`

Description

When this option is used, unused sections are not removed. In other words, each module that is included in the executable image contains all its original sections.

See also

*Keeping symbols and sections*, page 119.



To set this option, use **Project>Options>Linker>Extra Options**.

## **--no\_vfe**

Syntax

`--no_vfe`

Description

Use this option to disable the Virtual Function Elimination optimization. All virtual functions in all classes with at least one instance will be kept, and Runtime Type Information data will be kept for all polymorphic classes. Also, no warning message will be issued for modules that lack VFE information.

See also

`--vfe`, page 410 and *Virtual function elimination*, page 129.



To set related options, choose:

**Project>Options>Linker>Optimizations>Perform C++ Virtual Function Elimination**

## **--no\_warnings**

Syntax

`--no_warnings`

Description

By default, the linker issues warning messages. Use this option to disable all warning messages.



This option is not available in the IDE.

## --no\_wrap\_diagnostics

Syntax `--no_wrap_diagnostics`

Description By default, long lines in diagnostic messages are broken into several lines to make the message easier to read. Use this option to disable line wrapping of diagnostic messages.



This option is not available in the IDE.

## --only\_stdout

Syntax `--only_stdout`

Description Use this option to make the linker use the standard output stream (`stdout`) for messages that are normally directed to the error output stream (`stderr`).



This option is not available in the IDE.

## --output, -o

Syntax `--output {filename|directory}`  
`-o {filename|directory}`

Parameters See *Rules for specifying a filename or directory as parameters*, page 306.

Description By default, the object executable image produced by the linker is located in a file with the name `aout.out`. Use this option to explicitly specify a different output filename, which by default will have the filename extension `out`.

See also `--no_out_extension`, page 399.



**Project>Options>Linker>Output>Output file**

## --pi\_veneers

Syntax `--pi_veneers`

Description Use this option to make the linker generate position-independent veneers. Note that this type of veneer is larger and slower than normal veneers.

See also

*Veneers*, page 125.



To set this option, use **Project>Options>Linker>Extra Options**.

## --place\_holder

Syntax

```
--place_holder symbol[, size[, section[, alignment]]]
```

Parameters

|                  |                                                    |
|------------------|----------------------------------------------------|
| <i>symbol</i>    | The name of the symbol to create                   |
| <i>size</i>      | Size in ROM. Default is 4 bytes                    |
| <i>section</i>   | Section name to use. Default is <code>.text</code> |
| <i>alignment</i> | Alignment of section. Default is 1                 |

Description

Use this option to reserve a place in ROM to be filled by some other tool, for example, a checksum calculated by `ie1ftool`. Each use of this linker option results in a section with the specified name, size, and alignment. The symbol can be used by your application to refer to the section.

**Note:** Like any other section, sections created by the `--place_holder` option will only be included in your application if the section appears to be needed. The `--keep` linker option, or the `keep` linker directive can be used for forcing such section to be included.

See also

*IAR utilities*, page 609.



To set this option, use **Project>Options>Linker>Extra Options**

## --preconfig

Syntax

```
--preconfig filename
```

Parameters

See *Rules for specifying a filename or directory as parameters*, page 306.

Description

Use this option to make the linker read the specified file before reading the linker configuration file.



To set this option, use **Project>Options>Linker>Extra Options**.

## --printf\_multibytes

|             |                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--printf_multibytes</code>                                                                                  |
| Description | Use this option to make the linker automatically select a <code>printf</code> formatter that supports multibytes. |



**Project>Options>General Options>Library options 1>Printf formatter**

## --redirect

|                    |                                                                                                                                                                                 |                    |                               |                  |                                    |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-------------------------------|------------------|------------------------------------|
| Syntax             | <code>--redirect from_symbol=to_symbol</code>                                                                                                                                   |                    |                               |                  |                                    |
| Parameters         | <table> <tr> <td><i>from_symbol</i></td> <td>The name of the source symbol</td> </tr> <tr> <td><i>to_symbol</i></td> <td>The name of the destination symbol</td> </tr> </table> | <i>from_symbol</i> | The name of the source symbol | <i>to_symbol</i> | The name of the destination symbol |
| <i>from_symbol</i> | The name of the source symbol                                                                                                                                                   |                    |                               |                  |                                    |
| <i>to_symbol</i>   | The name of the destination symbol                                                                                                                                              |                    |                               |                  |                                    |
| Description        | Use this option to change references to an external symbol so that they refer to another symbol.                                                                                |                    |                               |                  |                                    |

**Note:** Redirection will normally not affect references within a module.



To set this option, use **Project>Options>Linker>Extra Options**

## --remarks

|             |                                                                                                                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--remarks</code>                                                                                                                                                                                                                                            |
| Description | The least severe diagnostic messages are called remarks. A remark indicates a source code construct that may cause strange behavior in the generated code. By default, the linker does not generate remarks. Use this option to make the linker generate remarks. |
| See also    | <i>Severity levels</i> , page 303.                                                                                                                                                                                                                                |



**Project>Options>Linker>Diagnostics>Enable remarks**

## **--require\_bti**

Syntax `--require_bti`

Description By default, the linker generates a warning if two or more modules do not have the same level of support for BTI (Branch Target Identification). Use this option to make the linker generate an error instead.

**In 64-bit mode**, this option has no effect.

**Note:** If the option `--library_security` is used, no diagnostic message at all is generated.

See also *Branch protection (PACBTI) — 32-bit mode only*, page 246 and *--library\_security*, page 391.



This option is not available in the IDE.

## **--require\_pac**

Syntax `--require_pac`

Description Use this option to make the linker generate a warning if two or more modules do not have the same level of support for PAC (Pointer Authentication). **In 64-bit mode**, this option has no effect.

**Note:** If the option `--library_security` is used, no warning is generated.

See also *Branch protection (PACBTI) — 32-bit mode only*, page 246 and *--library\_security*, page 391.



This option is not available in the IDE.

## **--scanf\_multibytes**

Syntax `--scanf_multibytes`

Description Use this option to make the linker automatically select a `scanf` formatter that supports multibytes.



**Project>Options>General Options>Library options 1>Scanf formatter**

**--search, -L**

|             |                                                                                                                                                                                                                                                                                     |                                                                                    |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Syntax      | <code>--search path</code>                                                                                                                                                                                                                                                          |                                                                                    |
|             | <code>-L path</code>                                                                                                                                                                                                                                                                |                                                                                    |
| Parameters  | <i>path</i>                                                                                                                                                                                                                                                                         | A path to a directory where the linker should search for object and library files. |
| Description | Use this option to specify more directories for the linker to search for object and library files in.<br><br>By default, the linker searches for object and library files only in the working directory. Each use of this option on the command line adds another search directory. |                                                                                    |
| See also    | <i>The linking process in detail</i> , page 99.                                                                                                                                                                                                                                     |                                                                                    |



This option is not available in the IDE.

**--semihosting**

|             |                                                                                                                                                                                                     |                                                                                              |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| Syntax      | <code>--semihosting[=iar_breakpoint]</code>                                                                                                                                                         |                                                                                              |
| Parameters  | <i>iar_breakpoint</i>                                                                                                                                                                               | The IAR-specific mechanism can be used when debugging applications that use SVC extensively. |
| Description | Use this option to include the debug interface—breakpoint mechanism—in the output image. If no parameter is specified, the behavior is as described in <i>The semihosting mechanism</i> , page 151. |                                                                                              |
| See also    | <i>The semihosting mechanism</i> , page 151.                                                                                                                                                        |                                                                                              |



**Project>Options>General Options>Library Configuration>Semihosted**

## --silent

Syntax `--silent`

Description By default, the linker issues introductory messages and a final statistics report. Use this option to make the linker operate without sending these messages to the standard output stream (normally `stdout`).

This option does not affect the display of error and warning messages.



This option is not available in the IDE.

## --small\_math

Syntax `--small_math`

Description Use this option to use smaller versions of the math libraries (but less accurate) than the default versions.

See also *Math functions*, page 152.



**Project>Options>General Options>Library Options 1>Math functions**

This option is not available in the IDE.

## --stack\_usage\_control

Syntax `--stack_usage_control=filename`

Parameters See *Rules for specifying a filename or directory as parameters*, page 306.

Description Use this option to specify a stack usage control file. This file controls stack usage analysis, or provides more stack usage information for modules or functions. You can use this option multiple times to specify multiple stack usage control files. If no filename extension is specified, the extension `suc` is used.

Using this option enables stack usage analysis in the linker.

See also *Stack usage analysis*, page 107.



**Project>Options>Linker>Advanced>Enable stack usage analysis>Control file**



## --strip

Syntax `--strip`

Description By default, the linker retains the debug information from the input object files in the output executable image. Use this option to remove that information.



To set related options, choose:

**Project>Options>Linker>Output>Include debug information in output**

## --text\_out

Syntax `--text_out {utf8|utf16le|utf16be|locale}`

Parameters

|                      |                                        |
|----------------------|----------------------------------------|
| <code>utf8</code>    | Uses the UTF-8 encoding                |
| <code>utf16le</code> | Uses the UTF-16 little-endian encoding |
| <code>utf16be</code> | Uses the UTF-16 big-endian encoding    |
| <code>locale</code>  | Uses the system locale encoding        |

Description Use this option to specify the encoding to be used when generating a text output file. The default for the linker list files is to use the same encoding as the main source file. The default for all other text files is UTF-8 with a Byte Order Mark (BOM). If you want text output in UTF-8 encoding without BOM, you can use the option `--no_bom` as well.

See also `--no_bom`, page 395 and *Text encodings*, page 300.



**Project>Options>Linker>Encodings>Text output file encoding**

## --threaded\_lib

Syntax `--threaded_lib`

Description Use this option to automatically configure the runtime library for use with threads. When this option is used, the linker creates the sections `__iar_tls$$DATA` and `__iar_tls$$INIT_DATA`, and the sections `.tdata` and `.tbss` will continue to use the names `.tdata` and `.tbss`. If the option `--threaded_lib` is *not* used, the contents of

the section `.tdata` will be handled as if they resided in `.data` and the contents of the section `.tbss` will be handled as if they resided in `.bss`.



**Project>Options>General Options>Library Configuration>Enable thread support in library**

## --timezone\_lib

Syntax `--timezone_lib`

Description Use this option to enable the time zone and daylight savings time functionality in the DLIB library.

**Note:** You must implement the time zone functionality yourself.

See also `__getzone`, page 162.



To set this option, use **Project>Options>Linker>Extra Options**.

## --treat\_rvct\_modules\_as\_softfp

Syntax `--treat_rvct_modules_as_softfp`

Description Use this option to treat all modules generated by RVCT as using the standard (non-VFP) calling convention.



To set this option, use **Project>Options>Linker>Extra Options**.

## --use\_full\_std\_template\_names

Syntax `--use_full_std_template_names`

Description In the demangled names of C++ entities, the linker by default uses shorter names for some classes. For example, `"std::string"` instead of `"std::basic_string<char, std::char_traits<char>, std::allocator<char>>"`. Use this option to make the linker instead use the full, unabbreviated names.



This option is not available in the IDE.

## --use\_optimized\_variants

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--use_optimized_variants={no auto small fast}</code>                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Parameters  | no                                                                                                                                                                                                                                                                                                                                                                                                                                            | Always uses the default variant with standard optimizations.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|             | auto                                                                                                                                                                                                                                                                                                                                                                                                                                          | Uses variants based on AEABI attributes that indicate the requested optimization goal:<br><br>If a module is compiled with <code>-Ohs</code> , and the DLIB library contains a fast variant of a function that is referenced in the module, that variant is used.<br><br>If all modules referencing a function are compiled with <code>-Ohz</code> , and the DLIB library contains a small variant of that function, that variant is used.<br><br>This is the default behavior of the linker. |
|             | small                                                                                                                                                                                                                                                                                                                                                                                                                                         | Always uses a small variant (balances code size and execution speed, favoring size) if there is one in the DLIB library.                                                                                                                                                                                                                                                                                                                                                                      |
|             | fast                                                                                                                                                                                                                                                                                                                                                                                                                                          | Always uses a fast variant (maximum execution speed) if there is one in the DLIB library.                                                                                                                                                                                                                                                                                                                                                                                                     |
| Description | Use this option to control the use of optimized variants of some DLIB library functions. (Some DLIB libraries delivered with the product contain optimized variants, such as a small integer division routine for Cortex-M0, or a fast <code>strcpy</code> implementation for cores that support the Thumb-2 ISA architecture.)<br><br>To see which variants that this option selected, inspect the list of redirects in the linker map file. |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |



To set this option, use **Project>Options>Linker>Extra Options**.

## --utf8\_text\_in

|             |                                                                                                                                                                                                       |  |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Syntax      | <code>--utf8_text_in</code>                                                                                                                                                                           |  |
| Description | Use this option to specify that the linker shall use the UTF-8 encoding when reading a text input file with no Byte Order Mark (BOM).<br><br><b>Note:</b> This option does not apply to source files. |  |
| See also    | <i>Text encodings</i> , page 300.                                                                                                                                                                     |  |



**Project>Options>Linker>Encodings>Default input file encoding**

**--version**

Syntax

`--version`

Description

Use this option to make the linker send version information to the console and then exit.



This option is not available in the IDE.

**--vfe**

Syntax

`--vfe [=forced]`

Parameters

`forced`

Performs Virtual Function Elimination even if one or more modules lack the needed virtual function elimination information.

Description

By default, Virtual Function Elimination is always performed but requires that all object files contain the necessary virtual function elimination information. Use `--vfe=forced` to perform Virtual Function Elimination even if one or more modules do not have the necessary information.

Forcing the use of Virtual Function Elimination can be unsafe if some of the modules that lack the needed information perform virtual function calls or use dynamic Runtime Type Information.

See also

`--no_vfe`, page 400 and *Virtual function elimination*, page 129.



To set related options, choose:

**Project>Options>Linker>Optimizations>Perform C++ Virtual Function Elimination**

## --warnings\_affect\_exit\_code

|             |                                                                                                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--warnings_affect_exit_code</code>                                                                                                                                     |
| Description | By default, the exit code is not affected by warnings, because only errors produce a non-zero exit code. With this option, warnings will also generate a non-zero exit code. |



This option is not available in the IDE.

## --warnings\_are\_errors

|             |                                                                                                                                                                                                               |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--warnings_are_errors</code>                                                                                                                                                                            |
| Description | Use this option to make the linker treat all warnings as errors. If the linker encounters an error, no executable image is generated. Warnings that have been changed into remarks are not treated as errors. |

**Note:** Any diagnostic messages that have been reclassified as warnings by the option `--diag_warning` will also be treated as errors when `--warnings_are_errors` is used.

|          |                                                                                    |
|----------|------------------------------------------------------------------------------------|
| See also | <code>--diag_warning</code> , page 324 and <code>--diag_warning</code> , page 382. |
|----------|------------------------------------------------------------------------------------|



**Project>Options>Linker>Diagnostics>Treat all warnings as errors**

## --whole\_archive

|             |                                                                                                                                                                                                                                                                                                                                              |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>--whole_archive filename</code>                                                                                                                                                                                                                                                                                                        |
| Parameters  | See <i>Rules for specifying a filename or directory as parameters</i> , page 306.                                                                                                                                                                                                                                                            |
| Description | Use this option to make the linker treat every object file in the archive as if it was specified on the command line. This is useful when an archive contains root content that is always included from an object file (filename extension <code>o</code> ), but only included from an archive if some entry from the module is referred to. |
| Example     | If <code>archive.a</code> contains the object files <code>file1.o</code> , <code>file2.o</code> , and <code>file3.o</code> , using <code>--whole_archive archive.a</code> is equivalent to specifying <code>file1.o file2.o file3.o</code> .                                                                                                 |
| See also    | <i>Keeping modules</i> , page 119.                                                                                                                                                                                                                                                                                                           |



To set this option, use **Project>Options>Linker>Extra Options**

# Data representation

- Alignment
- Byte order (32-bit mode only)
- Basic data types—integer types
- Basic data types—floating-point types
- Pointer types
- Structure types
- Type qualifiers
- Data types in C++

See the chapter *Efficient coding for embedded applications* for information about which data types provide the most efficient code for your application.

---

## Alignment

Every C data object has an alignment that controls how the object can be stored in memory. Should an object have an alignment of, for example, 4, it must be stored on an address that is divisible by 4.

The reason for the concept of alignment is that some processors have hardware limitations for how the memory can be accessed.

Assume that a processor can read 4 bytes of memory using one instruction, but only when the memory read is placed on an address divisible by 4. Then, 4-byte objects, such as `long` integers, will have alignment 4.

Another processor might only be able to read 2 bytes at a time—in that environment, the alignment for a 4-byte `long` integer might be 2.

A structure type will have the same alignment as the structure member with the strictest alignment. To decrease the alignment requirements on the structure and its members, use `#pragma pack` or the `__packed` data type attribute.

All data types must have a size that is a multiple of their alignment. Otherwise, only the first element of an array would be guaranteed to be placed in accordance with the alignment requirements. This means that the compiler might add pad bytes at the end of the structure. For more information about pad bytes, see *Packed structure types*, page 419.

**Note:** With the `#pragma data_alignment` directive, you can increase the alignment demands on specific variables.

See also the Standard C file `stdalign.h`.

## ALIGNMENT ON THE ARM CORE

The alignment of a data object controls how it can be stored in memory. The reason for using alignment is that the Arm core can access 4-byte objects more efficiently when the object is stored at an address divisible by 4.

Objects with alignment 4 must be stored at an address divisible by 4, while objects with alignment 2 must be stored at addresses divisible by 2.

The compiler ensures this by assigning an alignment to every data type, ensuring that the Arm core will be able to read the data.

For related information, see `--align_sp_on_irq`, page 315 and `--no_const_align`, page 337.

---

## Byte order (32-bit mode only)

In the little-endian byte order, which is default, the *least* significant byte is stored at the lowest address in memory. The *most* significant byte is stored at the highest address.

In the big-endian byte order (**can only be selected in 32-bit mode**), the *most* significant byte is stored at the lowest address in memory. The *least* significant byte is stored at the highest address. If you use the big-endian byte order, it might be necessary to use the `#pragma bitfields=reversed` directive to be compatible with code for other compilers and I/O register definitions of some devices, see *Bitfields*, page 410.

**Note:** There are two variants of the big-endian mode, BE8 and BE32, which you specify at link time. In BE8 data is big-endian and code is little-endian. In BE32 both data and code are big-endian. In architectures before v6, the BE32 endian mode is used, and after v6 the BE8 mode is used. In the v6 (Arm11) architecture, both big-endian modes are supported.



## Basic data types—integer types

The compiler supports both all Standard C basic data types and some additional types.

These topics are covered:

- Integer types—an overview
- Bool
- The enum type
- The char type
- The wchar\_t type
- The char16\_t type
- The char32\_t type
- Bitfields

### INTEGER TYPES—AN OVERVIEW

This table gives the size and range of each integer data type:

| Data type                            | Size    | Range                   | Alignment |
|--------------------------------------|---------|-------------------------|-----------|
| bool                                 | 8 bits  | 0 to 1                  | 1         |
| char                                 | 8 bits  | 0 to 255                | 1         |
| signed char                          | 8 bits  | -128 to 127             | 1         |
| unsigned char                        | 8 bits  | 0 to 255                | 1         |
| signed short                         | 16 bits | -32768 to 32767         | 2         |
| unsigned short                       | 16 bits | 0 to 65535              | 2         |
| signed int                           | 32 bits | $-2^{31}$ to $2^{31}-1$ | 4         |
| unsigned int                         | 32 bits | 0 to $2^{32}-1$         | 4         |
| signed long                          |         |                         | 4         |
| 32-bit mode and ILP32 in 64-bit mode | 32 bits | $-2^{31}$ to $2^{31}-1$ |           |
| LP64 in 64-bit mode                  | 64 bits | $-2^{63}$ to $2^{63}-1$ |           |
| unsigned long                        |         |                         | 4         |
| 32-bit mode and ILP32 in 64-bit mode | 32 bits | 0 to $2^{32}-1$         |           |
| LP64 in 64-bit mode                  | 64 bits | 0 to $2^{64}-1$         |           |
| signed long long                     | 64 bits | $-2^{63}$ to $2^{63}-1$ | 8         |
| unsigned long long                   | 64 bits | 0 to $2^{64}-1$         | 8         |

Table 32: Integer types

Signed variables are represented using the two's complement form.

## BOOL

The `bool` data type is supported by default in the C++ language. If you have enabled language extensions, the `bool` type can also be used in C source code if you include the file `stdbool.h`. This will also enable the boolean values `false` and `true`.

## THE ENUM TYPE

The compiler will use the smallest type required to hold `enum` constants, preferring `signed` rather than `unsigned`.

When IAR language extensions are enabled, and in C++, the `enum` constants and types can also be of the type `long`, `unsigned long`, `long long`, or `unsigned long long`.

To make the compiler use a larger type than it would automatically use, define an `enum` constant with a large enough value. For example:

```
/* Disables usage of the char type for enum */
enum Cards{Spade1, Spade2,
           DontUseChar=257};
```

See also the C++ `enum struct` syntax.

For related information, see `--enum_is_int`, page 328.

## THE CHAR TYPE

The `char` type is by default `unsigned` in the compiler, but the `--char_is_signed` compiler option allows you to make it `signed`.

**Note:** The library is compiled with the `char` type as `unsigned`.

## THE WCHAR\_T TYPE

The `wchar_t` data type is 4 bytes and the encoding used for it is UTF-32.

## THE CHAR16\_T TYPE

The `char16_t` data type is 2 bytes and the encoding used for it is UTF-16.

## THE CHAR32\_T TYPE

The `char32_t` data type is 4 bytes and the encoding used for it is UTF-32.

## BITFIELDS

In Standard C, `int`, `signed int`, and `unsigned int` can be used as the base type for integer bitfields. In standard C++, and in C when language extensions are enabled in the compiler, any integer or enumeration type can be used as the base type. It is

implementation defined whether a plain integer type (`char`, `short`, `int`, etc) results in a signed or unsigned bitfield.

In the IAR C/C++ Compiler for Arm, plain integer types are treated as unsigned.

Bitfields in expressions are treated as `int` if `int` can represent all values of the bitfield. Otherwise, they are treated as the bitfield base type.

Each bitfield is placed in the next suitably aligned container of its base type that has enough available bits to accommodate the bitfield. Within each container, the bitfield is placed in the first available byte or bytes, taking the byte order into account. Note that containers can overlap if needed, as long as they are suitably aligned for their type.

In addition, the compiler supports an alternative bitfield allocation strategy (disjoint types), where bitfield containers of different types are not allowed to overlap. Using this allocation strategy, each bitfield is placed in a new container if its type is different from that of the previous bitfield, or if the bitfield does not fit in the same container as the previous bitfield. Within each container, the bitfield is placed from the least significant bit to the most significant bit (disjoint types) or from the most significant bit to the least significant bit (reverse disjoint types). This allocation strategy will never use less space than the default allocation strategy (joined types), and can use significantly more space when mixing bitfield types.

Use the `#pragma bitfields` directive to choose which bitfield allocation strategy to use, see *bitfields*, page 446.

Assume this example:

```
struct BitfieldExample
{
    uint32_t a : 12;
    uint16_t b : 3;
    uint16_t c : 7;
    uint8_t  d;
};
```

### The example in the joined types bitfield allocation strategy


To place the first bitfield, `a`, the compiler allocates a 32-bit container at offset 0 and puts `a` into the first and second bytes of the container.

For the second bitfield, `b`, a 16-bit container is needed and because there are still four bits free at offset 0, the bitfield is placed there.


For the third bitfield, `c`, as there is now only one bit left in the first 16-bit container, a new container is allocated at offset 2, and `c` is placed in the first byte of this container.

The fourth member, `d`, can be placed in the next available full byte, which is the byte at offset 3.

In little-endian mode, each bitfield is allocated starting from the least significant free bit of its container to ensure that it is placed into bytes from left to right.

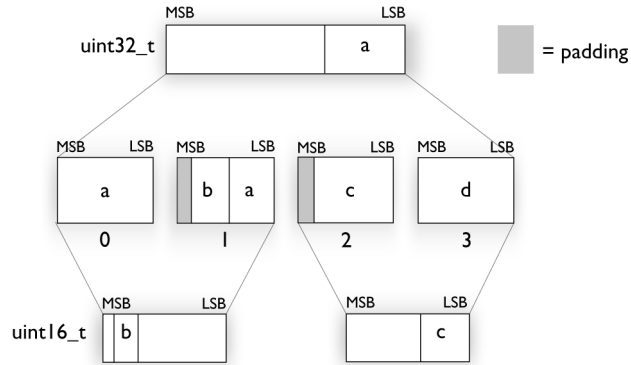

In big-endian mode, each bitfield is allocated starting from the most significant free bit of its container to ensure that it is placed into bytes from left to right.

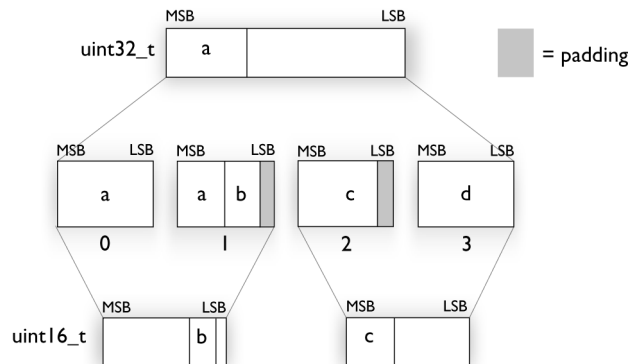

### The example in the disjoint types bitfield allocation strategy

To place the first bitfield, *a*, the compiler allocates a 32-bit container at offset 0 and puts *a* into the least significant 12 bits of the container.


To place the second bitfield, *b*, a new container is allocated at offset 4, because the type of the bitfield is not the same as that of the previous one. *b* is placed into the least significant three bits of this container.

The third bitfield, *c*, has the same type as *b* and fits into the same container.


The fourth member, `d`, is allocated into the byte at offset 6. `d` cannot be placed into the same container as `b` and `c` because it is not a bitfield, it is not of the same type, and it would not fit.

When using reverse order (reverse disjoint types), each bitfield is instead placed starting from the most significant bit of its container.

This is the layout of `bitfield_example` in little-endian mode:

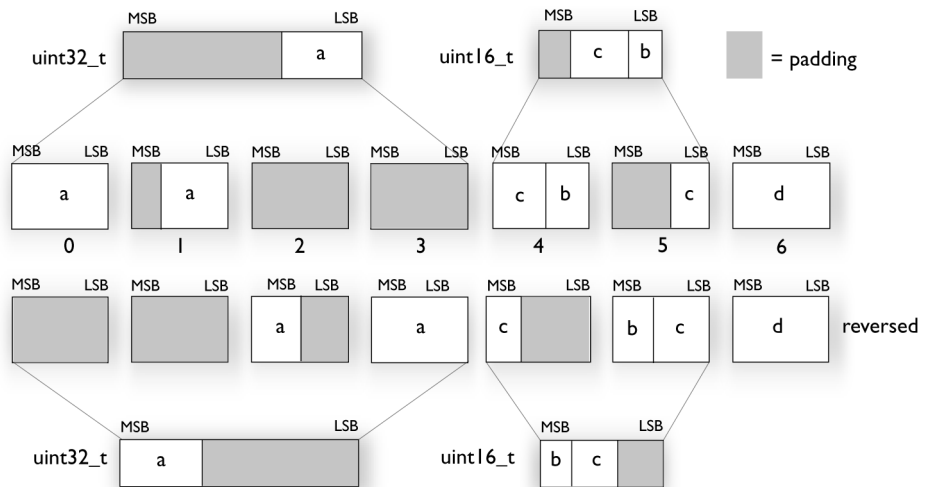

This is the layout of `bitfield_example` in big-endian mode:

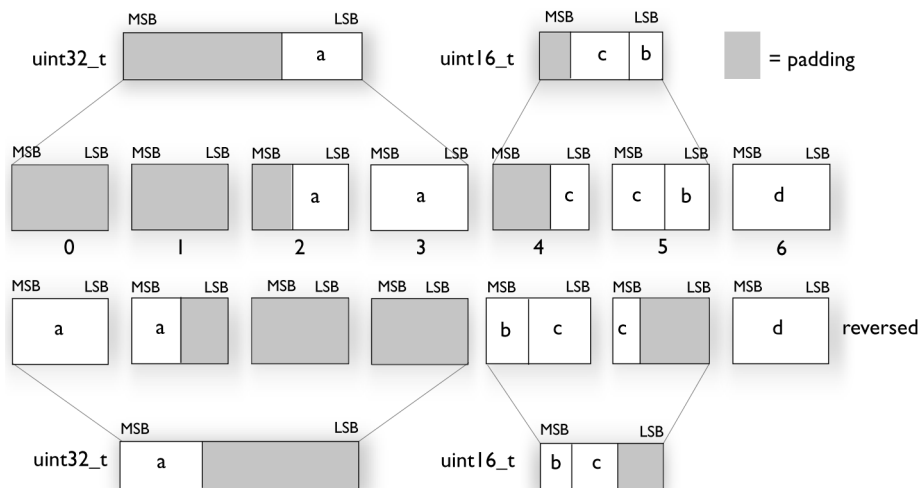

## Padding

Padding is usually added to the end of structures to accommodate reading/writing an entire bitfield container when accessing bitfields, as shown above. However, when bits are allocated from low to high addresses, padding is only added if it is needed to accommodate the alignment of the field.

Example:

```
struct X { uint32_t x1 : 5; };
```

When the alignment of the `uint32_t` bitfield is 4, the size of `struct X` is 4, to enable reading/writing the entire bitfield container (`uint32_t`) at its natural alignment.

However, if the alignment of the field is lower (for example, by using `#pragma pack`), and bits are allocated from low addresses, the size of `struct X` is also correspondingly less.

## Basic data types—floating-point types

In the IAR C/C++ Compiler for Arm, floating-point values are represented in standard IEC 60559 format. The sizes for the different floating-point types are:

| Type                     | Size    | Range (+/-)                        | Decimals | Exponent | Mantissa | Alignment |
|--------------------------|---------|------------------------------------|----------|----------|----------|-----------|
| <code>__fp16</code>      | 16 bits | $\pm 2E-14$ to 65504               | 3        | 5 bits   | 11 bits  | 2         |
| <code>float</code>       | 32 bits | $\pm 1.18E-38$ to $\pm 3.40E+38$   | 7        | 8 bits   | 23 bits  | 4         |
| <code>double</code>      | 64 bits | $\pm 2.23E-308$ to $\pm 1.79E+308$ | 15       | 11 bits  | 52 bits  | 8         |
| <code>long double</code> | 64 bits | $\pm 2.23E-308$ to $\pm 1.79E+308$ | 15       | 11 bits  | 52 bits  | 8         |

Table 33: Floating-point types

For Cortex-M0 and Cortex-M1, the compiler does not support subnormal numbers. All operations that should produce subnormal numbers will instead generate zero. For information about the representation of subnormal numbers for other cores, see *Representation of special floating-point numbers*, page 416.

The `__fp16` floating-point type is only a storage type. All numerical operations will operate on values promoted to `float`. There is also a standard type `_Float16`, which is layout-compatible with `__fp16`. Some cores support numerical operations directly on `_Float16` values. For other cores, it is a storage-only type.

**Note:** The C/C++ standard library does *not* support the `_Float16` type. If you want to use any of the standard library functions on the `_Float16` type, you must cast the `_Float16` value to single-precision or double-precision, and then use the appropriate library function. Because there is no string format specifier for the `_Float16` type, an explicit cast is required.


### FLOATING-POINT ENVIRONMENT

Exception flags for floating-point values are supported for devices with a VFP unit, and they are defined in the `fenv.h` file. For devices without a VFP unit, the functions defined in the `fenv.h` file exist but have no functionality.

The `feraiseexcept` function does not raise an `inexact` floating-point exception when called with `FE_OVERFLOW` or `FE_UNDERFLOW`.

### 32-BIT FLOATING-POINT FORMAT

The representation of a 32-bit floating-point number as an integer is:



The exponent is 8 bits, and the mantissa is 23 bits.

The value of the number is:

$$(-1)^S * 2^{(\text{Exponent}-127)} * 1.\text{Mantissa}$$


The range of the number is at least:

$$\pm 1.18\text{E}-38 \text{ to } \pm 3.39\text{E}+38$$

The precision of the float operators (+, -, \*, and /) is approximately 7 decimal digits.

## 64-BIT FLOATING-POINT FORMAT

The representation of a 64-bit floating-point number as an integer is:



The exponent is 11 bits, and the mantissa is 52 bits.

The value of the number is:

$$(-1)^S * 2^{(\text{Exponent}-1023)} * 1.\text{Mantissa}$$

The range of the number is at least:

$$\pm 2.23\text{E}-308 \text{ to } \pm 1.79\text{E}+308$$

The precision of the float operators (+, -, \*, and /) is approximately 15 decimal digits.

## REPRESENTATION OF SPECIAL FLOATING-POINT NUMBERS

This list describes the representation of special floating-point numbers:

- Zero is represented by zero mantissa and exponent. The sign bit signifies positive or negative zero.
- Infinity is represented by setting the exponent to the highest value and the mantissa to zero. The sign bit signifies positive or negative infinity.
- Not a number (NaN) is represented by setting the exponent to the highest positive value and the most significant bit in the mantissa to 1. The value of the sign bit is ignored.
- Subnormal numbers are used for representing values smaller than what can be represented by normal values. The drawback is that the precision will decrease with smaller values. The exponent is set to 0 to signify that the number is subnormal, even though the number is treated as if the exponent was 1. Unlike normal numbers, subnormal numbers do not have an implicit 1 as the most significant bit (the MSB) of the mantissa. The value of a subnormal number is:

$$(-1)^S * 2^{(1-\text{BIAS})} * 0.\text{Mantissa}$$



where `BIAS` is 127 and 1023 for 32-bit and 64-bit floating-point values, respectively.

## Pointer types

The compiler has two basic types of pointers: function pointers and data pointers. Pointer types have the same alignment as the corresponding integer type.

### FUNCTION POINTERS

The function pointers have these properties:

| Execution mode | Data model | Pointer size | Address range           |
|----------------|------------|--------------|-------------------------|
| 32-bit         | n/a        | 32 bits      | 0-0xFFFF'FFFF           |
| 64-bit         | ILP32      | 32 bits      | 0-0xFFFF'FFFF           |
| 64-bit         | LP64       | 64 bits      | 0-0xFFFF'FFFF'FFFF'FFFF |

Table 34: Function pointers

**Note:** In the ILP32 data model, the representation of a pointer in a register is always 64-bit. A 32-bit pointer is zero-extended when it is loaded into a register, and a store operation only stores the lowest 32 bits.

When function pointer types are declared, attributes are inserted before the `*` sign, for example:

```
typedef void (__thumb * IntHandler) (void);
```

This can be rewritten using `#pragma` directives:

```
#pragma type_attribute=__thumb
typedef void IntHandler_function(void);
typedef IntHandler_function *IntHandler;
```

### DATA POINTERS

There is one data pointer available. It has these properties:

| Execution mode | Data model | Pointer size | Address range           |
|----------------|------------|--------------|-------------------------|
| 32-bit         | n/a        | 32 bits      | 0-0xFFFF'FFFF           |
| 64-bit         | ILP32      | 32 bits      | 0-0xFFFF'FFFF           |
| 64-bit         | LP64       | 64 bits      | 0-0xFFFF'FFFF'FFFF'FFFF |

Table 35: Data pointers

**Note:** In the ILP32 data model, the representation of a pointer in a register is always 64-bit. A 32-bit pointer is zero-extended when it is loaded into a register, and a store operation only stores the lowest 32 bits.

## CASTING

Casts between pointers have these characteristics:

- Casting a *value* of an integer type to a pointer of a smaller type is performed by truncation
- Casting a *pointer type* to a smaller integer type is performed by truncation
- Casting a *pointer type* to a larger integer type is performed by zero extension
- Casting a *data pointer* to a function pointer and vice versa is illegal
- Casting a *function pointer* to an integer type gives an undefined result
- Casting a value of an unsigned integer type to a pointer of a larger type is performed by zero extension

### size\_t

`size_t` is the unsigned integer type of the result of the `sizeof` operator. In 32-bit mode and when using the ILP32 data model in 64-bit mode, the type used for `size_t` is `unsigned int`. In the LP64 data model, the type used for `size_t` is `unsigned long`.

### ptrdiff\_t

`ptrdiff_t` is the signed integer type of the result of subtracting two pointers. In 32-bit mode and when using the ILP32 data model in 64-bit mode, the type used for `ptrdiff_t` is the signed integer variant of the `size_t` type. In the LP64 data model, the type used for `ptrdiff_t` is `signed long`.

### intptr\_t

`intptr_t` is a signed integer type large enough to contain a `void *`. In the IAR C/C++ Compiler for Arm, the type used for `intptr_t` is `signed long int`.

### uintptr\_t

`uintptr_t` is equivalent to `intptr_t`, with the exception that it is unsigned.

---

## Structure types

The members of a `struct` are stored sequentially in the order in which they are declared—the first member has the lowest memory address.

### ALIGNMENT OF STRUCTURE TYPES

The `struct` and `union` types have the same alignment as the member with the highest alignment requirement—this alignment requirement also applies to a member that is a


structure. To allow arrays of aligned structure objects, the size of a `struct` is adjusted to an even multiple of the alignment.

## GENERAL LAYOUT

Members of a `struct` are always allocated in the order specified in the declaration. Each member is placed in the `struct` according to the specified alignment (offsets).

```
struct First
{
    char c;
    short s;
} s;
```

This diagram shows the layout in memory:



The alignment of the structure is 2 bytes, and a pad byte must be inserted to give `short s` the correct alignment.

## PACKED STRUCTURE TYPES

The `__packed` data type attribute or the `#pragma pack` directive is used for relaxing the alignment requirements of the members of a structure. This changes the layout of the structure. The members are placed in the same order as when declared, but there might be less pad space between members.

**Note:** Accessing an object that is not correctly aligned requires code that is both larger and slower. If such structure members are accessed many times, it is usually better to construct the correct values in a `struct` that is not packed, and access this `struct` instead.

Special care is also needed when creating and using pointers to misaligned members. For direct access to misaligned members in a packed `struct`, the compiler will emit the correct (but slower and larger) code when needed. However, when a misaligned member is accessed through a pointer to the member, the normal (smaller and faster) code is used. In the general case, this will not work, because the normal code might depend on the alignment being correct.

This example declares a packed structure:

```
#pragma pack(1)
struct S
{
    char c;
    short s;
};
```

```
#pragma pack()
```


The structure `S` has this memory layout:



The next example declares a new non-packed structure, `S2`, that contains the structure `S` declared in the previous example:

```
struct S2
{
    struct S s;
    long l;
};
```

The structure `S2` has this memory layout



The structure `S` will use the memory layout, size, and alignment described in the previous example. The alignment of the member `l` is 4, which means that alignment of the structure `S2` will become 4.

For more information, see *Alignment of elements in a structure*, page 250.

---

## Type qualifiers

According to the C standard, `volatile` and `const` are type qualifiers.

### DECLARING OBJECTS VOLATILE

By declaring an object `volatile`, the compiler is informed that the value of the object can change beyond the compiler's control. The compiler must also assume that any

accesses can have side effects—therefore all accesses to the `volatile` object must be preserved.

There are three main reasons for declaring an object `volatile`:

- Shared access—the object is shared between several tasks in a multitasking environment
- Trigger access—as for a memory-mapped SFR where the fact that an access occurs has an effect
- Modified access—where the contents of the object can change in ways not known to the compiler.

### Definition of access to volatile objects

The C standard defines an abstract machine, which governs the behavior of accesses to `volatile` declared objects. In general and in accordance to the abstract machine:

- The compiler considers each read and write access to an object declared `volatile` as an access
- The unit for the access is either the entire object or, for accesses to an element in a composite object—such as an array, struct, class, or union—the element. For example:

```
char volatile a;
a = 5; /* A write access */
a += 6; /* First a read then a write access */
```

- An access to a bitfield is treated as an access to the underlying type
- Adding a `const` qualifier to a `volatile` object will make write accesses to the object impossible. However, the object will be placed in RAM as specified by the C standard.

However, these rules are not detailed enough to handle the hardware-related requirements. The rules specific to the IAR C/C++ Compiler for Arm are described below.

### Rules for accesses

In the IAR C/C++ Compiler for Arm, accesses to `volatile` declared objects are subject to these rules:

- All accesses are preserved
- All accesses are complete, that is, the whole object is accessed
- All accesses are performed in the same order as given in the abstract machine
- All accesses are atomic, that is, they cannot be interrupted.

The compiler adheres to these rules for accesses to all 8-, 16-, and 32-bit scalar types, except for accesses to unaligned 16- and 32-bit fields in packed structures.

For all combinations of object types not listed, only the rule that states that all accesses are preserved applies.

## DECLARING OBJECTS VOLATILE AND CONST

If you declare a `volatile` object `const`, it will be write-protected but it will still be stored in RAM memory as the C standard specifies.

To store the object in read-only memory instead, but still make it possible to access it as a `const volatile` object, declare it with the `__ro_placement` attribute. See *\_\_ro\_placement*, page 436.

## DECLARING OBJECTS CONST

The `const` type qualifier is used for indicating that a data object, accessed directly or via a pointer, is non-writable. A pointer to `const` declared data can point to both constant and non-constant objects. It is good programming practice to use `const` declared pointers whenever possible because this improves the compiler's possibilities to optimize the generated code and reduces the risk of application failure due to erroneously modified data.

Static and global objects declared `const` are allocated in ROM.

In C++, objects that require runtime initialization cannot be placed in ROM.

---

## Data types in C++

In C++, all plain C data types are represented in the same way as described earlier in this chapter. However, if any C++ features are used for a type, no assumptions can be made concerning the data representation. This means, for example, that it is not supported to write assembler code that accesses class members.

# Extended keywords

- General syntax rules for extended keywords
- Summary of extended keywords
- Descriptions of extended keywords
- Supported GCC attributes

---

## General syntax rules for extended keywords

The compiler provides a set of attributes that can be used on functions or data objects to support specific features of the Arm core. There are two types of attributes—*type attributes* and *object attributes*:

- Type attributes affect the *external functionality* of the data object or function
- Object attributes affect the *internal functionality* of the data object or function.

The syntax for the keywords differs slightly depending on whether it is a type attribute or an object attribute, and whether it is applied to a data object or a function.

For more information about each attribute, see *Descriptions of extended keywords*, page 427.

**Note:** The extended keywords are only available when language extensions are enabled in the compiler.



In the IDE, language extensions are enabled by default.



Use the `-e` compiler option to enable language extensions. See `-e`, page 326.

### TYPE ATTRIBUTES

Type attributes define how a function is called, or how a data object is accessed. This means that if you use a type attribute, it must be specified both when a function or data object is defined and when it is declared.

You can either place the type attributes explicitly in your declarations, or use the pragma directive `#pragma type_attribute`.

## General type attributes

Available *function type attributes* (affect how the function should be called):

```
__arm, __cmse_nonsecure_call, __exception, __fig, __interwork, __irq,
__svc, __swi_no_scratch, __task, and __thumb.
```

Available *data type attributes*:

```
__big_endian, __little_endian, and __packed.
```

You can specify as many type attributes as required for each level of pointer indirection.

**Note:** Data type attributes (except `__packed`) are not allowed on structure type fields.

## Syntax for type attributes used on data objects

If you select the *uniform attribute syntax*, data type attributes use the same syntax rules as the type qualifiers `const` and `volatile`.

If not, data type attributes use almost the same syntax rules as the type qualifiers `const` and `volatile`. For example:

```
__little_endian int i;
int __little_endian j;
```

Both `i` and `j` will be accessed with little-endian byte order.

Using a type definition can sometimes make the code clearer:

```
typedef __packed int packed_int;
packed_int *q1;
```

`packed_int` is a typedef for packed integers. The variable `q1` can point to such integers.

You can also use the `#pragma type_attributes` directive to specify type attributes for a declaration. The type attributes specified in the pragma directive are applied to the data object or typedef being declared.

```
#pragma type_attribute=__packed
int * q2;
```

The variable `q2` is packed.

For more information about the uniform attribute syntax, see

*--uniform\_attribute\_syntax*, page 357 and *--no\_uniform\_attribute\_syntax*, page 344.



## Syntax for type attributes used on functions

The syntax for using type attributes on functions differs slightly from the syntax of type attributes on data objects. For functions, the attribute must be placed either in front of the return type, or inside the parentheses for function pointers, for example:

```
__irq __arm void my_handler(void);
```

or

```
void (__irq __arm * my_fp)(void);
```

You can also use `#pragma type_attribute` to specify the function type attributes:

```
#pragma type_attribute=__irq __arm
void my_handler(void);
```

```
#pragma type attribute=__irq __arm
typedef void my_fun_t(void);
my_fun_t * my_fp;
```

## OBJECT ATTRIBUTES

Normally, object attributes affect the internal functionality of functions and data objects, but not directly how the function is called or how the data is accessed. This means that an object attribute does not normally need to be present in the declaration of an object.

These object attributes are available:

- Object attributes that can be used for variables:
  - `__absolute`, `__no_alloc`, `__no_alloc16`, `__no_alloc_str`,  
`__no_alloc_str16`, `__no_init`, `__ro_placement`
- Object attributes that can be used for functions and variables:
  - `location`, `@`, `__root`, `__weak`
- Object attributes that can be used for functions:
  - `__cmse_nonsecure_entry`, `__intrinsic`, `__naked`, `__nested`, `__noreturn`,  
`__ramfunc`, `__stackless`

You can specify as many object attributes as required for a specific function or data object.

For more information about `location` and `@`, see *Controlling data and function placement in memory*, page 252.

### Syntax for object attributes

The object attribute must be placed in front of the type. For example, to place `myarray` in memory that is not initialized at startup:

```
__no_init int myarray[10];
```

The `#pragma object_attribute` directive can also be used. This declaration is equivalent to the previous one:

```
#pragma object_attribute=__no_init
int myarray[10];
```

**Note:** Object attributes cannot be used in combination with the `typedef` keyword.

---

## Summary of extended keywords

This table summarizes the extended keywords:

| Extended keyword                                              | Description                                                                                                                 |
|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <code>__absolute</code>                                       | Makes references to the object use absolute addressing                                                                      |
| <code>__arm</code>                                            | Makes a function execute in Arm mode                                                                                        |
| <code>__big_endian</code>                                     | Declares a variable to use the big-endian byte order                                                                        |
| <code>__cmse_nonsecure_call</code>                            | Declares a function pointer to call non-secure code                                                                         |
| <code>__cmse_nonsecure_entry</code>                           | Makes a function callable from a non-secure image                                                                           |
| <code>__exception</code>                                      | Declares a 64-bit mode exception function                                                                                   |
| <code>__fiq</code>                                            | Declares a fast interrupt function                                                                                          |
| <code>__interwork</code>                                      | Declares a function to be callable from both Arm and Thumb mode                                                             |
| <code>__intrinsic</code>                                      | Reserved for compiler internal use only                                                                                     |
| <code>__irq</code>                                            | Declares an interrupt function                                                                                              |
| <code>__little_endian</code>                                  | Declares a variable to use the little-endian byte order                                                                     |
| <code>__naked</code>                                          | Declares a function without generating code to set up or tear down the function's frame                                     |
| <code>__nested</code>                                         | Allows an <code>__irq</code> declared interrupt function to be nested, that is, interruptible by the same type of interrupt |
| <code>__no_alloc,</code><br><code>__no_alloc16</code>         | Makes a constant available in the execution file                                                                            |
| <code>__no_alloc_str,</code><br><code>__no_alloc_str16</code> | Makes a string literal available in the execution file                                                                      |

*Table 36: Extended keywords summary*

| Extended keyword            | Description                                                                                            |
|-----------------------------|--------------------------------------------------------------------------------------------------------|
| <code>__no_init</code>      | Places a data object in non-volatile memory                                                            |
| <code>__noreturn</code>     | Informs the compiler that the function will not return                                                 |
| <code>__packed</code>       | Decreases data type alignment to 1                                                                     |
| <code>__prel</code>         | Used internally by the compiler for constant data when the <code>--ropi</code> compiler option is used |
| <code>__ramfunc</code>      | Makes a function execute in RAM                                                                        |
| <code>__ro_placement</code> | Places <code>const volatile</code> data in read-only memory.                                           |
| <code>__root</code>         | Ensures that a function or variable is included in the object code even if unused                      |
| <code>__sbrel</code>        | Used internally by the compiler for constant data when the <code>--rwpi</code> compiler option is used |
| <code>__stackless</code>    | Makes a function callable without a working stack                                                      |
| <code>__svc</code>          | Declares a 32-bit mode software interrupt function or a 64-bit mode software exception function        |
| <code>__swi</code>          | Alias for <code>__svc</code>                                                                           |
| <code>__task</code>         | Relaxes the rules for preserving registers                                                             |
| <code>__thumb</code>        | Makes a function execute in Thumb mode                                                                 |
| <code>__weak</code>         | Declares a symbol to be externally weakly linked                                                       |

Table 36: Extended keywords summary (Continued)

## Descriptions of extended keywords

This section gives detailed information about each extended keyword.

### `__absolute`

Syntax

See *Syntax for object attributes*, page 426.

Description

The `__absolute` keyword makes references to the object use absolute addressing. The following limitations apply:

- Only available when the `--ropi` or `--rwpi` compiler option is used
- Can only be used on external declarations.

Example

```
extern __absolute char otherBuffer[100];
```

## **\_\_arm**

|             |                                                                                                                                                                                                                  |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for type attributes used on functions</i> , page 425.                                                                                                                                              |
| Description | The <code>__arm</code> keyword makes a function execute in Arm mode.<br>A function declared <code>__arm</code> cannot be declared <code>__thumb</code> .<br><b>In 64-bit mode</b> , this keyword cannot be used. |
| Example     | <pre>__arm int func1(void);</pre>                                                                                                                                                                                |

## **\_\_big\_endian**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for type attributes used on data objects</i> , page 424.                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Description | The <code>__big_endian</code> keyword is used for accessing a variable that is stored in the big-endian byte order regardless of what byte order the rest of the application uses. The <code>__big_endian</code> keyword is available when you compile for Armv6 or higher. It cannot be used <b>in 64-bit mode</b> .<br><b>Note:</b> If this keyword is used with a pointer, that pointer will not be compatible with pointers that do not have a <code>__big_endian</code> or <code>__little_endian</code> attribute. |
| Example     | <pre>__big_endian long my_variable;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| See also    | <code>__little_endian</code> , page 431.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## **\_\_cmse\_nonsecure\_call**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for type attributes used on functions</i> , page 425.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Description | The keyword <code>__cmse_nonsecure_call</code> can be used on a function pointer, and indicates that a call via the pointer will enter non-secure state. The execution state will be cleared up before such a call, to avoid leaking sensitive data to the non-secure state.<br>The <code>__cmse_nonsecure_call</code> keyword can only be used with a function pointer, and it is only allowed when compiling with <code>--cmse</code> .<br>The keyword <code>__cmse_nonsecure_call</code> is not supported for variadic functions, for functions with parameters or return values that do not fit in registers, or for functions with parameters or return values in floating-point registers.<br><b>Note:</b> This keyword can also be used as a GCC-style attribute, using the <code>__attribute__ ((attribute-list))</code> syntax. |

**In 64-bit mode**, this keyword cannot be used.

**Example**

```
#include <arm_cmse.h>
typedef __cmse_nonsecure_call void (*fp_ns_t)(void);
static fp_ns_t callback_ns = 0;
__cmse_nonsecure_entry void set_callback_ns(fp_ns_t func_ns) {
    callback_ns = cmse_nsfptr_create(func_ns);
}
```

**See also** `--cmse`, page 317.

## **\_\_cmse\_nonsecure\_entry**

**Syntax** See *Syntax for object attributes*, page 426.

**Description** The `__cmse_nonsecure_entry` keyword declares an entry function that can be called from the non-secure state. The execution state will be cleared before returning to the caller, to avoid leaking sensitive data to the non-secure state.

The keyword `__cmse_nonsecure_entry` is not supported for variadic functions or functions with parameters or return values that do not fit in registers.

The keyword `__cmse_nonsecure_entry` is only allowed when compiling with `--cmse`.

**Note:** This keyword can also be used as a GCC-style attribute, using the `__attribute__ ((attribute-list))` syntax.

**In 64-bit mode**, this keyword cannot be used.

**Example**

```
#include <arm_cmse.h>
__cmse_nonsecure_entry int secure_add(int a, int b) {
    return cmse_nonsecure_caller() ? a + b : 0;
}
```

**See also** `--cmse`, page 317.

## **\_\_exception**

**Syntax** See *Syntax for type attributes used on functions*, page 425.

**Description** The `__exception` keyword makes a function usable in one of the exception vectors in the 64-bit mode exception table.

Example `__exception void my_function(void);`

See also *Exception functions for 64-bit mode*, page 88.

## **\_\_fiq**

Syntax See *Syntax for type attributes used on functions*, page 425.

Description The `__fiq` keyword declares a fast interrupt function. All interrupt functions must be compiled in Arm mode. A function declared `__fiq` does not accept parameters and does not have a return value. This keyword is not available when you compile for Cortex-M devices.

**In 64-bit mode**, this keyword cannot be used.

Example `__fiq __arm void interrupt_function(void);`

## **\_\_interwork**

Syntax See *Syntax for type attributes used on functions*, page 425.

Description A function declared `__interwork` can be called from functions executing in either Arm or Thumb mode. **In 64-bit mode**, this keyword cannot be used.

**Note:** All functions are interwork. The keyword exists for compatibility reasons.

Example `typedef void (__thumb __interwork *IntHandler)(void);`

## **\_\_intrinsic**

Description The `__intrinsic` keyword is reserved for compiler internal use only.

## **\_\_irq**

Syntax See *Syntax for type attributes used on functions*, page 425.

Description The `__irq` keyword declares an interrupt function. All interrupt functions must be compiled in Arm mode. A function declared `__irq` does not accept parameters and does not have a return value. This keyword is not available when you compile for Cortex-M devices. **In 64-bit mode**, this keyword cannot be used.

Example `__irq __arm void interrupt_function(void);`

See also `--align_sp_on_irq`, page 315.

## **\_\_little\_endian**

Syntax See *Syntax for type attributes used on data objects*, page 424.

Description The `__little_endian` keyword is used for accessing a variable that is stored in the little-endian byte order regardless of what byte order the rest of the application uses. The `__little_endian` keyword is available when you compile for Armv6 or higher. It cannot be used **in 64-bit mode**.

**Note:** If this keyword is used with a pointer, that pointer will not be compatible with pointers that do not have a `__big_endian` or `__little_endian` attribute.

Example `__little_endian long my_variable;`

See also `__big_endian`, page 428.

## **\_\_naked**

Syntax See *Syntax for object attributes*, page 426.

Description This keyword declares a function for which the compiler does not generate code to set up or tear down the function's frame.

The compiler is severely limited by not having a frame layout, so the body of the declared function body should consist of `__asm` statements. Using extended assembly, parameter references, or mixing C code with `__asm` statements might not work reliably.

**Note:** It is not possible to call a function declared with the `__naked` keyword.

Example `__naked void save_process_state(void);`  
`__naked void restore_process_state(void);`

## **\_\_nested**

Syntax See *Syntax for object attributes*, page 426.

Description **In 32-bit mode**, the `__nested` keyword modifies the enter and exit code of an interrupt function to allow for nested interrupts. This allows interrupts to be enabled, which

means new interrupts can be served inside an interrupt function, without overwriting the SPSR and return address in R14. Nested interrupts are only supported for `__irq` declared functions.

**Note:** The `__nested` keyword requires the processor mode to be in either User or System mode.

**In 64-bit mode**, the `__nested` keyword modifies the enter and exit of an exception function to allow for nested exceptions. See *Exception functions for 64-bit mode*, page 88.

**Example** `__irq __nested __arm void interrupt_handler(void);`

**See also** *Nested interrupts*, page 86 and `--align_sp_on_irq`, page 315.

## `__no_alloc, __no_alloc16`

**Syntax** See *Syntax for object attributes*, page 426.

**Description** Use the `__no_alloc` or `__no_alloc16` object attribute on a constant to make the constant available in the executable file without occupying any space in the linked application.

You cannot access the contents of such a constant from your application. You can take its address, which is an integer offset to the section of the constant. The type of the offset is `unsigned long` when `__no_alloc` is used, and `unsigned short` when `__no_alloc16` is used.

**Example** `__no_alloc const struct MyData my_data @ "XXX" = {...};`

**See also** `__no_alloc_str`, `__no_alloc_str16`, page 433.



## `__no_alloc_str`, `__no_alloc_str16`

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>__no_alloc_str(<i>string_literal</i> @ <i>section</i>) and __no_alloc_str16(<i>string_literal</i> @ <i>section</i>)</pre> <p>where:</p> <p><i>string_literal</i>      The string literal that you want to make available in the executable file.</p> <p><i>section</i>              The name of the section to place the string literal in.</p>                                                                                                                                                               |
| Description | <p>Use the <code>__no_alloc_str</code> or <code>__no_alloc_str16</code> operators to make string literals available in the executable file without occupying any space in the linked application.</p> <p>The value of the expression is the offset of the string literal in the section. For <code>__no_alloc_str</code>, the type of the offset is unsigned long. For <code>__no_alloc_str16</code>, the type of the offset is unsigned short.</p>                                                                |
| Example     | <pre>#define MYSEG "YYY" #define X(str) __no_alloc_str(str @ MYSEG)  extern void dbg_printf(unsigned long fmt, ...)  #define DBGPRINTF(fmt, ...) dbg_printf(X(fmt), __VA_ARGS__)  void foo(int i, double d) {     DBGPRINTF("The value of i is: %d, the value of d is: %f",i,d); }</pre> <p>Depending on your debugger and the runtime support, this could produce trace output on the host computer.</p> <p><b>Note:</b> There is no such runtime support in C-SPY, unless you use an external plugin module.</p> |
| See also    | <code>__no_alloc</code> , <code>__no_alloc16</code> , page 432.                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## **\_\_no\_init**

|             |                                                                                                                                                                                         |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for object attributes</i> , page 426.                                                                                                                                     |
| Description | Use the <code>__no_init</code> keyword to place a data object in non-volatile memory. This means that the initialization of the variable, for example at system startup, is suppressed. |
| Example     | <pre>__no_init int myarray[10];</pre>                                                                                                                                                   |
| See also    | <i>Non-initialized variables</i> , page 267 and <i>do not initialize directive</i> , page 573.                                                                                          |

## **\_\_noreturn**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for object attributes</i> , page 426.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Description | <p>The <code>__noreturn</code> keyword can be used on a function to inform the compiler that the function will not return. If you use this keyword on such functions, the compiler can optimize more efficiently. Examples of functions that do not return are <code>abort</code> and <code>exit</code>.</p> <p><b>Note:</b> At optimization levels Medium or High, the <code>__noreturn</code> keyword might cause incorrect call stack debug information at any point where it can be determined that the current function cannot return.</p> <p><b>Note:</b> The extended keyword <code>__noreturn</code> has the same meaning as the Standard C keyword <code>_Noreturn</code> or the macro <code>noreturn</code> (if <code>stdnoreturn.h</code> has been included) and as the Standard C++ attribute <code>[[noreturn]]</code>.</p> |
| Example     | <pre>__noreturn void terminate(void);</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## **\_\_packed**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for type attributes used on data objects</i> , page 424. An exception is when the keyword is used for modifying the structure type in a <code>struct</code> or <code>union</code> declarations, see below.                                                                                                                                                                                                  |
| Description | <p>Use the <code>__packed</code> keyword to specify a data alignment of 1 for a data type. <code>__packed</code> can be used in two ways:</p> <ul style="list-style-type: none"> <li>• When used before the <code>struct</code> or <code>union</code> keyword in a structure definition, the maximum alignment of each member in the structure is set to 1, eliminating the need for gaps between the members.</li> </ul> |

You can also use the `__packed` keyword with structure declarations, but it is illegal to refer to a structure type defined without the `__packed` keyword using a structure declaration with the `__packed` keyword.

- When used in any other position, it follows the syntax rules for type attributes, and affects a type in its entirety. A type with the `__packed` type attribute is the same as the type attribute without the `__packed` type attribute, except that it has a data alignment of 1. Types that already have an alignment of 1 are not affected by the `__packed` type attribute.

A normal pointer can be implicitly converted to a pointer to `__packed`, but the reverse conversion requires a cast.

**Note:** Accessing data types at other alignments than their natural alignment can result in code that is significantly larger and slower.

Use either `__packed` or `#pragma pack` to relax the alignment restrictions for a type and the objects defined using that type. Mixing `__packed` and `#pragma pack` might lead to unexpected behavior.

#### Example

```
/* No pad bytes in X: */
__packed struct X { char ch; int i; };
/* __packed is optional here: */
struct X * xp;

/* NOTE: no __packed: */
struct Y { char ch; int i; };
/* ERROR: Y not defined with __packed: */
__packed struct Y * yp ;

/* Member 'i' has alignment 1: */
struct Z { char ch; __packed int i; };

void Foo(struct X * xp)
{
    /* Error:"int __packed *" -> "int *" not allowed: */
    int * p1 = &xp->i;
    /* OK: */
    int __packed * p2 = &xp->i;
    /* OK, char not affected */
    char * p3 = &xp->ch;
}
```

See also

*pack*, page 461.

## **\_\_ramfunc**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for object attributes</i> , page 426.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Description | <p>The <code>__ramfunc</code> keyword makes a function execute in RAM. Two code sections will be created: one for the RAM execution (<code>.textrw</code>), and one for the ROM initialization (<code>.textrw_init</code>).</p> <p>If a function declared <code>__ramfunc</code> tries to access ROM, the compiler will issue an error. This behavior is intended to simplify the creation of <i>upgrade</i> routines, for instance, rewriting parts of flash memory.</p> <p>Functions declared <code>__ramfunc</code> are by default stored in the section named <code>.textrw</code>.</p> <p>For functions declared <code>__ramfunc</code>, the <code>initialize manually</code> command in the linker configuration file disables the regular automatic <code>initialize by copy</code> mechanism and calls the <code>__iar_init_ramfunc</code> function instead.</p> <p>If you do not want to initialize <code>__ramfunc</code> functions, you must replace the <code>__iar_init_ramfunc</code> function with a dummy function, like this:</p> <pre>void * __iar_init_ramfunc(void * tab) {     return tab; }</pre> |
| Example     | <code>__ramfunc int FlashPage(char * data, char * page);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| See also    | <p><i>Execution in RAM</i>, page 81.</p> <p>To read more about <code>__ramfunc</code> declared functions in relation to breakpoints, see the <i>C-SPY® Debugging Guide for Arm</i>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## **\_\_ro\_placement**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for object attributes</i> , page 426.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Description | <p>The <code>__ro_placement</code> attribute specifies that a data object should be placed in read-only memory. There are two cases where you might want to use this object attribute:</p> <ul style="list-style-type: none"> <li>• Data objects declared <code>const volatile</code> are by default placed in read-write memory. Use the <code>__ro_placement</code> object attribute to place the data object in read-only memory instead.</li> <li>• In C++, a data object declared <code>const</code> and that needs dynamic initialization is placed in read-write memory and initialized at system startup. If you use the</li> </ul> |

`__ro_placement` object attribute, the compiler will give an error message if the data object needs dynamic initialization.

You can only use the `__ro_placement` object attribute on `const` objects.

You can use the `__ro_placement` attribute with C++ objects if the compiler can optimize the C++ dynamic initialization of the data objects into static initialization. This is possible only for relatively simple constructors that have been defined in the header files of the relevant class definitions, so that they are visible to the compiler. If the compiler cannot find the constructor, or if the constructor is too complex, an error message will be issued (`Error[Go023]`) and the compilation will fail.

Example

```
__ro_placement const volatile int x = 10;
```

## \_\_root

Syntax

See *Syntax for object attributes*, page 426.

Description

A function or variable with the `__root` attribute is kept whether or not it is referenced from the rest of the application, provided its module is included. Program modules are always included and library modules are only included if needed.

Example

```
__root int myarray[10];
```

See also

For more information about root symbols and how they are kept, see *Keeping symbols and sections*, page 119.

## \_\_stackless

Syntax

See *Syntax for object attributes*, page 426.

Description

The `__stackless` keyword declares a function that can be called without a working stack.



A function declared `__stackless` violates the calling convention in such a way that it is not possible to return from it. However, the compiler cannot reliably detect if the function returns and will not issue an error if it does.

Example

```
__stackless void start_application(void);
```

**\_\_SVC**

Syntax

See *Syntax for type attributes used on functions*, page 425.

Description

**32-bit mode:**

The `__svc` keyword declares a software interrupt function. It inserts an `SVC` (formerly `SWI`) instruction and the specified software interrupt number to make a proper function call. A function declared `__svc` accepts arguments and returns values. The `__svc` keyword makes the compiler generate the correct return sequence for a specific software interrupt function. Software interrupt functions follow the same calling convention regarding parameters and return values as an ordinary function, except for the stack usage.

The `__svc` keyword also expects a software interrupt number which is specified with the `#pragma svc_number=number` directive. The `svc_number` is used as an argument to the generated assembler `SVC` instruction, and can be used by the `SVC` interrupt handler, for example `SVC_Handler`, to select one software interrupt function in a system that contains several such functions.

**Note:** The software interrupt number should only be specified in the function declaration—typically, in a header file that you include in the source code file that calls the interrupt function—not in the function definition.

**Note:** All interrupt functions must be compiled in Arm mode, except for Cortex-M. Use either the `__arm` keyword or the `#pragma type_attribute=__arm` directive to alter the default behavior if needed.

**64-bit mode:**

The `__svc` keyword makes a function usable in one of the exception vectors in the 64-bit Arm exception table. See *Exception functions for 64-bit mode*, page 88.

Example

To declare your software interrupt function, typically in a header file, write for example like this:

```
#pragma svc_number=0x23
__svc int svc0x23_function(int a, int b);
...
```

To call the function:

```
...
int x = svc0x23_function(1, 2); /* Will be replaced by SVC 0x23,
                               hence the linker will never
                               try to locate the
                               svc0x23_function */
...
```

Somewhere in your application source code, you define your software interrupt function:

```
...
__svc __arm int the_actual_svc0x23_function(int a, int b)
{
    ...
    return 42;
}
```

See also

*Software interrupts*, page 87, *Calling convention*, page 189, and *Exception functions for 64-bit mode*, page 88.

## \_\_task

Syntax

See *Syntax for type attributes used on functions*, page 425.

Description

This keyword allows functions to relax the rules for preserving registers. Typically, the keyword is used on the start function for a task in an RTOS.

By default, functions save the contents of used preserved registers on the stack upon entry, and restore them at exit. Functions that are declared `__task` do not save all registers, and therefore require less stack space.

Because a function declared `__task` can corrupt registers that are needed by the calling function, you should only use `__task` on functions that do not return or call such a function from assembler code.

The function `main` can be declared `__task`, unless it is explicitly called from the application. In real-time applications with more than one task, the root function of each task can be declared `__task`.

Example

```
__task void my_handler(void);
```

## \_\_thumb

Syntax

See *Syntax for type attributes used on functions*, page 425.

Description

The `__thumb` keyword makes a function execute in Thumb mode.

A function declared `__thumb` cannot be declared `__arm`.

**In 64-bit mode**, this keyword cannot be used.

Example

```
__thumb int func2(void);
```

**\_\_weak**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | See <i>Syntax for object attributes</i> , page 426.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Description | <p>Using the <code>__weak</code> object attribute on an external declaration of a symbol makes all references to that symbol in the module weak.</p> <p>Using the <code>__weak</code> object attribute on a public definition of a symbol makes that definition a weak definition.</p> <p>The linker will not include a module from a library solely to satisfy weak references to a symbol, nor will the lack of a definition for a weak reference result in an error. If no definition is included, the address of the object will be zero.</p> <p>When linking, a symbol can have any number of weak definitions, and at most one non-weak definition. If the symbol is needed, and there is a non-weak definition, this definition will be used. If there is no non-weak definition, one of the weak definitions will be used.</p> |
| Example     | <pre>extern __weak int foo; /* A weak reference. */  __weak void bar(void) /* A weak definition. */ {     /* Increment foo if it was included. */     if (&amp;foo != 0)         ++foo; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

---

## Supported GCC attributes

In extended language mode, the IAR C/C++ Compiler also supports a limited selection of GCC-style attributes. Use the `__attribute__((attribute-list))` syntax for these attributes.

The following attributes are supported in part or in whole. For more information, see the GCC documentation.

- `alias`
- `aligned`
- `always_inline`

In contrast to the GCC implementation, the attribute implies `inline` on the function, and no diagnostic message will be produced when `always_inline` is used on a non-inline function.



- `cmse_nonsecure_call`  
See also `__cmse_nonsecure_call`, page 428.

- `cmse_nonsecure_entry`  
See also `__cmse_nonsecure_entry`, page 429.

- `const`

- `constructor`

Functions with the attribute `constructor` will be called at the end of dynamic initialization—after static initialization, and before `main` is called. If the attribute is used on multiple functions, they will be called in the order of definition.

The attribute is recognized, but has no effect, when used on objects compiled with the option `--shared`.

- `deprecated`

- `format`

- `naked`

- `noinline`

- `noreturn`

- `packed`

When used on an enum definition, the `packed` attribute has an effect only if the option `--enum_is_int` has been specified. In that case the smallest possible underlying type is selected for the enum. (This is otherwise the default behavior for the compiler).

Note that when using the GCC-style attribute `packed`, no diagnostics messages are produced for potential unaligned `struct` member accesses. To be informed of such accesses, use the IAR type attribute `__packed`.

- `pcs` (for IAR type attributes used on functions)
- `pure`
- `section`
- `target` (for IAR object attributes used on functions)
- `unused`
- `used`
- `visibility`

For reference information, see *visibility*, page 442.

- `volatile`

- `warn_unused_result`

- `weak`

Note that when the IAR attribute `__weak` is used on a declaration or on a tentative definition with a subsequent definition, the object is not made weak. Using the GCC-style attribute `weak`, the object will be made weak.

## visibility

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>__attribute__((visibility ("type")))</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Parameters  | <p><i>type</i>                      One of these values:</p> <ul style="list-style-type: none"> <li>● <code>default</code></li> <li>● <code>hidden</code></li> <li>● <code>internal</code></li> <li>● <code>protected</code></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Description | <p>This attribute is supported in C mode. Code that uses it must be compiled with the option <code>--shared</code>. Otherwise, the attribute is recognized but has no effect. It can be used with functions and variables.</p> <p>These limitations apply:</p> <ul style="list-style-type: none"> <li>● The <code>visibility</code> attribute cannot be used on types. Doing so causes a diagnostic message to be emitted.</li> <li>● Used on an <code>extern</code> declaration of an object, without a corresponding definition or tentative definition, the attribute has no effect.</li> <li>● The visibility type <code>internal</code> is treated as <code>hidden</code> by the linker.</li> </ul> |
| Example     | <pre>void __attribute__((visibility ("hidden"))) myFunction() { }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| See also    | <code>--so_export</code> , page 282 and <code>--visibility</code> , page 285.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

# Pragma directives

- Summary of pragma directives
- Descriptions of pragma directives

---

## Summary of pragma directives

The `#pragma` directive is defined by Standard C and is a mechanism for using vendor-specific extensions in a controlled way to make sure that the source code is still portable.

The pragma directives control the behavior of the compiler, for example, how it allocates memory for variables and functions, whether it allows extended keywords, and whether it outputs warning messages.

The pragma directives are always enabled in the compiler.

This table lists the pragma directives of the compiler that can be used either with the `#pragma` preprocessor directive or the `_Pragma()` preprocessor operator:

| <b>Pragma directive</b>                  | <b>Description</b>                                                                                                                             |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>bitfields</code>                   | Controls the order of bitfield members.                                                                                                        |
| <code>calls</code>                       | Lists possible called functions for indirect calls.                                                                                            |
| <code>call_graph_root</code>             | Specifies that the function is a call graph root.                                                                                              |
| <code>cstat_disable</code>               | See the <i>C-STAT® Static Analysis Guide</i> .                                                                                                 |
| <code>cstat_enable</code>                | See the <i>C-STAT® Static Analysis Guide</i> .                                                                                                 |
| <code>cstat_restore</code>               | See the <i>C-STAT® Static Analysis Guide</i> .                                                                                                 |
| <code>cstat_suppress</code>              | See the <i>C-STAT® Static Analysis Guide</i> .                                                                                                 |
| <code>data_alignment</code>              | Gives a variable a higher (more strict) alignment.                                                                                             |
| <code>default_function_attributes</code> | Sets default type and object attributes for declarations and definitions of functions.                                                         |
| <code>default_no_bounds</code>           | Applies <code>#pragma no_bounds</code> to a whole set of functions. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> . |
| <code>default_variable_attributes</code> | Sets default type and object attributes for declarations and definitions of variables.                                                         |

---

*Table 37: Pragma directives summary*

| Pragma directive                           | Description                                                                                                                                                            |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>define_with_bounds</code>            | Instruments a function to track pointer bounds. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .                                             |
| <code>define_without_bounds</code>         | Defines the version of a function that does not have extra bounds information. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .              |
| <code>deprecated</code>                    | Marks an entity as deprecated.                                                                                                                                         |
| <code>diag_default</code>                  | Changes the severity level of diagnostic messages.                                                                                                                     |
| <code>diag_error</code>                    | Changes the severity level of diagnostic messages.                                                                                                                     |
| <code>diag_remark</code>                   | Changes the severity level of diagnostic messages.                                                                                                                     |
| <code>diag_suppress</code>                 | Suppresses diagnostic messages.                                                                                                                                        |
| <code>diag_warning</code>                  | Changes the severity level of diagnostic messages.                                                                                                                     |
| <code>disable_check</code>                 | Specifies that the immediately following function does not check accesses against bounds. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .   |
| <code>error</code>                         | Signals an error while parsing.                                                                                                                                        |
| <code>function_category</code>             | Declares function categories for stack usage analysis.                                                                                                                 |
| <code>generate_entry_without_bounds</code> | Enables generation of an extra entry without bounds for the immediately following function. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> . |
| <code>include_alias</code>                 | Specifies an alias for an include file.                                                                                                                                |
| <code>inline</code>                        | Controls inlining of a function.                                                                                                                                       |
| <code>language</code>                      | Controls the IAR language extensions.                                                                                                                                  |
| <code>location</code>                      | Specifies the absolute address of a variable, places a variable in a register, or places groups of functions or variables in named sections.                           |
| <code>message</code>                       | Prints a message.                                                                                                                                                      |
| <code>no_arith_checks</code>               | Specifies that no C-RUN arithmetic checks will be performed in the following function. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> .      |

Table 37: Pragma directives summary (Continued)

| Pragma directive                   | Description                                                                                                                                                           |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>no_bounds</code>             | Specifies that the immediately following function is not instrumented for bounds checking. See the C-RUN documentation in the <i>C-SPY® Debugging Guide for Arm</i> . |
| <code>no_stack_protect</code>      | Disables stack protection for the following function.                                                                                                                 |
| <code>object_attribute</code>      | Adds object attributes to the declaration or definition of a variable or function.                                                                                    |
| <code>once</code>                  | Prevents a header file from being processed more than once.                                                                                                           |
| <code>optimize</code>              | Specifies the type and level of an optimization.                                                                                                                      |
| <code>pack</code>                  | Specifies the alignment of structures and union members.                                                                                                              |
| <code>__printf_args</code>         | Verifies that a function with a printf-style format string is called with the correct arguments.                                                                      |
| <code>public_equ</code>            | Defines a public assembler label and gives it a value.                                                                                                                |
| <code>required</code>              | Ensures that a symbol that is needed by another symbol is included in the linked output.                                                                              |
| <code>rtmodel</code>               | Adds a runtime model attribute to the module.                                                                                                                         |
| <code>__scanf_args</code>          | Verifies that a function with a scanf-style format string is called with the correct arguments.                                                                       |
| <code>section</code>               | Declares a section name to be used by intrinsic functions.                                                                                                            |
| <code>segment</code>               | This directive is an alias for <code>#pragma section</code> .                                                                                                         |
| <code>section_prefix</code>        | Adds a prefix to the names of sections.                                                                                                                               |
| <code>stack_protect</code>         | Forces stack protection for the function that follows.                                                                                                                |
| <code>STDC CX_LIMITED_RANGE</code> | Specifies whether the compiler can use normal complex mathematical formulas or not.                                                                                   |
| <code>STDC FENV_ACCESS</code>      | Specifies whether your source code accesses the floating-point environment or not.                                                                                    |
| <code>STDC FP_CONTRACT</code>      | Specifies whether the compiler is allowed to contract floating-point expressions or not.                                                                              |
| <code>svc_number</code>            | Sets the interrupt number of a software interrupt ( <b>32-bit mode</b> ) or exception ( <b>64-bit mode</b> ).                                                         |
| <code>type_attribute</code>        | Adds type attributes to a declaration or to definitions.                                                                                                              |

Table 37: Pragma directives summary (Continued)

| Pragma directive       | Description                                                                                 |
|------------------------|---------------------------------------------------------------------------------------------|
| <code>unroll</code>    | Unrolls loops.                                                                              |
| <code>vectorize</code> | Enables or disables generation of NEON vector instructions for a loop.                      |
| <code>weak</code>      | Makes a definition a weak definition, or creates a weak alias for a function or a variable. |

Table 37: Pragma directives summary (Continued)

**Note:** For portability reasons, see also *Recognized pragma directives (6.10.6)*, page 707.

## Descriptions of pragma directives

This section gives detailed information about each pragma directive.

### bitfields

|             |                                                                                                       |                                                                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma bitfields={disjoint_types joined_types reversed_disjoint_types reversed default}</code> |                                                                                                                                                                                           |
| Parameters  | <code>disjoint_types</code>                                                                           | Bitfield members are placed from the least significant bit to the most significant bit in the container type. Storage containers of bitfields with different base types will not overlap. |
|             | <code>joined_types</code>                                                                             | Bitfield members are placed depending on the byte order. Storage containers of bitfields will overlap other structure members. For more information, see <i>Bitfields</i> , page 410.     |
|             | <code>reversed_disjoint_types</code>                                                                  | Bitfield members are placed from the most significant bit to the least significant bit in the container type. Storage containers of bitfields with different base types will not overlap. |
|             | <code>reversed</code>                                                                                 | This is an alias for <code>reversed_disjoint_types</code> .                                                                                                                               |
|             | <code>default</code>                                                                                  | Restores the default layout of bitfield members. The default behavior for the compiler is <code>joined_types</code> .                                                                     |
| Description | Use this pragma directive to control the layout of bitfield members.                                  |                                                                                                                                                                                           |

**Example**

```
#pragma bitfields=disjoint_types
/* Structure that uses disjoint bitfield types. */
struct S
{
    unsigned char  error : 1;
    unsigned char  size  : 4;
    unsigned short code  : 10;
};
#pragma bitfields=default /* Restores to default setting. */
```

**See also** *Bitfields*, page 410.

## calls

**Syntax** `#pragma calls=arg[, arg...]`

**Parameters** *arg* can be one of these:

*function*            A declared function

*category*            A string that represents the name of a function category

**Description** Use this pragma directive to specify all functions that can be indirectly called in the following statement. This information can be used for stack usage analysis in the linker. You can specify individual functions or function categories. Specifying a category is equivalent to specifying all included functions in that category.

**Example**

```
void Fun1(), Fun2();

void Caller(void (*fp)(void))
{
    #pragma calls = Fun1, Fun2, "Cat1"
    (*fp)();            // Can call Fun1, Fun2, and all
                       // functions in category "Cat1"
}
```

**See also** *function\_category*, page 454 and *Stack usage analysis*, page 107.

## call\_graph\_root

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma call_graph_root [=category]</code>                                                                                                                                                                                                                                                                                                                                                                                                                |
| Parameters  | <i>category</i> A string that identifies an optional call graph root category                                                                                                                                                                                                                                                                                                                                                                                   |
| Description | Use this pragma directive to specify that, for stack usage analysis purposes, the immediately following function is a call graph root. You can also specify an optional category. The compiler will usually automatically assign a call graph root category to interrupt and task functions. If you use the <code>#pragma call_graph_root</code> directive on such a function you will override the default category. You can specify any string as a category. |
| Example     | <code>#pragma call_graph_root="interrupt"</code>                                                                                                                                                                                                                                                                                                                                                                                                                |
| See also    | <i>Stack usage analysis</i> , page 107.                                                                                                                                                                                                                                                                                                                                                                                                                         |

## data\_alignment

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma data_alignment=expression</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Parameters  | <i>expression</i> A constant which must be a power of two (1, 2, 4, etc.).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Description | <p>Use this pragma directive to give the immediately following variable a higher (more strict) alignment of the start address than it would otherwise have. This directive can be used on variables with static and automatic storage duration.</p> <p>When you use this directive on variables with automatic storage duration, there is an upper limit on the allowed alignment for each function, determined by the calling convention used.</p> <p><b>Note:</b> Normally, the size of a variable is a multiple of its alignment. The <code>data_alignment</code> directive only affects the alignment of the variable's start address, and not its size, and can therefore be used for creating situations where the size is not a multiple of the alignment.</p> <p><b>Note:</b> To comply with the ISO C11 standard and later, it is recommended to use the alignment specifier <code>_Alignas</code> for C code. To comply with the C++11 standard and later, it is recommended to use the alignment specifier <code>alignas</code> for C++ code.</p> |



## default\_function\_attributes

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>#pragma default_function_attributes=[ attribute...]</pre> <p>where <i>attribute</i> can be:</p> <pre>type_attribute object_attribute @ section_name</pre>                                                                                                                                                                                                                                                                                                                                                        |
| Parameters  | <pre>type_attribute</pre> See <i>Type attributes</i> , page 423.<br><pre>object_attribute</pre> See <i>Object attributes</i> , page 425.<br><pre>@ section_name</pre> See <i>Data and function placement in sections</i> , page 254.                                                                                                                                                                                                                                                                                  |
| Description | <p>Use this pragma directive to set default section placement, type attributes, and object attributes for function declarations and definitions. The default settings are only used for declarations and definitions that do not specify type or object attributes or location in some other way.</p> <p>Specifying a <code>default_function_attributes</code> pragma directive with no attributes, restores the initial state where no such defaults have been applied to function declarations and definitions.</p> |
| Example     | <pre>/* Place following functions in section MYSEC */ #pragma default_function_attributes = @ "MYSEC" int fun1(int x) { return x + 1; } int fun2(int x) { return x - 1; } /* Stop placing functions into MYSEC */ #pragma default_function_attributes =</pre> <p>has the same effect as:</p> <pre>int fun1(int x) @ "MYSEC" { return x + 1; } int fun2(int x) @ "MYSEC" { return x - 1; }</pre>                                                                                                                       |
| See also    | <p><i>location</i>, page 456.</p> <p><i>object_attribute</i>, page 458.</p> <p><i>type_attribute</i>, page 467.</p>                                                                                                                                                                                                                                                                                                                                                                                                   |

## default\_variable\_attributes

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>#pragma default_variable_attributes=[ attribute...]</pre> <p>where <i>attribute</i> can be:</p> <pre>type_attribute object_attribute @ section_name</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Parameters  | <pre>type_attribute</pre> See <i>Type attributes</i> , page 423.<br><pre>object_attributes</pre> See <i>Object attributes</i> , page 425.<br><pre>@ section_name</pre> See <i>Data and function placement in sections</i> , page 254.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Description | <p>Use this pragma directive to set default section placement, type attributes, and object attributes for declarations and definitions of variables with static storage duration. The default settings are only used for declarations and definitions that do not specify type or object attributes or location in some other way.</p> <p>Specifying a <code>default_variable_attributes</code> pragma directive with no attributes restores the initial state of no such defaults being applied to variables with static storage duration.</p> <p><b>Note:</b> The extended keyword <code>__packed</code> can be used in two ways—as a normal type attribute and in a structure type definition. The pragma directive <code>default_variable_attributes</code> only affects the use of <code>__packed</code> as a type attribute. Structure definitions are not affected by this pragma directive. See <i>__packed</i>, page 434.</p> |
| Example     | <pre>/* Place following variables in section MYSEC */ #pragma default_variable_attributes = @ "MYSEC" int var1 = 42; int var2 = 17; /* Stop placing variables into MYSEC */ #pragma default_variable_attributes =</pre> <p>has the same effect as:</p> <pre>int var1 @ "MYSEC" = 42; int var2 @ "MYSEC" = 17;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| See also    | <p><i>location</i>, page 456.</p> <p><i>object_attribute</i>, page 458.</p> <p><i>type_attribute</i>, page 467.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## deprecated

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma deprecated=entity</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Description | <p>If you place this pragma directive immediately before the declaration of a type, variable, function, field, or constant, any use of that type, variable, function, field, or constant will result in a warning.</p> <p>The <code>deprecated</code> pragma directive has the same effect as the C++ attribute <code>[[deprecated]]</code>, but is available in C as well.</p>                                                                                                                        |
| Example     | <pre>#pragma deprecated typedef int * intp_t; // typedef intp_t is deprecated  #pragma deprecated extern int fun(void); // function fun is deprecated  #pragma deprecated struct xx {           // struct xx is deprecated     int x; };  struct yy { #pragma deprecated     int y;           // field y is deprecated };  intp_t fun(void)     // Warning here {     struct xx ax;   // Warning here     struct yy ay;     fun();          // Warning here     return ay.y;   // Warning here }</pre> |
| See also    | Annex K ( <i>Bounds-checking interfaces</i> ) of the C standard.                                                                                                                                                                                                                                                                                                                                                                                                                                       |

## diag\_default

|            |                                                                                                                                |
|------------|--------------------------------------------------------------------------------------------------------------------------------|
| Syntax     | <code>#pragma diag_default=tag[, tag, ...]</code>                                                                              |
| Parameters | <p><i>tag</i>                      The number of a diagnostic message, for example, the message number <code>Pe177</code>.</p> |

**Description** Use this pragma directive to change the severity level back to the default, or to the severity level defined on the command line by any of the options `--diag_error`, `--diag_remark`, `--diag_suppress`, or `--diag_warnings`, for the diagnostic messages specified with the tags. This level remains in effect until changed by another diagnostic-level pragma directive.

**See also** *Diagnostics*, page 302.

## **diag\_error**

**Syntax** `#pragma diag_error=tag[, tag, ...]`

**Parameters**

*tag* The number of a diagnostic message, for example, the message number `Pe177`.

**Description** Use this pragma directive to change the severity level to `error` for the specified diagnostics. This level remains in effect until changed by another diagnostic-level pragma directive.

**See also** *Diagnostics*, page 302.

## **diag\_remark**

**Syntax** `#pragma diag_remark=tag[, tag, ...]`

**Parameters**

*tag* The number of a diagnostic message, for example, the message number `Pe177`.

**Description** Use this pragma directive to change the severity level to `remark` for the specified diagnostic messages. This level remains in effect until changed by another diagnostic-level pragma directive.

**See also** *Diagnostics*, page 302.

## diag\_suppress

|             |                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma diag_suppress=tag[, tag, ...]</code>                                                                                                                |
| Parameters  | <i>tag</i> The number of a diagnostic message, for example, the message number Pe117.                                                                             |
| Description | Use this pragma directive to suppress the specified diagnostic messages. This level remains in effect until changed by another diagnostic-level pragma directive. |
| See also    | <i>Diagnostics</i> , page 302.                                                                                                                                    |

## diag\_warning

|             |                                                                                                                                                                                                                |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma diag_warning=tag[, tag, ...]</code>                                                                                                                                                              |
| Parameters  | <i>tag</i> The number of a diagnostic message, for example, the message number Pe826.                                                                                                                          |
| Description | Use this pragma directive to change the severity level to <code>warning</code> for the specified diagnostic messages. This level remains in effect until changed by another diagnostic-level pragma directive. |
| See also    | <i>Diagnostics</i> , page 302.                                                                                                                                                                                 |

## error

|             |                                                                                                                                                                                                                                                                                                                                                       |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma error message</code>                                                                                                                                                                                                                                                                                                                    |
| Parameters  | <i>message</i> A string that represents the error message.                                                                                                                                                                                                                                                                                            |
| Description | Use this pragma directive to cause an error message when it is parsed. This mechanism is different from the preprocessor directive <code>#error</code> , because the <code>#pragma error</code> directive can be included in a preprocessor macro using the <code>_Pragma</code> form of the directive and only causes an error if the macro is used. |

Example

```
#if FOO_AVAILABLE
#define FOO ...
#else
#define FOO _Pragma("error\Foo is not available")
#endif
```

If `FOO_AVAILABLE` is zero, an error will be signaled if the `FOO` macro is used in actual source code.

## function\_category

Syntax

```
#pragma function_category=category[, category...]
```

Parameters

*category*                      A string that represents the name of a function category.

Description

Use this pragma directive to specify one or more function categories that the immediately following function belongs to. When used together with `#pragma` calls, the `function_category` directive specifies the destination for indirect calls for stack usage analysis purposes.

Example

```
#pragma function_category="Cat1"
```

See also

*calls*, page 447 and *Stack usage analysis*, page 107.

## include\_alias

Syntax

```
#pragma include_alias ("orig_header" , "subst_header")
#pragma include_alias (<orig_header> , <subst_header>)
```

Parameters

*orig\_header*                      The name of a header file for which you want to create an alias.

*subst\_header*                      The alias for the original header file.

Description

Use this pragma directive to provide an alias for a header file. This is useful for substituting one header file with another, and for specifying an absolute path to a relative file.

This pragma directive must appear before the corresponding `#include` directives and `subst_header` must match its corresponding `#include` directive exactly.

**Example**

```
#pragma include_alias (<stdio.h> , <C:\MyHeaders\stdio.h>)
#include <stdio.h>
```

This example will substitute the relative file `stdio.h` with a counterpart located according to the specified path.

**See also** *Include file search procedure*, page 297.

## inline

**Syntax** `#pragma inline[=forced|=never|=no_body|=forced_no_body]`

### Parameters

|                             |                                                                                                          |
|-----------------------------|----------------------------------------------------------------------------------------------------------|
| No parameter                | Has the same effect as the <code>inline</code> keyword.                                                  |
| <code>forced</code>         | Disables the compiler's heuristics and forces inlining.                                                  |
| <code>never</code>          | Disables the compiler's heuristics and makes sure that the function will not be inlined.                 |
| <code>no_body</code>        | Has the same effect as the <code>inline</code> keyword, but the generated function will not have a body. |
| <code>forced_no_body</code> | Disables the compiler's heuristics and forces inlining. The generated function will not have a body.     |

**Description** Use `#pragma inline` to advise the compiler that the function defined immediately after the directive should be inlined according to C++ inline semantics.

Specifying `#pragma inline=forced` or `#pragma inline=forced_no_body` will always inline the defined function. If the compiler fails to inline the function for some reason, for example due to recursion, a warning message is emitted.

Inlining is normally performed only on the High optimization level. Specifying `#pragma inline=forced` or `#pragma inline=forced_no_body` will inline the function on all optimization levels or result in an error due to recursion, etc.

**See also** *Inlining functions*, page 92.

## language

|                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|--------------------------------------------------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                    | <code>#pragma language={extended default save restore}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
| Parameters                | <table> <tr> <td><code>extended</code></td> <td>Enables the IAR language extensions from the first use of the pragma directive and onward.</td> </tr> <tr> <td><code>default</code></td> <td>From the first use of the pragma directive and onward, restores the settings for the IAR language extensions to whatever that was specified by compiler options.</td> </tr> <tr> <td><code>save restore</code></td> <td>Saves and restores, respectively, the IAR language extensions setting around a piece of source code.<br/><br/>Each use of <code>save</code> must be followed by a matching <code>restore</code> in the same file without any intervening <code>#include</code> directive.</td> </tr> </table> | <code>extended</code> | Enables the IAR language extensions from the first use of the pragma directive and onward. | <code>default</code> | From the first use of the pragma directive and onward, restores the settings for the IAR language extensions to whatever that was specified by compiler options. | <code>save restore</code> | Saves and restores, respectively, the IAR language extensions setting around a piece of source code.<br><br>Each use of <code>save</code> must be followed by a matching <code>restore</code> in the same file without any intervening <code>#include</code> directive. |
| <code>extended</code>     | Enables the IAR language extensions from the first use of the pragma directive and onward.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
| <code>default</code>      | From the first use of the pragma directive and onward, restores the settings for the IAR language extensions to whatever that was specified by compiler options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
| <code>save restore</code> | Saves and restores, respectively, the IAR language extensions setting around a piece of source code.<br><br>Each use of <code>save</code> must be followed by a matching <code>restore</code> in the same file without any intervening <code>#include</code> directive.                                                                                                                                                                                                                                                                                                                                                                                                                                            |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
| Description               | Use this pragma directive to control the use of language extensions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
| Example                   | <p>At the top of a file that needs to be compiled with IAR extensions enabled:</p> <pre>#pragma language=extended /* The rest of the file. */</pre> <p>Around a particular part of the source code that needs to be compiled with IAR extensions enabled, but where the state before the sequence cannot be assumed to be the same as that specified by the compiler options in use:</p> <pre>#pragma language=save #pragma language=extended /* Part of source code. */ #pragma language=restore</pre>                                                                                                                                                                                                            |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |
| See also                  | <code>-e</code> , page 326 and <code>--strict</code> , page 356.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                       |                                                                                            |                      |                                                                                                                                                                  |                           |                                                                                                                                                                                                                                                                         |

## location

|                      |                                                                                                                                                                               |                      |                                                                                                            |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------------------|
| Syntax               | <code>#pragma location={address register NAME}</code>                                                                                                                         |                      |                                                                                                            |
| Parameters           | <table> <tr> <td><code>address</code></td> <td>The absolute address of the global or static variable or function for which you want an absolute location.</td> </tr> </table> | <code>address</code> | The absolute address of the global or static variable or function for which you want an absolute location. |
| <code>address</code> | The absolute address of the global or static variable or function for which you want an absolute location.                                                                    |                      |                                                                                                            |



|                 |                                                                                                                               |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------|
| <i>register</i> | An identifier that corresponds to one of the Arm core registers R4–R11. This parameter cannot be used <b>in 64-bit mode</b> . |
| <i>NAME</i>     | A user-defined section name—cannot be a section name predefined for use by the compiler and linker.                           |

**Description**

Use this pragma directive to specify:

- The location—the absolute address—of the global or static variable whose declaration follows the pragma directive.
- An identifier specifying a register. The variable defined after the pragma directive is placed in the register. The variable must be declared as `__no_init` and have file scope.

A string specifying a section for placing either a variable or function whose declaration follows the pragma directive. Do not place variables that would normally be in different sections—for example, variables declared as `__no_init` and variables declared as `const`—in the same named section.

**Example**

```
#pragma location=0xFFFF0400
__no_init volatile char PORT1; /* PORT1 is located at address
                                0xFFFF0400 */

#pragma location=R8
__no_init int TASK; /* TASK is placed in R8 */

#pragma location="FLASH"
char PORT2; /* PORT2 is located in section FLASH */

/* A better way is to use a corresponding mechanism */
#define FLASH _Pragma("location=\"FLASH\"")
/* ... */
FLASH int i; /* i is placed in the FLASH section */
```

**See also**

*Controlling data and function placement in memory*, page 252 and *Declare and place your own sections*, page 118.

## message

|             |                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma message (message)</code>                                                                                  |
| Parameters  | <i>message</i> The message that you want to direct to the standard output stream.                                       |
| Description | Use this pragma directive to make the compiler print a message to the standard output stream when the file is compiled. |
| Example     | <pre>#ifdef TESTING #pragma message ("Testing") #endif</pre>                                                            |

## no\_stack\_protect

|             |                                                                                                                                                                                                                        |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma no_stack_protect</code>                                                                                                                                                                                  |
| Description | <p>Use this pragma directive to disable stack protection for the defined function that follows.</p> <p>This pragma directive only has effect if the compiler option <code>--stack_protection</code> has been used.</p> |
| See also    | <i>Stack protection</i> , page 94.                                                                                                                                                                                     |

## object\_attribute

|             |                                                                                                                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma object_attribute=<i>object_attribute</i>[ <i>object_attribute</i>...]</code>                                                                                                                                                                                                                                                             |
| Parameters  | For information about object attributes that can be used with this pragma directive, see <i>Object attributes</i> , page 425.                                                                                                                                                                                                                          |
| Description | Use this pragma directive to add one or more IAR-specific object attributes to the declaration or definition of a variable or function. Object attributes affect the actual variable or function and not its type. When you define a variable or function, the union of the object attributes from all declarations including the definition, is used. |
| Example     | <pre>#pragma object_attribute=__no_init char bar;</pre>                                                                                                                                                                                                                                                                                                |

is equivalent to:

```
__no_init char bar;
```

See also

*General syntax rules for extended keywords*, page 423.

## once

Syntax

```
#pragma once
```

Description

Place this pragma directive at the beginning of a header file to prevent the header file from being included more than once in a compilation. If it is included more than once, all inclusions after the first one will be ignored.

## optimize

Syntax

```
#pragma optimize=[goal] [level] [vectorize] [disable]
```

Parameters

*goal*

Choose between:

*size*, optimizes for size

*balanced*, optimizes balanced between speed and size

*speed*, optimizes for speed.

*no\_size\_constraints*, optimizes for speed, but relaxes the normal restrictions for code size expansion.

*level*

Specifies the level of optimization—choose between *none*, *low*, *medium*, or *high*.

*vectorize*

Enables generation of NEON vector instructions.

|                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>disable</i> | <p>Disables one or several optimizations (separated by spaces). Choose from:</p> <ul style="list-style-type: none"> <li><i>no_code_motion</i>, disables code motion</li> <li><i>no_cse</i>, disables common subexpression elimination</li> <li><i>no_inline</i>, disables function inlining</li> <li><i>no_relaxed_fp</i>, disables the language relaxation that optimizes floating-point expressions more aggressively</li> <li><i>no_static_to_auto_conversion</i>, disables static-to-auto conversion</li> <li><i>no_tbaa</i>, disables type-based alias analysis</li> <li><i>no_scheduling</i>, disables instruction scheduling</li> <li><i>no_vectorize</i>, disables generation of NEON vector instructions</li> <li><i>no_unroll</i>, disables loop unrolling</li> </ul> |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**Description**

Use this pragma directive to decrease the optimization level, or to turn off some specific optimizations. This pragma directive only affects the function that follows immediately after the directive.

The parameters *size*, *balanced*, *speed*, and *no\_size\_constraints* only have effect on the *high* optimization level and only one of them can be used as it is not possible to optimize for speed and size at the same time. It is also not possible to use preprocessor macros embedded in this pragma directive. Any such macro will not be expanded by the preprocessor.

**Note:** If you use the `#pragma optimize` directive to specify an optimization level that is higher than the optimization level you specify using a compiler option, the pragma directive is ignored.

**Example**

```
#pragma optimize=speed
int SmallAndUsedOften()
{
    /* Do something here. */
}

#pragma optimize=size
int BigAndSeldomUsed()
{
    /* Do something here. */
}
```

See also *Fine-tuning enabled transformations*, page 259.

## pack

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|---------------------------------------------------------------|------------|---------------------------------------------|------|--------------------------------------|-----|----------------------------------------------------------------------|-------------|----------------------------------------------|
| Syntax      | <pre>#pragma pack(n) #pragma pack() #pragma pack({push pop} [, name] [, n])</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| Parameters  | <table> <tr> <td><i>n</i></td> <td>Sets an optional structure alignment—one of 1, 2, 4, 8, or 16</td> </tr> <tr> <td>Empty list</td> <td>Restores the structure alignment to default</td> </tr> <tr> <td>push</td> <td>Sets a temporary structure alignment</td> </tr> <tr> <td>pop</td> <td>Restores the structure alignment from a temporarily pushed alignment</td> </tr> <tr> <td><i>name</i></td> <td>An optional pushed or popped alignment label</td> </tr> </table>                                                                                                                                                                                                                         | <i>n</i> | Sets an optional structure alignment—one of 1, 2, 4, 8, or 16 | Empty list | Restores the structure alignment to default | push | Sets a temporary structure alignment | pop | Restores the structure alignment from a temporarily pushed alignment | <i>name</i> | An optional pushed or popped alignment label |
| <i>n</i>    | Sets an optional structure alignment—one of 1, 2, 4, 8, or 16                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| Empty list  | Restores the structure alignment to default                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| push        | Sets a temporary structure alignment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| pop         | Restores the structure alignment from a temporarily pushed alignment                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| <i>name</i> | An optional pushed or popped alignment label                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| Description | <p>Use this pragma directive to specify the maximum alignment of <code>struct</code> and <code>union</code> members.</p> <p>The <code>#pragma pack</code> directive affects declarations of structures following the pragma directive to the next <code>#pragma pack</code> or the end of the compilation unit.</p> <p><b>Note:</b> This can result in significantly larger and slower code when accessing members of the structure.</p> <p>Use either <code>__packed</code> or <code>#pragma pack</code> to relax the alignment restrictions for a type and the objects defined using that type. Mixing <code>__packed</code> and <code>#pragma pack</code> might lead to unexpected behavior.</p> |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |
| See also    | <i>Structure types</i> , page 418 and <i>__packed</i> , page 434.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |          |                                                               |            |                                             |      |                                      |     |                                                                      |             |                                              |

## \_\_printf\_args

|             |                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma __printf_args</code>                                                                                                                                                                                                                                                                                                                                                 |
| Description | <p>Use this pragma directive on a function with a <code>printf</code>-style format string. For any call to that function, the compiler verifies that the argument to each conversion specifier, for example <code>%d</code>, is syntactically correct.</p> <p>You cannot use this pragma directive on functions that are members of an overload set with more than one member.</p> |

Example

```
#pragma __printf_args
int printf(char const *,...);

void PrintNumbers(unsigned short x)
{
    printf("%d", x); /* Compiler checks that x is an integer */
}
```

## public\_equ

Syntax

```
#pragma public_equ="symbol", value
```

Parameters

|               |                                                                          |
|---------------|--------------------------------------------------------------------------|
| <i>symbol</i> | The name of the assembler symbol to be defined (string).                 |
| <i>value</i>  | The value of the defined assembler symbol (integer constant expression). |

Description

Use this pragma directive to define a public assembler label and give it a value.

Example

```
#pragma public_equ="MY_SYMBOL", 0x123456
```

See also

--*public\_equ*, page 349.

## required

Syntax

```
#pragma required=symbol
```

Parameters

|               |                                             |
|---------------|---------------------------------------------|
| <i>symbol</i> | Any statically linked function or variable. |
|---------------|---------------------------------------------|

Description

Use this pragma directive to ensure that a symbol which is needed by a second symbol is included in the linked output. The directive must be placed immediately before the second symbol.

Use the directive if the requirement for a symbol is not otherwise visible in the application, for example, if a variable is only referenced indirectly through the section it resides in.

**Example**

```
const char copyright[] = "Copyright by me";

#pragma required=copyright
int main()
{
    /* Do something here. */
}
```

Even if the copyright string is not used by the application, it will still be included by the linker and available in the output.

**rtmodel****Syntax**

```
#pragma rtmodel="key", "value"
```

**Parameters**

|         |                                                                                                                                                      |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| "key"   | A text string that specifies the runtime model attribute.                                                                                            |
| "value" | A text string that specifies the value of the runtime model attribute. Using the special value * is equivalent to not defining the attribute at all. |

**Description**

Use this pragma directive to add a runtime model attribute to a module, which can be used by the linker to check consistency between modules.

This pragma directive is useful for enforcing consistency between modules. All modules that are linked together and define the same runtime attribute key must have the same value for the corresponding key, or the special value \*. It can, however, be useful to state explicitly that the module can handle any runtime model.

A module can have several runtime model definitions.

**Note:** The predefined compiler runtime model attributes start with a double underscore. To avoid confusion, this style must not be used in the user-defined attributes.

**Example**

```
#pragma rtmodel="I2C", "ENABLED"
```

The linker will generate an error if a module that contains this definition is linked with a module that does not have the corresponding runtime model attributes defined.

## \_\_scanf\_args

|             |                                                                                                                                                                                                                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma __scanf_args</code>                                                                                                                                                                                                                                                                                                                       |
| Description | <p>Use this pragma directive on a function with a scanf-style format string. For any call to that function, the compiler verifies that the argument to each conversion specifier, for example %d, is syntactically correct.</p> <p>You cannot use this pragma directive on functions that are members of an overload set with more than one member.</p> |
| Example     | <pre>#pragma __scanf_args int scanf(char const *,...);  int GetNumber() {     int nr;     scanf("%d", &amp;nr); /* Compiler checks that                        the argument is a                        pointer to an integer */      return nr; }</pre>                                                                                                |

## section

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>#pragma section="NAME" alias #pragma segment="NAME"</pre>                                                                                                                                                                                                                                                                                                                                                                          |
| Parameters  | <p><i>NAME</i>                      The name of the section.</p>                                                                                                                                                                                                                                                                                                                                                                        |
| Description | <p>Use this pragma directive to define a section name that can be used by the section operators <code>__section_begin</code>, <code>__section_end</code>, and <code>__section_size</code>. All section declarations for a specific section must have the same alignment.</p> <p><b>Note:</b> To place variables or functions in a specific section, use the <code>#pragma location</code> directive or the <code>@</code> operator.</p> |
| Example     | <code>#pragma section="MYSECTION"</code>                                                                                                                                                                                                                                                                                                                                                                                                |
| See also    | <i>Dedicated section operators</i> , page 206, and the chapter <i>Linking your application</i> .                                                                                                                                                                                                                                                                                                                                        |



## section\_prefix

|             |                                                                                                                                                                                                                                                                                |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma section_prefix="prefix"</code>                                                                                                                                                                                                                                   |
| Parameters  | <i>prefix</i> A prefix to add to all section names.                                                                                                                                                                                                                            |
| Description | This pragma directive has the same effect as the compiler option <code>--section_prefix</code> . The names of all sections in the translation unit that are not explicitly named using the <code>@</code> notation or the <code>#pragma location</code> directive are changed. |
| See also    | <code>--section_prefix</code> , page 354.                                                                                                                                                                                                                                      |

## stack\_protect

|             |                                                                                            |
|-------------|--------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma stack_protect</code>                                                         |
| Description | Use this pragma directive to force stack protection for the defined function that follows. |
| See also    | <i>Stack protection</i> , page 94.                                                         |

## STDC CX\_LIMITED\_RANGE

|             |                                                                                                                                                                                                                                                                                                                                 |    |                                                 |     |                                                    |         |                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|-------------------------------------------------|-----|----------------------------------------------------|---------|-----------------------------------------|
| Syntax      | <code>#pragma STDC CX_LIMITED_RANGE {ON OFF DEFAULT}</code>                                                                                                                                                                                                                                                                     |    |                                                 |     |                                                    |         |                                         |
| Parameters  | <table> <tr> <td>ON</td> <td>Normal complex mathematic formulas can be used.</td> </tr> <tr> <td>OFF</td> <td>Normal complex mathematic formulas cannot be used.</td> </tr> <tr> <td>DEFAULT</td> <td>Sets the default behavior, that is OFF.</td> </tr> </table>                                                               | ON | Normal complex mathematic formulas can be used. | OFF | Normal complex mathematic formulas cannot be used. | DEFAULT | Sets the default behavior, that is OFF. |
| ON          | Normal complex mathematic formulas can be used.                                                                                                                                                                                                                                                                                 |    |                                                 |     |                                                    |         |                                         |
| OFF         | Normal complex mathematic formulas cannot be used.                                                                                                                                                                                                                                                                              |    |                                                 |     |                                                    |         |                                         |
| DEFAULT     | Sets the default behavior, that is OFF.                                                                                                                                                                                                                                                                                         |    |                                                 |     |                                                    |         |                                         |
| Description | <p>Use this pragma directive to specify that the compiler can use the normal complex mathematic formulas for <code>*</code> (multiplication), <code>/</code> (division), and <code>abs</code>.</p> <p><b>Note:</b> This directive is required by Standard C. The directive is recognized but has no effect in the compiler.</p> |    |                                                 |     |                                                    |         |                                         |

## STDC FENV\_ACCESS

|             |                                                                                                                                                                         |                                                                                                                      |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma STDC FENV_ACCESS {ON OFF DEFAULT}</code>                                                                                                                  |                                                                                                                      |
| Parameters  | ON                                                                                                                                                                      | Source code accesses the floating-point environment.<br><b>Note:</b> This argument is not supported by the compiler. |
|             | OFF                                                                                                                                                                     | Source code does not access the floating-point environment.                                                          |
|             | DEFAULT                                                                                                                                                                 | Sets the default behavior, that is OFF.                                                                              |
| Description | Use this pragma directive to specify whether your source code accesses the floating-point environment or not.<br><b>Note:</b> This directive is required by Standard C. |                                                                                                                      |

## STDC FP\_CONTRACT

|             |                                                                                                                                                               |                                                                                                                               |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma STDC FP_CONTRACT {ON OFF DEFAULT}</code>                                                                                                        |                                                                                                                               |
| Parameters  | ON                                                                                                                                                            | The compiler is allowed to contract floating-point expressions.                                                               |
|             | OFF                                                                                                                                                           | The compiler is not allowed to contract floating-point expressions.                                                           |
|             | DEFAULT                                                                                                                                                       | Sets the default behavior, that is ON. To change the default behavior, use the option <code>--no_default_fp_contract</code> . |
| Description | Use this pragma directive to specify whether the compiler is allowed to contract floating-point expressions or not. This directive is required by Standard C. |                                                                                                                               |
| Example     | <code>#pragma STDC FP_CONTRACT ON</code>                                                                                                                      |                                                                                                                               |
| See also    | <code>--no_default_fp_contract</code> , page 337                                                                                                              |                                                                                                                               |

## svc\_number

|             |                                                                                                                                                                                                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma svc_number=number</code>                                                                                                                                                                                                                                       |
| Parameters  | <i>number</i> The software call number                                                                                                                                                                                                                                       |
| Description | Use this pragma directive together with the <code>__svc</code> extended keyword. It is used as an argument to the generated <code>SVC</code> assembler instruction, and is used for selecting one software interrupt function in a system containing several such functions. |
| Example     | <code>#pragma svc_number=17</code>                                                                                                                                                                                                                                           |
| See also    | <i>Software interrupts</i> , page 87 and <i>Exception functions for 64-bit mode</i> , page 88.                                                                                                                                                                               |

## type\_attribute

|             |                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma type_attribute=type_attr[ type_attr...]</code>                                                                                                                                                                                                                                                                                                         |
| Parameters  | For information about type attributes that can be used with this pragma directive, see <i>Type attributes</i> , page 423.                                                                                                                                                                                                                                            |
| Description | Use this pragma directive to specify IAR-specific <i>type attributes</i> , which are not part of Standard C. Note however, that a given type attribute might not be applicable to all kind of objects.<br><br>This directive affects the declaration of the identifier, the next variable, or the next function that follows immediately after the pragma directive. |
| Example     | In this example, thumb-mode code is generated for the function <code>myFunc</code> :<br><br><pre>#pragma type_attribute=__thumb void myFunc(void) { }</pre><br>This declaration, which uses extended keywords, is equivalent:<br><br><pre>__thumb void myFunc(void) { }</pre>                                                                                        |
| See also    | The chapter <i>Extended keywords</i> .                                                                                                                                                                                                                                                                                                                               |

## unroll

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma unroll=n</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Parameters  | <p><i>n</i>                      The number of loop bodies in the unrolled loop, a constant integer. <code>#pragma unroll = 1</code> will prevent the unrolling of a loop.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Description | <p>Use this pragma directive to specify that the loop following immediately after the directive should be unrolled and that the unrolled loop should have <i>n</i> copies of the loop body. The pragma directive can only be placed immediately before a <code>for</code>, <code>do</code>, or <code>while</code> loop, whose number of iterations can be determined at compile time.</p> <p>Normally, unrolling is most effective for relatively small loops. However, in some cases, unrolling larger loops can be beneficial if it exposes opportunities for further optimizations between the unrolled loop iterations, for example, common subexpression elimination or dead code elimination.</p> <p>The <code>#pragma unroll</code> directive can be used to force a loop to be unrolled if the unrolling heuristics are not aggressive enough. The pragma directive can also be used to reduce the aggressiveness of the unrolling heuristics.</p> |
| Example     | <pre>#pragma unroll=4 for (i = 0; i &lt; 64; ++i) {     foo(i * k, (i + 1) * k); }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| See also    | <i>Loop unrolling</i> , page 260                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## vectorize

|             |                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>#pragma vectorize [= never]</code>                                                                                                                                                               |
| Parameters  | <p>No parameter              Enables generation of NEON vector instructions <b>in 32-bit mode</b>.</p> <p><code>never</code>                      Disables generation of NEON vector instructions.</p> |
| Description | <p>Use this pragma directive to enable or disable generation of NEON vector instructions for the loop that follows immediately after the pragma directive. This pragma directive</p>                   |

can only be placed immediately before a `for`, `do`, or `while` loop. If the optimization level is lower than `High`, the pragma directive has no effect.

**Note:** Auto-vectorization is not supported in **64-bit mode**.

#### Example

```
#pragma vectorize
for (i = 0; i < 1024; ++i)
{
    a[i] = b[i] * c[i];
}
```

#### See also

*Vectorization*, page 262.

## weak

#### Syntax

```
#pragma weak symbol1[=symbol2]
```

#### Parameters

*symbol1*                    A function or variable with external linkage.  
*symbol2*                    A defined function or variable.

#### Description

This pragma directive can be used in one of two ways:

- To make the definition of a function or variable with external linkage a weak definition. The `__weak` attribute can also be used for this purpose.
- To create a weak alias for another function or variable. You can make more than one alias for the same function or variable.

#### Example

To make the definition of `foo` a weak definition, write:

```
#pragma weak foo
```

To make `NMI_Handler` a weak alias for `Default_Handler`, write:

```
#pragma weak NMI_Handler=Default_Handler
```

If `NMI_Handler` is not defined elsewhere in the program, all references to `NMI_Handler` will refer to `Default_Handler`.

#### See also

`__weak`, page 440.



# Intrinsic functions

- Summary of intrinsic functions
- Descriptions of IAR intrinsic functions
- Supported GCC built-in functions

---

## Summary of intrinsic functions

The IAR C/C++ Compiler for Arm can be used with several different sets of intrinsic functions.

To use the IAR intrinsic functions in an application, include the header file `intrinsics.h`.

To use the ACLE (*Arm C Language Extensions*) intrinsic functions in an application, include the header file `arm_acle.h`. For more information, see *Intrinsic functions for ACLE*, page 471.

To use the Neon intrinsic functions in an application, include the header file `arm_neon.h`. For more information, see *Intrinsic functions for Neon instructions*, page 472.

To use the MVE intrinsic functions in an application, include the header file `arm_mve.h`. For more information, see *Intrinsic functions for MVE instructions*, page 472.

To use the CDE intrinsic functions in an application, include the header file `arm_cde.h`. For more information, see *Intrinsic functions for CDE instructions*, page 473.

To use the CMSIS intrinsic functions in an application, include the main CMSIS header file for your device or core. Note that the CMSIS header files should not be included in the same module as `intrinsics.h`. For information about CMSIS, see *CMSIS integration (32-bit mode)*, page 241.

**Note:** The intrinsic function names start with double underscores, for example:

```
__disable_interrupt
```

## INTRINSIC FUNCTIONS FOR ACLE

ACLE (*Arm C Language Extensions*) specifies a number of intrinsic functions. These are not documented here. Instead, see the *Arm C Language Extensions (IHI 0053D)*.

To use the intrinsic functions for ACLE in an application, include the header file `arm_acle.h`.

## INTRINSIC FUNCTIONS FOR NEON INSTRUCTIONS

The Neon co-processor implements the Advanced SIMD instruction set extension, as defined by the Arm architecture. To use Neon intrinsic functions in an application, include the header file `arm_neon.h`. It can be included from both C and C++. Including it does not enable the IAR extensions if they were disabled. The functions use vector types that are named according to this pattern:

```
<type><size>x<number_of_lanes>_t
```

where:

- *type* is `int`, `unsigned int`, `float`, or `poly`
- *size* is 8, 16, 32, or 64
- *number\_of\_lanes* is 1, 2, 4, 8, or 16.

The total bit width of a vector type is *size* times *number\_of\_lanes*, and should fit in a D register (64 bits) or a Q register (128 bits).

For example:

```
__intrinsic float32x2_t vsub_f32(float32x2_t, float32x2_t);
```

The intrinsic function `vsub_f32` inserts a `VSUB.F32` instruction that operates on two 64-bit vectors (D registers), each with two elements (lanes) of 32-bit floating-point type.

Some functions use an array of vector types. As an example, the definition of an array type with four elements of type `float32x2_t` is:

```
typedef struct
{
    float32x2_t val[4];
}
float32x2x4_t;
```

## INTRINSIC FUNCTIONS FOR MVE INSTRUCTIONS

The M-profile vector extension (MVE) is defined in the Armv8.1-M architecture. To use Arm MVE intrinsic functions in an application, include the header file `arm_mve.h`. It can be included from both C and C++. Including it does not enable the IAR extensions if they were disabled. For more information on the MVE intrinsics, see *Arm C Language Extensions* (document number: 101028). The functions use vector types that are named according to this pattern:

```
<type><size>x<number_of_lanes>_t
```



where:

- *type* is int, unsigned int, or float
- *size* is 8, 16, 32, or 64
- *number\_of\_lanes* is 1, 2, 4, 8, or 16.

The total bit width of a vector type is *size* times *number\_of\_lanes*, and should fit in a Q register (128 bits).

For example:

```
__intrinsic float32x4_t vsubq_f32(float32x4_t, float32x4_t);
```

The intrinsic function `vsub_f32` inserts a `VSUB.F32` instruction that operates on two 128-bit vectors (Q registers), each with four elements (lanes) of 32-bit floating-point type.

Some functions use an array of vector types. As an example, the definition of an array type with four elements of type `float32x2_t` is:

```
typedef struct
{
    float32x2_t val[4];
}
float32x2x4_t;
```

## INTRINSIC FUNCTIONS FOR CDE INSTRUCTIONS

ACLE (Arm C Language Extensions) specifies a number of intrinsic functions for use with CDE (Custom Datapath Extension). For information on the CDE intrinsics, see the *Custom Datapath Extension* section of *Arm C Language Extensions* (document number: 101028).

---

## Descriptions of IAR intrinsic functions

This section gives reference information about each IAR intrinsic function.

### `__arm_cdp`, `__arm_cdp2`

Syntax

```
void __arm_cdp(__cpid coproc, __cpcpw opc1, __cpreg CRd,
__cpreg CRn, __cpreg CRm, __cpcpc opc2);
void __arm_cdp2(__cpid , __cpcpw coprocopc1, __cpreg CRd,
__cpreg CRn, __cpreg CRm, __cpcpc opc2);
```

Parameters

|                            |                                       |
|----------------------------|---------------------------------------|
| <code>coproc</code>        | The coprocessor number 0..15.         |
| <code>opc1, opc2</code>    | Coprocessor-specific operation codes. |
| <code>CRd, CRn, CRm</code> | Coprocessor registers.                |

Description

Inserts the coprocessor-specific data operation instruction `CDP` or `CDP2`. The parameters will be encoded in the instruction and must therefore be constants.

These intrinsic functions are defined according to the *Arm C Language Extensions* (ACLE).

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

See also

`__CDP`, `__CDP2`, page 478.

## `__arm_ldc`, `__arm_ldcl`, `__arm_ldc2`, `__arm_ldcl2`

Syntax

```
void __arm_ldc(__cpid coproc, __cpreg CRd, const void* p);
void __arm_ldcl(__cpid coproc, __cpreg CRd, const void* p);
void __arm_ldc2(__cpid coproc, __cpreg CRd, const void* p);
void __arm_ldcl2(__cpid coproc, __cpreg CRd, const void* p);
```

Parameters

|                     |                                                        |
|---------------------|--------------------------------------------------------|
| <code>coproc</code> | The coprocessor number 0..15.                          |
| <code>CRd</code>    | A coprocessor register.                                |
| <code>p</code>      | Pointer to memory that the coprocessor will read from. |

Description

Inserts the coprocessor load instruction `LDC` (or one of its variants), which means that a value will be loaded into a coprocessor register. The parameters `coproc`, and `CRd` will be encoded in the instruction and must therefore be constants.

These intrinsic functions are defined according to the *Arm C Language Extensions* (ACLE).

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

See also

`__LDC`, `__LDCL`, `__LDC2`, `__LDC2L`, page 487.

## `__arm_mcr`, `__arm_mcr2`, `__arm_mcr`, `__arm_mcr2`

**Syntax**

```
void __arm_mcr(__cpid coproc, __cpopc opc1, __ul src, __cpreq CRn, __cpreq CRm, __cpopc opc2);
void __arm_mcr2(__cpid coproc, __cpopc opc1, __ul src, __cpreq CRn, __cpreq CRm, __cpopc opc2);
void __arm_mcr(__cpid coproc, __cpopc opc1, unsigned long long src, __cpreq CRm);
void __arm_mcr2(__cpid coproc, __cpopc opc1, unsigned long long src, __cpreq CRm);
```

### Parameters

|                         |                                             |
|-------------------------|---------------------------------------------|
| <code>coproc</code>     | The coprocessor number 0..15.               |
| <code>opc1, opc2</code> | Coprocessor-specific operation code.        |
| <code>src</code>        | The value to be written to the coprocessor. |
| <code>CRn, CRm</code>   | The coprocessor register to write to.       |

### Description

Inserts a coprocessor write instruction, MCR, MCR2, MCRR, or MCRR2. The parameters `coproc`, `opc1`, `opc2`, `CRn`, and `CRm` will be encoded in the instruction and must therefore be constants.

These intrinsic functions are defined according to the *Arm C Language Extensions* (ACLE).

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

### See also

`__MCR`, `__MCR2`, page 489 and `__MCRR`, `__MCRR2`, page 490.

## `__arm_mrc`, `__arm_mrc2`, `__arm_mrrc`, `__arm_mrrc2`

**Syntax**

```
unsigned int __arm_mrc(__cpid coproc, __cpopc opc1, __cpreq CRn, __cpreq CRm, __cpopc opc2);
unsigned int __arm_mrc2(__cpid coproc, __cpopc opc1, __cpreq CRn, __cpreq CRm, __cpopc opc2);
unsigned long long __arm_mrrc(__cpid coproc, __cpopc opc1, __cpreq CRm);
unsigned long long __arm_mrrc2(__cpid coproc, __cpopc opc1, __cpreq CRm);
```

### Parameters

|                         |                                      |
|-------------------------|--------------------------------------|
| <code>coproc</code>     | The coprocessor number 0..15.        |
| <code>opc1, opc2</code> | Coprocessor-specific operation code. |

*CRn*, *CRm*                      The coprocessor register to read from.

**Description**                      Inserts a coprocessor read instruction, `MRC`, `MRC2`, `MRRC`, or `MRRC2`. Returns the value of the specified coprocessor register. The parameters *coproc*, *opc1*, *opc2*, *CRn*, and *CRm* will be encoded in the instruction and must therefore be constants.

These intrinsic functions are defined according to the *Arm C Language Extensions (ACLE)*.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**See also**                              `__MCR`, `__MCR2`, page 489, and `__MRRC`, `__MRRC2`, page 491.

## `__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`

**Syntax**                              `unsigned int __arm_rsr(sys_reg special_register);`  
`unsigned long long __arm_rsr64(__sys_reg special_register);`  
`void * __arm_rsrp(sys_reg special_register);`

**Parameters**                         *special\_register*                      A string literal specifying a register.

**Description**                         Reads a system register. Use a string literal to specify which register to read. For `__arm_rsr` and `__arm_rsrp`, the string literal can specify the name of a system register accepted in an `MRS` or `VMRS` instruction for the architecture specified by the compiler option `--cpu`.

For `__arm_rsr` and `__arm_rsrp`, the string literal can also specify a 32-bit coprocessor register, using this format:

```
coprocessor : opc1 :c CRn :c CRm : opc2
```

For `__arm_rsr64`, the string literal can specify a 64-bit coprocessor register using this format:

```
coprocessor : opc1 :c CRm
```

where, for both formats:

- *coprocessor* is a number, `c0`..`c15` or `cp0`..`cp15`
- *opc1* and *opc2* are coprocessor-specific operation codes, `0`..`7`
- *CRn* and *CRm* are coprocessor registers `0`..`15`

These intrinsic functions are defined according to the *Arm C Language Extensions (ACLE)*.

## `__arm_stc`, `__arm_stcl`, `__arm_stc2`, `__arm_stc2l`

|             |                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                       |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|
| Syntax      | <pre>void __arm_stc(__cpid coproc, __cpreg CRd, const void* p); void __arm_stcl(__cpid coproc, __cpreg CRd, const void* p); void __arm_stc2(__cpid coproc, __cpreg CRd, const void* p); void __arm_stc2l(__cpid coproc, __cpreg CRd, const void* p);</pre>                                                                                                                                                        |                                                       |
| Parameters  | <i>coproc</i>                                                                                                                                                                                                                                                                                                                                                                                                     | The coprocessor number 0..15.                         |
|             | <i>CRd</i>                                                                                                                                                                                                                                                                                                                                                                                                        | A coprocessor register.                               |
|             | <i>p</i>                                                                                                                                                                                                                                                                                                                                                                                                          | Pointer to memory that the coprocessor will write to. |
| Description | <p>Inserts the coprocessor store instruction <code>STC</code> (or one of its variants). The parameters <i>coproc</i>, <i>CRd</i>, and <i>p</i> will be encoded in the instruction and must therefore be constants.</p> <p>These intrinsic functions are defined according to the <i>Arm C Language Extensions</i> (ACLE).</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |                                                       |
| See also    | <code>__STC</code> , <code>__STCL</code> , <code>__STC2</code> , <code>__STC2L</code> , page 504.                                                                                                                                                                                                                                                                                                                 |                                                       |

## `__arm_wsr`, `__arm_wsr64`, `__arm_wsrp`

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|
| Syntax      | <pre>void __arm_wsr(const char * special_reg, _uint32_t value); void __arm_wsr64(const char * special_reg, uint64_t value); void __arm_wsrp(const char * special_reg, const void * value);</pre>                                                                                                                                                                                                                                                                                                                                                                        |                                                |
| Parameters  | <i>special_reg</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | A string literal specifying a system register. |
|             | <i>value</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | The value to write to the system register.     |
| Description | <p>Writes to a system register. Use a string literal to specify which register to write to. For <code>__arm_wsr</code> and <code>__arm_wsrp</code>, the string literal can specify the name of a system register accepted in an <code>MSR</code> or <code>VMSR</code> instruction for the architecture specified by the compiler option <code>--cpu</code>.</p> <p>For <code>__arm_wsr</code> and <code>__arm_wsrp</code>, the string literal can also specify a 32-bit coprocessor register, using this format:</p> <pre>coprocessor : opc1 :c CRn :c CRm : opc2</pre> |                                                |

For `__arm_wsr64`, the string literal can specify a 64-bit coprocessor register using this format:

```
coprocessor : opc1 :c CRm
```

where, for both formats:

- *coprocessor* is the coprocessor number, cp0..cp15 or p0..p15
- *opc1* and *opc2* are coprocessor-specific operation codes, 0..7
- *CRn* and *CRm* are coprocessor registers, 0..15

These intrinsic functions are defined according to ACLE (*Arm C Language Extensions*).

## \_\_CDP, \_\_CDP2

### Syntax

```
void __CDP(__cpid coproc, __cpcw opc1, __cpreg CRd, __cpreg
CRn, __cpreg CRm, __cpcw opc2);
void __CDP2(__cpid coproc, __cpcw opc1, __cpreg CRd, __cpreg
CRn, __cpreg CRm, __cpcw opc2);
```

### Parameters

|                      |                                       |
|----------------------|---------------------------------------|
| <i>coproc</i>        | The coprocessor number 0..15.         |
| <i>opc1, opc2</i>    | Coprocessor-specific operation codes. |
| <i>CRd, CRn, CRm</i> | Coprocessor registers.                |

### Description

Inserts the coprocessor-specific data operation instruction CDP or CDP2.

The parameters will be encoded in the instruction and must therefore be constants.

The intrinsic functions `__CDP` and `__CDP2` require an Armv5 architecture or higher for Arm mode, or Armv6 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

### See also

`__arm_cdp`, `__arm_cdp2`, page 473.

## \_\_CLREX

### Syntax

```
void __CLREX(void);
```

### Description

Inserts a CLREX instruction.

This intrinsic function requires architecture Armv6K or Armv7 for Arm mode, and AVRv7 for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## **\_\_CLZ**

|             |                                                                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __CLZ(unsigned int);</code>                                                                                                                                                                                     |
| Description | Inserts a CLZ instruction. If the CLZ instruction is not available, a separate sequence of instructions is inserted to achieve the same result.<br><br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | The <i>Arm C Language Extensions</i> (ACLE) intrinsic functions <code>__clz</code> , <code>__clz1</code> , and <code>__clz11</code> .                                                                                              |

## **\_\_crc32b, \_\_crc32h, \_\_crc32w, \_\_crc32d**

|             |                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __crc32b(unsigned int crc, unsigned char data);</code><br><code>unsigned int __crc32h(unsigned int crc, unsigned short data);</code><br><code>unsigned int __crc32w(unsigned int crc, unsigned int data);</code><br><code>unsigned int __crc32d(unsigned int crc, unsigned long long data);</code>                                                                   |
| Description | Calculates a CRC32 checksum from a checksum (or initial value) <code>crc</code> and one item of <code>data</code> .<br><br><b>Note:</b> The 32-bit Arm/Thumb instructions do not include CRC32X, so <code>__crc32d</code> is implemented as two calls to <code>__crc32w</code> .<br><br>These intrinsic functions are defined according to the <i>Arm C Language Extensions</i> (ACLE). |

## **\_\_crc32cb, \_\_crc32ch, \_\_crc32cw, \_\_crc32cd**

|             |                                                                                                                                                                                                                                                                                                                           |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __crc32cb(unsigned int crc, unsigned char data);</code><br><code>unsigned int __crc32ch(unsigned int crc, unsigned short data);</code><br><code>unsigned int __crc32cw(unsigned int crc, unsigned int data);</code><br><code>unsigned int __crc32cd(unsigned int crc, unsigned long long data);</code> |
| Description | Calculates a CRC32C checksum from a checksum (or initial value) <code>crc</code> and one item of <code>data</code> .<br><br><b>Note:</b> The 32-bit Arm/Thumb instructions do not include CRC32CX, so <code>__crc32cd</code> is implemented as two calls to <code>__crc32cw</code> .                                      |

These intrinsic functions are defined according to the *Arm C Language Extensions* (ACLE).

## **\_\_disable\_debug**

Syntax

```
void __disable_debug(void);
```

Description

Disables debug requests in the DAIF system register (bit 4).

**Note:** This intrinsic function cannot be used in **32-bit mode**.

## **\_\_disable\_fiq**

Syntax

```
void __disable_fiq(void);
```

Description

**In 32-bit mode:** Disables fast interrupt requests (fiq). This intrinsic function can only be used in privileged mode and is not available for Cortex-M devices.

**In 64-bit mode:** Disables fast interrupt requests in the DAIF system register (bit 1).

## **\_\_disable\_interrupt**

Syntax

```
void __disable_interrupt(void);
```

Description

Disables interrupts.

**In 32-bit mode:** For Cortex-M devices, it raises the execution priority level to 0 by setting the priority mask bit, PRIMASK. For other devices, it disables interrupt requests (irq) and fast interrupt requests (fiq). This intrinsic function can only be used in privileged mode.

**In 64-bit mode:** Disables all four types of interrupts in the DAIF system register (low 4 bits).

## **\_\_disable\_irq**

Syntax

```
void __disable_irq(void);
```

Description

**In 32-bit mode:** Disables interrupt requests (irq). This intrinsic function can only be used in privileged mode and is not available for Cortex-M devices.

**In 64-bit mode:** Disables interrupt requests in the DAIF system register (bit 2).



**\_\_disable\_SError**

|             |                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __disable_SError(void);</code>                                                                                                                |
| Description | Disables synchronous error requests in the DAIIF system register (bit 3).<br><b>Note:</b> This intrinsic function cannot be used in <b>32-bit mode</b> . |

**\_\_DMB**

|             |                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __DMB(void);</code>                                                                                                                                                                         |
| Description | Inserts a DMB instruction. This intrinsic function requires an Armv6M architecture, or an Armv7 architecture or higher.<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | The <i>Arm C Language Extensions</i> (ACLE) intrinsic function <code>__dmb</code> .                                                                                                                    |

**\_\_DSB**

|             |                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __DSB(void);</code>                                                                                                                                                                         |
| Description | Inserts a DSB instruction. This intrinsic function requires an Armv6M architecture, or an Armv7 architecture or higher.<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | The <i>Arm C Language Extensions</i> (ACLE) intrinsic function <code>__dsb</code> .                                                                                                                    |

**\_\_enable\_debug**

|             |                                                                                                                                             |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __enable_debug(void);</code>                                                                                                     |
| Description | Enables debug requests in the DAIIF system register (bit 4).<br><b>Note:</b> This intrinsic function cannot be used in <b>32-bit mode</b> . |

## `__enable_fiq`

Syntax `void __enable_fiq(void);`

Description **In 32-bit mode:** Enables fast interrupt requests (fiq). This intrinsic function can only be used in privileged mode, and it is not available for Cortex-M devices.

**In 64-bit mode:** Enables fast interrupt requests in the DAIF system register (bit 1).

## `__enable_interrupt`

Syntax `void __enable_interrupt(void);`

Description Enables interrupts.

**In 32-bit mode:** For Cortex-M devices, it resets the execution priority level to default by clearing the priority mask bit, PRIMASK. For other devices, it enables interrupt requests (irq) and fast interrupt requests (fiq). This intrinsic function can only be used in privileged mode.

**In 64-bit mode:** Enables all four types of interrupts in the DAIF system register (low 4 bits).

## `__enable_irq`

Syntax `void __enable_irq(void);`

Description **In 32-bit mode:** Enables interrupt requests (irq). This intrinsic function can only be used in privileged mode, and it is not available for Cortex-M devices.

**In 64-bit mode:** Enables interrupt requests in the DAIF system register (bit 2).

## `__enable_SError`

Syntax `void __enable_SError(void);`

Description Enables synchronous error requests in the DAIF system register (bit 3).

**Note:** This intrinsic function cannot be used in **32-bit mode**.

## `__fma`, `__fmaf`

### Syntax

```
double __fma(double x, double y, double z);
float __fmaf(float x, float y, float z);
```

### Description

Fused floating-point multiply-accumulate computes  $x*y+z$  without intermediate rounding, which corresponds either to the intrinsic call `__VFMA_F64(z, x, y)` for double precision, or `__VFMA_F32(z, x, y)` for single precision.

These intrinsic functions are defined according to the *Arm C Language Extensions* (ACLE).

## `__get_BASEPRI`

### Syntax

```
unsigned int __get_BASEPRI(void);
```

### Description

Returns the value of the `BASEPRI` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M3, Cortex-M4, or Cortex-M7 device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

### See also

`__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

## `__get_CONTROL`

### Syntax

```
unsigned int __get_CONTROL(void);
```

### Description

Returns the value of the `CONTROL` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

### See also

`__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

## `__get_CPSR`

### Syntax

```
unsigned int __get_CPSR(void);
```

### Description

Returns the value of the Arm `CPSR` (Current Program Status Register). This intrinsic function can only be used in privileged mode, is not available for Cortex-M devices, and it requires Arm mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also [\\_\\_arm\\_rsr](#), [\\_\\_arm\\_rsr64](#), [\\_\\_arm\\_rsrp](#), page 476.

## **\_\_get\_FAULTMASK**

Syntax `unsigned int __get_FAULTMASK(void);`

Description Returns the value of the `FAULTMASK` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M3, Cortex-M4, or Cortex-M7 device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also [\\_\\_arm\\_rsr](#), [\\_\\_arm\\_rsr64](#), [\\_\\_arm\\_rsrp](#), page 476.

## **\_\_get\_FPSCR**

Syntax `unsigned int __get_FPSCR(void);`

Description Returns the value of `FPSCR` (floating-point status and control register). This intrinsic function is only available for devices with a VFP coprocessor.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also [\\_\\_arm\\_rsr](#), [\\_\\_arm\\_rsr64](#), [\\_\\_arm\\_rsrp](#), page 476.

## **\_\_get\_interrupt\_state**

Syntax `__istate_t __get_interrupt_state(void);`

Description **In 32-bit mode:**  
Returns the global interrupt state. The return value can be used as an argument to the `__set_interrupt_state` intrinsic function, which will restore the interrupt state. This intrinsic function can only be used in privileged mode, and cannot be used when using the `--aeabi` compiler option.

**In 64-bit mode:**

Returns the 4 low bits of the `DAIF` system register (`__istate_t` is unsigned long long).

## Example

```
#include "intrinsics.h"

void CriticalFn()
{
    __istate_t s = __get_interrupt_state();
    __disable_interrupt();

    /* Do something here. */

    __set_interrupt_state(s);
}
```

The advantage of using this sequence of code compared to using `__disable_interrupt` and `__enable_interrupt` is that the code in this example will not enable any interrupts disabled before the call of `__get_interrupt_state`.

**\_\_get\_IPSR**

## Syntax

```
unsigned int __get_IPSR(void);
```

## Description

Returns the value of the IPSR register (Interrupt Program Status Register). This intrinsic function can only be used in privileged mode, and is only available for Cortex-M devices.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## See also

`__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

**\_\_get\_LR**

## Syntax

```
unsigned int __get_LR(void);
```

## Description

Returns the value of the link register (R14).

**Note:** This intrinsic function cannot be used in **64-bit mode**.

**\_\_get\_MSP**

## Syntax

```
unsigned int __get_MSP(void);
```

## Description

Returns the value of the MSP register (Main Stack Pointer). This intrinsic function can only be used in privileged mode, and is only available for Cortex-M devices.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

## `__get_PRIMASK`

Syntax `unsigned int __get_PRIMASK(void);`

Description Returns the value of the `PRIMASK` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

## `__get_PSP`

Syntax `unsigned int __get_PSP(void);`

Description Returns the value of the `PSP` register (Process Stack Pointer). This intrinsic function can only be used in privileged mode, and is only available for Cortex-M devices.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

## `__get_PSR`

Syntax `unsigned int __get_PSR(void);`

Description Returns the value of the `PSR` register (combined Program Status Register). This intrinsic function can only be used in privileged mode, and is only available for Cortex-M devices.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_rsr`, `__arm_rsr64`, `__arm_rsrp`, page 476.

## \_\_get\_return\_address

|             |                                                                                                                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>uintptr_t __get_return_address(void);</code>                                                                                                                                                                                                                                   |
| Description | Returns the return address of the current function. This is the value that was in the link register (LR) when the current function was called. In this context, an inlined function is never <i>current</i> , instead the function that it was inlined into is the current function. |

## \_\_get\_SB

|             |                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __get_SB(void);</code>                                                                                          |
| Description | Returns the value of the static base register (R9).<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |

## \_\_get\_SP

|             |                                                                                                                                       |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __get_SP(void);</code>                                                                                             |
| Description | Returns the value of the stack pointer register (R13).<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |

## \_\_ISB

|             |                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __ISB(void);</code>                                                                                                                                                                                       |
| Description | Inserts an <code>ISB</code> instruction. This intrinsic function requires an Armv6M architecture, or an Armv7 architecture or higher.<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | The <i>Arm C Language Extensions</i> (ACLE) intrinsic function <code>__isb</code> .                                                                                                                                  |

## \_\_LDC, \_\_LDCL, \_\_LDC2, \_\_LDC2L

|            |                                                                     |
|------------|---------------------------------------------------------------------|
| Syntax     | <code>void __LDCxxx(__ul coproc, __ul CRn, __ul const *src);</code> |
| Parameters | <i>coproc</i> The coprocessor number 0..15.                         |

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                   |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
|             | <i>CRn</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | The coprocessor register to load. |
|             | <i>src</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | A pointer to the data to load.    |
| Description | <p>Inserts the coprocessor load instruction <code>LDC</code>—or one of its variants—which means that a value will be loaded into a coprocessor register. The parameters <i>coproc</i> and <i>CRn</i> will be encoded in the instruction and must therefore be constants.</p> <p>The intrinsic functions <code>__LDC</code> and <code>__LDCL</code> require architecture Armv4 or higher for Arm mode, and Armv6T2 or higher for Thumb mode.</p> <p>The intrinsic functions <code>__LDC2</code> and <code>__LDC2L</code> require architecture Armv5 or higher for Arm mode, and Armv6T2 or higher for Thumb mode.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |                                   |
| See also    | <code>__arm_ldc</code> , <code>__arm_ldcl</code> , <code>__arm_ldc2</code> , <code>__arm_ldc12</code> , page 474.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                   |

## `__LDC_noidx`, `__LDCL_noidx`, `__LDC2_noidx`, `__LDC2L_noidx`

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
| Syntax      | <code>void __LDCxxx_noidx(__ul coproc, __ul CRn, __ul const *src, __ul option);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                       |
| Parameters  | <i>coproc</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | The coprocessor number 0..15.         |
|             | <i>CRn</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | The coprocessor register to load.     |
|             | <i>src</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | A pointer to the data to load.        |
|             | <i>option</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Additional coprocessor option 0..255. |
| Description | <p>Inserts the coprocessor load instruction <code>LDC</code>, or one of its variants. A value will be loaded into a coprocessor register. The parameters <i>coproc</i>, <i>CRn</i>, and <i>option</i> will be encoded in the instruction and must therefore be constants.</p> <p>The intrinsic functions <code>__LDC_noidx</code> and <code>__LDCL_noidx</code> require architecture Armv4 or higher for Arm mode, and Armv6T2 or higher for Thumb mode.</p> <p>The intrinsic functions <code>__LDC2_noidx</code> and <code>__LDC2L_noidx</code> require architecture Armv5 or higher for Arm mode, and Armv6T2 or higher for Thumb mode.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |                                       |



**\_\_LDREX, \_\_LDREXB, \_\_LDREXD, \_\_LDREXH**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>unsigned int __LDREX(unsigned int *); unsigned char __LDREXB(unsigned char *); unsigned long long __LDREXD(unsigned long long *); unsigned short __LDREXH(unsigned short *);</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Description | <p>Inserts the specified instruction.</p> <p>The <code>__LDREX</code> intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv6T2 or baseline Armv8-M for Thumb mode.</p> <p>The <code>__LDREXB</code> and the <code>__LDREXH</code> intrinsic functions require architecture Armv6K or Armv7 for Arm mode, and Armv7 or baseline Armv8-M for Thumb mode.</p> <p>The <code>__LDREXD</code> intrinsic function requires architecture Armv6K or Armv7 for Arm mode, and Armv7 but not Armv7-M for Thumb mode.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |

**\_\_MCR, \_\_MCR2**

|                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|-------------------------------|-----------------|--------------------------------------|------------|---------------------------------------------|------------|---------------------------------------|------------|----------------------------------------------------------|-----------------|-------------------------------------------------------------------------|
| Syntax          | <pre>void __MCR(__ul coproc, __ul opcode_1, __ul src, __ul CRn, __ul CRm, __ul opcode_2); void __MCR2(__ul coproc, __ul opcode_1, __ul src, __ul CRn, __ul CRm, __ul opcode_2);</pre>                                                                                                                                                                                                                                                                                                                                                                               |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| Parameters      | <table> <tr> <td><i>coproc</i></td> <td>The coprocessor number 0..15.</td> </tr> <tr> <td><i>opcode_1</i></td> <td>Coprocessor-specific operation code.</td> </tr> <tr> <td><i>src</i></td> <td>The value to be written to the coprocessor.</td> </tr> <tr> <td><i>CRn</i></td> <td>The coprocessor register to write to.</td> </tr> <tr> <td><i>CRm</i></td> <td>Additional coprocessor register—set to zero if not used.</td> </tr> <tr> <td><i>opcode_2</i></td> <td>Additional coprocessor-specific operation code—set to zero if not used.</td> </tr> </table> | <i>coproc</i> | The coprocessor number 0..15. | <i>opcode_1</i> | Coprocessor-specific operation code. | <i>src</i> | The value to be written to the coprocessor. | <i>CRn</i> | The coprocessor register to write to. | <i>CRm</i> | Additional coprocessor register—set to zero if not used. | <i>opcode_2</i> | Additional coprocessor-specific operation code—set to zero if not used. |
| <i>coproc</i>   | The coprocessor number 0..15.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| <i>opcode_1</i> | Coprocessor-specific operation code.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| <i>src</i>      | The value to be written to the coprocessor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| <i>CRn</i>      | The coprocessor register to write to.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| <i>CRm</i>      | Additional coprocessor register—set to zero if not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| <i>opcode_2</i> | Additional coprocessor-specific operation code—set to zero if not used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |
| Description     | <p>Inserts a coprocessor write instruction (MCR or MCR2). The parameters <i>coproc</i>, <i>opcode_1</i>, <i>CRn</i>, <i>CRm</i>, and <i>opcode_2</i> will be encoded in the instruction and must therefore be constants.</p> <p>The intrinsic function <code>__MCR</code> requires either Arm mode, or an Armv6T2 or higher for Thumb mode.</p>                                                                                                                                                                                                                     |               |                               |                 |                                      |            |                                             |            |                                       |            |                                                          |                 |                                                                         |

The intrinsic function `__MCR2` requires an Armv5T architecture or higher for Arm mode, or Armv6T2 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

See also

`__arm_mcr`, `__arm_mcr2`, `__arm_mcr`, `__arm_mcr2`, page 475.

## `__MCRR`, `__MCRR2`

Syntax

```
void __MCRR(__cpid coproc, __cpopc opc1, unsigned long long src,
__cpreg CRm);
void __MCRR2(__cpid coproc, __cpopc opc1, unsigned long long
src, __cpreg CRm);
```

Parameters

|               |                                             |
|---------------|---------------------------------------------|
| <i>coproc</i> | The coprocessor number 0..15.               |
| <i>opc1</i>   | Coprocessor-specific operation code.        |
| <i>src</i>    | The value to be written to the coprocessor. |
| <i>CRm</i>    | The coprocessor register to write to.       |

Description

Inserts a coprocessor write instruction, MCRR or MCRR2. The parameters *coproc*, *opc1*, and *CRm* will be encoded in the instruction and must therefore be constants.

The intrinsic functions `__MCRR` and `__MCRR2` require an Armv6 architecture or higher for Arm mode, or Armv6T2 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

See also

`__arm_mcr`, `__arm_mcr2`, `__arm_mcr`, `__arm_mcr2`, page 475.

## `__MRC`, `__MRC2`

Syntax

```
unsigned int __MRC(__ul coproc, __ul opcode_1, __ul CRn, __ul
CRm, __ul opcode_2);
unsigned int __MRC2(__ul coproc, __ul opcode_1, __ul CRn, __ul
CRm, __ul opcode_2);
```

Parameters

|                 |                                      |
|-----------------|--------------------------------------|
| <i>coproc</i>   | The coprocessor number 0..15.        |
| <i>opcode_1</i> | Coprocessor-specific operation code. |

|                 |                                                                         |
|-----------------|-------------------------------------------------------------------------|
| <i>CRn</i>      | The coprocessor register to read from.                                  |
| <i>CRm</i>      | Additional coprocessor register—set to zero if not used.                |
| <i>opcode_2</i> | Additional coprocessor-specific operation code—set to zero if not used. |

**Description** Inserts a coprocessor read instruction (MRC or MRC2). Returns the value of the specified coprocessor register. The parameters *coproc*, *opcode\_1*, *CRn*, *CRm*, and *opcode\_2* will be encoded in the instruction and must therefore be constants.

The intrinsic function `__MRC` requires either Arm mode, or an Armv6T2 or higher for Thumb mode.

The intrinsic function `__MRC2` requires an Armv5T architecture or higher for Arm mode, or Armv6T2 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

See also `__arm_mrc`, `__arm_mrc2`, `__arm_mrrc`, `__arm_mrrc2`, page 475.

## \_\_MRRC, \_\_MRRC2

**Syntax**

```
unsigned long long __MRRC(__cpid coproc, __cpopc opc1, __cpreg CRm);
unsigned long long __MRRC2(__cpid coproc, __cpopc opc1, __cpreg CRm);
```

**Parameters**

|               |                                        |
|---------------|----------------------------------------|
| <i>coproc</i> | The coprocessor number 0 . . 15.       |
| <i>opc1</i>   | Coprocessor-specific operation code.   |
| <i>CRm</i>    | The coprocessor register to read from. |

**Description** Inserts a coprocessor read instruction, MRRC or MRRC2. Returns the value of the specified coprocessor register. The parameters *coproc*, *opc1*, and *CRm* will be encoded in the instruction and must therefore be constants.

The intrinsic functions `__MRRC` and `__MRRC2` require an Armv6 architecture or higher for Arm mode, or Armv6T2 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

See also `__arm_mrc`, `__arm_mrc2`, `__arm_mrrc`, `__arm_mrrc2`, page 475.

## **\_\_no\_operation**

|             |                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __no_operation(void);</code>                                                                                                                              |
| Description | <p>Inserts a NOP instruction.</p> <p>This intrinsic function is equivalent to the <i>Arm C Language Extensions (ACLE)</i> intrinsic function <code>__nop</code>.</p> |

## **\_\_PKHBT**

|              |                                                                                                                                                                                                                                                                                                                                                   |          |                |          |                                          |              |                                           |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------------|----------|------------------------------------------|--------------|-------------------------------------------|
| Syntax       | <code>unsigned int __PKHBT(unsigned int x, unsigned int y, unsigned int count);</code>                                                                                                                                                                                                                                                            |          |                |          |                                          |              |                                           |
| Parameters   | <table> <tr> <td><i>x</i></td> <td>First operand.</td> </tr> <tr> <td><i>y</i></td> <td>Second operand, optionally shifted left.</td> </tr> <tr> <td><i>count</i></td> <td>Shift count 0–31, where 0 means no shift.</td> </tr> </table>                                                                                                          | <i>x</i> | First operand. | <i>y</i> | Second operand, optionally shifted left. | <i>count</i> | Shift count 0–31, where 0 means no shift. |
| <i>x</i>     | First operand.                                                                                                                                                                                                                                                                                                                                    |          |                |          |                                          |              |                                           |
| <i>y</i>     | Second operand, optionally shifted left.                                                                                                                                                                                                                                                                                                          |          |                |          |                                          |              |                                           |
| <i>count</i> | Shift count 0–31, where 0 means no shift.                                                                                                                                                                                                                                                                                                         |          |                |          |                                          |              |                                           |
| Description  | <p>Inserts a <code>PKHBT</code> instruction, with an optionally shifted operand (LSL) for count in the range 1–31.</p> <p>This intrinsic function requires an Arm v6 architecture or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.</p> <p><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b>.</p> |          |                |          |                                          |              |                                           |

## **\_\_PKHTB**

|              |                                                                                                                                                                                                                                                              |          |                |          |                                                              |              |                                           |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------------|----------|--------------------------------------------------------------|--------------|-------------------------------------------|
| Syntax       | <code>unsigned int __PKHTB(unsigned int x, unsigned int y, unsigned int count);</code>                                                                                                                                                                       |          |                |          |                                                              |              |                                           |
| Parameters   | <table> <tr> <td><i>x</i></td> <td>First operand.</td> </tr> <tr> <td><i>y</i></td> <td>Second operand, optionally shifted right (arithmetic shift).</td> </tr> <tr> <td><i>count</i></td> <td>Shift count 0–32, where 0 means no shift.</td> </tr> </table> | <i>x</i> | First operand. | <i>y</i> | Second operand, optionally shifted right (arithmetic shift). | <i>count</i> | Shift count 0–32, where 0 means no shift. |
| <i>x</i>     | First operand.                                                                                                                                                                                                                                               |          |                |          |                                                              |              |                                           |
| <i>y</i>     | Second operand, optionally shifted right (arithmetic shift).                                                                                                                                                                                                 |          |                |          |                                                              |              |                                           |
| <i>count</i> | Shift count 0–32, where 0 means no shift.                                                                                                                                                                                                                    |          |                |          |                                                              |              |                                           |
| Description  | <p>Inserts a <code>PKHTB</code> instruction, with an optionally shifted operand (ASR) for count in the range 1–32.</p>                                                                                                                                       |          |                |          |                                                              |              |                                           |

This intrinsic function requires an Arm v6 architecture or higher for Arm mode, and Armv7-A, Armv7-R, or Arm v7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## \_\_PLD, \_\_PLDW

|             |                                                                                                                                                                                                                                                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>void __PLD(void const *); void __PLDW(void const *);</pre>                                                                                                                                                                                                                                                              |
| Description | <p>Inserts a preload data instruction (PLD or PLDW).</p> <p>The intrinsic function <code>__PLD</code> requires an Armv7 architecture. <code>__PLDW</code> requires an Armv7 architecture with MP extensions, for example, Cortex-A5.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |
| See also    | The <i>Arm C Language Extensions</i> (ACLE) intrinsic functions <code>__pld</code> .                                                                                                                                                                                                                                         |

## \_\_PLI

|             |                                                                                                                                                                              |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>void __PLI(void const *);</pre>                                                                                                                                         |
| Description | <p>Inserts a PLI instruction. This intrinsic function requires an Arm v7 architecture.</p> <p><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b>.</p> |
| See also    | The <i>Arm C Language Extensions</i> (ACLE) intrinsic function <code>__pli</code> .                                                                                          |

## \_\_QADD, \_\_QDADD, \_\_QDSUB, \_\_QSUB

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>signed int __Qxxx(signed int, signed int);</pre>                                                                                                                                                                                                                                                                                                                                                                                |
| Description | <p>Inserts the specified instruction.</p> <p>These intrinsic functions require architecture Armv5E or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.</p> <p>These intrinsic functions are equivalent to the <i>Arm C Language Extensions</i> (ACLE) intrinsic functions <code>__qadd</code> and <code>__qsub</code>.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |

## **\_\_QADD8, \_\_QADD16, \_\_QASX, \_\_QSAX, \_\_QSUB8, \_\_QSUB16**

Syntax `unsigned int __Qxxx(unsigned int, unsigned int);`

Description Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions* (ACLE) intrinsic functions `__qadd8`, `__qadd16`, `__qasx`, `__qsax`, `__qsub8`, and `__qsub16`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_QCFlag**

Syntax `unsigned int __QCFlag(void);`

Description Returns the value of the cumulative saturation flag `QC` of the `FPSCR` register (Floating-point Status and Control Register). This intrinsic function is only available for devices with Neon (Advanced SIMD).

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## **\_\_QDOUBLE**

Syntax `signed int __QDOUBLE(signed int);`

Description Inserts an instruction `QADD Rd, Rs, Rs` for a source register `Rs`, and a destination register `Rd`.

This intrinsic function requires architecture Armv5E or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## **\_\_QFlag**

Syntax `int __QFlag(void);`

Description Returns the `Q` flag that indicates if overflow/saturation has occurred.

This intrinsic function requires architecture Armv5E or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## \_\_RBIT

Syntax `unsigned int __RBIT(unsigned int);`

Description Inserts an `RBIT` instruction, which reverses the bit order in a 32-bit register. If the `RBIT` instruction is not available, a separate sequence of instructions is inserted to achieve the same result.

This intrinsic function is equivalent to the *Arm C Language Extensions (ACLE)* intrinsic function `__rbit`.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## \_\_reset\_Q\_flag

Syntax `void __reset_Q_flag(void);`

Description Clears the Q flag that indicates if overflow/saturation has occurred.

This intrinsic function requires an Arm v5E architecture or higher for Arm mode, and Arm v7A, Arm v7R, or Arm v7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## \_\_reset\_QC\_flag

Syntax `void __reset_QC_flag(void);`

Description Clears the value of the cumulative saturation flag `QC` of the `FPSCR` register (Floating-point Status and Control Register). This intrinsic function is only available for devices with Neon (Advanced SIMD).

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## \_\_REV, \_\_REV16, \_\_REVSH

Syntax `unsigned int __REV(unsigned int);`  
`unsigned int __REV16(unsigned int);`  
`signed int __REVSH(short);`

**Description** Inserts the specified instruction. If the instruction is not available, a separate sequence of instruction is inserted to achieve the same result.

These intrinsic functions are equivalent to the *Arm C Language Extensions (ACLE)* intrinsic functions `__rev`, `__rev16`, and `__revsh`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_rintn, \_\_rintnf**

**Syntax**  
`double __rintn(double x);`  
`float __rintnf(float x);`

**Description** Rounds a number `x` to the nearest integer number (with ties to even), which corresponds either to the intrinsic call `__VRINTN_F64(x)` for double precision, or `__VRINTN_F32(x)` for single precision.

These intrinsic functions are defined according to the *Arm C Language Extensions (ACLE)*.

## **\_\_ROR**

**Syntax**  
`unsigned int __ROR(unsigned int);`

**Description** Inserts an ROR instruction.  
 This intrinsic function is equivalent to the *Arm C Language Extensions (ACLE)* intrinsic function `__ror`.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## **\_\_RRX**

**Syntax**  
`unsigned int __RRX(unsigned int);`

**Description** Inserts an RRX instruction.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## **\_\_SADD8, \_\_SADD16, \_\_SASX, \_\_SSAX, \_\_SSUB8, \_\_SSUB16**

**Syntax**  
`unsigned int __Sxxx(unsigned int, unsigned int);`



## Description

Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions* (ACLE) intrinsic functions `__sadd8`, `__sadd16`, `__sasx`, `__ssax`, `__ssub8`, and `__ssub16`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_SEL**

## Syntax

```
unsigned int __SEL(unsigned int, unsigned int);
```

## Description

Inserts an `SEL` instruction.

This intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

**\_\_set\_BASEPRI**

## Syntax

```
void __set_BASEPRI(unsigned int);
```

## Description

Sets the value of the `BASEPRI` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M3, Cortex-M4, or Cortex-M7 device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## See also

`__arm_wsr`, `__arm_wsr64`, `__arm_wsrp`, page 477.

**\_\_set\_CONTROL**

## Syntax

```
void __set_CONTROL(unsigned int);
```

## Description

Sets the value of the `CONTROL` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## See also

`__arm_wsr`, `__arm_wsr64`, `__arm_wsrp`, page 477.

## **\_\_set\_CPSR**

|             |                                                                                                                                                                                                                                                                                                                                               |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __set_CPSR(unsigned int);</code>                                                                                                                                                                                                                                                                                                   |
| Description | Sets the value of the Arm <code>CPSR</code> (Current Program Status Register). Only the control field is changed (bits 0-7). This intrinsic function can only be used in privileged mode, is not available for Cortex-M devices, and it requires Arm mode.<br><br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | <code>__arm_wsr</code> ; <code>__arm_wsr64</code> , <code>__arm_wsrp</code> , page 477.                                                                                                                                                                                                                                                       |

## **\_\_set\_FAULTMASK**

|             |                                                                                                                                                                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __set_FAULTMASK(unsigned int);</code>                                                                                                                                                                                                                   |
| Description | Sets the value of the <code>FAULTMASK</code> register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M3, Cortex-M4, or Cortex-M7 device.<br><br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | <code>__arm_wsr</code> ; <code>__arm_wsr64</code> , <code>__arm_wsrp</code> , page 477.                                                                                                                                                                            |

## **\_\_set\_FPSCR**

|             |                                                                                                                                                                                                                                                           |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __set_FPSCR(unsigned int);</code>                                                                                                                                                                                                              |
| Description | Sets the value of <code>FPSCR</code> (floating-point status and control register)<br><br>This intrinsic function is only available for devices with a VFP coprocessor.<br><br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |
| See also    | <code>__arm_wsr</code> ; <code>__arm_wsr64</code> , <code>__arm_wsrp</code> , page 477.                                                                                                                                                                   |

## **\_\_set\_interrupt\_state**

|             |                                                                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __set_interrupt_state(__istate_t);</code>                                                                                                                                                                               |
| Description | <b>In 32-bit mode:</b> Restores the interrupt state to a value previously returned by the <code>__get_interrupt_state</code> function.<br><br><b>In 64-bit mode:</b> Sets the 4 low bits of the <code>DAIF</code> system register. |

For information about the `__istate_t` type, see `__get_interrupt_state`, page 484.

## `__set_LR`

Syntax `void __set_LR(unsigned int);`

Description Assigns a new address to the link register (R14).

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## `__set_MSP`

Syntax `void __set_MSP(unsigned int);`

Description Sets the value of the `MSP` register (Main Stack Pointer). This intrinsic function can only be used in privileged mode, and is only available for Cortex-M devices.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_wsr`, `__arm_wsr64`, `__arm_wsrp`, page 477.

## `__set_PRIMASK`

Syntax `void __set_PRIMASK(unsigned int);`

Description Sets the value of the `PRIMASK` register. This intrinsic function can only be used in privileged mode and it requires a Cortex-M device.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_wsr`, `__arm_wsr64`, `__arm_wsrp`, page 477.

## `__set_PSP`

Syntax `void __set_PSP(unsigned int);`

Description Sets the value of the `PSP` register (Process Stack Pointer). This intrinsic function can only be used in privileged mode, and is only available for Cortex-M devices.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

See also `__arm_wsr`, `__arm_wsr64`, `__arm_wsrp`, page 477.

## **\_\_set\_SB**

|             |                                                                                                                                        |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __set_SB(unsigned int);</code>                                                                                              |
| Description | Assigns a new address to the static base register (R9).<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |

## **\_\_set\_SP**

|             |                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __set_SP(unsigned int);</code>                                                                                                 |
| Description | Assigns a new address to the stack pointer register (R13).<br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |

## **\_\_SEV**

|             |                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>void __SEV(void);</code>                                                                                                                                                                                                                                                                                                                                          |
| Description | Inserts an <i>SEV</i> instruction.<br><br>This intrinsic function requires architecture Armv7 for Arm mode, and Armv6-M or Armv7 for Thumb mode.<br><br>This intrinsic function is equivalent to the <i>Arm C Language Extensions</i> (ACLE) intrinsic function <code>__sev</code> .<br><br><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b> . |

## **\_\_SHADD8, \_\_SHADD16, \_\_SHASX, \_\_SHSAX, \_\_SHSUB8, \_\_SHSUB16**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __SHxxx(unsigned int, unsigned int);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Description | Inserts the specified instruction.<br><br>These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.<br><br>These intrinsic functions are equivalent to the <i>Arm C Language Extensions</i> (ACLE) intrinsic functions <code>__shadd8</code> , <code>__shadd16</code> , <code>__shasx</code> , <code>__shsax</code> , <code>__shsub8</code> , and <code>__shsub16</code> .<br><br><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b> . |

**\_\_SMLABB, \_\_SMLABT, \_\_SMLATB, \_\_SMLATT, \_\_SMLAWB, \_\_SMLAWT**

**Syntax**                    unsigned int \_\_SMLAxxx(unsigned int, unsigned int, unsigned int);

**Description**              Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_SMLAD, \_\_SMLADX, \_\_SMLSD, \_\_SMLSDX**

**Syntax**                    unsigned int \_\_SMLxxx(unsigned int, unsigned int, unsigned int);

**Description**              Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions (ACLE)* intrinsic functions \_\_smlad, \_\_smladx, \_\_smlsd, and \_\_smlsdx.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_SMLALBB, \_\_SMLALBT, \_\_SMLALTB, \_\_SMLALTT**

**Syntax**                    unsigned long long \_\_SMLALxxx(unsigned int, unsigned int, unsigned long long);

**Description**              Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_SMLALD, \_\_SMLALDX, \_\_SMLSLD, \_\_SMLSLDX**

**Syntax**                    unsigned long long \_\_SMLxxx(unsigned int, unsigned int, unsigned long long);

**Description**              Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions (ACLE)* intrinsic functions `__smlald`, `__smlaldx`, `__smlslld`, and `__smlslldx`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_SMMLA, \_\_SMMLAR, \_\_SMMLS, \_\_SMMLSR**

Syntax `unsigned int __SMMLxxx(unsigned int, unsigned int, unsigned int);`

Description Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_SMMUL, \_\_SMMULR**

Syntax `signed int __SMMULxxx(signed int, signed int);`

Description Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_SMUAD, \_\_SMUADX, \_\_SMUSD, \_\_SMUSDX**

Syntax `unsigned int __SMUxxx(unsigned int, unsigned int);`

Description Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_SMUL**

Syntax `signed int __SMUL(signed short, signed short);`

Description Inserts a signed 16-bit multiplication.

This intrinsic function requires architecture Armv5-E or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

**\_\_SMULBB, \_\_SMULBT, \_\_SMULTB, \_\_SMULTT, \_\_SMULWB, \_\_SMULWT**

Syntax `unsigned int __SMULxxx(unsigned int, unsigned int);`

Description Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_sqrt, \_\_sqrtf**

Syntax `double __sqrt(double x);`  
`float __sqrtf(float x);`

Description Computes the square root of the operand *x*, which corresponds either to the intrinsic call `__VSQRT_F64(x)` for double precision, or `__VSQRT_F32(x)` for single precision.

These intrinsic functions are defined according to the *Arm C Language Extensions (ACLE)*.

**\_\_SSAT**

Syntax `signed int __SSAT(signed int, unsigned int);`

Description Inserts an *SSAT* instruction.

The compiler will incorporate a shift instruction into the operand when possible. For example, `__SSAT(x << 3, 11)` compiles to `SSAT Rd, #11, Rn, LSL #3`, where the value of *x* has been placed in register *Rn* and the return value of `__SSAT` will be placed in register *Rd*.

This intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7-M for Thumb mode.

This intrinsic function is equivalent to the *Arm C Language Extensions* (ACLE) intrinsic function `__ssat`.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## `__SSAT16`

**Syntax** `unsigned int __SSAT16(unsigned int, unsigned int);`

**Description** Inserts an `SSAT16` instruction.

This intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Arm v7E-M for Thumb mode.

This intrinsic function is equivalent to the *Arm C Language Extensions* (ACLE) intrinsic function `__ssat16`.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## `__STC`, `__STCL`, `__STC2`, `__STC2L`

**Syntax** `void __STCxxx(__ul coproc, __ul CRn, __ul const *dst);`

**Parameters**

|               |                                   |
|---------------|-----------------------------------|
| <i>coproc</i> | The coprocessor number 0 . . 15.  |
| <i>CRn</i>    | The coprocessor register to load. |
| <i>dst</i>    | A pointer to the destination.     |

**Description**

Inserts the coprocessor store instruction `STC`—or one of its variants—which means that the value of the specified coprocessor register will be written to a memory location. The parameters *coproc* and *CRn* will be encoded in the instruction and must therefore be constants.

The intrinsic functions `__STC` and `__STCL` require architecture Armv4 or higher for Arm mode, and Arm v6T2 or higher for Thumb mode.

The intrinsic functions `__STC2` and `__STC2L` require architecture Armv5 or higher for Arm mode, and Armv6-T2 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.



See also `__arm_stc`, `__arm_stcl`, `__arm_stc2`, `__arm_stc2l`, page 477.

## `__STC_noidx`, `__STCL_noidx`, `__STC2_noidx`, `__STC2L_noidx`

**Syntax** `void __STCxxx_noidx(__ul coproc, __ul CRn, __ul const *dst, __ul option);`

### Parameters

|                     |                                       |
|---------------------|---------------------------------------|
| <code>coproc</code> | The coprocessor number 0..15.         |
| <code>CRn</code>    | The coprocessor register to load.     |
| <code>dst</code>    | A pointer to the destination.         |
| <code>option</code> | Additional coprocessor option 0..255. |

### Description

Inserts the coprocessor store instruction `STC`—or one of its variants—which means that the value of the specified coprocessor register will be written to a memory location. The parameters `coproc`, `CRn`, and `option` will be encoded in the instruction and must therefore be constants.

The intrinsic functions `__STC_noidx` and `__STCL_noidx` require architecture Armv4 or higher for Arm mode, and Armv6-T2 or higher for Thumb mode.

The intrinsic functions `__STC2_noidx` and `__STC2L_noidx` require architecture Armv5 or higher for Arm mode, and Armv6-T2 or higher for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## `__STREX`, `__STREXB`, `__STREXD`, `__STREXH`

**Syntax** `unsigned int __STREX(unsigned int, unsigned int *);`  
`unsigned int __STREXB(unsigned char, unsigned char *);`  
`unsigned int __STREXD(unsigned long long, unsigned long long*);`  
`unsigned int __STREXH(unsigned short, unsigned short *);`

### Description

Inserts the specified instruction.

The `__STREX` intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv6-T2 or baseline Armv8-M for Thumb mode.

The `__STREXB` and the `__STREXH` intrinsic functions require architecture Armv6K or Armv7 for Arm mode, and Armv7 or baseline Armv8-M for Thumb mode.

The `__STREXD` intrinsic function requires architecture Armv6K or Armv7 for Arm mode, and Armv7 except for Armv7-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_SWP, \_\_SWPB**

|             |                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __SWP(unsigned int, unsigned int *);</code><br><code>char __SWPB(unsigned char, unsigned char *);</code>                                     |
| Description | Inserts the specified instruction. These intrinsic functions require Arm mode.<br><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b> . |

## **\_\_SXTAB, \_\_SXTAB16, \_\_SXTAH, \_\_SXTB16**

|             |                                                                                                                                                                                                                                                       |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __SXTxxx(unsigned int, unsigned int);</code>                                                                                                                                                                                       |
| Description | Inserts the specified instruction.<br>These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.<br><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b> . |

## **\_\_TT, \_\_TTT, \_\_TTA, \_\_TTAT**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __TT(unsigned int);</code><br><code>unsigned int __TTT(unsigned int);</code><br><code>unsigned int __TTA(unsigned int);</code><br><code>unsigned int __TTAT(unsigned int);</code>                                                                                                                                                                                                                                                         |
| Description | Inserts the specified instruction. Avoid using these intrinsic functions directly. Instead use the functions <code>cmse_TT</code> , <code>cmse_TTT</code> , <code>cmse_TT_fptr</code> , and <code>cmse_TTT_fptr</code> , which are defined in the header file <code>arm_cmse.h</code> .<br>These intrinsic functions require architecture Armv8-M with security extensions.<br><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b> . |
| See also    | <code>--cmse</code> , page 317.                                                                                                                                                                                                                                                                                                                                                                                                                              |

**\_\_UADD8, \_\_UADD16, \_\_UASX, \_\_USAX, \_\_USUB8, \_\_USUB16**

**Syntax**                    unsigned int \_\_Uxxx(unsigned int, unsigned int);

**Description**             Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions* (ACLE) intrinsic functions `__uadd8`, `__uadd16`, `__uasx`, `__usax`, `__usub8`, and `__usub16`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_UHADD8, \_\_UHADD16, \_\_UHASX, \_\_UHSAX, \_\_UHSUB8, \_\_UHSUB16**

**Syntax**                    unsigned int \_\_UHxxx(unsigned int, unsigned int);

**Description**             Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions* (ACLE) intrinsic functions `__uhadd8`, `__uhadd16`, `__uhasx`, `__uhsax`, `__uhsub8`, and `__uhsub16`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

**\_\_UMAAL**

**Syntax**                    unsigned long long \_\_UMAAL(unsigned int, unsigned int, unsigned int, unsigned int);

**Description**             Inserts an UMAAL instruction.

This intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

## **\_\_UQADD8, \_\_UQADD16, \_\_UQASX, \_\_UQSAX, \_\_UQSUB8, \_\_UQSUB16**

**Syntax** `unsigned int __UQxxx(unsigned int, unsigned int);`

**Description** Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions* (ACLE) intrinsic functions `__uqadd8`, `__uqadd16`, `__uqasx`, `__uqsax`, `__uqsub8`, and `__uqsub16`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_USAD8, \_\_USADA8**

**Syntax** `unsigned int __USADxxx(unsigned int, unsigned int);`

**Description** Inserts the specified instruction.

These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## **\_\_USAT**

**Syntax** `unsigned int __USAT(signed int, unsigned int);`

**Description** Inserts a USAT instruction.

The compiler will incorporate a shift instruction into the operand when possible. For example, `__USAT(x << 3, 11)` compiles to `USAT Rd, #11, Rn, LSL #3`, where the value of `x` has been placed in register `Rn` and the return value of `__USAT` will be placed in register `Rd`.

This intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7-M for Thumb mode.

This intrinsic function is equivalent to the *Arm C Language Extensions* (ACLE) intrinsic function `__usat`.

**Note:** This intrinsic function cannot be used in **64-bit mode**.

**\_\_USAT16**

|             |                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __USAT16(unsigned int, unsigned int);</code>                                                                                                                                                                                                                                                                                                                                   |
| Description | <p>Inserts a USAT16 instruction.</p> <p>This intrinsic function requires architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.</p> <p>This intrinsic function is equivalent to the <i>Arm C Language Extensions</i> (ACLE) intrinsic function <code>__usat16</code>.</p> <p><b>Note:</b> This intrinsic function cannot be used in <b>64-bit mode</b>.</p> |

**\_\_UXTAB, \_\_UXTAB16, \_\_UXTAH, \_\_UXTB16**

|             |                                                                                                                                                                                                                                                                     |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>unsigned int __UXTxxx(unsigned int, unsigned int);</code>                                                                                                                                                                                                     |
| Description | <p>Inserts the specified instruction.</p> <p>These intrinsic functions require architecture Armv6 or higher for Arm mode, and Armv7-A, Armv7-R, or Armv7E-M for Thumb mode.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p> |

**\_\_VFMA\_F64, \_\_VFMS\_F64, \_\_VFNMA\_F64, \_\_VFNMS\_F64, \_\_VFMA\_F32, \_\_VFMS\_F32, \_\_VFNMA\_F32, \_\_VFNMS\_F32**

|             |                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>double __VFMA_F64(double a, double x, double y); double __VFMS_F64(double a, double x, double y); double __VFNMA_F64(double a, double x, double y); double __VFNMS_F64(double a, double x, double y); float __VFMA_f32(float a, float x, float y); float __VFMS_f32(float a, float x, float y); float __VFNMA_F32(float a, float x, float y); float __VFNMS_F32(float a, float x, float y);</pre> |
| Description | <p>Inserts a fused floating-point multiply-accumulate instruction VFMA, VFMS, VFNMA, or VFNMS.</p> <p><b>Note:</b> These intrinsic functions cannot be used in <b>64-bit mode</b>.</p>                                                                                                                                                                                                                 |

## **\_\_VMINNM\_F64, \_\_VMAXNM\_F64, \_\_VMINNM\_F32, \_\_VMAXNM\_F32**

Syntax

```
double __VMINNM_F64(double x, double y);
double __VMAXNM_F64(double x, double y);
float __VMINNM_F32(float x, float y);
float __VMAXNM_F32(float x, float y);
```

Description

Inserts a `VMINNM` or `VMAXNM` instruction.

**Note:** These intrinsic functions cannot be used in 64-bit mode.

## **\_\_VRINTA\_F64, \_\_VRINTM\_F64, \_\_VRINTN\_F64, \_\_VRINTP\_F64, \_\_VRINTX\_F64, \_\_VRINTR\_F64, \_\_VRINTZ\_F64, \_\_VRINTA\_F32, \_\_VRINTM\_F32, \_\_VRINTN\_F32, \_\_VRINTP\_F32, \_\_VRINTX\_F32, \_\_VRINTR\_F32, \_\_VRINTZ\_F32**

Syntax

```
double __VRINTA_F64(double x);
double __VRINTM_F64(double x);
double __VRINTN_F64(double x);
double __VRINTP_F64(double x);
double __VRINTX_F64(double x);
double __VRINTR_F64(double x);
double __VRINTZ_F64(double x);
float __VRINTA_F32(float x);
float __VRINTM_F32(float x);
float __VRINTN_F32(float x);
float __VRINTP_F32(float x);
float __VRINTX_F32(float x);
float __VRINTR_F32(float x);
float __VRINTZ_F32(float x);
```

Description

Performs a directed rounding and inserts the corresponding instruction:

- `VRINTA`: Rounds floating-point to integer to Nearest with Ties to Away
- `VRINTM`: Rounds floating-point to integer towards -Infinity
- `VRINTN`: Rounds floating-point to integer to Nearest
- `VRINTP`: Rounds floating-point to integer towards +Infinity
- `VRINTR`: Rounds floating-point to integer (using rounding mode in FPSCR)
- `VRINTX`: rounds floating-point to integer inexact (using rounding mode in FPSCR)
- `VRINTZ`: Rounds floating-point to integer towards Zero

If the result of, for example `__VRINTA_F64`, is converted to `int`, the instruction `VCVTA.S32.F64` is used instead. For conversion to `unsigned int`, the instruction `VCVTA.U32.F64` is used instead. Similarly, `VRINTM`, `VRINTN`, `VRINTP`, and `VRINTR` use corresponding instructions `VCVTM`, `VCVTN`, `VCVTP`, and `VCVTR` for integer conversion.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## \_\_VSQRT\_F64, \_\_VSQRT\_F32

Syntax `double __VSQRT_F64(double x);`  
`float __VSQRT_F32(float x);`

Description Inserts the square root instruction `VSQRT`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

## \_\_WFE, \_\_WFI, \_\_YIELD

Syntax `void __xxx(void);`

Description Inserts the specified instruction.

These intrinsic functions require architecture Armv7 for Arm mode, and Armv6-M, or Armv7 for Thumb mode.

These intrinsic functions are equivalent to the *Arm C Language Extensions (ACLE)* intrinsic functions `__wfe`, `__wfi`, and `__yield`.

**Note:** These intrinsic functions cannot be used in **64-bit mode**.

---

## Supported GCC built-in functions

The IAR C/C++ Compiler also supports a limited selection of GCC-style built-in functions.

The following functions are supported. For more information, see the GCC documentation.

- `__atomic_add_fetch`
- `__atomic_and_fetch`
- `__atomic_compare_exchange`

The `weak` parameter is always ignored, only a variation with strong semantics is provided.

- `__atomic_compare_exchange_n`

The `weak` parameter is always ignored, only a variation with strong semantics is provided.

- `__atomic_exchange`

- `__atomic_exchange_n`
- `__atomic_fetch_add`
- `__atomic_fetch_and`
- `__atomic_fetch_nand`
- `__atomic_fetch_or`
- `__atomic_fetch_sub`
- `__atomic_fetch_xor`
- `__atomic_load`
- `__atomic_load_n`
- `__atomic_nand_fetch`
- `__atomic_or_fetch`
- `__atomic_store`
- `__atomic_store_n`
- `__atomic_sub_fetch`
- `__atomic_xor_fetch`
- `__builtin_bswap16`
- `__builtin_bswap32`
- `__builtin_bswap64`
- `__builtin_clz`
- `__builtin_clzl`
- `__builtin_clzll`
- `__builtin_ctz`
- `__builtin_ctzl`
- `__builtin_ctzll`
- `__builtin_expect` (recognized but has no effect)
- `__builtin_ffs`
- `__builtin_ffsl`
- `__builtin_ffsll`
- `__builtin_popcount`
- `__builtin_popcountl`
- `__builtin_popcountll`
- `__builtin_types_compatible_p`
- `__builtin_unreachable`

See also *Supported GCC predefined preprocessor symbols*, page 537.



The following functions are supported, but redirect to the corresponding standard library functions:

- `__builtin_acos`
- `__builtin_acosf`
- `__builtin_acosh`
- `__builtin_acoshf`
- `__builtin_acoshl`
- `__builtin_acosl`
- `__builtin_asin`
- `__builtin_asinf`
- `__builtin_asinh`
- `__builtin_asinhf`
- `__builtin_asinhl`
- `__builtin_asinl`
- `__builtin_atan`
- `__builtin_atan2`
- `__builtin_atan2f`
- `__builtin_atan2l`
- `__builtin_atanf`
- `__builtin_atanh`
- `__builtin_atanhf`
- `__builtin_atanhl`
- `__builtin_atanl`
- `__builtin_cbrt`
- `__builtin_cbrtf`
- `__builtin_cbrtl`
- `__builtin_ceil`
- `__builtin_ceilf`
- `__builtin_ceill`
- `__builtin_copysign`
- `__builtin_copysignf`
- `__builtin_copysignl`
- `__builtin_cos`
- `__builtin_cosf`

- `__builtin_cosh`
- `__builtin_coshf`
- `__builtin_coshl`
- `__builtin_cosl`
- `__builtin_erf`
- `__builtin_erfc`
- `__builtin_erfcf`
- `__builtin_erfcl`
- `__builtin_erff`
- `__builtin_erfl`
- `__builtin_exp`
- `__builtin_exp2`
- `__builtin_exp2f`
- `__builtin_exp2l`
- `__builtin_expf`
- `__builtin_expl`
- `__builtin_expm1`
- `__builtin_expm1f`
- `__builtin_expm1l`
- `__builtin_fabs`
- `__builtin_fabsf`
- `__builtin_fabsl`
- `__builtin_fdim`
- `__builtin_fdimf`
- `__builtin_fdiml`
- `__builtin_floor`
- `__builtin_floorf`
- `__builtin_floorl`
- `__builtin_fma`
- `__builtin_fmaf`
- `__builtin_fmал`
- `__builtin_fmax`
- `__builtin_fmaxf`
- `__builtin_fmaxl`

- `__builtin_fmin`
- `__builtin_fminf`
- `__builtin_fminl`
- `__builtin_fmod`
- `__builtin_fmodf`
- `__builtin_fmodl`
- `__builtin_frexp`
- `__builtin_frexp_f`
- `__builtin_frexp_l`
- `__builtin_hypot`
- `__builtin_hypot_f`
- `__builtin_hypot_l`
- `__builtin_ldexp`
- `__builtin_ldexp_f`
- `__builtin_ldexp_l`
- `__builtin_lgamma`
- `__builtin_lgamma_f`
- `__builtin_lgamma_l`
- `__builtin_llrint`
- `__builtin_llrint_f`
- `__builtin_llrint_l`
- `__builtin_llround`
- `__builtin_llround_f`
- `__builtin_llround_l`
- `__builtin_log`
- `__builtin_log10`
- `__builtin_log10_f`
- `__builtin_log10_l`
- `__builtin_log1p`
- `__builtin_log1p_f`
- `__builtin_log1p_l`
- `__builtin_log2`
- `__builtin_log2_f`
- `__builtin_log2_l`

- `__builtin_logb`
- `__builtin_logbf`
- `__builtin_logbl`
- `__builtin_logf`
- `__builtin_logl`
- `__builtin_lrint`
- `__builtin_lrintf`
- `__builtin_lrintl`
- `__builtin_lround`
- `__builtin_lroundf`
- `__builtin_lroundl`
- `__builtin_memcmp`
- `__builtin_memcpy`
- `__builtin_modf`
- `__builtin_modff`
- `__builtin_modfl`
- `__builtin_nearbyint`
- `__builtin_nearbyintf`
- `__builtin_nearbyintl`
- `__builtin_nextafter`
- `__builtin_nextafterf`
- `__builtin_nextafterl`
- `__builtin_nexttoward`
- `__builtin_nexttowardf`
- `__builtin_nexttowardl`
- `__builtin_pow`
- `__builtin_powf`
- `__builtin_powl`
- `__builtin_remainder`
- `__builtin_remainderf`
- `__builtin_remainderl`
- `__builtin_remquo`
- `__builtin_remquof`
- `__builtin_remquol`

- `__builtin_rint`
- `__builtin_rintf`
- `__builtin_rintl`
- `__builtin_round`
- `__builtin_roundf`
- `__builtin_roundl`
- `__builtin_scalbln`
- `__builtin_scalblnf`
- `__builtin_scalblnl`
- `__builtin_scalbn`
- `__builtin_scalbnf`
- `__builtin_scalbnl`
- `__builtin_sin`
- `__builtin_sinf`
- `__builtin_sinh`
- `__builtin_sinhf`
- `__builtin_sinh1`
- `__builtin_sinl`
- `__builtin_sqrt`
- `__builtin_sqrtf`
- `__builtin_sqrtl`
- `__builtin_tan`
- `__builtin_tanf`
- `__builtin_tanh`
- `__builtin_tanhf`
- `__builtin_tanh1`
- `__builtin_tanl`
- `__builtin_tgamma`
- `__builtin_tgammaf`
- `__builtin_tgammal`
- `__builtin_trunc`
- `__builtin_truncf`
- `__builtin_truncl`



# The preprocessor

- Overview of the preprocessor
- Description of predefined preprocessor symbols
- Descriptions of miscellaneous preprocessor extensions
- Supported GCC predefined preprocessor symbols

---

## Overview of the preprocessor

The preprocessor of the IAR C/C++ Compiler for Arm adheres to Standard C. The compiler also makes these preprocessor-related features available to you:

- Predefined preprocessor symbols

These symbols allow you to inspect the compile-time environment, for example, the time and date of compilation. For more information, see *Description of predefined preprocessor symbols*, page 520.
- User-defined preprocessor symbols defined using a compiler option

In addition to defining your own preprocessor symbols using the `#define` directive, you can also use the option `-D`, see *-D*, page 320.
- Predefined preprocessor macro symbols

Use the option `--predef_macros` to see the predefined preprocessor macro symbols and their values for a specific command line. For more information, see *--predef\_macros*, page 348.
- Preprocessor extensions

There are several preprocessor extensions, for example, many `pragma` directives. For more information, see the chapter *Pragma directives*. For information about other extensions related to the preprocessor, see *Descriptions of miscellaneous preprocessor extensions*, page 535.
- Preprocessor output

Use the option `--preprocess` to direct preprocessor output to a named file, see *--preprocess*, page 349.

To specify a path for an include file, use forward slashes:

```
#include "mydirectory/myfile"
```

In source code, use forward slashes:

```
file = fopen("mydirectory/myfile", "rt");
```



Backslashes can also be used—use one in include file paths and two in source code strings.

---

## Description of predefined preprocessor symbols

This section lists and describes the preprocessor symbols.

**Note:** To list the predefined preprocessor symbols, use the compiler option `--predef_macros`. See *--predef\_macros*, page 348.

### \_\_AAPCS\_\_

Description

An integer that is set based on the compiler option `--aapcs`. The symbol is set to 1 if the AAPCS base standard is the selected calling convention (`--aapcs=std`). The symbol is undefined for other calling conventions.

This preprocessor symbol is equivalent to the ACLE (*Arm C Language Extensions*) macro `__ARM_PCS`.

See also

`--aapcs`, page 313.

### \_\_AAPCS\_VFP\_\_

Description

An integer that is set based on the compiler option `--aapcs`. The symbol is set to 1 if the VFP variant of AAPCS is the selected calling convention (`--aapcs=vfp`). The symbol is undefined for other calling conventions.

This preprocessor symbol is equivalent to the ACLE (*Arm C Language Extensions*) macro `__ARM_PCS_VFP`.

See also

`--aapcs`, page 313.

### \_\_aarch64\_\_

Description

The symbol is set to 1 if A64 is the selected instruction set in AArch64.

See also

`--aarch64`, page 313, `--cpu_mode`, page 319, and `--abi`, page 314.



**\_\_arm\_\_**

|             |                                                                         |
|-------------|-------------------------------------------------------------------------|
| Description | The symbol is defined when generating code for the A32 instruction set. |
| See also    | <code>--cpu_mode</code> , page 319.                                     |

**\_\_ARM\_32BIT\_STATE**

|             |                                                                                                                                                     |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | The symbol is defined when compiling in 32-bit mode.<br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                        |

**\_\_ARM\_64BIT\_STATE**

|             |                                                                                                                                                     |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | The symbol is defined when compiling in 64-bit mode.<br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                        |

**\_\_ARM\_ADVANCED\_SIMD\_\_**

|             |                                                                                                                                                                                                                                                                                                                                                              |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that is set based on the compiler option <code>--cpu</code> . The symbol is set to 1 if the selected processor architecture has the Advanced SIMD architecture extension. The symbol is undefined for other cores.<br><br>This preprocessor symbol is equivalent to the ACLE ( <i>Arm C Language Extensions</i> ) macro <code>__ARM_NEON</code> . |
| See also    | <code>--cpu</code> , page 317.                                                                                                                                                                                                                                                                                                                               |

**\_\_ARM\_ALIGN\_MAX\_PWR**

|             |                                                                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that identifies the maximum alignment of static objects.<br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                                       |

## **\_\_ARM\_ALIGN\_MAX\_STACK\_PWR**

|             |                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that identifies the maximum alignment of stack objects.<br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                                      |

## **\_\_ARM\_ARCH**

|             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                   |

## **\_\_ARM\_ARCH\_ISA\_A64**

|             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                   |

## **\_\_ARM\_ARCH\_ISA\_ARM**

|             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                   |

## **\_\_ARM\_ARCH\_ISA\_THUMB**

|             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                   |

## **\_\_ARM\_ARCH\_PROFILE**

|             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                   |

**\_\_ARM\_BIG\_ENDIAN**

|             |                                                                                |
|-------------|--------------------------------------------------------------------------------|
| Description | This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                   |

**\_\_ARM\_FEATURE\_AES**

|             |                                                                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | This symbol is defined to 1 if the cryptographic AES instructions are supported.<br>This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**\_\_ARM\_FEATURE\_CLZ**

|             |                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | This symbol is defined to 1 if the CLZ instructions are supported.<br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                                      |

**\_\_ARM\_FEATURE\_CMSE**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that is set based on the compiler options <code>--cpu</code> and <code>--cmse</code> . The symbol is set to 3 if the selected processor architecture has CMSE (Cortex-M security extensions) and the compiler option <code>--cmse</code> is specified.<br><br>The symbol is set to 1 if the selected processor architecture has CMSE and the compiler option <code>--cmse</code> is not specified.<br><br>The symbol is undefined for cores without CMSE. |
| See also    | <code>--cmse</code> , page 317 and <code>--cpu</code> , page 317                                                                                                                                                                                                                                                                                                                                                                                                     |

**\_\_ARM\_FEATURE\_CRC32**

|             |                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | This symbol is defined to 1 if the CRC32 instructions are supported (optional in Armv8-A/R).<br><br>This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## **\_\_ARM\_FEATURE\_CRYPTO**

Description This symbol is defined to 1 if the cryptographic instructions are supported (implies Armv8-A/R with Neon).

This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_DIRECTED\_ROUNDING**

Description This symbol is defined to 1 if the directed rounding and conversion instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_DSP**

Description This symbol is defined according to ACLE (*Arm C Language Extensions*).

See also *Arm C Language Extensions* (IHI 0053D)

## **\_\_ARM\_FEATURE\_FMA**

Description This symbol is defined to 1 if the FPU supports fused floating-point multiply-accumulate.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_FP16\_FML**

Description This symbol is defined to 1 if the Armv8.2-A FP16 multiplication instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_IDIV**

Description This symbol is defined according to ACLE (*Arm C Language Extensions*).

See also *Arm C Language Extensions* (IHI 0053D)

**\_\_ARM\_FEATURE\_NUMERIC\_MAXMIN**

Description This symbol is defined to 1 if the floating-point maximum and minimum instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_FEATURE\_QBIT**

Description This symbol is defined to 1 if the Q (saturation) global flag is supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_FEATURE\_QRDMX**

Description This symbol is defined to 1 if SQRDMLAH and SQRDMLSH instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_FEATURE\_SAT**

Description This symbol is defined to 1 if SSAT and USAT instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_FEATURE\_SHA2**

Description This symbol is defined to 1 if the cryptographic SHA1 and SHA2 instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_FEATURE\_SHA3**

Description This symbol is defined to 1 if the cryptographic SHA3 instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_FEATURE\_SHA512**

Description This symbol is defined to 1 if the Armv8.2-A cryptographic SHA2 instructions are supported.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_SIMD32**

Description                      This symbol is defined to 1 if 32-bit SIMD instructions are supported.  
                                          This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_SM3**

Description                      This symbol is defined to 1 if the cryptographic SM3 instructions are supported.  
                                          This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_SM4**

Description                      This symbol is defined to 1 if the cryptographic SM4 instructions are supported.  
                                          This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FEATURE\_UNALIGNED**

Description                      This symbol is defined only if the target supports unaligned access, and unaligned access is allowed. The compiler option `--no_unaligned_access` can be used to disallow unaligned access.  
                                          This symbol is defined according to ACLE (*Arm C Language Extensions*).

## **\_\_ARM\_FP**

Description                      This symbol is defined according to ACLE (*Arm C Language Extensions*).  
                                          See also                              *Arm C Language Extensions* (IHI 0053D)

## **\_\_ARM\_FPI6\_ARGS**

Description                      This symbol is defined according to ACLE (*Arm C Language Extensions*).  
                                          See also                              *Arm C Language Extensions* (IHI 0053D)

**\_\_ARM\_FPI6\_FML**

Description This symbol is defined to 1 if FP16 multiplication instructions from Armv8.2-A are supported. This symbol is defined according to ACLE (*Arm C Language Extensions*).

See also *Arm C Language Extensions* (IHI 0053D)

**\_\_ARM\_FPI6\_FORMAT\_IEEE**

Description This symbol is defined according to ACLE (*Arm C Language Extensions*).

See also *Arm C Language Extensions* (IHI 0053D)

**\_\_ARM\_MEDIA\_\_**

Description An integer that is set based on the compiler option `--cpu`. The symbol is set to 1 if the selected processor architecture has the Armv6 SIMD extensions for multimedia. The symbol is undefined for other cores.

This preprocessor symbol is equivalent to the ACLE (*Arm C Language Extensions*) macro `__ARM_FEATURE_SIMD32`.

See also `--cpu`, page 317.

**\_\_ARM\_NEON**

Description This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_NEON\_FP**

Description This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_PCS\_AAPCS64**

Description This symbol is defined to 1 if the default procedure calling standard for the translation unit conforms to the AAPCS64 standard.

This symbol is defined according to ACLE (*Arm C Language Extensions*).

**\_\_ARM\_PROFILE\_M\_\_**

|             |                                                                                                                                                                                                                                                                                                                                          |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that is set based on the compiler option <code>--cpu</code> . The symbol is set to 1 if the selected processor architecture is a profile M core. The symbol is undefined for other cores.<br><br>This preprocessor symbol is related to the ACLE ( <i>Arm C Language Extensions</i> ) macro <code>__ARM_ARCH_PROFILE</code> . |
| See also    | <code>--cpu</code> , page 317.                                                                                                                                                                                                                                                                                                           |

**\_\_ARM\_ROPI**

|             |                                                                                                                                                                                                     |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | This symbol is defined to 1 if the translation unit is being compiled in read-only position-independent mode.<br><br>This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**\_\_ARM\_RWPI**

|             |                                                                                                                                                                                                      |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | This symbol is defined to 1 if the translation unit is being compiled in read/write position-independent mode.<br><br>This symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**\_\_ARM\_SIZEOF\_MINIMAL\_ENUM**

|             |                                                                                                                                                                                |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that identifies the size of a minimal enumeration type (1 or 4).<br><br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                                                   |

**\_\_ARM\_SIZEOF\_WCHAR\_T**

|             |                                                                                                                                                                                   |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that identifies the size of the <code>wchar_t</code> type (2 or 4).<br><br>This preprocessor symbol is defined according to ACLE ( <i>Arm C Language Extensions</i> ). |
| See also    | <i>Arm C Language Extensions</i> (IHI 0053D)                                                                                                                                      |



**\_\_ARMVFP\_\_**

**Description** An integer that reflects the `--fpu` option and is defined to `__ARMVFPV2__`, `__ARMVFPV3__`, `__ARMVFPV4__`, or `__ARMVFPV5__`. These symbolic names can be used when testing the `__ARMVFP__` symbol. If VFP code generation is disabled (default), the symbol will be undefined.

**See also** `--fpu`, page 330.

**\_\_ARMVFP\_D16\_\_**

**Description** An integer that is set based on the compiler option `--fpu`. The symbol is set to 1 if the selected FPU is a VFPv3 or VFPv4 unit with only 16 D registers. Otherwise, the symbol is undefined.

**See also** `--fpu`, page 330.

**\_\_ARMVFP\_SP\_\_**

**Description** An integer that is set based on the compiler option `--fpu`. The symbol is set to 1 if the selected FPU only supports 32-bit single-precision. Otherwise, the symbol is undefined. This preprocessor symbol is related to the ACLE (*Arm C Language Extensions*) macro `__ARM_FP`.

**See also** `--fpu`, page 330.

**\_\_BASE\_FILE\_\_**

**Description** A string that identifies the name of the base source file (that is, not the header file), being compiled.

**See also** `__FILE__`, page 531, `--no_normalize_file_macros`, page 340, and `--no_path_in_file_macros`, page 340.

**\_\_BUILD\_NUMBER\_\_**

**Description** A unique integer that identifies the build number of the compiler currently in use.

**\_\_CORE\_\_**

Description

An integer that identifies the chip core in use. The value reflects the setting of the `--cpu` option and is defined to `__ARM4TM__`, `__ARM5__`, `__ARM5E__`, `__ARM6__`, `__ARM6M__`, `__ARM6SM__`, `__ARM7M__`, `__ARM7EM__`, `__ARM7A__`, `__ARM7R__`, `__ARM8A__`, `__ARM8M_BASELINE__`, `__ARM8M_MAINLINE__`, `__ARM8R__`, or `__ARM8EM_MAINLINE__`. These symbolic names can be used when testing the `__CORE__` symbol.

This preprocessor symbol is related to the ACLE (*Arm C Language Extensions*) macro `__ARM_ARCH`.

**\_\_COUNTER\_\_**

Description

A macro that expands to a new integer each time it is expanded, starting at zero (0) and counting up.

**\_\_cplusplus**

Description

An integer which is defined when the compiler runs in any of the C++ modes, otherwise it is undefined. When defined, its value is `201703L`. This symbol can be used with `#ifdef` to detect whether the compiler accepts C++ code. It is particularly useful when creating header files that are to be shared by C and C++ code.

This symbol is required by Standard C.

**\_\_CPU\_MODE\_\_**

Description

An integer that reflects the selected CPU mode and is defined to 1 for Thumb (T or T32), 2 for Arm (A32), or 3 for A64.

**\_\_DATE\_\_**

Description

A string that identifies the date of compilation, which is returned in the form "`Mmm dd yyYY`", for example, "`Oct 30 2018`".

This symbol is required by Standard C.

## \_\_EXCEPTIONS

|             |                                                                |
|-------------|----------------------------------------------------------------|
| Description | A symbol that is defined when exceptions are supported in C++. |
| See also    | <code>--no_exceptions</code> , page 338.                       |

## \_\_FILE\_\_

|             |                                                                                                                                                                                  |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | A string that identifies the name of the file being compiled, which can be both the base source file and any included header file.<br><br>This symbol is required by Standard C. |
| See also    | <code>__BASE_FILE__</code> , page 529, <code>--no_normalize_file_macros</code> , page 340, and <code>--no_path_in_file_macros</code> , page 340.                                 |

## \_\_func\_\_

|             |                                                                                                                                                                                                                                  |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | A predefined string identifier that is initialized with the name of the function in which the symbol is used. This is useful for assertions and other trace utilities. The symbol requires that language extensions are enabled. |
| See also    | <code>-e</code> , page 326 and <code>__PRETTY_FUNCTION__</code> , page 533.                                                                                                                                                      |

## \_\_FUNCTION\_\_

|             |                                                                                                                                                                                                                                                                                                                     |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | A predefined string identifier that is initialized with the name of the function in which the symbol is used, similar to <code>char _FUNCTION_[]="main";</code> if used in <code>main()</code> . This is useful for assertions and other trace utilities. The symbol requires that language extensions are enabled. |
| See also    | <code>-e</code> , page 326 and <code>__PRETTY_FUNCTION__</code> , page 533.                                                                                                                                                                                                                                         |

## \_\_IAR\_SYSTEMS\_ICC\_\_

|             |                                                                                                                                                                                                                                                                |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that identifies the IAR compiler platform. The current value is 9—the number could be higher in a future version of the product. This symbol can be tested with <code>#ifdef</code> to detect whether the code was compiled by a compiler from IAR. |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**\_\_ICCARM\_\_**

Description An integer that is set to 1 when the code is compiled with the IAR C/C++ Compiler for Arm.

**\_\_ILP32\_\_**

Description This symbol is defined if the ILP32 data model is used when compiling for the A64 instruction set in the AArch64 state. It can also be written in lower case: `__ilp32__`.

See also `--abi`, page 314.

**\_\_LIBCPP**

Description A symbol that is defined when the Libc++ library is used.

**\_LIBCPP\_ENABLE\_CXX17\_REMOVED\_FEATURES**

Description By default, the Libc++ library does not support deprecated C++17 features. To enable support for these, define the preprocessor symbol `_LIBCPP_ENABLE_CXX17_REMOVED_FEATURES` prior to including the relevant system header. For a list of some of these deprecated features, see *Not supported C/C++ functionality*, page 547.

**\_\_LINE\_\_**

Description An integer that identifies the current source line number of the file being compiled, which can be both the base source file and any included header file.

This symbol is required by Standard C.

**\_\_LITTLE\_ENDIAN\_\_**

Description An integer that reflects the setting of the compiler option `--endian` and is defined to 1 when the byte order is little-endian. The symbol is defined to 0 when the byte order is big-endian.

This preprocessor symbol is related to the ACLE (*Arm C Language Extensions*) macro `__ARM_BIG_ENDIAN`.

**\_\_LP64\_\_**

|             |                                                                                                                                                                                      |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | This symbol is defined if the LP64 data model is used when compiling for the A64 instruction set in the AArch64 state. It can also be written in lower case: <code>__lp64__</code> . |
| See also    | <code>--abi</code> , page 314.                                                                                                                                                       |

**\_\_PRETTY\_FUNCTION\_\_**

|             |                                                                                                                                                                                                                                                                                                                                            |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | A predefined string identifier that is initialized with the function name, including parameter types and return type, of the function in which the symbol is used, for example, <code>"void func(char)"</code> . This symbol is useful for assertions and other trace utilities. The symbol requires that language extensions are enabled. |
| See also    | <code>-e</code> , page 326 and <code>__func__</code> , page 531.                                                                                                                                                                                                                                                                           |

**\_\_ROPI\_\_**

|             |                                                                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that is defined when the compiler option <code>--ropi</code> is used.<br><br>This preprocessor symbol is equivalent to the ACLE ( <i>Arm C Language Extensions</i> ) macro <code>__ARM_ROPI</code> . |
| See also    | <code>--ropi</code> , page 351.                                                                                                                                                                                 |

**\_\_RTTI\_\_**

|             |                                                                                    |
|-------------|------------------------------------------------------------------------------------|
| Description | A symbol that is defined when runtime type information (RTTI) is supported in C++. |
| See also    | <code>--no_rtti</code> , page 341.                                                 |

**\_\_RWPI\_\_**

|             |                                                                                                                                                                                                                 |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | An integer that is defined when the compiler option <code>--rwpi</code> is used.<br><br>This preprocessor symbol is equivalent to the ACLE ( <i>Arm C Language Extensions</i> ) macro <code>__ARM_RWPI</code> . |
| See also    | <code>--rwpi</code> , page 352.                                                                                                                                                                                 |

**\_\_STDC\_\_**

Description An integer that is set to 1, which means the compiler adheres to Standard C. This symbol can be tested with `#ifdef` to detect whether the compiler in use adheres to Standard C.\*  
This symbol is required by Standard C.

**\_\_STDC\_LIB\_EXT1\_\_**

Description An integer that is set to 201112L and that signals that Annex K, *Bounds-checking interfaces*, of the C standard is supported.

See also `__STDC_WANT_LIB_EXT1__`, page 536.

**\_\_STDC\_NO\_ATOMICS\_\_**

Description Set to 1 if the compiler does not support atomic types nor `stdatomic.h`.

See also *Atomic operations*, page 548.

**\_\_STDC\_NO\_THREADS\_\_**

Description Set to 1 to indicate that the implementation does not support threads.

**\_\_STDC\_NO\_VLA\_\_**

Description Set to 1 to indicate that C variable length arrays, VLAs, are not enabled.

See also `--vla`, page 359.

**\_\_STDC\_UTF16\_\_**

Description Set to 1 to indicate that the values of type `char16_t` are UTF-16 encoded.

**\_\_STDC\_UTF32\_\_**

Description Set to 1 to indicate that the values of type `char32_t` are UTF-32 encoded.

## \_\_STDC\_VERSION\_\_

Description An integer that identifies the version of the C standard in use. The symbol expands to 201710L, unless the `--c89` compiler option is used, in which case the symbol expands to 199409L.

This symbol is required by Standard C.

## \_\_thumb\_\_

Description The symbol is defined when generating code for the T or T32 instruction set.

See also `--cpu_mode`, page 319.

## \_\_TIME\_\_

Description A string that identifies the time of compilation in the form "hh:mm:ss".

This symbol is required by Standard C.

## \_\_TIMESTAMP\_\_

Description A string constant that identifies the date and time of the last modification of the current source file. The format of the string is the same as that used by the `asctime` standard function (in other words, "Tue Sep 16 13:03:52 2014").

## \_\_VER\_\_

Description An integer that identifies the version number of the IAR compiler in use. For example, version 5.11.3 is returned as 5011003.

---

## Descriptions of miscellaneous preprocessor extensions

This section gives reference information about the preprocessor extensions that are available in addition to the predefined symbols, pragma directives, and Standard C directives.

## #include\_next

**Description** This is a variant of the `#include` directive. It searches for the named file only in the directories on the search path that follow the directory in which the current source file (the one containing the `#include_next` directive) is found.

## NDEBUG

**Description** This preprocessor symbol determines whether any assert macros you have written in your application shall be included or not in the built application.

If this symbol is not defined, all assert macros are evaluated. If the symbol is defined, all assert macros are excluded from the compilation. In other words, if the symbol is:

- **defined**, the assert code will *not* be included
- **not defined**, the assert code will be included

This means that if you write any assert code and build your application, you should define this symbol to exclude the assert code from the final application.

**Note:** The assert macro is defined in the `assert.h` standard include file.

In the IDE, the `NDEBUG` symbol is automatically defined if you build your application in the Release build configuration.

**See also** `__aeabi_assert`, page 159.

## \_\_STDC\_WANT\_LIB\_EXT1\_\_

**Description** If this symbol is defined to 1 prior to any inclusions of system header files, it will enable the use of functions from Annex K, *Bounds-checking interfaces*, of the C standard.

**See also** *Bounds checking functionality*, page 142 and *C bounds-checking interface*, page 549.

## #warning

**Syntax** `#warning message`  
 where *message* can be any string.

**Description** Use this preprocessor directive to produce messages. Typically, this is useful for assertions and other trace utilities, similar to the way the Standard C `#error` directive is used. This directive is not recognized when the `--strict` compiler option is used.



---

## Supported GCC predefined preprocessor symbols

The IAR C/C++ Compiler also supports a limited selection of GCC-style predefined preprocessor symbols (macros).

The following predefined symbols are supported. For more information, see the GCC documentation.

- `__ATOMIC_ACQUIRE`
- `__ATOMIC_ACQ_REL`
- `__ATOMIC_CONSUME`
- `__ATOMIC_RELAXED`
- `__ATOMIC_RELEASE`
- `__ATOMIC_SEQ_CST`

See also *Supported GCC built-in functions*, page 511.



# C/C++ standard library functions

- C/C++ standard library overview
- DLIB runtime environment—implementation details

For detailed reference information about the library functions, see the online help system.

---

## C/C++ standard library overview

The compiler comes with two different implementations of the C/C++ standard library.

The IAR DLIB runtime environment offers low-level support for C as well as C++. When using this runtime environment, you have a choice of two libraries:

- The IAR DLIB C/C++ library is a complete implementation of the C/C++ standard library, compliant with standard C and C++14, except for thread-related functionality. It can be configured to include different levels of support for locale, file descriptors, multibyte characters, etc.
- The IAR Libc++ library is a complete implementation of the C/C++ standard library, compliant with standard C and C++17, except for thread-related and `filesystem` functionality. The Libc++ library is taken from LLVM under an open source license and is used as is, with extensions and limitations from the C++17 standard.

Both these implementations are built on top of the IAR DLIB runtime environment and both implementations support floating-point numbers in IEC 60559 format. For more information about this environment, and about how to customize the DLIB library, see the chapter *The DLIB runtime environment*.

For detailed information about the DLIB library functions, see the documentation supplied with the product in the `arm\doc` directory in the file `HelpDLIB6.chm`. There is no reference information available for the Libc++ library functions.

For more information about library functions, see the chapters about implementation-defined behavior.

## HEADER FILES

Your application program gains access to library definitions through header files, which it incorporates using the `#include` directive. The definitions are divided into several different header files, each covering a particular functional area, letting you include just those that are required.

It is essential to include the appropriate header file before making any reference to its definitions. Failure to do so can cause the call to fail during execution, or generate error or warning messages at compile time or link time.

## LIBRARY OBJECT FILES

Most of the library definitions can be used without modification, that is, directly from the library object files that are supplied with the product. For information about how to set up a runtime library, see *Setting up the runtime environment*, page 135. The linker will include only those routines that are required—directly or indirectly—by your application.

For information about how you can override library modules with your own versions, see *Overriding library modules*, page 139.

## ALTERNATIVE MORE ACCURATE LIBRARY FUNCTIONS

The default implementation of `cos`, `sin`, `tan`, and `pow` is designed to be fast and small. As an alternative, there are versions designed to provide better accuracy. They are named `__iar_xxx_accuratef` for float variants of the functions and `__iar_xxx_accuratel` for long double variants of the functions, and where `xxx` is `cos`, `sin`, etc.

To use these more accurate versions, use the `--redirect` linker option.

## REENTRANCY

A function that can be simultaneously invoked in the main application and in any number of interrupts is reentrant. A library function that uses statically allocated data is therefore not reentrant.

Most parts of the DLIB runtime environment are reentrant, but the following functions and parts are not reentrant because they need static data:

- Heap functions—`malloc`, `free`, `realloc`, `calloc`, etc. and the C++ operators `new` and `delete`
- Locale functions—`localeconv`, `setlocale`
- Multibyte functions—`mblen`, `mbrlen`, `mbrtowc`, `mbsrtowc`, `mbtowc`, `wcrtomb`, `wcstomb`, `wctomb`

- Rand functions—`rand`, `srand`
- Time functions—`asctime`, `localtime`, `gmtime`, `mktime`
- The miscellaneous functions `atexit`, `perror`, `strerror`, `strtok`
- Functions that use files or the heap in some way. This includes `scanf`, `sscanf`, `getchar`, `getwchar`, `putchar`, and `putwchar`. In addition, if you are using the options `--printf_multibytes` and `--dlib_config=Full`, the `printf` and `sprintf` functions (or any variants) can also use the heap.

Functions that can set `errno` are not reentrant, because an `errno` value resulting from one of these functions can be destroyed by a subsequent use of the function before it is read. This applies to math and string conversion functions, among others.

Remedies for this are:

- Do not use non-reentrant functions in interrupt service routines
- Guard calls to a non-reentrant function by a mutex, or a secure region, etc.

## THE LONGJMP FUNCTION



A `longjmp` is in effect a jump to a previously defined `setjmp`. Any variable length arrays or C++ objects residing on the stack during stack unwinding will not be destroyed. This can lead to resource leaks or incorrect application behavior.

---

## DLIB runtime environment—implementation details

These topics are covered:

- Briefly about the DLIB runtime environment
- C header files
- C++ header files
- Library functions as intrinsic functions
- Not supported C/C++ functionality
- Atomic operations
- Added C functionality
- Non-standard implementations
- Symbols used internally by the library

### BRIEFLY ABOUT THE DLIB RUNTIME ENVIRONMENT

The DLIB runtime environment provides most of the important C and C++ standard library definitions that apply to embedded systems. These are of the following types:

- Adherence to a free-standing implementation of Standard C. The library supports most of the hosted functionality, but you must implement some of its base functionality. For more information, see the chapter *Implementation-defined behavior for Standard C*.
- Standard C library definitions, for user programs.
- C++ library definitions, for user programs.
- `CSTARTUP`, the module containing the start-up code, see the chapter *The DLIB runtime environment*.
- Runtime support libraries, for example, low-level floating-point routines.
- Intrinsic functions, allowing low-level use of Arm features. For more information, see the chapter *Intrinsic functions*.

In addition, the DLIB runtime environment includes some added C functionality, see *Added C functionality*, page 548.

## C HEADER FILES

This section lists the C header files specific to the DLIB runtime environment. Header files may additionally contain target-specific definitions, which are documented in the chapter *Using C*.

This table lists the C header files:

| Header file             | Usage                                                              |
|-------------------------|--------------------------------------------------------------------|
| <code>assert.h</code>   | Enforcing assertions when functions execute                        |
| <code>complex.h</code>  | Computing common complex mathematical functions                    |
| <code>ctype.h</code>    | Classifying characters                                             |
| <code>errno.h</code>    | Testing error codes reported by library functions                  |
| <code>fenv.h</code>     | Floating-point exception flags                                     |
| <code>float.h</code>    | Testing floating-point type properties                             |
| <code>inttypes.h</code> | Defining formatters for all types defined in <code>stdint.h</code> |
| <code>iso646.h</code>   | Alternative spellings                                              |
| <code>limits.h</code>   | Testing integer type properties                                    |
| <code>locale.h</code>   | Adapting to different cultural conventions                         |
| <code>math.h</code>     | Computing common mathematical functions                            |
| <code>setjmp.h</code>   | Executing non-local goto statements                                |
| <code>signal.h</code>   | Controlling various exceptional conditions                         |
| <code>stdalign.h</code> | Handling alignment on data objects                                 |

Table 38: Traditional Standard C header files—DLIB

| Header file                | Usage                                                                                                                      |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <code>stdarg.h</code>      | Accessing a varying number of arguments                                                                                    |
| <code>stdatomic.h</code>   | Adding support for atomic operations.<br>Atomic operations are available in cores where the instruction set supports them. |
| <code>stdbool.h</code>     | Adds support for the <code>bool</code> data type in C.                                                                     |
| <code>stddef.h</code>      | Defining several useful types and macros                                                                                   |
| <code>stdint.h</code>      | Providing integer characteristics                                                                                          |
| <code>stdio.h</code>       | Performing input and output                                                                                                |
| <code>stdlib.h</code>      | Performing a variety of operations                                                                                         |
| <code>stdnoreturn.h</code> | Adding support for non-returning functions                                                                                 |
| <code>string.h</code>      | Manipulating several kinds of strings                                                                                      |
| <code>tgmath.h</code>      | Type-generic mathematical functions                                                                                        |
| <code>threads.h</code>     | Adding support for multiple threads of execution<br>This functionality is not supported.                                   |
| <code>time.h</code>        | Converting between various time and date formats                                                                           |
| <code>uchar.h</code>       | Unicode functionality                                                                                                      |
| <code>wchar.h</code>       | Support for wide characters                                                                                                |
| <code>wctype.h</code>      | Classifying wide characters                                                                                                |

Table 38: Traditional Standard C header files—DLIB (Continued)

## C++ HEADER FILES

This section lists the C++ header files:

- The C++ library header files  
The header files that constitute the Standard C++ library.
- The C++ C header files  
The C++ header files that provide the resources from the C library.

### The C++ library header files

This table lists the header files that can be used in C++:

| Header file            | Usage                                                                |
|------------------------|----------------------------------------------------------------------|
| <code>algorithm</code> | Defines several common operations on containers and other sequences  |
| <code>any</code>       | Adding support for the <code>std::any</code> class. Requires Libc++. |

Table 39: C++ header files

| Header file                     | Usage                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <code>array</code>              | Adding support for the array sequencer container                                                                          |
| <code>atomic</code>             | Adding support for atomic operations<br>Atomic operations are available in cores where the instruction set supports them. |
| <code>bitset</code>             | Defining a container with fixed-sized sequences of bits                                                                   |
| <code>charconv</code>           | Adding support for the <code>std::to_chars</code> and <code>std::from_chars</code> routines. Requires Libc++.             |
| <code>chrono</code>             | Adding support for time utilities. Note that the <code>steady_clock</code> class is not available in Libc++.              |
| <code>codecvt</code>            | Adding support for conversions between encodings                                                                          |
| <code>complex</code>            | Defining a class that supports complex arithmetic                                                                         |
| <code>condition_variable</code> | Adding support for thread condition variables.<br>This functionality is not supported.                                    |
| <code>deque</code>              | A deque sequence container                                                                                                |
| <code>exception</code>          | Defining several functions that control exception handling                                                                |
| <code>forward_list</code>       | Adding support for the forward list sequence container                                                                    |
| <code>fstream</code>            | Defining several I/O stream classes that manipulate external files                                                        |
| <code>functional</code>         | Defines several function objects                                                                                          |
| <code>future</code>             | Adding support for passing function information between threads<br>This functionality is not supported.                   |
| <code>hash_map</code>           | A map associative container, based on a hash algorithm. This is a C++14 header—it is not available in Libc++.             |
| <code>hash_set</code>           | A set associative container, based on a hash algorithm. This is a C++14 header—it is not available in Libc++.             |
| <code>initializer_list</code>   | Adding support for the <code>initializer_list</code> class                                                                |
| <code>iomanip</code>            | Declaring several I/O stream manipulators that take an argument                                                           |
| <code>ios</code>                | Defining the class that serves as the base for many I/O streams classes                                                   |
| <code>iosfwd</code>             | Declaring several I/O stream classes before they are necessarily defined                                                  |
| <code>iostream</code>           | Declaring the I/O stream objects that manipulate the standard streams                                                     |
| <code>istream</code>            | Defining the class that performs extractions                                                                              |
| <code>iterator</code>           | Defines common iterators, and operations on iterators                                                                     |

Table 39: C++ header files (Continued)



| Header file                   | Usage                                                                                                               |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <code>limits</code>           | Defining numerical values                                                                                           |
| <code>list</code>             | A doubly-linked list sequence container                                                                             |
| <code>locale</code>           | Adapting to different cultural conventions                                                                          |
| <code>map</code>              | A map associative container                                                                                         |
| <code>memory</code>           | Defines facilities for managing memory                                                                              |
| <code>mutex</code>            | Adding support for the data race protection object <code>mutex</code> . This functionality is not supported.        |
| <code>new</code>              | Declaring several functions that allocate and free storage                                                          |
| <code>numeric</code>          | Performs generalized numeric operations on sequences                                                                |
| <code>optional</code>         | Adding support for the <code>std::optional</code> class template. Requires Libc++.                                  |
| <code>ostream</code>          | Defining the class that performs insertions                                                                         |
| <code>queue</code>            | A queue sequence container                                                                                          |
| <code>random</code>           | Adding support for random numbers                                                                                   |
| <code>ratio</code>            | Adding support for compile-time rational arithmetic                                                                 |
| <code>regex</code>            | Adding support for regular expressions                                                                              |
| <code>scoped_allocator</code> | Adding support for the memory resource <code>scoped_allocator_adaptor</code>                                        |
| <code>set</code>              | A set associative container                                                                                         |
| <code>shared_mutex</code>     | Adding support for the data race protection object <code>shared_mutex</code> . This functionality is not supported. |
| <code>slist</code>            | A singly-linked list sequence container. This is a C++14 header—it is not available in Libc++.                      |
| <code>sstream</code>          | Defining several I/O stream classes that manipulate string containers                                               |
| <code>stack</code>            | A stack sequence container                                                                                          |
| <code>stdexcept</code>        | Defining several classes useful for reporting exceptions                                                            |
| <code>streambuf</code>        | Defining classes that buffer I/O stream operations                                                                  |
| <code>string</code>           | Defining a class that implements a string container                                                                 |
| <code>string_view</code>      | Adding support for the <code>std::basic_string_view</code> class template. Requires Libc++.                         |
| <code>stringstream</code>     | Defining several I/O stream classes that manipulate in-memory character sequences                                   |

Table 39: C++ header files (Continued)

| Header file                | Usage                                                                                     |
|----------------------------|-------------------------------------------------------------------------------------------|
| <code>system_error</code>  | Adding support for global error reporting                                                 |
| <code>thread</code>        | Adding support for multiple threads of execution.<br>This functionality is not supported. |
| <code>tuple</code>         | Adding support for the <code>tuple</code> class                                           |
| <code>typeinfo</code>      | Defining type information support                                                         |
| <code>typeid</code>        | Adding support for type indexes                                                           |
| <code>typetraits</code>    | Adding support for traits on types                                                        |
| <code>unordered_map</code> | Adding support for the unordered map associative container                                |
| <code>unordered_set</code> | Adding support for the unordered set associative container                                |
| <code>utility</code>       | Defines several utility components                                                        |
| <code>valarray</code>      | Defining varying length array container                                                   |
| <code>variant</code>       | Adding support for the <code>std::variant</code> class template.<br>Requires Libc++.      |
| <code>vector</code>        | A vector sequence container                                                               |

Table 39: C++ header files (Continued)

## Using Standard C libraries in C++

The C++ library works in conjunction with some of the header files from the Standard C library, sometimes with small alterations. The header files come in two forms—new and traditional—for example, `cassert` and `assert.h`. The former puts all declared symbols in the global and `std` namespace, whereas the latter puts them in the global namespace only.

This table shows the new header files:

| Header file            | Usage                                                              |
|------------------------|--------------------------------------------------------------------|
| <code>cassert</code>   | Enforcing assertions when functions execute                        |
| <code>ccomplex</code>  | Computing common complex mathematical functions                    |
| <code>cctype</code>    | Classifying characters                                             |
| <code>cerrno</code>    | Testing error codes reported by library functions                  |
| <code>cfenv</code>     | Floating-point exception flags                                     |
| <code>cfloat</code>    | Testing floating-point type properties                             |
| <code>cinttypes</code> | Defining formatters for all types defined in <code>stdint.h</code> |
| <code>ciso646</code>   | Alternative spellings                                              |
| <code>climits</code>   | Testing integer type properties                                    |

Table 40: New Standard C header files—DLIB

| Header file              | Usage                                                                                     |
|--------------------------|-------------------------------------------------------------------------------------------|
| <code>locale</code>      | Adapting to different cultural conventions                                                |
| <code>cmath</code>       | Computing common mathematical functions                                                   |
| <code>csetjmp</code>     | Executing non-local goto statements                                                       |
| <code>csignal</code>     | Controlling various exceptional conditions                                                |
| <code>cstdalign</code>   | Handling alignment on data objects                                                        |
| <code>cstdarg</code>     | Accessing a varying number of arguments                                                   |
| <code>cstdatomic</code>  | Adding support for atomic operations                                                      |
| <code>cstdbool</code>    | Adds support for the <code>bool</code> data type in C.                                    |
| <code>cstddef</code>     | Defining several useful types and macros                                                  |
| <code>cstdint</code>     | Providing integer characteristics                                                         |
| <code>stdio</code>       | Performing input and output                                                               |
| <code>stdlib</code>      | Performing a variety of operations                                                        |
| <code>stdnoreturn</code> | Adding support for non-returning functions                                                |
| <code>cstring</code>     | Manipulating several kinds of strings                                                     |
| <code>ctgmath</code>     | Type-generic mathematical functions                                                       |
| <code>threads</code>     | Adding support for multiple threads of execution.<br>This functionality is not supported. |
| <code>ctime</code>       | Converting between various time and date formats                                          |
| <code>uchar</code>       | Unicode functionality                                                                     |
| <code>wchar</code>       | Support for wide characters                                                               |
| <code>wctype</code>      | Classifying wide characters                                                               |

Table 40: New Standard C header files—DLIB (Continued)

## LIBRARY FUNCTIONS AS INTRINSIC FUNCTIONS

Certain C library functions will under some circumstances be handled as intrinsic functions and will generate inline code instead of an ordinary function call, for example, `memcpy`, `memset`, and `strcat`.

## NOT SUPPORTED C/C++ FUNCTIONALITY

The following files have contents that are not supported by the IAR C/C++ Compiler:

- `threads.h`, `condition_variable`, `future`, `mutex`, `shared_mutex`, `thread`, `threads`
- `memory_resource`
- `filesystem`

Some library functions will have the same address. This occurs, most notably, when the library function parameters differ in type but not in size, as for example, `cos(double)` and `cosl(long double)`.

The IAR C/C++ Compiler does not support threads as described in the C11 and C++14 standards. However, using `DLib_Threads.h` and an RTOS, you can build an application with thread support. For more information, see *Managing a multithreaded environment*, page 169.

C++17 parallel algorithms for containers with the header execution are not supported in Libc++.

By default, the Libc++ library does not support deprecated C++17 features such as `auto_ptr()`, `auto_ptr_ref()`, `random_shuffle`, `set_unexpected()`, `get_unexpected()`, `unary_function()`, `binary_function()`, `const_mem_fun()`, and `const_mem_fun_ref_t()`.

To enable support for deprecated C++17 features, define the preprocessor symbol `_LIBCPP_ENABLE_CXX17_REMOVED_FEATURES` prior to including the relevant system header.

## ATOMIC OPERATIONS

When you compile for cores with instruction set support for atomic accesses, the standard C and C++ atomic operations are available in the files `stdatomic.h` and `atomic`. If atomic operations are not available, the predefined preprocessor symbol `__STDC_NO_ATOMICS__` is defined to 1. This is true both in C and C++.

Atomic operations that cannot be handled natively by the hardware are passed on to library functions. The IAR C/C++ Compiler for Arm does not include implementations for these functions. A template implementation can be found in the file `src\lib\atomic\libatomic.c`.

## ADDED C FUNCTIONALITY

The DLIB runtime environment includes some added C functionality:

- C bounds-checking interface
- `DLib_Threads.h`
- `iar_dlmalloc.h`
- `LowLevelIOInterface.h`
- `stdio.h`
- `stdlib.h`
- `string.h`
- `time.h` (`time32.h`, `time64.h`)

## C bounds-checking interface

The C library supports Annex K (*Bounds-checking interfaces*) of the C standard. It adds symbols, types, and functions in the header files `errno.h`, `stddef.h`, `stdint.h`, `stdio.h`, `stdlib.h`, `string.h`, `time.h` (`time32.h`, `time64.h`), and `wchar.h`.

To enable the interface, define the preprocessor extension `__STDC_WANT_LIB_EXT1__` to 1 prior to including any system header file. See `__STDC_WANT_LIB_EXT1__`, page 536.

As an added benefit, the compiler will issue warning messages for the use of unsafe functions for which the interface has a safer version. For example, using `strcpy` instead of the safer `strcpy_s` will make the compiler issue a warning message.

## DLib\_Threads.h

The `DLib_Threads.h` header file contains support for locks and thread-local storage (TLS) variables. This is useful for implementing thread support. For more information, see the header file.

## iar\_dlmalloc.h

The `iar_dlmalloc.h` header file contains support for the advanced (`dlmalloc`) heap handler. For more information, see *Heap considerations*, page 226.

## LowLevelIOInterface.h

The header file `LowLevelIOInterface.h` contains declarations for the low-level I/O functions used by DLIB. See *The DLIB low-level I/O interface*, page 158.

## stdio.h

These functions provide additional I/O functionality:

|                            |                                                                                     |
|----------------------------|-------------------------------------------------------------------------------------|
| <code>fdopen</code>        | Opens a file based on a low-level file descriptor.                                  |
| <code>fileno</code>        | Gets the low-level file descriptor from the file descriptor ( <code>FILE*</code> ). |
| <code>__gets</code>        | Corresponds to <code>fgets</code> on <code>stdin</code> .                           |
| <code>getw</code>          | Gets a <code>wchar_t</code> character from <code>stdin</code> .                     |
| <code>putw</code>          | Puts a <code>wchar_t</code> character to <code>stdout</code> .                      |
| <code>__ungetchar</code>   | Corresponds to <code>ungetc</code> on <code>stdout</code> .                         |
| <code>__write_array</code> | Corresponds to <code>fwrite</code> on <code>stdout</code> .                         |

## string.h

These are the additional functions defined in `string.h`:

|                         |                                                |
|-------------------------|------------------------------------------------|
| <code>strdup</code>     | Duplicates a string on the heap.               |
| <code>strcasemp</code>  | Compares strings case-insensitive.             |
| <code>strncasemp</code> | Compares strings case-insensitive and bounded. |
| <code>strlen</code>     | Bounded string length.                         |

## time.h

There are two interfaces for using `time_t` and the associated functions `time`, `ctime`, `difftime`, `gmtime`, `localtime`, and `mktime`:

- The 32-bit interface supports years from 1900 up to 2035 and uses a 32-bit integer for `time_t`. The type and function have names like `__time32_t`, `__time32`, etc. This variant is mainly available for backwards compatibility.
- The 64-bit interface supports years from -9999 up to 9999 and uses a signed long long for `time_t`. The type and function have names like `__time64_t`, `__time64`, etc.

The interfaces are defined in three header files:

- `time32.h` defines `__time32_t`, `time_t`, `__time32`, `time`, and associated functions.
- `time64.h` defines `__time64_t`, `time_t`, `__time64`, `time`, and associated functions.
- `time.h` includes `time32.h` or `time64.h` depending on the definition of `_DLIB_TIME_USES_64`.

If `_DLIB_TIME_USES_64` is:

- defined to 1, it will include `time64.h`.
- defined to 0, it will include `time32.h`.
- undefined, it will include `time64.h`.

In both interfaces, `time_t` starts at the year 1970.

An application can use either interface, and even mix them by explicitly using the 32 or 64-bit variants.

See also `__time32`, `__time64`, page 166.

`clock_t` is 8 bytes if `long` is 8 bytes and 64-bit `time.h` is used, otherwise it is 4 bytes.

By default, the time library does not support the timezone and daylight saving time functionality. To enable that functionality, use the linker option `--timezone_lib`. See *--timezone\_lib*, page 408.

There are two functions that can be used for loading or force-loading the timezone and daylight saving time information from `__getzone`:

- `int _ReloadDstRules (void)`
- `int _ForceReloadDstRules (void)`

Both these functions return 0 for DST rules found and -1 for DST rules not found.

## NON-STANDARD IMPLEMENTATIONS

These functions do not work as specified by the C or C++ standards:

- `fopen_s` and `freopen`

These C functions will not propagate the `u` exclusivity attribute to the low-level interface.

- `toupper` and `tolower`

These C functions will only handle A, ..., Z and a, ..., z.

- `iswalnum`, ..., `iswxdigit`

These C functions will only handle arguments in the range 0 to 127.

- The collate C functions `strcoll` and `strxfrm` will not work as intended. The same applies to the C++ equivalent functionality.
- `now`

This C++ function in the C++ header `chrono` uses the `_Xtime_get_ticks()` function and the C `time.h` macro `CLOCKS_PER_SEC`. By default, `_Xtime_get_ticks()` calls `__clock()`. If this is not applicable, you must override the setting of the macro `_XTIME_NSECS_PER_TICK` prior to using `chrono` or `clock_t _Xtime_get_ticks()`.

## SYMBOLS USED INTERNALLY BY THE LIBRARY

The system header files use intrinsic functions, symbols, `pragma` directives etc. Some are defined in the library and some in the compiler. These reserved symbols start with `__` (double underscores) and should only be used by the library.

Use the compiler option `--predef_macros` to determine the value for any predefined symbols.

The symbols used internally by the library are not listed in this guide.





# The linker configuration file

- Overview
- Declaring the build type
- Defining memories and regions
- Regions
- Section handling
- Section selection
- Using symbols, expressions, and numbers
- Structural configuration

Before you read this chapter, you must be familiar with the concept of *sections*, see *Modules and sections*, page 98.

See also:

- *Reference information on linker directives for shared objects*, page 286

---

## Overview

To link and locate an application in memory according to your requirements, ILINK needs information about how to handle sections and how to place them into the available memory regions. In other words, ILINK needs a *configuration*, passed to it by means of the *linker configuration file*.

This file consists of a sequence of directives and typically, provides facilities for:

- Declaring the build type  
informing the linker of whether the build is for a traditional ROM system or for a RAM system, helping the linker check that only suitable sections are placed in the different memory regions.

- Defining available addressable memories  
giving the linker information about the maximum size of possible addresses and defining the available physical memory, as well as dealing with memories that can be addressed in different ways.
  - Defining the regions of the available memories that are populated with ROM or RAM  
giving the start and end address for each region.
  - Section groups  
dealing with how to group sections into blocks and overlays depending on the section requirements.
  - Defining how to handle initialization of the application  
giving information about which sections that are to be initialized, and how that initialization should be made.
  - Memory allocation  
defining where—in what memory region—each set of sections should be placed.
  - Using symbols, expressions, and numbers  
expressing addresses and sizes, etc, in the other configuration directives. The symbols can also be used in the application itself. There are also predefined linker symbols, see *Predefined linker symbols*, page 591.
  - Structural configuration  
meaning that you can include or exclude directives depending on a condition, and to split the configuration file into several different files.
  - Special characters in names  
When specifying the name of a symbol or section that uses non-identifier characters, you can enclose the name in back quotes. Example: ``My Name``.
- Comments can be written either as C comments (`/* . . . */`) or as C++ comments (`// . . .`).

---

## Declaring the build type

Declaring the build type in the linker configuration files specifies to the linker whether the build is for a traditional ROM system (with, among other things, variable initialization at program start) or for a RAM system to be used for debugging (where other styles of initialization can be used).

## build for directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                                        |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>build for { ram   rom };</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                        |
| Parameters  | <code>ram</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | The build is assumed to be a debugging or experimental setup, where some or all variable initialization can be performed at load time. |
|             | <code>rom</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | The build is assumed to be a traditional ROM build, where all variable initialization is performed at program start.                   |
| Description | <p>If you declare a build type of <code>rom</code>—and especially if you also declare which memory regions are ROM or RAM—the linker can perform better checking that only suitable sections are placed in the different memory regions. If you do not explicitly specify an <code>initialize</code> directive (see <i>initialize directive</i>, page 570), the linker will behave as if you had specified <code>initialize by copy { rw };</code>.</p> <p>If you declare a build type of <code>ram</code>, the linker does not check which section types are placed in which memory region.</p> <p>If you do not include the <code>build for</code> directive in the linker configuration file, the linker only performs limited checking. This is useful primarily for backward compatibility purposes.</p> |                                                                                                                                        |
| See also    | <i>define region directive</i> , page 556.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                                        |

---

## Defining memories and regions

ILINK needs information about the available memory spaces, or more specifically it needs information about:

- The maximum size of possible addressable memories

The `define memory` directive defines a *memory space* with a given size, which is the maximum possible amount of addressable memory, not necessarily physically available. See *define memory directive*, page 556.

- Available physical memory

The `define region` directive defines a region in the available memories in which specific sections of application code and sections of application data can be placed. You can also use this directive to declare whether a region contains RAM or ROM memory. This is primarily useful when building for a traditional ROM system. See *define region directive*, page 556.

A region consists of one or several memory ranges. A range is a continuous sequence of bytes in a memory and several ranges can be expressed by using region expressions. See *Region expression*, page 560.

This section gives detailed information about each linker directive specific to defining memories and regions.

## define memory directive

|                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                  |                                                                                             |                     |                                             |                      |                                                                         |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|---------------------------------------------------------------------------------------------|---------------------|---------------------------------------------|----------------------|-------------------------------------------------------------------------|
| Syntax               | <pre>define memory [ name ] with size = size_expr [ ,unit-size ];</pre> <p>where <i>unit-size</i> is one of:</p> <pre>unitbitsize = bitsize_expr unitbytesize = bytesize_expr</pre> <p>and where <i>expr</i> is an expression, see <i>expressions</i>, page 587.</p>                                                                                                                                                                                                                                                                                                                                                                                   |                  |                                                                                             |                     |                                             |                      |                                                                         |
| Parameters           | <table> <tr> <td style="vertical-align: top;"><i>size_expr</i></td> <td>Specifies how many <i>units</i> the memory space contains—always counted from address zero.</td> </tr> <tr> <td style="vertical-align: top;"><i>bitsize_expr</i></td> <td>Specifies how many bits each unit contains.</td> </tr> <tr> <td style="vertical-align: top;"><i>bytesize_expr</i></td> <td>Specifies how many bytes each unit contains. Each byte contains 8 bits.</td> </tr> </table>                                                                                                                                                                               | <i>size_expr</i> | Specifies how many <i>units</i> the memory space contains—always counted from address zero. | <i>bitsize_expr</i> | Specifies how many bits each unit contains. | <i>bytesize_expr</i> | Specifies how many bytes each unit contains. Each byte contains 8 bits. |
| <i>size_expr</i>     | Specifies how many <i>units</i> the memory space contains—always counted from address zero.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                  |                                                                                             |                     |                                             |                      |                                                                         |
| <i>bitsize_expr</i>  | Specifies how many bits each unit contains.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                  |                                                                                             |                     |                                             |                      |                                                                         |
| <i>bytesize_expr</i> | Specifies how many bytes each unit contains. Each byte contains 8 bits.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                  |                                                                                             |                     |                                             |                      |                                                                         |
| Description          | <p>The <code>define memory</code> directive defines a <i>memory space</i> with a given size, which is the maximum possible amount of addressable memory, not necessarily physically available. This sets the limits for the possible addresses to be used in the linker configuration file. For many microcontrollers, one memory space is sufficient. However, some microcontrollers require two or more. For example, a Harvard architecture usually requires two different memory spaces, one for code and one for data. If only one memory is defined, the memory name is optional. If no <i>unit-size</i> is given, the unit contains 8 bits.</p> |                  |                                                                                             |                     |                                             |                      |                                                                         |
| Example              | <pre>/* Declare the memory space Mem of four Gigabytes */ define memory Mem with size = 4G;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                  |                                                                                             |                     |                                             |                      |                                                                         |

## define region directive

|        |                                                                                                                                                       |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax | <pre>define [ ram   rom ] region name = region-expr;</pre> <p>where <i>region-expr</i> is a region expression, see also <i>Regions</i>, page 559.</p> |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------|

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                 |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| Parameters  | <code>ram</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | The region contains RAM memory. |
|             | <code>rom</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | The region contains ROM memory. |
|             | <code>name</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | The name of the region.         |
| Description | <p>The <code>define region</code> directive defines a region in which specific sections of code and sections of data can be placed. A region consists of one or several memory ranges, where each memory range consists of a continuous sequence of bytes in a specific memory. Several ranges can be combined by using region expressions—these ranges do not need to be consecutive or even in the same memory.</p> <p>If you declare regions as being ROM or RAM, the linker can check that only suitable sections are placed in the regions if you are building a traditional ROM-based system (see <i>build for directive</i>, page 555).</p> |                                 |

|         |                                                                                                                                             |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Example | <pre>/* Define the 0x10000-byte code region ROM located at address    0x10000 */ define rom region ROM = [from 0x10000 size 0x10000];</pre> |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------|

## logical directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                                                          |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| Syntax      | <pre>logical <i>range-list</i> = physical <i>range-list</i> where <i>range-list</i> is one of [ <i>region-expr</i>, ... ]<i>region-expr</i> [ <i>region-expr</i>, ... ]from <i>address-expr</i></pre>                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                          |
| Parameters  | <code>region-expr</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | A region expression, see also <i>Regions</i> , page 559. |
|             | <code>address-expr</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | An address expression                                    |
| Description | <p>The <code>logical</code> directive maps logical addresses to physical addresses. The physical address is typically used when loading or burning content into memory, while the logical address is the one seen by your application. The physical address is the same as the logical address, if no <code>logical</code> directives are used, or if the address is in a range specified in a <code>logical</code> directive.</p> <p>When generating ELF output, the mapping affects the physical address in program headers. When generating output in the Intel hex or Motorola S-records formats, the physical address is used.</p> |                                                          |

Each address in the logical range list, in the order specified, is mapped to the corresponding address in the physical range list, in the order specified.

Unless one or both of the range lists end with the `from` form, the total size of the logical ranges and the physical ranges must be the same. If one side ends with the `from` form and not the other, the side that ends with the `from` form will include a final range of a size that makes the total sizes match, if possible. If both sides end with a `from` form, the ranges will extend to the highest possible address that makes the total sizes match.

Setting up a mapping from logical to physical addresses can affect how sections and other content are placed. No content will be placed to overlap more than one individual logical or physical range. Also, if there is a mapping from a different logical range to the corresponding physical range, any logical range for which no mapping to physical ranges has been specified—by not being mentioned in a `logical` directive—is excluded from placement.

All `logical` directives are applied together. Using one or using several directives to specify the same mapping makes no difference to the result.

#### Example

```
// Logical range 0x8000-0x8FFF maps to physical 0x10000-0x10FFF.
// No content can be placed in the logical range 0x10000-0x10FFF.
logical [from 0x8000 size 4K] = physical [from 0x10000 size 4K];

// Another way to specify the same mapping
logical [from 0x8000 size 4K] = physical from 0x10000;

// Logical range 0x8000-0x8FFF maps to physical 0x10000-0x10FFF.
// Logical range 0x10000-0x10FFF maps to physical 0x8000-0x8FFF.
// No logical range is excluded from placement because of
// this mapping.
logical [from 0x8000 size 4K] = physical [from 0x10000 size 4K];
logical [from 0x10000 size 4K] = physical [from 0x8000 size 4K];

// Logical range 0x1000-0x13FF maps to physical 0x8000-0x83FF.
// Logical range 0x1400-0x17FF maps to physical 0x9000-0x93FF.
// Logical range 0x1800-0x1BFF maps to physical 0xA000-0xA3FF.
// Logical range 0x1C00-0x1FFF maps to physical 0xB000-0xB3FF.
// No content can be placed in the logical ranges 0x8000-0x83FF,
// 0x9000-0x93FF, 0xA000-0xA3FF, or 0xB000-0xB3FF.
logical [from 0x1000 size 4K] =
    physical [from 0x8000 size 1K repeat 4 displacement 4K];
```

```
// Another way to specify the same mapping.
logical [from 0x1000 to 0x13FF] = physical [from 0x8000 to
0x83FF];
logical [from 0x1400 to 0x17FF] = physical [from 0x9000 to
0x93FF];
logical [from 0x1800 to 0x1BFF] = physical [from 0xA000 to
0xA3FF];
logical [from 0x1C00 to 0x1FFF] = physical [from 0xB000 to
0xB3FF];
```

## Regions

A *region* is a set of non-overlapping memory ranges. A *region expression* is built up out of *region literals* and set operations (union, intersection, and difference) on regions.

### Region literal

#### Syntax

```
[ memory-name: ] [from expr { to expr | size expr }
```

```
  [ repeat expr [ displacement expr ] ] ]
```

where *expr* is an expression, see *expressions*, page 587.

#### Parameters

|                          |                                                                                                                                                 |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>memory-name</i>       | The name of the memory space in which the region literal will be located. If there is only one memory, the name is optional.                    |
| from <i>expr</i>         | <i>expr</i> is the start address of the memory range (inclusive).                                                                               |
| to <i>expr</i>           | <i>expr</i> is the end address of the memory range (inclusive).                                                                                 |
| size <i>expr</i>         | <i>expr</i> is the size of the memory range.                                                                                                    |
| repeat <i>expr</i>       | <i>expr</i> defines several ranges in the same memory for the region literal.                                                                   |
| displacement <i>expr</i> | <i>expr</i> is the displacement from the previous range start in the repeat sequence. Default displacement is the same value as the range size. |

#### Description

A region literal consists of one memory range. When you define a range, the memory it resides in, a start address, and a size must be specified. The range size can be stated explicitly by specifying a size, or implicitly by specifying the final address of the range. The final address is included in the range and a zero-sized range will only contain an

address. A range can span over the address zero and such a range can even be expressed by unsigned values, because it is known where the memory wraps.

The `repeat` parameter will create a region literal that contains several ranges, one for each repeat. This is useful for *banked* or *far* regions.

### Example

```
/* The 5-byte size range spans over the address zero */
Mem:[from -2 to 2]

/* The 512-byte size range spans over zero, in a 64-Kbyte memory */
Mem:[from 0xFF00 to 0xFF]

/* Defining several ranges in the same memory, a repeating
   literal */
Mem:[from 0 size 0x100 repeat 3 displacement 0x1000]

/* Resulting in a region containing:
   Mem:[from 0 size 0x100]
   Mem:[from 0x1000 size 0x100]
   Mem:[from 0x2000 size 0x100]
*/
```

See also

*define region directive*, page 556, and *Region expression*, page 560.

## Region expression

### Syntax

```
region-operand
| region-expr | region-operand
| region-expr - region-operand
| region-expr & region-operand
```

where *region-operand* is one of:

```
( region-expr )
region-name
region-literal
empty-region
```

where *region-name* is a region, see *define region directive*, page 556

where *region-literal* is a region literal, see *Region literal*, page 559

and where *empty-region* is an empty region, see *Empty region*, page 561.

### Description

Normally, a region consists of one memory range, which means a *region literal* is sufficient to express it. When a region contains several ranges, possibly in different



memories, it is instead necessary to use a *region expression* to express it. Region expressions are actually set expressions on sets of memory ranges.

To create region expressions, three operators are available: union (`|`), intersection (`&`), and difference (`-`). These operators work as in *set theory*. For example, if you have the sets A and B, then the result of the operators would be:

- A | B: all elements in either set A or set B
- A & B: all elements in both set A and B
- A - B: all elements in set A but not in B.

### Example

```
/* Resulting in a range starting at 1000 and ending at 2FFF, in
   memory Mem */
Mem:[from 0x1000 to 0x1FFF] | Mem:[from 0x1500 to 0x2FFF]

/* Resulting in a range starting at 1500 and ending at 1FFF, in
   memory Mem */
Mem:[from 0x1000 to 0x1FFF] & Mem:[from 0x1500 to 0x2FFF]

/* Resulting in a range starting at 1000 and ending at 14FF, in
   memory Mem */
Mem:[from 0x1000 to 0x1FFF] - Mem:[from 0x1500 to 0x2FFF]

/* Resulting in two ranges. The first starting at 1000 and ending
   at 1FFF, the second starting at 2501 and ending at 2FFF.
   Both located in memory Mem */
Mem:[from 0x1000 to 0x2FFF] - Mem:[from 0x2000 to 0x24FF]
```

## Empty region

Syntax

```
[ ]
```

Description

The empty region does not contain any memory ranges. If the empty region is used in a placement directive that actually is used for placing one or more sections, ILINK will issue an error.

**Example**

```

define region Code = Mem:[from 0 size 0x10000];
if (Banked) {
    define region Bank = Mem:[from 0x8000 size 0x1000];
} else {
    define region Bank = [];
}
define region NonBanked = Code - Bank;

/* Depending on the Banked symbol, the NonBanked region is either
one range with 0x10000 bytes, or two ranges with 0x8000 and
0x7000 bytes, respectively. */

```

**See also**

*Region expression*, page 560.

---

## Section handling

Section handling describes how ILINK should handle the sections of the execution image, which means:

- **Placing sections in regions**

The `place at` and `place in` directives place sets of sections with similar attributes into previously defined regions. See *place at directive*, page 574 and *place in directive*, page 576.
- **Reserving regions of memory**

The `reserve region` directive specifies that no content may be placed in certain memory regions. See *reserve region*, page 577.
- **Making sets of sections with special requirements**

The `block` directive makes it possible to create empty sections with specific or expanding sizes, specific alignments, sequentially sorted sections of different types, etc.

The `overlay` directive makes it possible to create an area of memory that can contain several overlay images. See *define block directive*, page 563, and *define overlay directive*, page 569.
- **Initializing the application**

The directives `initialize` and `do not initialize` control how the application should be started. With these directives, the application can initialize global symbols at startup, and copy pieces of code. The initializers can be stored in several ways, for example, they can be compressed. See *initialize directive*, page 570 and *do not initialize directive*, page 573.

- Keeping removed sections

The `keep` directive retains sections even though they are not referred to by the rest of the application, which means it is equivalent to the `root` concept in the assembler and compiler. See *keep directive*, page 574.

- Specifying the contents of linker-generated sections

The `define section` directive can be used for creating specific sections with content and calculations that are only available at link time.

- Additional more specialized directives:

use `init table` directive

This section gives detailed information about each linker directive specific to section handling.

## define block directive

### Syntax

```
define [ movable ] block name
  [ with param, param... ]
  {
    extended-selectors
  }
  [ except
  {
    section-selectors
  } ];
```

where *param* can be one of:

```
size = expr
minimum size = expr
maximum size = expr
expanding size
alignment = expr
end alignment = expr
fixed order
alphabetical order
static base [basename]
```

and where the rest of the directive selects sections to include in the block, see *Section selection*, page 579.

### Parameters

|             |                                                                                                                      |
|-------------|----------------------------------------------------------------------------------------------------------------------|
| <i>name</i> | The name of the block to be defined.                                                                                 |
| <i>size</i> | Customizes the size of the block. By default, the size of a block is the sum of its parts dependent of its contents. |

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>minimum size</code>       | Specifies a lower limit for the size of the block. The block is at least this large, even if its contents would otherwise not require it.                                                                                                                                                                                                                                                                                                                                                               |
| <code>maximum size</code>       | Specifies an upper limit for the size of the block. An error is generated if the sections in the block do not fit.                                                                                                                                                                                                                                                                                                                                                                                      |
| <code>expanding size</code>     | The block will expand to use all available space in the memory range where it is placed.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <code>alignment</code>          | Specifies a minimum alignment for the block. If any section in the block has a higher alignment than the minimum alignment, the block will have that alignment.                                                                                                                                                                                                                                                                                                                                         |
| <code>end alignment</code>      | Specifies a minimum alignment for the end of the block. Normally, the end address of a block is determined by its start address and its size (which can depend on its contents), but if this parameter is used, the end address is increased to comply with the specified alignment if needed.                                                                                                                                                                                                          |
| <code>fixed order</code>        | Places sections in the specified order. Each <i>extended-selector</i> is added in a separate nested block, and these blocks are kept in the specified order. Note that it is not possible to combine defining blocks with <code>fixed order</code> with initializing entire blocks by <code>copy</code> .                                                                                                                                                                                               |
| <code>alphabetical order</code> | Places sections in alphabetical order by section name. Only <i>section-selector</i> patterns are allowed in <code>alphabetical order</code> blocks, for example, no nested blocks. All sections in a particular <code>alphabetical order</code> block must use the same kind of initialization (read-only, zero-init, copy-init, or no-init, and otherwise equivalent). You cannot use <code>__section_begin</code> , etc on individual sections contained in an <code>alphabetical order</code> block. |

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| static base<br>[ <i>basename</i> ] | <p><b>32-bit mode only:</b> Specifies that the static base with the name <i>basename</i> will be placed at the start of the block or in the middle of the block, as appropriate for the particular static base. The startup code must ensure that the register that holds the static base is initialized to the correct value. If there is only one static base, the name can be omitted.</p> <p>When linking for <code>--rwp</code>, the <i>basename</i> for writable data must be <code>SB</code>, and when linking for <code>--ropi_cb</code>, the <i>basename</i> for read-only data must be <code>CB</code>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Description                        | <p>The <code>block</code> directive defines a contiguous area of memory that contains a possibly empty set of sections or other blocks. Blocks with no content are useful for allocating space for stacks or heaps. Blocks with content are usually used to group together sections that must to be consecutive.</p> <p>You can access the start, end, and size of a block from an application by using the <code>__section_begin</code>, <code>__section_end</code>, or <code>__section_size</code> operators. If there is no block with the specified name, but there are sections with that name, a block will be created by the linker, containing all such sections.</p> <p><code>movable</code> blocks are for use with read-only and read-write position independence. Making blocks movable enables the linker to validate the application's use of addresses. Movable blocks are located in exactly the same way as other blocks, but the linker will check that the appropriate relocations are used when referring to symbols in movable blocks.</p> <p>Blocks with expanding size are most often used for heaps or stacks.</p> <p><b>Note:</b> You cannot place a block with expanding size inside another block with expanding size, inside a block with a maximum size, or inside an overlay.</p> |
| Example                            | <pre>/* Create a block with a minimum size for the heap that will use all remaining space in its memory range */ define block HEAP with minimum size = 4K, expanding size, alignment = 8 { };</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| See also                           | <p><i>Interaction between the tools and your application</i>, page 227. For an accessing example, see <i>define overlay directive</i>, page 569.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## define section directive

### Syntax

```
define [ root ] section name
    [ with alignment = sec-align ]
{
    section-content-item...
};
```

where each *section-content-item* can be one of:

```
udata8 { data | string };
sdata8 data [ ,data ] ...;
udata16 data [ ,data ] ...;
sdata16 data [ ,data ] ...;
udata24 data [ ,data ] ...;
sdata24 data [ ,data ] ...;
udata32 data [ ,data ] ...;
sdata32 data [ ,data ] ...;
udata64 data [ ,data ] ...;
sdata64 data [ ,data ] ...;
pad_to data-align;
[ public ] label:
if-item;
```

where *if-item* is:

```
if ( condition ) {
    section-content-item...
[] else if ( condition ) {
    section-content-item... }...
[] else {
    section-content-item... }
}
```

### Parameters

|                  |                                                                                                      |
|------------------|------------------------------------------------------------------------------------------------------|
| <i>name</i>      | The name of the section.                                                                             |
| <i>sec-align</i> | The alignment of the section, an expression.                                                         |
| <i>root</i>      | Optional. If <i>root</i> is specified, the section is always included, even if it is not referenced. |

`uint8_t {data|string};` If the parameter is an expression (*data*), it generates an unsigned one-byte member in the section. The *data* expression is only evaluated during relocation and only if the value is needed. It causes a relocation error if the value of *data* is too large to fit in a byte. The possible range of values is 0 to 0xFF.

If the parameter is a quoted string, it generates one one-byte member in the section for each character in the string.

`int8_t data;` As `uint8_t data;`, except that it generates a signed one-byte member.

The possible range of values is -0x80 to 0x7F.

`uint16_t data;` As `uint8_t data;`, except that it generates an unsigned two-byte member. The possible range of values is 0 to 0xFFFF.

`int16_t data;` As `uint8_t data;`, except that it generates a signed two-byte member. The possible range of values is -0x8000 to 0x7FFF.

`uint24_t data;` As `uint8_t data;`, except that it generates an unsigned three-byte member. The possible range of values is 0 to 0xFF'FFFF.

`int24_t data;` As `uint8_t data;`, except that it generates a signed three-byte member. The possible range of values is -0x80'0000 to 0x7F'FFFF.

`uint32_t data;` As `uint8_t data;`, except that it generates an unsigned four-byte member. The possible range of values is 0 to 0xFFFF'FFFF.

`int32_t data;` As `uint8_t data;`, except that it generates a signed four-byte member.

The possible range of values is -0x8000'0000 to 0x7FFF'FFFF.

`uint64_t data;` As `uint8_t data;`, except that it generates an unsigned eight-byte member. The possible range of values is 0 to 0xFFFF'FFFF'FFFF'FFFF.

|                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>sdata64 data;</code>                                         | As <code>sdata8</code> , except that it generates a signed eight-byte member. The possible range of values is <code>-0x8000'0000'0000'0000</code> to <code>0x7FFF'FFFF'FFFF'FFFF</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <code>pad_to data_align;</code>                                    | Generates pad bytes to make the current offset from the start of the section to be aligned to the expression <code>data-align</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <code>[public public_code public_data public_notype] label;</code> | Defines a label at the current offset from the start of the section. If <code>public</code> , <code>public_code</code> , etc., is specified, the label is visible to other program modules. If not, it is only visible to other data expressions in the linker configuration file.<br><br><code>public</code> . Synonym for <code>public_data</code> .<br><code>public_code</code> . Generates a code label (the ELF type for the symbol is <code>STT_FUNC</code> ).<br><code>public_data</code> . Generates a data label (the ELF type for the symbol is <code>STT_OBJECT</code> ).<br><code>public_notype</code> . Generates a type-less label (the ELF type for the symbol is <code>STT_NOTYPE</code> )<br><br>Generally, the type of a symbol does not matter. |
| <code>if-item</code>                                               | Configuration-time selection of items.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <code>condition</code>                                             | An expression.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <code>data</code>                                                  | An expression that is only evaluated during relocation and only if the value is needed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

**Description**

Use the `define section` directive to create sections with content that is not available from assembler language or C/C++. Examples of this are the results of stack usage analysis, the size of blocks, and arithmetic operations that do not exist as relocations.

Unknown identifiers in data expressions are assumed to be labels.

**Note:** Only data expressions can use labels, stack usage analysis results, etc. All the other expressions are evaluated immediately when the configuration file is read.

Three extra operators are available:

|                                 |                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------|
| <code>maxstack(category)</code> | The stack depth of the deepest call chain for any call graph root function in the category. |
|---------------------------------|---------------------------------------------------------------------------------------------|



|                                   |                                                                                                           |
|-----------------------------------|-----------------------------------------------------------------------------------------------------------|
| <code>totalstack(category)</code> | The sum of the stack depths of the deepest call chains for each call graph root function in the category. |
| <code>size(block)</code>          | The size of the block.                                                                                    |

**Example**

```
define section data {
  /* The application entry in a 16-bit word, provided it is less
     than 256K and 4-byte aligned. */
  udata16 __iar_program_start >> 2;
  /* The maximum stack usage in the program entry category. */
  udata16 maxstack("Application entry");
  /* The size of the DATA block */
  udata32 size(block DATA);
};
```

**define overlay directive****Syntax**

```
define overlay name [ with param, param... ]
{
  extended-selectors;
}
[ except
{
  section-selectors
} ];
```

For information about extended selectors and except clauses, see *Section selection*, page 579.

**Parameters**

|                           |                                                                                                                                                                       |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>name</code>         | The name of the overlay.                                                                                                                                              |
| <code>size</code>         | Customizes the size of the overlay. By default, the size of a overlay is the sum of its parts dependent of its contents.                                              |
| <code>maximum size</code> | Specifies an upper limit for the size of the overlay. An error is generated if the sections in the overlay do not fit.                                                |
| <code>alignment</code>    | Specifies a minimum alignment for the overlay. If any section in the overlay has a higher alignment than the minimum alignment, the overlay will have that alignment. |
| <code>fixed order</code>  | Places sections in fixed order—if not specified, the order of the sections will be arbitrary.                                                                         |

## Description

The `overlay` directive defines a named set of sections. In contrast to the `block` directive, the `overlay` directive can define the same name several times. Each definition will then be grouped in memory at the same place as all other definitions of the same name. This creates an *overlaid* memory area, which can be useful for an application that has several independent sub-applications.

Place each sub-application image in ROM and reserve a RAM overlay area that can hold all sub-applications. To execute a sub-application, first copy it from ROM to the RAM overlay.

**Note:** ILINK does not help you with managing interdependent overlay definitions, apart from generating a diagnostic message for any reference from one overlay to another overlay.

The size of an overlay will be the same size as the largest definition of that overlay name and the alignment requirements will be the same as for the definition with the highest alignment requirements.

**Note:** Sections that were overlaid must be split into a RAM and a ROM part and you must take care of all the copying needed.



Code in overlaid memory areas cannot be debugged—the C-SPY Debugger cannot determine which code is currently loaded.

## See also

*Manual initialization*, page 121.

## initialize directive

## Syntax

```
initialize { by copy | manually }
  [ with param, param... ]
{
  section-selectors
}
[ except
{
  section-selectors
} ];
```

where *param* can be one of:

```
packing = algorithm
simple ranges
complex ranges
no exclusions
```

For information about section selectors and except clauses, see *Section selection*, page 579.

## Parameters

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>by copy</code>   | Splits the section into sections for initializers and initialized data, and handles the initialization at application startup automatically. Note that it is not possible to combine defining blocks with <code>fixed order</code> with initializing entire blocks by <code>copy</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <code>manually</code>  | Splits the section into sections for initializers and initialized data. The initialization at application startup is not handled automatically.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <code>algorithm</code> | Specifies how to handle the initializers. Choose between: <ul style="list-style-type: none"> <li><code>none</code>. Disables compression of the selected section contents. This is the default method for initialize manually.</li> <li><code>zeros</code>. Compresses consecutive bytes with the value zero.</li> <li><code>packbits</code>. Compresses with the PackBits algorithm. This method generates good results for data with many identical consecutive bytes.</li> <li><code>lz77</code>. Compresses with the Lempel-Ziv-77 algorithm. This method handles a larger variety of inputs well, but has a slightly larger decompressor.</li> <li><code>auto</code>. ILINK estimates the resulting size using each packing method (except for <code>auto</code>), and then chooses the packing method that produces the smallest estimated size. Note that the size of the decompressor is also included. This is the default method for initialize by <code>copy</code>.</li> <li><code>smallest</code>. This is a synonym for <code>auto</code>.</li> </ul> |

## Description

The `initialize` directive splits each selected section into one section that holds initializer data and another section that holds the space for the initialized data. The section that holds the space for the initialized data retains the original section name, and the section that holds initializer data gets the name suffix `_init`. You can choose whether the initialization at startup should be handled automatically (`initialize by copy`) or whether you should handle it yourself (`initialize manually`).

When you use the packing method `auto` (default for `initialize by copy`), ILINK will automatically choose an appropriate packing algorithm for the initializers. To override this, specify a different packing method. The `--log initialization` option shows how ILINK decided which packing algorithm to use.

When initializers are compressed, a decompressor is automatically added to the image.

Each decompressor has two variants: one that can only handle a single source and destination range at a time, and one that can handle more complex cases. By default, the linker chooses a decompressor variant based on whether the associated section placement directives specify a single or multi-range memory region. In general, this is the desired behavior, but you can use the `with complex ranges` or the `with simple ranges` modifier on an `initialize` directive to specify which decompressor variant to use. You can also use the command line option `--default_to_complex_ranges` to make `initialize` directives by default use complex ranges. The `simple ranges` decompressors are normally hundreds of bytes smaller than the `complex ranges` variants.

When initializers are compressed, the exact size of the compressed initializers is unknown until the exact content of the uncompressed data is known. If this data contains other addresses, and some of these addresses are dependent on the size of the compressed initializers, the linker fails with error Lp017. To avoid this, place compressed initializers last, or in a memory region together with sections whose addresses do not need to be known.

Due to an internal dependence, generation of compressed initializers can also fail (with error LP021) if the address of the initialized area depends on the size of its initializers. To avoid this, place the initializers and the initialized area in different parts of the memory (for example, the initializers are placed in ROM and the initialized area in RAM).

If you specify the parameter `no exclusions`, an error is emitted if any sections are excluded (because they are needed for the initialization). `no exclusions` can only be used with `initialize by copy` (automatic initialization), not with `initialize manually`.

Unless `initialize manually` is used, ILINK will arrange for initialization to occur during system startup by including an initialization table. Startup code calls an initialization routine that reads this table and performs the necessary initializations.

Zero-initialized sections are not affected by the `initialize` directive.

The `initialize` directive is normally used for initialized variables, but can be used for copying any sections, for example, copying executable code from slow ROM to fast RAM, or for overlays. For another example, see *define overlay directive*, page 569.

Sections that are needed for initialization are not affected by the `initialize by copy` directive. This includes the `__low_level_init` function and anything it references.

Anything reachable from the program entry label is considered *needed for initialization* unless reached via a section fragment with a label starting with `__iar_init$$done`. The `--log sections` option, in addition to logging the marking of section fragments to be included in the application, also logs the process of determining which sections are needed for initialization.

**Example**

```

/* Copy all read-write sections automatically from ROM to RAM at
   program start */
initialize by copy { rw };
place in RAM { rw };
place in ROM { ro };

```

**See also** *Initialization at system startup*, page 104, and *do not initialize directive*, page 573.

## do not initialize directive

**Syntax**

```

do not initialize
{
    section-selectors
}
[ except
{
    section-selectors
} ];

```

For information about section selectors and except clauses, see *Section selection*, page 579.

**Description**

Use the `do not initialize` directive to specify the sections that you do not want to be automatically zero-initialized by the system startup code. The directive can only be used on `zeroinit` sections.

Typically, this is useful if you want to handle zero-initialization in some other way for all or some `zeroinit` sections.

This can also be useful if you want to suppress zero-initialization of variables entirely. Normally, this is handled automatically for variables specified as `__no_init` in the source, but if you link with object files produced by older tools from IAR or other tool vendors, you might need to suppress zero-initialization specifically for some sections.

**Example**

```

/* Do not initialize read-write sections whose name ends with
   _noinit at program start */
do not initialize { rw section .*_noinit };
place in RAM { rw section .*_noinit };

```

**See also** *Initialization at system startup*, page 104, and *initialize directive*, page 570.

## keep directive

### Syntax

```
keep
{
    [ { section-selectors | block name }
      [ , {section-selectors | block name }... ] ]
}
[ except
  {
    section-selectors
  } ];
```

For information about selectors and except clauses, see *Section selection*, page 579.

### Description

The `keep` directive can be used for including blocks, overlays, or sections in the executable image that would otherwise be discarded because no references to them exist in the included parts of the application. Note that this directive always causes entire input sections to be included, and not just the relevant section fragment, when matching against a symbol name.

Furthermore, only sections from included modules are considered. The `keep` directive does not cause any additional modules to be included in your application.

To cause a module that defines a specific symbol to be included, or only the section fragment that defines a symbol, use the **Keep symbols** linker option (or the `--keep` option on the command line), or the linker directive `keep symbol`.

### Example

```
keep { section .keep* } except {section .keep};
```

## place at directive

### Syntax

```
[ "name" : ]
place [ noload ] at { address [ memory: ] address |
                    start of region_expr [ with mirroring to mirror_address ] |
                    end of region_expr [ with mirroring to mirror_address ] }

{
    extended-selectors
}
[ except
  {
    section-selectors
  } ];
```

For information about extended selectors and except clauses, see *Section selection*, page 579.

## Parameters

|                             |                                                                                                                                                                                                                                                                                                                                                                                                         |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>name</i>                 | Optional. If it is specified, it is used in the map file, in some log messages, and is part of the name of any ELF output sections resulting from the directive. (This is entirely a matter of presentation. There is no connection to names used in the application.)                                                                                                                                  |
| <i>noload</i>               | Optional. If it is specified, it prevents the sections in the directive from being loaded to the target system. To use the sections, you must put them into the target system in some other way. <i>noload</i> can only be used when a <i>name</i> is specified.                                                                                                                                        |
| <i>memory: address</i>      | A specific address in a specific memory. The address must be available in the supplied memory defined by the <code>define memory</code> directive. The memory specifier is optional if there is only one memory.                                                                                                                                                                                        |
| <i>start of region_expr</i> | A region expression that results in a single-internal region. The start of the interval is used.                                                                                                                                                                                                                                                                                                        |
| <i>end of region_expr</i>   | A region expression that results in a single-internal region. The end of the interval is used.                                                                                                                                                                                                                                                                                                          |
| <i>mirror_address</i>       | If with <code>mirroring to</code> is specified, the contents of any sections are assumed to be mirrored to this address, therefore debug information and symbols will appear in the mirrored range, but the actual content bytes are placed as if with <code>mirroring to</code> was not specified.<br><br><b>Note:</b> This functionality is intended to support external (target-specific) mirroring. |

## Description

The `place at` directive places sections and blocks either at a specific address or, at the beginning or the end of a region. The same address cannot be used for two different `place at` directives. It is also not possible to use an empty region in a `place at` directive. If placed in a region, the sections and blocks will be placed before any other sections or blocks placed in the same region with a `place in` directive.

**Note:** with `mirroring to` can be used only together with `start of` and `end of`.

## Example

```
/* Place the RO section .startup at the start of code_region */
"START": place at start of ROM { readonly section .startup };
```

## See also

*place in directive*, page 576.

## place in directive

### Syntax

```
[ "name": ]
place [ noload ] in region-expr
    [ with mirroring to mirror_address ]
{
    extended-selectors
}
[ except{
    section-selectors
} ];
```

where *region-expr* is a region expression, see also *Regions*, page 559.

and where the rest of the directive selects sections to include in the block. See *Section selection*, page 579.

### Parameters

|                       |                                                                                                                                                                                                                                                                                                                                                                                             |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>name</i>           | Optional. If it is specified, it is used in the map file, in some log messages, and is part of the name of any ELF output sections resulting from the directive. (This is entirely a matter of presentation. There is no connection to names used in the application.)                                                                                                                      |
| <i>noload</i>         | Optional. If it is specified, it prevents the sections in the directive from being loaded to the target system. To use the sections, you must put them into the target system in some other way. <i>noload</i> can only be used when a <i>name</i> is specified.                                                                                                                            |
| <i>mirror_address</i> | If <i>with mirroring to</i> is specified, the contents of any sections are assumed to be mirrored to this address, therefore debug information and symbols will appear in the mirrored range, but the actual content bytes are placed as if <i>with mirroring to</i> was not specified.<br><br><b>Note:</b> This functionality is intended to support external (target-specific) mirroring. |

### Description

The *place in* directive places sections and blocks in a specific region. The sections and blocks will be placed in the region in an arbitrary order.

To specify a specific order, use the *block* directive. The region can have several ranges.

**Note:** When *with mirroring to* is specified, the *region-expr* must result in a single range.



**Example**

```
/* Place the read-only sections in the code_region */
"ROM": place in ROM { readonly };
```

**See also** *place at directive*, page 574.

## reserve region

**Syntax**

```
reserve region "name" = region-expr;
```

where *region-expr* is a region expression, see also *Regions*, page 559.

**Parameters**

|             |                                 |
|-------------|---------------------------------|
| <i>name</i> | The name of the reserved region |
|-------------|---------------------------------|

**Description**

The `reserve region` directive excludes a region from being used in `place in` directives. If any absolute sections or `place at` directives overlap the reserved regions, an error is emitted.

Reserved regions cannot overlap.

**Example**

```
reserve region "Stay out" = [ from 0x1000 size 0x100 ];
```

**See also** *place in directive*, page 576.

## use init table directive

**Syntax**

```
use init table name for
{
    section-selectors
}
[ except
{
    section-selectors
} ];
```

For information about section selectors and `except` clauses, see *Section selection*, page 579.

**Parameters**

|             |                                          |
|-------------|------------------------------------------|
| <i>name</i> | The name of the <code>init</code> table. |
|-------------|------------------------------------------|

**Description**

Normally, all initialization entries are generated into a single initialization table (called `Table`). Use this directive to cause some of the entries to be put into a separate table.

You can then use this initialization table at another time, or under different circumstances, than the normal initialization table.

Initialization entries for all variables not mentioned in a `use init table` directive are put into the normal initialization table. By having multiple `use init table` directives you can have multiple initialization tables.

The start, end, and size of the `init` table can be accessed in the application program by using `__section_begin`, `__section_end`, or `__section_size` of `"Region$$name"`, respectively, or via the symbols `Region$$name$$Base`, `Region$$name$$Limit`, and `Region$$name$$Length`.

An initialization function, `IAR_TABLE_INIT`, which operates on the start and end addresses of an initialization table, is available in the include file `stdlib.h`. Calling the function with start and end addresses of an initialization table created with `use init table` will initialize all initialization entries in that table.

**Note:** Stack usage analysis handles all initialization entries as if they were called by the normal initialization routine (`IAR_DATA_INIT`). This will result in stack usage information for initialization entries that are called from another place, such as `IAR_TABLE_INIT`, being incorrect. If such a function is called when almost all stack has been used, it is possible that too much stack will be used without the stack usage analysis detecting this. Initialization functions and routines for dynamic initialization typically use little stack space, so this would most likely not be a serious problem.

#### Example

In this example, the `use init table` directive resides in the linker configuration file, while the rest of the example resides in a C file.

```

use init table Core2 for { section *.core2};

/* This code example needs IAR language extensions to handle
   __section_begin. */

#include <stdlib.h>

/* This sets up the name of the table and ensures that pointers
   to it have the correct attributes. */

#pragma section="Region$$Core2" const _DLIB_ELF_INIT_TABLE_MEMORY

/* Calling this function will result in all initialization
   functions in the Core2 table being called. This must be called
   before any of the data/objects are accessed. Nothing prevents
   the data/objects from being accessed before they are
   initialized and nothing prevents the data from being
   initialized more than once (data is typically overwritten by
   the initial values if it is initialized more than once). */

void HandleCore2Init()
{
    IAR_TABLE_INIT(__section_begin("Region$$Core2"),
                  __section_end ("Region$$Core2"));
}

```

---

## Section selection

The purpose of *section selection* is to specify—by means of *section selectors* and *except clauses*—the sections that an `ILINK` directive should be applied to. All sections that match one or more of the section selectors will be selected, and none of the sections selectors in the *except* clause, if any. Each section selector can match sections on section attributes, section name, and object or library name.

Some directives provide functionality that requires more detailed selection capabilities, for example, directives that can be applied on both sections and blocks. In this case, the *extended-selectors* are used.

This section gives detailed information about each linker directive specific to section selection.

## section-selectors

### Syntax

```
[ section-selector [ , section-selector... ] ]
section-selector is:
[ section-attribute ] [ section-type ]
[ symbol symbol-name ] [ section section-name ]
[ object module-spec ]
section-attribute is:
ro [ code | data ] | rw [ code | data ] | zi
section-type is:
[ preinit_array | init_array ]
```

### Parameters

*section-attribute* Only sections with the specified attribute will be selected. *section-attribute* can consist of:

- ro|readonly, for ROM sections.
- rw|readwrite, for RAM sections.

In each category, sections can be further divided into those that contain code and those that contain data, resulting in four main categories:

- ro code, for normal code
- ro data, for constants
- rw code, for code copied to RAM
- rw data, for variables

readwrite data also has a subcategory—  
 zi|zeroinit—for sections that are zero-initialized at application startup.

*section-type* Only sections with that ELF section type will be selected. *section-type* can be:

- preinit\_array, sections of the ELF section type SHT\_PREINIT\_ARRAY.
- init\_array, sections of the ELF section type SHT\_INIT\_ARRAY.

|                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>symbol <i>symbol-name</i></code>   | <p>Only sections that define at least one public symbol that matches the symbol name pattern will be selected. <i>symbol-name</i> is the symbol name pattern. For example, specifying <code>symbol __mySymbol</code> selects the section that contains <code>__mySymbol</code>. Two wildcards are allowed:</p> <ul style="list-style-type: none"> <li>? matches any single character</li> <li>* matches zero or more characters</li> </ul> <p>See the note below for a more detailed description.</p>                                                                                                                                                                                                                                                                                                        |
| <code>section <i>section-name</i></code> | <p>Only sections whose names match the <i>section-name</i> will be selected. Two wildcards are allowed:</p> <ul style="list-style-type: none"> <li>? matches any single character</li> <li>* matches zero or more characters.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <code>object <i>module-spec</i></code>   | <p>Only sections that originate from library modules or object files that matches <i>module-spec</i> will be selected. <i>module-spec</i> can be in one of two forms:</p> <p><i>module</i>, a name in the form <i>objectname(libraryname)</i>. Sections from object modules where both the object name and the library name match their respective patterns are selected. An empty library name pattern selects only sections from object files. If <i>libraryname</i> is <code>:sys</code>, the pattern will match only sections from the system library.</p> <p><i>filename</i>, the name of an object file, or an object in a library.</p> <p>Two wildcards are allowed:</p> <ul style="list-style-type: none"> <li>? matches any single character</li> <li>* matches zero or more characters.</li> </ul> |

**Description**

A section selector selects all sections that match the section attribute, section type, symbol name, section name, and the name of the module. Up to four of the five conditions can be omitted.

It is also possible to use only `{ }` without any section selectors, which can be useful when defining blocks.

**Note:** Like all section selectors, `symbol` selects sections, not symbols. If you specify the symbol `__mySymbol`, you select the section that contains the public symbol `__mySymbol`. If that section contains more public symbols, those will also be selected. If a section contains more than one public symbol, for instance `symbolA` and `symbolB`, you

cannot select symbol `symbolA` to one section selector and symbol `symbolB` to another. A section can only match one section selector, and the match is case sensitive. Static symbols are not affected by this directive.

You can inspect the symbol table of object files with the command `ielfdumparm -s .symtab file.o`. The number of the containing section will be listed for each symbol. If two public symbols reside in the same section, they cannot be matched by two section selectors that use the two symbols—the single section must be matched by one section selector.

Which section a symbol resides in might change with the optimization level. The compiler uses an optimization called static clustering on optimization levels Medium and higher. Clustering typically places several data symbols in the same section, which typically reduces both the size and the execution time of the generated code. You can disable static clustering (using the compiler option `--no_clustering`) to get symbols into different sections (which allows you to match them individually with different symbol section selectors), but the generated code will typically be larger and slower.

**Note:** A section selector with narrower scope has higher priority than a more generic section selector. If more than one section selector matches for the same purpose, one of them must be more specific. A section selector is more specific than another one if in priority order:

- It specifies a public symbol name with no wildcards and the other one does not.
- It specifies a section name or object name with no wildcards and the other one does not
- It specifies a section type and the other one does not
- There could be sections that match the other selector that also match this one, however, the reverse is not true.

| Selector 1                      | Selector 2                    | More specific |
|---------------------------------|-------------------------------|---------------|
| <code>ro</code>                 | <code>ro code</code>          | Selector 2    |
| <code>symbol mysym</code>       | <code>section foo</code>      | Selector 1    |
| <code>ro code section f*</code> | <code>ro section f*</code>    | Selector 1    |
| <code>section foo*</code>       | <code>section f*</code>       | Selector 1    |
| <code>section *x</code>         | <code>section f*</code>       | Neither       |
| <code>init_array</code>         | <code>section f*</code>       | Selector 1    |
| <code>section .intvec</code>    | <code>ro section .int*</code> | Selector 1    |
| <code>section .intvec</code>    | <code>object foo.o</code>     | Neither       |

Table 41: Examples of section selector specifications

**Example**

```
{ rw } /* Selects all read-write sections */

{ section .mydata* } /* Selects only .mydata* sections */
/* Selects .mydata* sections available in the object special.o */
{ section .mydata* object special.o }
```

Assuming a section in an object named `foo.o` in a library named `lib.a`, any of these selectors will select that section:

```
object foo.o(lib.a)
object f*(lib*)
object foo.o
object lib.a
```

**See also**

*initialize directive*, page 570, *do not initialize directive*, page 573, and *keep directive*, page 574.

**extended-selectors****Syntax**

```
[ extended-selector [ , extended-selector... ] ]
```

where *extended-selector* is:

```
[ first | last | midway ]
    { section-selector |
      block name [ inline-block-def ] |
      overlay name }
```

where *inline-block-def* is:

```
[ block-params ] extended-selectors
```

**Parameters**

|                     |                                                                                                                                                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>first</code>  | Places the selected sections, block, or overlay first in the containing placement directive, block, or overlay.                                                                                                                                      |
| <code>last</code>   | Places the selected sections, block or overlay last in the containing placement directive, block, or overlay.                                                                                                                                        |
| <code>midway</code> | Places the selected sections, block, or overlay so that they are no further than half the maximum size of the containing block away from either edge of the block. Note that this parameter can only be used inside a block that has a maximum size. |
| <code>name</code>   | The name of the block or overlay.                                                                                                                                                                                                                    |

## Description

Use `extended-selectors` to select content for inclusion in a placement directive, block, or overlay. In addition to using section selection patterns, you can also explicitly specify blocks or overlays for inclusion.

Using the `first` or `last` keyword, you can specify one pattern, block, or overlay to be placed first or last in the containing placement directive, block, or overlay. Note that:

- The `first` or `last` keyword is local to the scope in which it is used—it has no effect outside that scope.
- If `first` is used inside a block, it has no effect on the block itself.
- If a `place in` directive contains a `last` keyword that targets a region that also is the target of other `place in` directives, the `last` keyword will only place its content last in the placement directive in which was defined—it has no effect on the others.
- If you want to place something last in a region, you must define a single block that contains everything, or place everything with a single `place in` directive that targets that region.

If you need more precise control of the placement order, you can instead use a block with fixed order.

Blocks can be defined separately, using the `define block` directive, or `inline`, as part of an `extended-selector`.

The `midway` parameter is primarily useful together with a static base that can have both negative and positive offsets.

## Example

```
define block First { ro section .f* }; /* Define a block holding
                                     any read-only section*/
                                     matching ".f*" */
define block Table { first block First, ro section .b* };
                                     /* Define a block where
                                     the block First comes
                                     before the sections
                                     matching ".b*". */
```

You can also define the block `First` inline, instead of in a separate `define block` directive:

```
define block Table { first block First { ro section .f* },
                    ro section .b* };
```

## See also

*define block directive*, page 563, *define overlay directive*, page 569, and *place at directive*, page 574.



## Using symbols, expressions, and numbers

In the linker configuration file, you can also:

- *Define and export symbols*

The `define symbol` directive defines a symbol with a specified value that can be used in expressions in the configuration file. The symbol can also be exported to be used by the application or the debugger. See *define symbol directive*, page 586, and *export directive*, page 586.

- *Use expressions and numbers*

In the linker configuration file, expressions and numbers are used for specifying addresses, sizes, etc. See *expressions*, page 587.

This section gives detailed information about each linker directive specific to defining symbols, expressions and numbers.

### check that directive

|                                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|----------------------------------------|---------------------------------------------------------------------------------------------|------------------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------|------------------------|
| Syntax                                   | <code>check that <i>expression</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
| Parameters                               | <code><i>expression</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | A boolean expression. |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
| Description                              | <p>You can use the <code>check that</code> directive to compare the results of stack usage analysis against the sizes of blocks and regions. If the expression evaluates to zero, an error is emitted.</p> <p>Three extra operators are available:</p> <table> <tr> <td><code>maxstack(<i>category</i>)</code></td> <td>The stack depth of the deepest call chain for any call graph root function in the category.</td> </tr> <tr> <td><code>totalstack(<i>category</i>)</code></td> <td>The sum of the stack depths of the deepest call chains for each call graph root function in the category.</td> </tr> <tr> <td><code>size(<i>block</i>)</code></td> <td>The size of the block.</td> </tr> </table> |                       | <code>maxstack(<i>category</i>)</code> | The stack depth of the deepest call chain for any call graph root function in the category. | <code>totalstack(<i>category</i>)</code> | The sum of the stack depths of the deepest call chains for each call graph root function in the category. | <code>size(<i>block</i>)</code> | The size of the block. |
| <code>maxstack(<i>category</i>)</code>   | The stack depth of the deepest call chain for any call graph root function in the category.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
| <code>totalstack(<i>category</i>)</code> | The sum of the stack depths of the deepest call chains for each call graph root function in the category.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
| <code>size(<i>block</i>)</code>          | The size of the block.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
| Example                                  | <pre>check that maxstack("Program entry")            + totalstack("interrupt")            + 1K            &lt;= size(block CSTACK);</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |
| See also                                 | <i>Stack usage analysis</i> , page 107.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |                       |                                        |                                                                                             |                                          |                                                                                                           |                                 |                        |

## define symbol directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                       |                                                          |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| Syntax      | <code>define [ exported ] symbol name = expr;</code>                                                                                                                                                                                                                                                                                                                                                  |                                                          |
| Parameters  | <code>exported</code>                                                                                                                                                                                                                                                                                                                                                                                 | Exports the symbol to be usable by the executable image. |
|             | <code>name</code>                                                                                                                                                                                                                                                                                                                                                                                     | The name of the symbol.                                  |
|             | <code>expr</code>                                                                                                                                                                                                                                                                                                                                                                                     | The symbol value.                                        |
| Description | The <code>define symbol</code> directive defines a symbol with a specified value. The symbol can then be used in expressions in the configuration file. The symbols defined in this way work exactly like the symbols defined with the option <code>--config_def</code> outside of the configuration file.                                                                                            |                                                          |
|             | The <code>define exported symbol</code> variant of this directive is a shortcut for using the directive <code>define symbol</code> in combination with the <code>export symbol</code> directive. On the command line this would require both a <code>--config_def</code> option and a <code>--define_symbol</code> option to achieve the same effect.                                                 |                                                          |
|             | <b>Note:</b>                                                                                                                                                                                                                                                                                                                                                                                          |                                                          |
|             | <ul style="list-style-type: none"> <li>● A symbol cannot be redefined</li> <li>● Symbols that are either prefixed by <code>_X</code>, where <code>X</code> is a capital letter, or that contain <code>__</code> (double underscore) are reserved for toolset vendors.</li> <li>● The symbol value will be listed in the <b>Address</b> column of the entry list of the generated map file.</li> </ul> |                                                          |
| Example     | <pre>/* Define the symbol my_symbol with the value 4 */ define symbol my_symbol = 4;</pre>                                                                                                                                                                                                                                                                                                            |                                                          |
| See also    | <i>export directive</i> , page 586 and <i>Interaction between ILINK and the application</i> , page 124.                                                                                                                                                                                                                                                                                               |                                                          |

## export directive

|            |                                  |                         |
|------------|----------------------------------|-------------------------|
| Syntax     | <code>export symbol name;</code> |                         |
| Parameters | <code>name</code>                | The name of the symbol. |

**Description** The `export` directive defines a symbol to be exported, so that it can be used both from the executable image and from a global label. The application, or the debugger, can then refer to it for setup purposes etc.

**Note:** The symbol value will be listed in the **Address** column of the entry list of the generated map file.

**Example**

```
/* Define the symbol my_symbol to be exported */
export symbol my_symbol;
```

## expressions

**Syntax** An expression is built up of the following constituents:

```
expression binop expression
unop expression
expression ? expression : expression
(expression)
number
symbol
func-operator
```

where *binop* is one of these binary operators:

```
+, -, *, /, %, <<, >>, <, >, ==, !=, &, ^, |, &&, ||
```

where *unop* is one of this unary operators:

```
+, -, !, ~
```

where *number* is a number, see *numbers*, page 589

where *symbol* is a defined symbol, see *define symbol directive*, page 586 and *--config\_def*, page 377

and where *func-operator* is one of these function-like operators, available in all expressions:

|                                                   |                                                                                                                      |
|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <code>aligndown(<i>expr</i>, <i>align</i>)</code> | The value of <i>expr</i> rounded down to the nearest multiple of <i>align</i> . <i>align</i> must be a power of two. |
| <code>alignup(<i>expr</i>, <i>align</i>)</code>   | The value of <i>expr</i> rounded up to the nearest multiple of <i>align</i> . <i>align</i> must be a power of two.   |
| <code>end(<i>region</i>)</code>                   | The highest address in the region.                                                                                   |
| <code>isdefinedsymbol(<i>name</i>)</code>         | True (1) if the symbol <i>name</i> is defined, otherwise False (0).                                                  |

|                                                    |                                                                                                                                                                                                                                |
|----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>isempty(<i>region</i>)</code>                | True (1) if the region is empty, otherwise False (0).                                                                                                                                                                          |
| <code>max(<i>expr</i> [, <i>expr</i>... ] )</code> | The largest of the parameters.                                                                                                                                                                                                 |
| <code>min(<i>expr</i> [, <i>expr</i>... ] )</code> | The smallest of the parameters.                                                                                                                                                                                                |
| <code>size(<i>region</i>)</code>                   | The total size of all ranges in the region.                                                                                                                                                                                    |
| <code>so_is_shared()</code>                        | True (1) if shared object is the specified output type, otherwise False (0). Use this operator with the <code>if</code> directive to create linker configuration files that work for both shared objects and executable files. |
| <code>start(<i>region</i>)</code>                  | The lowest address in the region.                                                                                                                                                                                              |

where *align* and *expr* are expressions, and *region* is a region expression, see *Region expression*, page 560.

*func-operator* can also be one of these operators, which are only available in expressions for the size or alignment of a block or overlay, in `check that` expressions, and in data expressions in `define section` directives:

|                               |                                                                                                                                                                                                                                                                                                            |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>imp(<i>name</i>)</code> | If <i>name</i> is the name of a symbol with a constant value, this operator is that value. This operator can be used together with <code>#pragma public_equ</code> (see <i>public_equ</i> , page 462) to import values from modules in your application, for example the size of a particular struct type. |
| <code>tlsalignment()</code>   | The alignment of the thread-local storage area.                                                                                                                                                                                                                                                            |
| <code>tlssize()</code>        | The size of the thread-local storage area.                                                                                                                                                                                                                                                                 |

## Description

In the linker configuration file, an expression is a 65-bit value with the range  $-2^{64}$  to  $2^{64}$ . The expression syntax closely follows C syntax with some minor exceptions. There are no assignments, casts, pre or post-operations, and no address operations (`*`, `&`, `[]`, `-->`, and `.`). Some operations that extract a value from a region expression, etc, use a syntax resembling that of a function call. A boolean expression returns 0 (False) or 1 (True).

## keep symbol directive

|             |                                                                                                                                                                       |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>keep symbol name;</code>                                                                                                                                        |
| Parameters  | <i>name</i> The name of the symbol.                                                                                                                                   |
| Description | Normally, the linker keeps a symbol only if it is needed by your application. Use this directive to ensure that a symbol is always included in the final application. |
| See also    | <i>keep directive</i> , page 574 and <i>--keep</i> , page 390.                                                                                                        |

## numbers

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>nr [nr-suffix]</code><br>where <i>nr</i> is either a decimal number or a hexadecimal number (0x... or 0X...),<br>and where <i>nr-suffix</i> is one of:<br><br><pre> K           /* Kilo = (1 &lt;&lt; 10) 1024 */ M           /* Mega = (1 &lt;&lt; 20) 1048576 */ G           /* Giga = (1 &lt;&lt; 30) 1073741824 */ T           /* Tera = (1 &lt;&lt; 40) 1099511627776 */ P           /* Peta = (1 &lt;&lt; 50) 1125899906842624 */ E           /* Exa = (1 &lt;&lt; 60) 1152921504606846976 */ </pre> |
| Description | A number can be expressed either by normal C means or by suffixing it with a set of useful suffixes, which provides a compact way of specifying numbers.                                                                                                                                                                                                                                                                                                                                                         |
| Example     | 1024 is the same as 0x400, which is the same as 1K.                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

---

## Structural configuration

The structural directives provide means for creating structure within the configuration, such as:

- **Conditional inclusion**  
An `if` directive includes or excludes other directives depending on a condition, which makes it possible to have directives for several different memory configurations in the same file. See *if directive*, page 590.

- Dividing the linker configuration file into several different files  
The `include` directive makes it possible to divide the configuration file into several logically distinct files. See *include directive*, page 591.
- Signaling an error for unsupported cases

This section gives detailed information about each linker directive specific to structural configuration.

## error directive

|             |                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>error string</code>                                                                                                                 |
| Parameters  | <code>string</code> The error message.                                                                                                    |
| Description | An <code>error</code> directive can be used for signaling an error if the directive occurs in the active part of a conditional directive. |
| Example     | <code>error "Unsupported configuration"</code>                                                                                            |

## if directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <pre>if (expr) {     directives } else if (expr) {     directives } } else {     directives } }</pre> <p>where <i>expr</i> is an expression, see <i>expressions</i>, page 587.</p>                                                                                                                                                                                                                                                                                                                                                                      |
| Parameters  | <code>directives</code> Any ILINK directive.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Description | <p>An <code>if</code> directive includes or excludes other directives depending on a condition, which makes it possible to have directives for several different memory configurations, for example, both a banked and non-banked memory configuration, in the same file.</p> <p>The text inside a non-selected part of an <code>if</code> directive is not checked for syntax. The only requirements for such text, is that it can be tokenized, and that any open brace (<code>{</code>) token has a matching close brace (<code>}</code>) token.</p> |

Example See *Empty region*, page 561.

## include directive

Syntax `include "filename";`

Parameters *filename* A path where both / and \ can be used as the directory delimiter.

Description The `include` directive makes it possible to divide the configuration file into several logically distinct parts, each in a separate file. For instance, there might be parts that you need to change often and parts that you seldom edit.

Normally, the linker searches for configuration include files in the system configuration directory. You can use the `--config_search` linker option to add more directories to search.

See also `--config_search`, page 377

---

## Predefined linker symbols

These symbols allow you to inspect the linker environment, for example, the version of the linker executable file. The symbols can then be used in expressions in the configuration file. They are defined as if by a `define symbol` directive before the start of the configuration file.

### `__version`

Description The version of the linker, expressed as a number. If the linker version is `XX.YY.ZZ`, the `__version` symbol will have the value  $(XX*100) + YY * 100 + ZZ$ .

Example `__version` will have the value 95007 if the linker version is 9.50.7.

See also *define symbol directive*, page 586.





# Section reference

- Summary of sections and blocks
- Descriptions of sections and blocks

For more information, see *Modules and sections*, page 98.

---

## Summary of sections and blocks

This table lists the ELF sections and blocks that are used by the IAR build tools:

| Section                            | Description                                                                                                     |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| <code>.bss</code>                  | Holds zero-initialized static and global variables.                                                             |
| <code>CSTACK</code>                | Holds the stack used by C or C++ programs.                                                                      |
| <code>.data</code>                 | Holds static and global initialized variables.                                                                  |
| <code>.data_init</code>            | Holds initial values for <code>.data</code> sections when the linker directive <code>initialize</code> is used. |
| <code>.dynamic</code>              | See <i>Shared object layout</i> , page 274.                                                                     |
| <code>.dynstr</code>               | See <i>Shared object layout</i> , page 274.                                                                     |
| <code>.dynsym</code>               | See <i>Shared object layout</i> , page 274.                                                                     |
| <code>.exc.text</code>             | Holds exception-related code.                                                                                   |
| <code>.got</code>                  | See <i>Shared object layout</i> , page 274.                                                                     |
| <code>.hash</code>                 | See <i>Shared object layout</i> , page 274.                                                                     |
| <code>HEAP</code>                  | Holds the heap used for dynamically allocated data.                                                             |
| <code>__iar_tls\$\$DATA</code>     | Holds the TLS area for the primary thread.                                                                      |
| <code>__iar_tls\$\$INITDATA</code> | Holds initial values for the TLS area.                                                                          |
| <code>.iar.dynexit</code>          | Holds the <code>atexit</code> table.                                                                            |
| <code>.iar.locale_table</code>     | Holds the locale table for the selected locales.                                                                |
| <code>.init_array</code>           | Holds a table of dynamic initialization functions.                                                              |
| <code>.intvec</code>               | Holds the reset vector table                                                                                    |
| <code>IRQ_STACK</code>             | Holds the stack for interrupt requests, IRQ, and exceptions.                                                    |
| <code>.noinit</code>               | Holds <code>__no_init</code> static and global variables.                                                       |
| <code>.plt</code>                  | See <i>Shared object layout</i> , page 274.                                                                     |

Table 42: Section summary

| Section                        | Description                                                                             |
|--------------------------------|-----------------------------------------------------------------------------------------|
| <code>.preinit_array</code>    | Holds a table of dynamic initialization functions.                                      |
| <code>.prepreinit_array</code> | Holds a table of dynamic initialization functions.                                      |
| <code>.rel.dyn</code>          | See <i>Shared object layout</i> , page 274.                                             |
| <code>.rel.plt</code>          | See <i>Shared object layout</i> , page 274.                                             |
| <code>.rodata</code>           | Holds constant data.                                                                    |
| <code>so_bss</code>            | See <i>Reference information on linker blocks for shared objects</i> , page 291.        |
| <code>so_code</code>           | See <i>Reference information on linker blocks for shared objects</i> , page 291.        |
| <code>so_const</code>          | See <i>Reference information on linker blocks for shared objects</i> , page 291.        |
| <code>so_data</code>           | See <i>Reference information on linker blocks for shared objects</i> , page 291.        |
| <code>.tbss</code>             | Holds thread-local zero-initialized static and global variables for the primary thread. |
| <code>.tdata</code>            | Holds thread-local initialized static and global variables for the primary thread.      |
| <code>.text</code>             | Holds the program code.                                                                 |
| <code>.textrw</code>           | Holds <code>__ramfunc</code> declared program code.                                     |
| <code>.textrw_init</code>      | Holds initializers for the <code>.textrw</code> declared section.                       |
| <code>.uninit</code>           | See <i>Shared object layout</i> , page 274.                                             |
| <code>Veneer\$\$CMSE</code>    | Holds secure gateway veneers.                                                           |

*Table 42: Section summary (Continued)*

In addition to the ELF sections used for your application, the tools use a number of other ELF sections for a variety of purposes:

- Sections starting with `.debug` generally contain debug information in the DWARF format
- Sections starting with `.iar.debug` contain supplemental debug information in an IAR format
- The section `.comment` contains the tools and command lines used for building the file
- Sections starting with `.rel` or `.rela` contain ELF relocation information
- The section `.symtab` contains the symbol table for a file
- The section `.strtab` contains the names of the symbol in the symbol table
- The section `.shstrtab` contains the names of the sections.

---

## Descriptions of sections and blocks

This section gives reference information about each section, where the:

- *Description* describes what type of content the section is holding and, where required, how the section is treated by the linker
- *Memory placement* describes memory placement restrictions.

For information about how to allocate sections in memory by modifying the linker configuration file, see *Placing code and data—the linker configuration file*, page 101.

### **.bss**

|                  |                                                     |
|------------------|-----------------------------------------------------|
| Description      | Holds zero-initialized static and global variables. |
| Memory placement | This section can be placed anywhere in memory.      |

### **CSTACK**

|                  |                                              |
|------------------|----------------------------------------------|
| Description      | Block that holds the internal data stack.    |
| Memory placement | This block can be placed anywhere in memory. |
| See also         | <i>Setting up stack memory</i> , page 120.   |

### **.data**

|                  |                                                                                                                                                                                                                                                                                                              |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description      | Holds static and global initialized variables. In object files, this includes the initial values. When the linker directive <code>initialize</code> is used, a corresponding <code>.data_init</code> section is created for each <code>.data</code> section, holding the possibly compressed initial values. |
| Memory placement | This section can be placed anywhere in memory.                                                                                                                                                                                                                                                               |

### **.data\_init**

|                  |                                                                                                                                                                              |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description      | Holds the possibly compressed initial values for <code>.data</code> sections. This section is created by the linker if the <code>initialize</code> linker directive is used. |
| Memory placement | This section can be placed anywhere in memory.                                                                                                                               |

## **.exc.text**

|                  |                                                                              |
|------------------|------------------------------------------------------------------------------|
| Description      | Holds code that is only executed when your application handles an exception. |
| Memory placement | In the same memory as <code>.text</code> .                                   |
| See also         | <i>Exception handling</i> , page 215.                                        |

## **HEAP**

|                  |                                                                                                                                                                                                   |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description      | Holds the heap used for dynamically allocated data in memory, in other words data allocated by <code>malloc</code> and <code>free</code> , and in C++, <code>new</code> and <code>delete</code> . |
| Memory placement | This section can be placed anywhere in memory.                                                                                                                                                    |
| See also         | <i>Setting up heap memory</i> , page 120.                                                                                                                                                         |

## **\_\_iar\_tls\$\$DATA**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <p>Holds the two sections <code>.tdata</code> and <code>.tbss</code>. Together they hold the thread-local storage area for the primary thread. The main use for this section is to use a size operator (<code>__section_size</code>, see <i>Dedicated section operators</i>, page 206) on it to obtain the size of the thread-local storage area. You can also use the operator <code>__iar_tls\$\$DATA\$Align</code> to obtain the alignment of the thread-local storage.</p> <p>This section is created by the linker if the linker option <code>--threaded_lib</code> is used.</p> |
| See also    | <i>Managing a multithreaded environment</i> , page 169                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## **\_\_iar\_tls\$\$INITDATA**

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description | <p>Holds initial values for the thread-local storage area. The main use for this section is to copy it to a thread's thread-local storage area when the thread is created. The difference between the size of this section and the total size of the thread-local storage area (the section <code>__iar_tls\$\$DATA</code>) is the number of bytes in the thread-local storage area that should be initialized to zero.</p> <p>This section is created by the linker if the linker option <code>--threaded_lib</code> is used.</p> |
| See also    | <i>Managing a multithreaded environment</i> , page 169                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

**.iar.dynexit**

|                  |                                                |
|------------------|------------------------------------------------|
| Description      | Holds the table of calls to be made at exit.   |
| Memory placement | This section can be placed anywhere in memory. |
| See also         | <i>Setting up the atexit limit</i> , page 120. |

**.iar.locale\_table**

|                  |                                                  |
|------------------|--------------------------------------------------|
| Description      | Holds the locale table for the selected locales. |
| Memory placement | This section can be placed anywhere in memory.   |
| See also         | <i>Locale</i> , page 168.                        |

**.init\_array**

|                  |                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------|
| Description      | Holds pointers to routines to call for initializing one or more C++ objects with static storage duration. |
| Memory placement | This section can be placed anywhere in memory.                                                            |

**.intvec**

|                  |                                                                                                                                                 |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Description      | Holds the reset vector table and exception vectors which contain branch instructions to <code>cstartup</code> , interrupt service routines etc. |
| Memory placement | The placement of this section is device-dependent. See the manufacturer's hardware manual.                                                      |

**IRQ\_STACK**

|                  |                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Description      | Holds the stack which is used when servicing IRQ exceptions. Other stacks may be added as needed for servicing other exception types— <code>FIQ</code> , <code>SVC</code> , <code>ABT</code> , and <code>UND</code> . The <code>cstartup.s</code> file must be modified to initialize the exception stack pointers used.<br><br><b>Note:</b> This section is not used when compiling for Cortex-M. |
| Memory placement | This section can be placed anywhere in memory.                                                                                                                                                                                                                                                                                                                                                     |

See also *Processor modes and stacks*, page 224.

## **.noinit**

Description Holds static and global `__no_init` variables.

Memory placement This section can be placed anywhere in memory.

## **.preinit\_array**

Description Like `.init_array`, but is used by the library to make some C++ initializations happen before the others.

Memory placement This section can be placed anywhere in memory.

See also *.init\_array*, page 597.

## **.prepreinit\_array**

Description Like `.init_array`, but is used when C static initialization is rewritten as dynamic initialization. Performed before all C++ dynamic initialization.

Memory placement This section can be placed anywhere in memory.

See also *.init\_array*, page 597.

## **.rodata**

Description Holds constant data. This can include constant variables, string and aggregate literals, etc.

Memory placement This section can be placed anywhere in memory.

## **.tbss**

Description Holds thread-local zero-initialized static and global variables for the primary thread. If the linker option `--threaded_lib` is not used, these are treated as `.bss`.

See also *Managing a multithreaded environment*, page 169.

**.tdata**

Description Holds thread-local initialized static and global variables for the primary thread. If the linker option `--threaded_lib` is not used, these are treated as `.data`.

See also *Managing a multithreaded environment*, page 169.

**.text**

Description Holds program code, including the code for system initialization.

Memory placement This section can be placed anywhere in memory.

**.textrw**

Description Holds `__ramfunc` declared program code.

Memory placement This section can be placed anywhere in memory.

See also *\_\_ramfunc*, page 436.

**.textrw\_init**

Description Holds initializers for the `.textrw` declared sections.

Memory placement This section can be placed anywhere in memory.

See also *\_\_ramfunc*, page 436.

**Veneer\$\$CMSE**

Description This section contains secure gateway veneers created automatically by the linker for each entry function, as determined by the extended keyword `__cmse_nonsecure_entry`.

Memory placement This section should be placed in an NSC (non-secure callable) memory region. NSC regions can be programmed using an SAU (security attribution unit) or an IDAU (implementation-defined attribute unit). For information about how to program the SAU or IDAU, see the documentation for your Armv8-M core.

See also

*Arm TrustZone®*, page 243, `--cmse`, page 317, `__cmse_nonsecure_entry`, page 429, and `--import_cmse_lib_out`, page 390



# The stack usage control file

- Overview
- Stack usage control directives
- Syntactic components

Before you read this chapter, see *Stack usage analysis*, page 107.

---

## Overview

A stack usage control file consists of a sequence of directives that control stack usage analysis. You can use C ("*/\*...\*/*") and C++ ("*//...*") comments in these files.

The default filename extension for stack usage control files is `suc`.

### C++ NAMES

When you specify the name of a C++ function in a stack usage control file, you must use the name exactly as used by the linker. Both the number and names of parameters, as well as the names of types must match. However, most non-significant white-space differences are accepted. In particular, you must enclose the name in quote marks because all C++ function names include non-identifier characters.

You can also use wildcards in function names. "`##`" matches any sequence of characters, and "`#?`" matches a single character. This makes it possible to write function names that will match any instantiation of a template function.

Examples:

```
"operator new(unsigned int)"
"std::ostream::flush()"
"operator <<(std::ostream &, char const *)"
"void _Sort<##>(##, ##, ##)"
```

---

## Stack usage control directives

This section gives detailed reference information about each stack usage control directive.

## call graph root directive

|             |                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>call graph root [ category ] : func-spec [ , func-spec... ];</code>                                                                                                                                                                                                                                                                                                               |
| Parameters  | See the information on syntactic components:<br><i>category</i> , page 605<br><i>func-spec</i> , page 605                                                                                                                                                                                                                                                                               |
| Description | Specifies that the listed functions are call graph roots. You can optionally specify a call graph root category. Call graph roots are listed under their category in the <i>Stack Usage</i> chapter in the linker map file.<br><br>The linker will normally issue a warning for functions needed in the application that are not call graph roots and which do not appear to be called. |
| Example     | <code>call graph root [task]: MyFunc10, MyFunc11;</code>                                                                                                                                                                                                                                                                                                                                |
| See also    | <i>call_graph_root</i> , page 448.                                                                                                                                                                                                                                                                                                                                                      |

## exclude directive

|             |                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------|
| Syntax      | <code>exclude func-spec [ , func-spec... ];</code>                                                     |
| Parameters  | See the information on syntactic components:<br><i>func-spec</i> , page 605                            |
| Description | Excludes the specified functions, and call trees originating with them, from stack usage calculations. |
| Example     | <code>exclude MyFunc5, MyFunc6;</code>                                                                 |

## function directive

|            |                                                                                                           |
|------------|-----------------------------------------------------------------------------------------------------------|
| Syntax     | <code>[ override ] function [ category ] func-spec : stack-size [ , call-info... ];</code>                |
| Parameters | See the information on syntactic components:<br><i>category</i> , page 605<br><i>func-spec</i> , page 605 |

|             |                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|             | <i>call-info</i> , page 606                                                                                                                                                                                                                                                                                                                                                                              |
|             | <i>stack-size</i> , page 606                                                                                                                                                                                                                                                                                                                                                                             |
| Description | <p>Specifies what the maximum stack usage is in a function and which other functions that are called from that function.</p> <p>Normally, an error is issued if there already is stack usage information for the function, but if you start with <code>override</code>, the error will be suppressed and the information supplied in the directive will be used instead of the previous information.</p> |
| Example     | <pre>function MyFunc1: 32,     calls MyFunc2,     calls MyFunc3, MyFunc4: 16;  function [interrupt] MyInterruptHandler: 44;</pre>                                                                                                                                                                                                                                                                        |

## max recursion depth directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>max recursion depth <i>func-spec</i> : <i>size</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Parameters  | <p>See the information on syntactic components:</p> <p><i>func-spec</i>, page 605</p> <p><i>size</i>, page 607</p>                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Description | <p>Specifies the maximum number of iterations through any of the cycles in the recursion nest of which the function is a member.</p> <p>A recursion nest is a set of cycles in the call graph where each cycle shares at least one node with another cycle in the nest.</p> <p>Stack usage analysis will base its result on the max recursion depth multiplied by the stack usage of the deepest cycle in the nest. If the nest is not entered on a point along one of the deepest cycles, no stack usage result will be calculated for such calls.</p> |
| Example     | <code>max recursion depth MyFunc12: 10;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## no calls from directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>no calls from <i>module-spec</i> to <i>func-spec</i> [ , <i>func-spec</i>... ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Parameters  | See the information on syntactic components:<br><i>func-spec</i> , page 605<br><i>module-spec</i> , page 605                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Description | When you provide stack usage information for some functions in a module without stack usage information, the linker warns about functions that are referenced from the module but not listed as called. This is primarily to help avoid problems with C runtime routines, calls to which are generated by the compiler, beyond user control.<br><br>If there actually is no call to some of these functions, use the <code>no calls from</code> directive to selectively suppress the warning for the specified functions. You can also disable the warning entirely ( <code>--diag_suppress</code> or <b>Project&gt;Options&gt;Linker&gt;Diagnostics&gt;Suppress these diagnostics</b> ). |
| Example     | <code>no calls from [file.o] to MyFunc13, MyFunc14;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## possible calls directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>possible calls <i>calling-func</i> : <i>called-func</i> [ , <i>called-func</i>... ];</code>                                                                                                                                                                                                                                                                                                                 |
| Parameters  | See the information on syntactic components:<br><i>func-spec</i> , page 605                                                                                                                                                                                                                                                                                                                                       |
| Description | Specifies an exhaustive list of possible destinations for all indirect calls in one function. Use this for functions which are known to perform indirect calls and where you know exactly which functions that might be called in this particular application. Consider using the <code>#pragma calls</code> directive if the information about which functions that might be called is available when compiling. |
| Example     | <code>possible calls MyFunc7: MyFunc8, MyFunc9;</code><br><br>When the function does not perform any calls, the list is empty:<br><code>possible calls MyFunc8: ;</code>                                                                                                                                                                                                                                          |
| See also    | <i>calls</i> , page 447.                                                                                                                                                                                                                                                                                                                                                                                          |

## Syntactic components

This section describes the syntactical components that can be used by the stack usage control directives.

### ***category***

|             |                                                                                               |
|-------------|-----------------------------------------------------------------------------------------------|
| Syntax      | [ <i>name</i> ]                                                                               |
| Description | A call graph root category. You can use any name you like. Categories are not case-sensitive. |
| Example     | <i>category</i> examples:<br><br>[interrupt]<br>[task]                                        |

### ***func-spec***

|             |                                                                                                                                                                                                                                              |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | [ ? ] <i>name</i> [ <i>module-spec</i> ]                                                                                                                                                                                                     |
| Description | Specifies the name of a symbol, and for module-local symbols, the name of the module it is defined in. Normally, if <i>func-spec</i> does not match a symbol in the program, a warning is emitted. Prefixing with ? suppresses this warning. |
| Example     | <i>func-spec</i> examples:<br><br>xFun<br>MyFun [file.o]<br>?"fun1(int) "                                                                                                                                                                    |

### ***module-spec***

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | [name [ ( <i>name</i> ) ]]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Description | Specifies the name of a module, and optionally, in parentheses, the name of the library it belongs to. To distinguish between modules with the same name, you can specify: <ul style="list-style-type: none"> <li>● The complete path of the file ("D:\C1\test\file.o")</li> <li>● As many path elements as are needed at the end of the path ("test\file.o")</li> <li>● Some path elements at the start of the path, followed by "...", followed by some path elements at the end ("D:\...\file.o").</li> </ul> |

**Note:** When using multi-file compilation (`--mfc`), multiple files are compiled into a single module, named after the first file.

Example `module-spec` examples:

```
[file.o]
[file.o(lib.a)]
["D:\C1\test\file.o"]
```

## ***name***

Description A name can be either an identifier or a quoted string.

The first character of an identifier must be either a letter or one of the characters "\_", "\$", or ".". The rest of the characters can also be digits.

A quoted string starts and ends with " and can contain any character. Two consecutive " characters can be used inside a quoted string to represent a single " .

Example `name` examples:

```
MyFun
file.o
"file-1.o"
```

## ***call-info***

Syntax `calls func-spec [ , func-spec... ] [ : stack-size ]`

Description Specifies one or more called functions, and optionally, the stack size at the calls.

Example `call-info` examples:

```
calls MyFunc1 : stack 16
calls MyFunc2, MyFunc3, MyFunc4
```

## ***stack-size***

Syntax `[ stack ] size`  
`( [ stack ] size )`

Description Specifies the size of a stack frame. A stack may not be specified more than once.

Example *stack-size* examples:

```
24
stack 28
```

## **size**

Description A decimal integer, or 0x followed by a hexadecimal integer. Either alternative can optionally be followed by a suffix indicating a power of two ( $K=2^{10}$ ,  $M=2^{20}$ ,  $G=2^{30}$ ,  $T=2^{40}$ ,  $P=2^{50}$ ).

Example *size* examples:

```
24
0x18
2048
2K
```





# IAR utilities

- The IAR Archive Tool—`iarchive`—creates and manipulates a library (an archive) of several ELF object files
- The IAR ELF Tool—`ielftool`—performs various transformations on an ELF executable image (such as fill, checksum, format conversions, etc)
- The IAR ELF Dumper—`ielfdump`—creates a text representation of the contents of an ELF relocatable or executable image
- The IAR ELF Object Tool—`iobjmanip`—is used for performing low-level manipulation of ELF object files
- The IAR Absolute Symbol Exporter—`ismexport`—exports absolute symbols from a ROM image file, so that they can be used when you link an add-on application.
- The IAR ELF Relocatable Object Creator—`ixe2obj`—creates a relocatable ELF object file from an executable ELF object file.
- Descriptions of options—detailed reference information about each command line option available for the different utilities.

---

## The IAR Archive Tool—`iarchive`

The IAR Archive Tool, `iarchive`, can create a library (an archive) file from several ELF object files. You can also use `iarchive` to manipulate ELF libraries.

A library file contains several relocatable ELF object modules, each of which can be independently used by a linker. In contrast with object modules specified directly to the linker, each module in a library is only included if it is needed.

For information about how to build a library in the IDE, see the *IDE Project Management and Building Guide for Arm*.

## INVOCATION SYNTAX

The invocation syntax for the archive builder is:

```
iarchive [command] [libraryfile] [objectfiles] [options]
```

### Parameters

The parameters are:

| Parameter          | Description                                                                                                                                                                                                    |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>command</i>     | A command line option that defines the operation to be performed. If the <i>command</i> is omitted, <code>--create</code> is used by default. You can specify the <i>command</i> anywhere on the command line. |
| <i>libraryfile</i> | The library file to be operated on. If specified like this, it must appear before the first object file, if any. You can also specify the library file using the option <code>-o</code> .                      |
| <i>objectfiles</i> | One or more object files as arguments to the command. Note that some commands take no object file arguments.                                                                                                   |
| <i>options</i>     | Optional command line options that modify the behavior of the archive tool. These options can be placed anywhere on the command line.                                                                          |

Table 43: iarchive parameters

### Examples

This example creates a library file called `mylibrary.a` from the source object files `module1.o`, `module2.o`, and `module3.o`:

```
iarchive mylibrary.a module1.o module2.o module3.o.
```

This example lists the contents of `mylibrary.a`:

```
iarchive --toc mylibrary.a
```

This example replaces `module3.o` in the library with the content in the `module3.o` file and appends `module4.o` to `mylibrary.a`:

```
iarchive --replace mylibrary.a module3.o module4.o
```

## SUMMARY OF IARCHIVE COMMANDS

This table summarizes the `iarchive` commands:

| Command line option   | Description                                              |
|-----------------------|----------------------------------------------------------|
| <code>--create</code> | Creates a library that contains the listed object files. |

Table 44: iarchive commands summary

| Command line option        | Description                                                 |
|----------------------------|-------------------------------------------------------------|
| <code>--delete, -d</code>  | Deletes the listed object files from the library.           |
| <code>--extract, -x</code> | Extracts the listed object files from the library.          |
| <code>--replace, -r</code> | Replaces or appends the listed object files to the library. |
| <code>--symbols</code>     | Lists all symbols defined by files in the library.          |
| <code>--toc, -t</code>     | Lists all files in the library.                             |

Table 44: *iarchive* commands summary (Continued)

For more information, see *Descriptions of options*, page 628.

## SUMMARY OF IARCHIVE OPTIONS

This table summarizes the *iarchive* command line options:

| Command line option         | Description                                             |
|-----------------------------|---------------------------------------------------------|
| <code>-f</code>             | Extends the command line.                               |
| <code>--f</code>            | Extends the command line, optionally with a dependency. |
| <code>--fake_time</code>    | Generates library files with identical timestamps.      |
| <code>--no_bom</code>       | Omits the byte order mark from UTF-8 output files.      |
| <code>--output, -o</code>   | Specifies the library file.                             |
| <code>--text_out</code>     | Specifies the encoding for text output files.           |
| <code>--utf8_text_in</code> | Uses the UTF-8 encoding for text input files.           |
| <code>--verbose, -V</code>  | Reports all performed operations.                       |
| <code>--version</code>      | Sends tool output to the console and then exits.        |
| <code>--vtoc</code>         | Produces a verbose list of files in the library.        |

Table 45: *iarchive* options summary

For more information, see *Descriptions of options*, page 628.

## DIAGNOSTIC MESSAGES

This section lists the messages produced by *iarchive*:

### La001: could not open file *filename*

*iarchive* failed to open an object file.

### La002: illegal path *pathname*

The path *pathname* is not a valid path.

**La006: too many parameters to *cmd* command**

A list of object modules was specified as parameters to a command that only accepts a single library file.

**La007: too few parameters to *cmd* command**

A command that takes a list of object modules was issued without the expected modules.

**La008: *lib* is not a library file**

The library file did not pass a basic syntax check. Most likely the file is not the intended library file.

**La009: *lib* has no symbol table**

The library file does not contain the expected symbol information. The reason might be that the file is not the intended library file, or that it does not contain any ELF object modules.

**La010: no library parameter given**

The tool could not identify which library file to operate on. The reason might be that a library file has not been specified.

**La011: file *file* already exists**

The file could not be created because a file with the same name already exists.

**La013: file confusions, *lib* given as both library and object**

The library file was also mentioned in the list of object modules.

**La014: module *module* not present in archive *lib***

The specified object module could not be found in the archive.

**La015: internal error**

The invocation triggered an unexpected error in `iarchive`.

**Ms003: could not open file *filename* for writing**

`iarchive` failed to open the archive file for writing. Make sure that it is not write protected.

**Ms004: problem writing to file *filename***

An error occurred while writing to file *filename*. A possible reason for this is that the volume is full.

**Ms005: problem closing file *filename***

An error occurred while closing the file *filename*.

---

## The IAR ELF Tool—`ielftool`

The IAR ELF Tool, `ielftool`, can generate a checksum on specific ranges of memories. This checksum can be compared with a checksum calculated on your application.

The source code for `ielftool` and a CMake configuration file are available in the `arm\src\elfutils` directory. If you have specific requirements for how the checksum should be generated or requirements for format conversion, you can modify the source code accordingly. The CMake file can be used as a Microsoft Visual Studio project or it can be used to generate makefiles for use on Linux, etc.

### INVOCATION SYNTAX

The invocation syntax for the IAR ELF Tool is:

```
ielftool [options] inputfile outputfile [options]
```

The `ielftool` tool will first process all the fill options, then it will process all the checksum options (from left to right).

### Parameters

The parameters are:

| Parameter         | Description                                                                                                                     |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <i>inputfile</i>  | An absolute ELF executable image produced by the ILINK linker.                                                                  |
| <i>options</i>    | Any of the available command line options, see <i>Summary of ielftool options</i> , page 614.                                   |
| <i>outputfile</i> | An absolute ELF executable image, or if one of the relevant command line options is specified, an image file in another format. |

Table 46: *ielftool* parameters

See also *Rules for specifying a filename or directory as parameters*, page 306.

## Example

This example fills a memory range with 0xFF and then calculates a checksum on the same range:

```
ielftool my_input.out my_output.out --fill 0xFF;0-0xFF
--checksum __checksum:4,crc32;0-0xFF
```

## SUMMARY OF IELFTOOL OPTIONS

This table summarizes the `ielftool` command line options:

| Command line option          | Description                                                                  |
|------------------------------|------------------------------------------------------------------------------|
| <code>--bin</code>           | Sets the format of the output file to raw binary.                            |
| <code>--bin-multi</code>     | Produces output to multiple raw binary files.                                |
| <code>--checksum</code>      | Generates a checksum.                                                        |
| <code>--fill</code>          | Specifies fill requirements.                                                 |
| <code>--front_headers</code> | Outputs headers in the beginning of the file.                                |
| <code>--ihex</code>          | Sets the format of the output file to 32-bit linear Intel Extended hex.      |
| <code>--ihex-len</code>      | Sets the number of data bytes in Intel Hex records.                          |
| <code>--offset</code>        | Adds (or subtracts) an offset to all addresses in the generated output file. |
| <code>--parity</code>        | Generates parity bits.                                                       |
| <code>--self_reloc</code>    | Not for general use.                                                         |
| <code>--silent</code>        | Sets silent operation.                                                       |
| <code>--simple</code>        | Sets the format of the output file to Simple-code.                           |
| <code>--simple-ne</code>     | As <code>--simple</code> , but without an entry record.                      |
| <code>--srec</code>          | Sets the format of the output file to Motorola S-records.                    |
| <code>--srec-len</code>      | Sets the number of data bytes in each S-record.                              |
| <code>--srec-s3only</code>   | Restricts the S-record output to contain only a subset of records.           |
| <code>--strip</code>         | Removes debug information.                                                   |
| <code>--titxt</code>         | Sets the format of the output file to Texas Instruments TI-TXT.              |
| <code>--update_symbol</code> | Replaces the ELF file content for the specified symbol.                      |
| <code>--verbose, -V</code>   | Prints all performed operations.                                             |
| <code>--version</code>       | Sends tool output to the console and then exits.                             |

Table 47: *ielftool* options summary

For more information, see *Descriptions of options*, page 628.

## SPECIFYING IELFTOOL ADDRESS RANGES

At the most basic level, an address range for `ielftool` consists of two hexadecimal numbers—`0x8000-0x87FF`—which includes both `0x8000` and `0x87FF`.

You can specify ELF symbols that are present in the processed ELF file as a start or end address using `__checksum_begin-__checksum_end`. This range begins on the byte that has the address value of the `__checksum_begin` symbol and ends (inclusive) on the byte that has the address value of the `__checksum_end` symbol. Symbol values of `0x40` and `0x3FD` would equate to specifying `0x40-0x3FD`.

You can add offsets to symbolic values using `__start+3-__end+0x10`. The calculation is done in modulo 64-bits, therefore adding `0xFFFF'FFFF'FFFF'FFFF` is equivalent to subtracting 1.

You can specify blocks from an `.icf` file that are present in the processed ELF file using `{BLOCKNAME}`. A block started on `0x400` and ending (inclusively) on `0x535`, would equate to specifying `0x400-0x535`.

You can combine several address ranges, as long as they do not overlap, separated by `0x800-1FFF {FARCODE_BLOCK}`.

You can specify `__FLASH_BASE-__FLASH_END` as a legal range (as long as there is no overlap).

**Note:** If your application is linked with address translation (see *logical directive*, page 557), make sure that any checksums are calculated using explicit physical checksum ranges, see *Checksums of address-translated ranges*, page 237.

---

## The IAR ELF Dumper—`ielfdump`

The IAR ELF Dumper for Arm, `ielfdumparm`, can be used for creating a text representation of the contents of a relocatable or absolute ELF file.

`ielfdumparm` can be used in one of three ways:

- To produce a listing of the general properties of the input file and the ELF segments and ELF sections it contains. This is the default behavior when no command line options are used.
- To also include a textual representation of the contents of each ELF section in the input file. To specify this behavior, use the command line option `--all`.
- To produce a textual representation of selected ELF sections from the input file. To specify this behavior, use the command line option `--section`.

## INVOCATION SYNTAX

The invocation syntax for `ielfdumparm` is:

```
ielfdumparm input_file [output_file]
```

**Note:** `ielfdumparm` is a command line tool which is not primarily intended to be used in the IDE.

## Parameters

The parameters are:

| Parameter          | Description                                                                                                                                     |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>input_file</i>  | An ELF relocatable or executable file to use as input.                                                                                          |
| <i>output_file</i> | A file or directory where the output is emitted. If absent and no <code>--output</code> option is specified, output is directed to the console. |

Table 48: `ielfdumparm` parameters

See also *Rules for specifying a filename or directory as parameters*, page 306.

## SUMMARY OF IELFDUMP OPTIONS

This table summarizes the `ielfdumparm` command line options:

| Command line option           | Description                                                                   |
|-------------------------------|-------------------------------------------------------------------------------|
| <code>-a</code>               | Generates output for all sections except string table sections.               |
| <code>--all</code>            | Generates output for all input sections regardless of their names or numbers. |
| <code>--code</code>           | Dumps all sections that contain executable code.                              |
| <code>--disasm_data</code>    | Dumps data sections as code sections.                                         |
| <code>-f</code>               | Extends the command line.                                                     |
| <code>--f</code>              | Extends the command line, optionally with a dependency.                       |
| <code>--no_bom</code>         | Omits the Byte Order Mark from UTF-8 output files.                            |
| <code>--no_header</code>      | Suppresses production of a list header in the output.                         |
| <code>--no_rel_section</code> | Suppresses dumping of <code>.rel/.rela</code> sections.                       |
| <code>--no_strtab</code>      | Suppresses dumping of string table sections.                                  |
| <code>--no_utf8_in</code>     | Do not assume UTF-8 for non-IAR ELF files.                                    |
| <code>--output, -o</code>     | Specifies an output file.                                                     |
| <code>--range</code>          | Disassembles only addresses in the specified range.                           |

Table 49: `ielfdumparm` options summary



| Command line option                             | Description                                                                                                                                         |
|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>--raw</code>                              | Uses the generic hexadecimal/ASCII output format for the contents of any selected section, instead of any dedicated output format for that section. |
| <code>--section, -s</code>                      | Generates output for selected input sections.                                                                                                       |
| <code>--segment, -g</code>                      | Generates output for segments with specified numbers.                                                                                               |
| <code>--source</code>                           | Includes source with disassembled code in executable files.                                                                                         |
| <code>--text_out</code>                         | Specifies the encoding for text output files.                                                                                                       |
| <code>--use_full_std_templat<br/>e_names</code> | Uses full short full names for some Standard C++ templates.                                                                                         |
| <code>--utf8_text_in</code>                     | Uses the UTF-8 encoding for text input files.                                                                                                       |
| <code>--version</code>                          | Sends tool output to the console and then exits.                                                                                                    |

Table 49: *iefldumparm options summary (Continued)*

For more information, see *Descriptions of options*, page 628.

## The IAR ELF Object Tool—`iobjmanip`

Use the IAR ELF Object Tool, `iobjmanip`, to perform low-level manipulation of ELF object files.

### INVOCATION SYNTAX

The invocation syntax for the IAR ELF Object Tool is:

```
iobjmanip options inputfile outputfile
```

### Parameters

The parameters are:

| Parameter               | Description                                                                                                                                                        |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>options</code>    | Command line options that define actions to be performed. These options can be placed anywhere on the command line. At least one of the options must be specified. |
| <code>inputfile</code>  | A relocatable ELF object file.                                                                                                                                     |
| <code>outputfile</code> | A relocatable ELF object file with all the requested operations applied.                                                                                           |

Table 50: *iobjmanip parameters*

See also *Rules for specifying a filename or directory as parameters*, page 306.

## Examples

This example renames the section `.example` in `input.o` to `.example2` and stores the result in `output.o`:

```
iobjmanip --rename_section .example=.example2 input.o output.o
```

## SUMMARY OF IOBJMANIP OPTIONS

This table summarizes the `iobjmanip` options:

| Command line option                    | Description                                             |
|----------------------------------------|---------------------------------------------------------|
| <code>-f</code>                        | Extends the command line.                               |
| <code>--f</code>                       | Extends the command line, optionally with a dependency. |
| <code>--no_bom</code>                  | Omits the Byte Order Mark from UTF-8 output files.      |
| <code>--remove_file_path</code>        | Removes path information from the file symbol.          |
| <code>--remove_section</code>          | Removes one or more section.                            |
| <code>--rename_section</code>          | Renames a section.                                      |
| <code>--rename_symbol</code>           | Renames a symbol.                                       |
| <code>--strip</code>                   | Removes debug information.                              |
| <code>--text_out</code>                | Specifies the encoding for text output files.           |
| <code>--update_typeless_globals</code> | Updates the type of global symbols in an object file.   |
| <code>--utf8_text_in</code>            | Uses the UTF-8 encoding for text input files.           |
| <code>--version</code>                 | Sends tool output to the console and then exits.        |

*Table 51: iobjmanip options summary*

For more information, see *Descriptions of options*, page 628.

## DIAGNOSTIC MESSAGES

This section lists the messages produced by `iobjmanip`:

### Lm001: No operation given

None of the command line parameters specified an operation to perform.

### Lm002: Expected *nr* parameters but got *nr*

Too few or too many parameters. Check invocation syntax for `iobjmanip` and for the used command line options.

**Lm003: Invalid section/symbol renaming pattern *pattern***

The pattern does not define a valid renaming operation.

**Lm004: Could not open file *filename***

`iobjmanip` failed to open the input file.

**Lm005: ELF format error *msg***

The input file is not a valid ELF object file.

**Lm006: Unsupported section type *nr***

The object file contains a section that `iobjmanip` cannot handle. This section will be ignored when generating the output file.

**Lm007: Unknown section type *nr***

`iobjmanip` encountered an unrecognized section. `iobjmanip` will try to copy the content as is.

**Lm008: Symbol *symbol* has unsupported format**

`iobjmanip` encountered a symbol that cannot be handled. `iobjmanip` will ignore this symbol when generating the output file.

**Lm009: Group type *nr* not supported**

`iobjmanip` only supports groups of type `GRP_COMDAT`. If any other group type is encountered, the result is undefined.

**Lm010: Unsupported ELF feature in *file*: *msg***

The input file uses a feature that `iobjmanip` does not support.

**Lm011: Unsupported ELF file type**

The input file is not a relocatable object file.

**Lm012: Ambiguous rename for section/symbol *name* (*alt1* and *alt2*)**

An ambiguity was detected while renaming a section or symbol. One of the alternatives will be used.

**Lm013: Section *name* removed due to transitive dependency on *name***

A section was removed as it depends on an explicitly removed section.

**Lm014: File has no section with index *nr***

A section index, used as a parameter to `--remove_section` or `--rename_section`, did not refer to a section in the input file.

**Ms003: could not open file *filename* for writing**

`iobjmanip` failed to open the output file for writing. Make sure that it is not write protected.

**Ms004: problem writing to file *filename***

An error occurred while writing to file *filename*. A possible reason for this is that the volume is full.

**Ms005: problem closing file *filename***

An error occurred while closing the file *filename*.

---

## The IAR Absolute Symbol Exporter—`isymexport`

The IAR Absolute Symbol Exporter, `isymexport`, can export absolute symbols from a ROM image file, so that they can be used when you link an add-on application.

To keep symbols from your symbols file in your final application, the symbols must be referred to, either from your source code or by using the linker option `--keep`.

### INVOCATION SYNTAX

The invocation syntax for the IAR Absolute Symbol Exporter is:

```
isymexport [options] inputfile outputfile
```

### Parameters

The parameters are:

| Parameter        | Description                                                              |
|------------------|--------------------------------------------------------------------------|
| <i>inputfile</i> | A ROM image in the form of an executable ELF file (output from linking). |

Table 52: `isymexport` parameters

| Parameter         | Description                                                                                                                                                                                                                                                                                                                                                   |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>options</i>    | Any of the available command line options, see <i>Summary of isymexport options</i> , page 621.                                                                                                                                                                                                                                                               |
| <i>outputfile</i> | A relocatable ELF file that can be used as input to linking, and which contains all or a selection of the absolute symbols in the input file. The output file contains only the symbols, not the actual code or data sections. A steering file can be used for controlling which symbols are included, and if desired, for also renaming some of the symbols. |

Table 52: *isymexport* parameters (Continued)

See also *Rules for specifying a filename or directory as parameters*, page 306.



In the IDE, to add the export of library symbols, choose **Project>Options>Build Actions** and specify your command line in the **Post-build command line** text field, for example:

```
$TOOLKIT_DIR$\bin\isymexport.exe "$TARGET_PATH$"  
"$PROJ_DIR$\const_lib.symbols"
```

## SUMMARY OF ISYMEXPORT OPTIONS

This table summarizes the `isymexport` command line options:

| Command line option                | Description                                                                                             |
|------------------------------------|---------------------------------------------------------------------------------------------------------|
| <code>--edit</code>                | Specifies a steering file.                                                                              |
| <code>--export_locals</code>       | Exports local symbols.                                                                                  |
| <code>-f</code>                    | Extends the command line.                                                                               |
| <code>--f</code>                   | Extends the command line, optionally with a dependency.                                                 |
| <code>--generate_vfe_header</code> | Declares that the image does not contain any virtual function calls to potentially discarded functions. |
| <code>--no_bom</code>              | Omits the Byte Order Mark from UTF-8 output files.                                                      |
| <code>--ram_reserve_ranges</code>  | Generates symbols for the areas in RAM that the image uses.                                             |
| <code>--reserve_ranges</code>      | Generates symbols to reserve the areas in ROM and RAM that the image uses.                              |
| <code>--show_entry_as</code>       | Exports the entry point of the application with the given name.                                         |
| <code>--text_out</code>            | Specifies the encoding for text output files.                                                           |
| <code>--utf8_text_in</code>        | Uses the UTF-8 encoding for text input files.                                                           |
| <code>--version</code>             | Sends tool output to the console and then exits.                                                        |

Table 53: *isymexport* options summary

For more information, see *Descriptions of options*, page 628.

## STEERING FILES

A steering file can be used for controlling which symbols are included, and if desired, for also renaming some of the symbols. In the file, you can use `show` and `hide` directives to select which public symbols from the input file that are to be included in the output file. `rename` directives can be used for changing the names of symbols in the input file.

When you use a steering file, only actively exported symbols will be available in the output file. Therefore, a steering file without `show` directives will generate an output file without symbols.

### Syntax

The following syntax rules apply:

- Each directive is specified on a separate line.
- C comments (`/* . . . */`) and C++ comments (`// . . .`) can be used.
- Patterns can contain wildcard characters that match more than one possible character in a symbol name.
- The `*` character matches any sequence of zero or more characters in a symbol name.
- The `?` character matches any single character in a symbol name.

### Example

```
rename xxx_* as YYY_* /*Change symbol prefix from xxx_ to YYY_ */
show YYY_*           /* Export all symbols from YYY package */
hide *_internal      /* But do not export internal symbols */
show zzz?            /* Export zzza, but not zzzaaa */
hide zzzx            /* But do not export zzzx */
```

## Hide directive

|             |                                                                                                                                                         |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>hide pattern</code>                                                                                                                               |
| Parameters  | <code>pattern</code> A pattern to match against a symbol name.                                                                                          |
| Description | A symbol with a name that matches the pattern will not be included in the output file unless this is overridden by a later <code>show</code> directive. |
| Example     | <pre>/* Do not include public symbols ending in _sys. */ hide *_sys</pre>                                                                               |

## Rename directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>rename <i>pattern1</i> as <i>pattern2</i></code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Parameters  | <p><i>pattern1</i>      A pattern used for finding symbols to be renamed. The pattern can contain no more than one * or ? wildcard character.</p> <p><i>pattern2</i>      A pattern used for the new name for a symbol. If the pattern contains a wildcard character, it must be of the same kind as in <i>pattern1</i>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Description | <p>Use this directive to rename symbols from the output file to the input file. No exported symbol is allowed to match more than one <code>rename</code> pattern.</p> <p><code>rename</code> directives can be placed anywhere in the steering file, but they are executed before any <code>show</code> and <code>hide</code> directives. Therefore, if a symbol will be renamed, all <code>show</code> and <code>hide</code> directives in the steering file must refer to the new name.</p> <p>If the name of a symbol matches a <i>pattern1</i> pattern that contains no wildcard characters, the symbol will be renamed <i>pattern2</i> in the output file.</p> <p>If the name of a symbol matches a <i>pattern1</i> pattern that contains a wildcard character, the symbol will be renamed <i>pattern2</i> in the output file, with part of the name matching the wildcard character preserved.</p> |
| Example     | <pre>/* xxx_start will be renamed Y_start_X in the output file,    xxx_stop will be renamed Y_stop_X in the output file. */ rename xxx_* as Y*_X</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## Show directive

|             |                                                                                                                                                     |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>show <i>pattern</i></code>                                                                                                                    |
| Parameters  | <i>pattern</i> A pattern to match against a symbol name.                                                                                            |
| Description | A symbol with a name that matches the pattern will be included in the output file unless this is overridden by a later <code>hide</code> directive. |
| Example     | <pre>/* Include all public symbols ending in _pub. */ show *_pub</pre>                                                                              |

## Show-root directive

|             |                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>show-root pattern</code>                                                                                                                                                                                                                                                                                                                                                            |
| Parameters  | <code>pattern</code> A pattern to match against a symbol name.                                                                                                                                                                                                                                                                                                                            |
| Description | <p>A symbol with a name that matches the pattern will be included in the output file, marked as <code>root</code>, unless this is overridden by a later <code>hide</code> directive.</p> <p>When linking with the module produced by <code>isymexport</code>, the symbol will be included in the final executable file, even if no references to the symbol are present in the build.</p> |
| Example     | <pre>/* Export myVar making sure that it is included when linking */ show-root myVar</pre>                                                                                                                                                                                                                                                                                                |

## Show-weak directive

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax      | <code>show-weak pattern</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Parameters  | <code>pattern</code> A pattern to match against a symbol name.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Description | <p>A symbol with a name that matches the pattern will be included in the output file as a weak symbol unless this is overridden by a later <code>hide</code> directive.</p> <p>When linking, no error will be reported if the new code contains a definition for a symbol with the same name as the exported symbol.</p> <p><b>Note:</b> Any internal references in the <code>isymexport</code> input file are already resolved and cannot be affected by the presence of definitions in the new code.</p> |
| Example     | <pre>/* Export myFunc as a weak definition */ show-weak myFunc</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                       |

## DIAGNOSTIC MESSAGES

This section lists the messages produced by `isymexport`:

### **Es001: could not open file *filename***

`isymexport` failed to open the specified file.



**Es002: illegal path *pathname***

The path *pathname* is not a valid path.

**Es003: format error: *message***

A problem occurred while reading the input file.

**Es004: no input file**

No input file was specified.

**Es005: no output file**

An input file, but no output file was specified.

**Es006: too many input files**

More than two files were specified.

**Es007: input file is not an ELF executable**

The input file is not an ELF executable file.

**Es008: unknown directive: *directive***

The specified directive in the steering file is not recognized.

**Es009: unexpected end of file**

The steering file ended when more input was required.

**Es010: unexpected end of line**

A line in the steering file ended before the directive was complete.

**Es011: unexpected text after end of directive**

There is more text on the same line after the end of a steering file directive.

**Es012: expected text**

The specified text was not present in the steering file, but must be present for the directive to be correct.

**Es013: pattern can contain at most one \* or ?**

Each pattern in the current directive can contain at most one \* or one ? wildcard character.

**Es014: rename patterns have different wildcards**

Both patterns in the current directive must contain exactly the same kind of wildcard. That is, both must either contain:

- No wildcards
- Exactly one \*
- Exactly one ?

This error occurs if the patterns are not the same in this regard.

**Es015: ambiguous pattern match: *symbol* matches more than one rename pattern**

A symbol in the input file matches more than one `rename` pattern.

**Es016: the entry point symbol is already exported**

The option `--show_entry_as` was used with a name that already exists in the input file.

---

## The IAR ELF Relocatable Object Creator—iexe2obj

The IAR ELF Relocatable Object Creator, `iexe2obj`, creates a relocatable ELF object file from an executable ELF object file.

**INVOCATION SYNTAX**

The invocation syntax for `iexe2obj` is:

```
iexe2obj options inputfile outputfile
```

**Parameters**

The parameters are:

| Parameter            | Description                                                                                                                                                                                                  |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>options</code> | Command line options that define actions to be performed. These options can be placed anywhere on the command line. At least one option must be specified. See <i>Summary of iexe2obj options</i> , page 628 |

*Table 54: iexe2obj parameters*

| Parameter         | Description                                                                                      |
|-------------------|--------------------------------------------------------------------------------------------------|
| <i>inputfile</i>  | An executable ELF object file.                                                                   |
| <i>outputfile</i> | The name of the resulting relocatable ELF object file with all the requested operations applied. |

Table 54: *ixex2obj* parameters (Continued)

See also *Rules for specifying a filename or directory as parameters*, page 306.

## BUILDING THE INPUT FILE

The input file must be linked with the linker option `--no_entry`, using object files compiled with `--rwp_i`, `--rop_i`, and `--rop_i_cb`. See also `--rop_i_cb`, page 352.

A function symbol `FUNC`, that should have a wrapper, must be preserved by the linker when it builds the input file. You can achieve this either by using the keyword `__root` in the declaration of `FUNC` or by using the linker command line option `--keep FUNC`.

### Code and constant data

The input file can contain at most one *non-writable, executable* section that will be placed in the output file. To enable placing the executable section in execute-only memory, you must use the option `--no_literal_pool` both when compiling and when linking.

The input file can contain at most one *non-writable, non-executable* section that will be placed in the output file. The start address of the section will be used as a constants base address, `CB`.

### Writable data

The input file can contain at most one *writable, non-executable* section that will be placed in the output file. The start address of the section will be used as a static base address, `SB`.

The writable data section might need dynamic initialization, in which case `ixex2obj` will create a function (`__sti_routine`) that is called during dynamic initialization of the client application. For this to work, a label `__init` is needed (as defined in the library `rt7MQx_t1`), and the linker configuration file used for creating your input file must contain:

```
define block INIT with alignment=4, fixed order {
    section .init_start,
    section .init_a,
    section .init_b,
    section .init_end.
};
```

The linker might issue a warning (Lp005) for mixing sections with content and sections without content. If that warning concerns sections `.data` and `.bss`, it can be ignored.

## SUMMARY OF IEXE2OBJ OPTIONS

| Command line option              | Description                                                                                                                    |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <code>--hide_symbols</code>      | Hides all symbols from the input file                                                                                          |
| <code>--keep_mode_symbols</code> | Copies mode symbols from the input file to the output file                                                                     |
| <code>--prefix</code>            | Sets a prefix for symbol and section names                                                                                     |
| <code>--wrap</code>              | Generates wrapper functions for function symbols in <i>inputfile</i> that should be callable by clients of <i>outputfile</i> . |

Table 55: *ixex2obj* options summary

## Descriptions of options

This section gives detailed reference information about each command line option available for the different utilities.

### **-a**

Syntax

`-a`

For use with

`ielfdumparm`

Description

Use this option as a shortcut for `--all --no_strtab`.



This option is not available in the IDE.

### **--all**

Syntax

`--all`

For use with

`ielfdumparm`

Description

Use this option to include the contents of all ELF sections in the output, in addition to the general properties of the input file. Sections are output in index order, except that each relocation section is output immediately after the section it holds relocations for.

By default, no section contents are included in the output.



This option is not available in the IDE.

## --bin

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--bin[=<i>range</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Parameters   | See <i>Specifying ielftool address ranges</i> , page 615.                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| For use with | <code>ielftool</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Description  | Sets the format of the output file to raw binary, a binary format that includes only the raw bytes, with no address information. If no range is specified, the output file will include all the bytes from the lowest address for which there is content in the ELF file to the highest address for which there is content. If a range is specified, only bytes from that range are included. Note that in both cases, any gaps for which there is no content will be generated as zeros. |

**Note:** If a range with no content is specified, no output file is created.



To set related options, choose:

**Project>Options>Output converter**

## --bin-multi

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--bin-multi[=<i>range</i>[;<i>range</i>...]]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Parameters   | See <i>Specifying ielftool address ranges</i> , page 615.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| For use with | <code>ielftool</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Description  | Use this option to produce one or more raw binary output files. If no ranges are specified, a raw binary output file is generated for each range for which there is content in the ELF file. If ranges are specified, a raw binary output file is generated for each range specified for which there is content. In each case, the name of each output file will include the start address of its range. For example, if the output file is specified as <code>out.bin</code> and the ranges <code>0x0-0x1F</code> and <code>0x8000-0x8147</code> are output, there will be two files, named <code>out-0x0.bin</code> and <code>out-0x8000.bin</code> . |



This option is not available in the IDE.

## --checksum

### Syntax

```
--checksum {symbol[ {+|-}offset] | address}:size,  
algorithm[: [1|2] [a|m|z] [W|L|Q] [x] [r] [R] [o] [i|p] ]  
[, start];range[;range...]
```

### Parameters

|                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>symbol</i>    | The name of the symbol where the checksum value should be stored. Note that it must exist in the symbol table in the input ELF file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>offset</i>    | The offset will be added (or subtracted if a negative offset (-) is specified) to the symbol. Address expressions using + and - are supported in a limited fashion. For example:<br>(start+7)-(end-2).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <i>address</i>   | The absolute address where the checksum value should be stored.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <i>size</i>      | The number of bytes in the checksum—1, 2, or 4. The number cannot be larger than the size of the checksum symbol.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <i>algorithm</i> | The checksum algorithm used. Choose between:<br><br><i>sum</i> , a byte-wise calculated arithmetic sum. The result is truncated to 8 bits.<br><br><i>sum8wide</i> , a byte-wise calculated arithmetic sum. The result is truncated to the size of the symbol.<br><br><i>sum32</i> , a word-wise (32 bits) calculated arithmetic sum.<br><br><i>crc16</i> , CRC16 (generating polynomial 0x1021)—used by default.<br><br><i>crc32</i> , CRC32 (generating polynomial 0x04C11DB7).<br><br><i>crc64iso</i> , CRC64iso (generating polynomial 0x1B).<br><br><i>crc64ecma</i> , CRC64ECMA (generating polynomial 0x42F0E1EBA9EA3693).<br><br><i>crc=n</i> , CRC with a generating polynomial of <i>n</i> . |
| 1 2              | If specified, choose between:<br><br>1, specifies one's complement.<br><br>2, specifies two's complement.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

|       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| a m z | <p>Reverses the order of the bits for the checksum. Choose between:</p> <ul style="list-style-type: none"> <li>a, reverses the input bytes (but nothing else).</li> <li>m, reverses the input bytes and the final checksum.</li> <li>z, reverses the final checksum (but nothing else).</li> </ul> <p>Note that using a and z in combination has the same effect as m.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| w L Q | <p>Specifies the size of the unit for which a checksum should be calculated. Choose between:</p> <ul style="list-style-type: none"> <li>w, calculates a checksum on 16 bits in every iteration.</li> <li>L, calculates a checksum on 32 bits in every iteration.</li> <li>Q, calculates a checksum on 64 bits in every iteration.</li> </ul> <p>If you do not specify a unit size, 8 bits will be used by default.</p> <p>The input byte sequence will processed as:</p> <ul style="list-style-type: none"> <li>● 8-bit checksum unit size—byte0, byte1, byte2, byte3, etc.</li> <li>● 16-bit checksum unit size—byte1, byte0, byte3, byte2, etc.</li> <li>● 32-bit checksum unit size—byte3, byte2, byte1, byte0, byte7, byte6, byte5, byte4, etc.</li> <li>● 64-bit checksum unit size—byte7, byte6, byte5, byte4, byte3, byte2, byte1, byte0, byte15, byte14, etc.</li> </ul> <p><b>Note:</b> The checksum unit size only affects the order in which the input byte sequence is processed. It does not affect the size of the checksum symbol, the polynomial, the initial value, the width of the processor's address bus, etc.</p> <p>Most software CRC implementations use a checksum unit size of 1 byte (8 bits). The w, L, and Q parameters are almost exclusively used when a software CRC implementation has to match the checksum computed by the hardware CRC implementation. If you are not trying to cooperate with a hardware CRC implementation, the w, L, or Q parameter will simply compute a different checksum, because it processes the input byte sequence in a different order.</p> |
| x     | <p>Reverses the byte order of the checksum. This only affects the checksum value.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

|                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>r</code>     | Reverses the byte order of the input data. This has no effect unless the number of bits per iteration has been set using the <code>L</code> or <code>W</code> parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <code>R</code>     | Traverses the checksum range(s) in reverse order.<br><br>If the range is, for example, <code>0x100-0xFFFF;0x2000-0x2FFF</code> , the checksum calculation will normally start on <code>0x100</code> and then calculate every byte up to and including <code>0xFFFF</code> , followed by calculating the byte on <code>0x2000</code> and continue to <code>0x2FFF</code> .<br><br>Using the <code>R</code> parameter, the calculation instead starts on <code>0x2FFF</code> and continues by calculating every byte down to <code>0x2000</code> , then from <code>0xFFFF</code> down to and including <code>0x100</code> . |
| <code>o</code>     | Outputs the Rocksoft model specification for the checksum.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <code>i p</code>   | Use either <code>i</code> or <code>p</code> , if the <code>start</code> value is bigger than 0. Choose between:<br><br><code>i</code> , initializes the checksum value with the start value.<br><br><code>p</code> , prefixes the input data with a word of size <code>size</code> that contains the <code>start</code> value.                                                                                                                                                                                                                                                                                            |
| <code>start</code> | By default, the initial value of the checksum is 0. If necessary, use <code>start</code> to supply a different initial value. If not 0, then either <code>i</code> or <code>p</code> must be specified.                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <code>range</code> | <code>range</code> is one or more memory ranges for which the checksum will be calculated.<br><br>It is typically advisable to use symbols or blocks if the memory range can change. If you use explicit addresses, for example, <code>0x8000-0x8347</code> , and the code then changes, you need to update the end address to the new value. If you instead use <code>{CODE}</code> or a symbol located at the end of the code, you do not need to update the <code>--checksum</code> command.<br><br>See also <i>Specifying ielftool address ranges</i> , page 615.                                                     |

For use with

`ielftool`

Description

Use this option to calculate a checksum with the specified algorithm for the specified ranges. If you have an external definition for the checksum—for example, a hardware CRC implementation—use the appropriate parameters to the `--checksum` option to match the external design. In this case, learn more about that design in the hardware



documentation. The checksum will then replace the original value in *symbol*. A new absolute symbol will be generated, with the *symbol* name suffixed with *\_value* containing the calculated checksum. This symbol can be used for accessing the checksum value later when needed, for example, during debugging.

If the `--checksum` option is used more than once on the command line, the options are evaluated from left to right. If a checksum is calculated for a *symbol* that is specified in a later evaluated `--checksum` option, an error is issued.

### Example

This example shows how to use the `crc16` algorithm with the start value 0 over the address range `0x8000-0x8FFF`:

```
ielftool --checksum=__checksum:2,crc16;0x8000-0x8FFF
sourceFile.out destinationFile.out
```

The input data is read from `sourceFile.out`, and the resulting checksum value of size 2 bytes will be stored at the symbol `__checksum`. The modified ELF file is saved as `destinationFile.out` leaving `sourceFile.out` untouched.

In the next example, a symbol is used for specifying the start of the range:

```
ielftool --checksum=__checksum:2,crc16;__checksum_begin-0x8FFF
sourceFile.out destinationFile.out
```

If `BLOCK1` occupies `0x4000-0x4337` and `BLOCK2` occupies `0x8000-0x87FF`, this example will compute the checksum for the bytes on `0x4000` to `0x4337` and from `0x8000` to `0x87FF`:

```
ielftool --checksum __checksum:2,crc16;{BLOCK1};{BLOCK2}
BlxTest.out BlxTest2.out
```

### See also

*Checksum calculation for verifying image integrity*, page 229

*Specifying ielftool address ranges*, page 615



To set related options, choose:

**Project>Options>Linker>Checksum**

## --code

Syntax

```
--code
```

For use with

```
ielfdumparm
```

**Description** Use this option to dump all sections that contain executable code—sections with the ELF section attribute `SHF_EXECINSTR`.



This option is not available in the IDE.

## **--create**

**Syntax** `--create libraryfile objectfile1 ... objectfileN`

**Parameters**

*libraryfile* The library file that the command operates on.  
*objectfile1 ... objectfileN* The object file(s) to build the library from. The arguments can also be archive files, in which case each member in the archive file is processed as if specified separately.

See also *Rules for specifying a filename or directory as parameters*, page 306

**For use with** `iarchive`

**Description** Use this command to build a new library from a set of object files (modules) and/or archive files. The modules are added to the library in the order that they are specified on the command line.

If no command is specified on the command line, `--create` is used by default.



This option is not available in the IDE.

## **--delete, -d**

**Syntax** `--delete libraryfile objectfile1 ... objectfileN`  
`-d libraryfile objectfile1 ... objectfileN`

**Parameters**

*libraryfile* The library file that the command operates on.  
*objectfile1 ... objectfileN* The object file(s) that the command operates on.

See also *Rules for specifying a filename or directory as parameters*, page 306

**For use with** `iarchive`

**Description** Use this command to remove object files (modules) from an existing library. All object files that are specified on the command line will be removed from the library.



This option is not available in the IDE.

## --disasm\_data

**Syntax** `--disasm_data`

**For use with** `ielfdumparm`

**Description** Use this command to instruct the dumper to dump data sections as if they were code sections.



This option is not available in the IDE.

## --edit

**Syntax** `--edit steering_file`

**Parameters** See *Rules for specifying a filename or directory as parameters*, page 306

**For use with** `isymexport`

**Description** Use this option to specify a steering file for controlling which symbols are included in the `isymexport` output file, and if desired, also for renaming some of the symbols.

**See also** *Steering files*, page 622.



This option is not available in the IDE.

## --export\_locals

**Syntax** `--export_locals [=symbol_prefix]`

**Parameters** `symbol_prefix` A custom prefix to the names of exported symbols that replaces the default prefix `LOCAL`.

|              |                                                                                                                                                                                                                                                                                                  |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| For use with | <code>isymexport</code>                                                                                                                                                                                                                                                                          |
| Description  | Use this option to export local symbols from a ROM image file, in addition to absolute symbols. The default name of the exported symbol is <code>LOCAL_filename_symbolname</code> . Use the optional parameter <code>symbol_prefix</code> to replace <code>LOCAL</code> with your custom prefix. |
| Example      | When exported from the ROM image file, the symbol <code>symb</code> in the source file <code>myFile.c</code> becomes <code>LOCAL_myFile_c_symb</code> .                                                                                                                                          |



This option is not available in the IDE.

## **--extract, -x**

|        |                                                                                                                               |
|--------|-------------------------------------------------------------------------------------------------------------------------------|
| Syntax | <code>--extract libraryfile [objectfile1 ... objectfileN]</code><br><code>-x libraryfile [objectfile1 ... objectfileN]</code> |
|--------|-------------------------------------------------------------------------------------------------------------------------------|

|            |                                                                                                                                                                                      |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Parameters | <code>libraryfile</code> The library file that the command operates on.<br><code>objectfile1 ...</code> The object file(s) that the command operates on.<br><code>objectfileN</code> |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

See also *Rules for specifying a filename or directory as parameters*, page 306

|              |                                                                                                                                                                                                                                                 |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| For use with | <code>iarchive</code>                                                                                                                                                                                                                           |
| Description  | Use this command to extract object files (modules) from an existing library. If a list of object files is specified, only these files are extracted. If a list of object files is not specified, all object files in the library are extracted. |



This option is not available in the IDE.

## **-f**

|              |                                                                                                           |
|--------------|-----------------------------------------------------------------------------------------------------------|
| Syntax       | <code>-f filename</code>                                                                                  |
| Parameters   | See <i>Rules for specifying a filename or directory as parameters</i> , page 306                          |
| For use with | <code>iarchive</code> , <code>ielfdumparm</code> , <code>iobjmanip</code> , and <code>isymexport</code> . |

**Description** Use this option to make the tool read command line options from the named file, with the default filename extension `.xcl`.

In the command file, you format the items exactly as if they were on the command line itself, except that you can use multiple lines, because the newline character acts just as a space or tab character.

Both C and C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.



This option is not available in the IDE.

## **--f**

**Syntax** `--f filename`

**Parameters** See *Rules for specifying a filename or directory as parameters*, page 306

**For use with** `iarchive`, `ielfdumparm`, `iobjmanip`, and `isymexport`.

**Description** Use this option to make the tool read command line options from the named file, with the default filename extension `.xcl`.

In the command file, you format the items exactly as if they were on the command line itself, except that you may use multiple lines, because the newline character acts just as a space or tab character.

Both C and C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.

If you also specify `--dependencies` on the command line for the tool, extended command line files specified using `--f` will generate a dependency, but those specified using `-f` will not generate a dependency.

**See also** `-f`, page 636.



This option is not available in the IDE.

## **--fake\_time**

**Syntax** `--fake_time`

**For use with** `iarchive`

**Description** Use this option to generate library files with identical timestamps. The value used is 0x5CF00000, which corresponds to approximately 30th May 2019 at 18:08:32 (the exact time will vary depending on the time settings). This option enables you to generate identical libraries for identical object files. Without this option, the timestamp will generate unique library files from the same input files.



This option is not available in the IDE.

## --fill

**Syntax** `--fill [v;]pattern;range[;range...]`

### Parameters

**v** Generates virtual fill for the fill command. Virtual fill is filler bytes that are included in checksumming, but that are not included in the output file. The primary use for this is certain types of hardware where bytes that are not specified by the image have a known value—typically, 0xFF or 0x0.

**pattern** A hexadecimal string with the 0x prefix, for example, 0xEF, interpreted as a sequence of bytes, where each pair of digits corresponds to one byte, for example 0x123456, for the sequence of bytes 0x12, 0x34, and 0x56. This sequence is repeated over the fill area. If the length of the fill pattern is greater than 1 byte, it is repeated as if it started at address 0.

**range** Specifies the address range for the fill.

See also *Specifying ielftool address ranges*, page 615.

**For use with** `ielftool`

**Description** Use this option to fill all gaps in one or more ranges with a pattern, which can be either an expression or a hexadecimal string. The contents will be calculated as if the fill pattern was repeatedly filled from the start address until the end address is passed, and then the real contents will overwrite that pattern.

You might want to take alignment into consideration. If you generate fill that will be accessed by half-word or word accesses, you should ensure that the addresses in the filler range are half-word or word aligned.

If the `--fill` option is used more than once on the command line, the fill ranges cannot overlap each other.



To set related options, choose:

**Project>Options>Linker>Checksum**

## --front\_headers

|              |                                                                                                                |
|--------------|----------------------------------------------------------------------------------------------------------------|
| Syntax       | --front_headers                                                                                                |
| For use with | ielftool                                                                                                       |
| Description  | Use this option to output ELF program and section headers in the beginning of the file, instead of at the end. |



This option is not available in the IDE.

## --generate\_vfe\_header

|              |                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | --generate_vfe_header                                                                                                                                                                                                                                                                                                                                                                                |
| For use with | isymexport                                                                                                                                                                                                                                                                                                                                                                                           |
| Description  | Use this option to declare that the image does not contain any virtual function calls to potentially discarded functions.<br><br>When the linker performs virtual function elimination, it discards virtual functions that appear not to be needed. For the optimization to be applied correctly, there must be no virtual function calls in the image that affect the functions that are discarded. |
| See also     | <i>Virtual function elimination</i> , page 129.                                                                                                                                                                                                                                                                                                                                                      |



To set this options, use:

**Project>Options>Linker>Extra Options**

## --hide\_symbols

|              |                                                          |
|--------------|----------------------------------------------------------|
| Syntax       | --hide_symbols                                           |
| For use with | ixex2obj                                                 |
| Description  | Use this option to hide all symbols from the input file. |



This option is not available in the IDE.

## --ihex

|              |                                                                                                                                                                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--ihex</code>                                                                                                                                                                                                                                                                |
| For use with | <code>ielftool</code>                                                                                                                                                                                                                                                              |
| Description  | Sets the format of the output file to 32-bit linear Intel Extended hex, a hexadecimal text format defined by Intel.<br><br><b>Note:</b> Intel Extended cannot express addresses larger than $2^{32}-1$ . If your application contains such addresses, you must use another format. |



To set related options, choose:

**Project>Options>Linker>Output converter**

## --ihex-len

|              |                                                                                                                                                                                                             |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--ihex-len=length</code>                                                                                                                                                                              |
| Parameters   | <i>length</i> The number of data bytes in the record.                                                                                                                                                       |
| For use with | <code>ielftool</code>                                                                                                                                                                                       |
| Description  | Sets the maximum number of data bytes in an Intel Hex record. This option can only be used together with the <code>--ihex</code> option. By default, the number of data bytes in an Intel Hex record is 16. |



This option is not available in the IDE.

## --keep\_mode\_symbols

|              |                                  |
|--------------|----------------------------------|
| Syntax       | <code>--keep_mode_symbols</code> |
| For use with | <code>iexe2obj</code>            |



**Description** Use this option to copy mode symbols from the input file to the output file. This is used, for example, by the disassembler.



This option is not available in the IDE.

## **--no\_bom**

**Syntax** `--no_bom`

**For use with** `iarchive`, `ielfdumparm`, `iobjmanip`, and `isymexport`

**Description** Use this option to omit the Byte Order Mark (BOM) when generating a UTF-8 output file.

**See also** `--text_out`, page 654 and *Text encodings*, page 300



This option is not available in the IDE.

## **--no\_header**

**Syntax** `--no_header`

**For use with** `ielfdumparm`

**Description** By default, a standard list header is added before the actual file content. Use this option to suppress output of the list header.



This option is not available in the IDE.

## **--no\_rel\_section**

**Syntax** `--no_rel_section`

**For use with** `ielfdumparm`

**Description** By default, whenever the content of a section of a relocatable file is generated as output, the associated section, if any, is also included in the output. Use this option to suppress output of the relocation section.



This option is not available in the IDE.

## **--no\_strtab**

|              |                                                                                                           |
|--------------|-----------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--no_strtab</code>                                                                                  |
| For use with | <code>ielfdumparm</code>                                                                                  |
| Description  | Use this option to suppress dumping of string table sections (sections of type <code>SHT_STRTAB</code> ). |



This option is not available in the IDE.

## **--no\_utf8\_in**


|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--no_utf8_in</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| For use with | <code>ielfdumparm</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Description  | <p>The dumper can normally determine whether ELF files produced by IAR tools use the UTF-8 text encoding or not, and produce the correct output. For ELF files produced by non-IAR tools, the dumper will assume UTF-8 encoding unless this option is used, in which case the encoding is assumed to be according to the current system default locale.</p> <p><b>Note:</b> This only makes a difference if any characters beyond 7-bit ASCII are used in paths, symbols, etc.</p> |
| See also     | <i>Text encodings</i> , page 300                                                                                                                                                                                                                                                                                                                                                                                                                                                   |




This option is not available in the IDE.

## **--offset**

|            |                                                                                                                                                          |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax     | <code>--offset [-]offset</code>                                                                                                                          |
| Parameters | <p><code>offset</code></p> <p>The offset will be added (or subtracted if <code>-</code> is specified) to all addresses in the generated output file.</p> |

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| For use with | <code>ielftool</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Description  | Use this option to add or subtract an offset to the address of each output record in the generated output file. The option only works on Motorola S-records, Intel Hex, TI-Txt, and Simple-Code. The option has no effect when generating an ELF file or when binary files ( <code>--bin</code> contain no address information) are generated. No content, including the entry point, will be changed by using this option, only the addresses in the output format. |
| Example      | <pre>--offset 0x30000</pre> <p>This will add an offset of <code>0x30000</code> to all addresses. As a result, content that was linked at address <code>0x4000</code> will be placed at <code>0x34000</code>.</p> <p> This option is not available in the IDE.</p>                                                                                                                   |

## --output, -o

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <pre>-o {filename directory} --output {filename directory}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Parameters   | See <i>Rules for specifying a filename or directory as parameters</i> , page 306                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| For use with | <code>iarchive</code> and <code>ielfdumparm</code> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Description  | <p><code>iarchive</code></p> <p>By default, <code>iarchive</code> assumes that the first argument after the <code>iarchive</code> command is the name of the destination library. Use this option to explicitly specify a different filename for the library.</p> <p><code>ielfdumparm</code></p> <p>By default, output from the dumper is directed to the console. Use this option to direct the output to a file instead. The default name of the output file is the name of the input file with an added <code>id</code> filename extension</p> <p>You can also specify the output file by specifying a file or directory following the name of the input file.</p> <p> This option is not available in the IDE.</p> |

## --parity

|              |                                                                                                                                                                                        |                                                                                                                                                                                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--parity{symbol[+offset]   address} : size, algo: flashbase[: flags]; range[: range...]</code>                                                                                   |                                                                                                                                                                                                                                                                          |
| Parameters   | <i>symbol</i>                                                                                                                                                                          | The name of the symbol where the parity bytes should be stored. Note that it must exist in the symbol table in the input ELF file.                                                                                                                                       |
|              | <i>offset</i>                                                                                                                                                                          | An offset to the symbol. By default, 0.                                                                                                                                                                                                                                  |
|              | <i>address</i>                                                                                                                                                                         | The absolute address where the parity bytes should be stored.                                                                                                                                                                                                            |
|              | <i>size</i>                                                                                                                                                                            | The maximum number of bytes that the parity generation can use. An error will be issued if this value is exceeded. Note that the size must fit in the specified symbol in the ELF file.                                                                                  |
|              | <i>algo</i>                                                                                                                                                                            | Choose between:<br>odd, uses odd parity.<br>even, uses even parity.                                                                                                                                                                                                      |
|              | <i>flashbase</i>                                                                                                                                                                       | The start address of the flash memory. Parity bits will not be generated for the addresses between <i>flashbase</i> and the start address of the range. If <i>flashbase</i> and the start address of the range coincide, parity bits will be generated for all addresses |
|              | <i>flags</i>                                                                                                                                                                           | Choose between:<br>r, reverses the byte order within each word.<br>L, processes 4 bytes at a time.<br>W, processes 2 bytes at a time.<br>B, processes 1 byte at a time.                                                                                                  |
|              | <i>range</i>                                                                                                                                                                           | The address range over which the parity bytes should be generated.<br><br>See also <i>Specifying ielftool address ranges</i> , page 615.                                                                                                                                 |
| For use with | <code>ielftool</code>                                                                                                                                                                  |                                                                                                                                                                                                                                                                          |
| Description  | Use this option to generate parity bytes over specified ranges. The range is traversed left to the right and the parity bits are generated using the odd or even algorithm. The parity |                                                                                                                                                                                                                                                                          |

bits are finally stored in the specified symbol where they can be accessed by your application.



This option is not available in the IDE.

## --prefix

|              |                                                                                                                                                                                                         |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--prefix <i>prefix</i></code>                                                                                                                                                                     |
| Parameters   | <i>prefix</i> A prefix for symbol and section names                                                                                                                                                     |
| For use with | <code>iexe2obj</code>                                                                                                                                                                                   |
| Description  | By default, the base name of the output file is used as a prefix for symbol and section names that are defined in wrappers. Use this option to set a custom prefix for these symbols and section names. |
| See also     | <code>--wrap</code> , page 659                                                                                                                                                                          |



This option is not available in the IDE.

## --ram\_reserve\_ranges

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--ram_reserve_ranges [=<i>symbol_prefix</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                              |
| Parameters   | <i>symbol_prefix</i> The prefix of symbols created by this option.                                                                                                                                                                                                                                                                                                                                                                                     |
| For use with | <code>isymexport</code>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Description  | Use this option to generate symbols for the areas in RAM that the image uses. One symbol will be generated for each such area. The name of each symbol is based on the name of the area and is prefixed by the optional parameter <i>symbol_prefix</i> .<br><br>Generating symbols that cover an area in this way prevents the linker from placing other content at the affected addresses. This can be useful when linking against an existing image. |

If `--ram_reserve_ranges` is used together with `--reserve_ranges`, the RAM areas will get their prefix from the `--ram_reserve_ranges` option and the non-RAM areas will get their prefix from the `--reserve_ranges` option.

See also

`--reserve_ranges`, page 649.



This option is not available in the IDE.

## **--range**

Syntax

`--range start-end`

Parameters

*start-end*

Disassemble code where the start address is greater than or equal to *start*, and where the end address is less than *end*.

For use with

`ielfdumparm`

Description

Use this option to specify a range for which code from an executable will be dumped.



This option is not available in the IDE.

## **--raw**

Syntax

`--raw`

For use with

`ielfdumparm`

Description

By default, many ELF sections will be dumped using a text format specific to a particular kind of section. Use this option to dump each selected ELF section using the generic text format.

The generic text format dumps each byte in the section in hexadecimal format, and where appropriate, as ASCII text.

**Note:** Raw-binary does not have any problems with 64-bit addresses.



This option is not available in the IDE.

## --remove\_file\_path

|              |                                                                                                                                                                                                                                 |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--remove_file_path</code>                                                                                                                                                                                                 |
| For use with | <code>iobjmanip</code>                                                                                                                                                                                                          |
| Description  | Use this option to make <code>iobjmanip</code> remove information about the directory structure of the project source tree from the generated object file, which means that the file symbol in the ELF object file is modified. |

This option must be used in combination with `--remove_section ".comment"`.



This option is not available in the IDE.

## --remove\_section


|                |                                                                                                                                                                                                                                                                                                                                            |                |                                                                                               |               |                                                                                                                                       |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-----------------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Syntax         | <code>--remove_section {section number}</code>                                                                                                                                                                                                                                                                                             |                |                                                                                               |               |                                                                                                                                       |
| Parameters     | <table> <tr> <td><i>section</i></td> <td>The section—or sections, if there are more than one section with the same name—to be removed.</td> </tr> <tr> <td><i>number</i></td> <td>The number of the section to be removed. Section numbers can be obtained from an object dump created using <code>ielfdumparm</code>.</td> </tr> </table> | <i>section</i> | The section—or sections, if there are more than one section with the same name—to be removed. | <i>number</i> | The number of the section to be removed. Section numbers can be obtained from an object dump created using <code>ielfdumparm</code> . |
| <i>section</i> | The section—or sections, if there are more than one section with the same name—to be removed.                                                                                                                                                                                                                                              |                |                                                                                               |               |                                                                                                                                       |
| <i>number</i>  | The number of the section to be removed. Section numbers can be obtained from an object dump created using <code>ielfdumparm</code> .                                                                                                                                                                                                      |                |                                                                                               |               |                                                                                                                                       |
| For use with   | <code>iobjmanip</code>                                                                                                                                                                                                                                                                                                                     |                |                                                                                               |               |                                                                                                                                       |
| Description    | Use this option to make <code>iobjmanip</code> omit the specified section when generating the output file.                                                                                                                                                                                                                                 |                |                                                                                               |               |                                                                                                                                       |




This option is not available in the IDE.

## --rename\_section

|                |                                                                                                                                                            |                |                                                                                               |
|----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|-----------------------------------------------------------------------------------------------|
| Syntax         | <code>--rename_section {oldname oldnumber}=newname</code>                                                                                                  |                |                                                                                               |
| Parameters     | <table> <tr> <td><i>oldname</i></td> <td>The section—or sections, if there are more than one section with the same name—to be renamed.</td> </tr> </table> | <i>oldname</i> | The section—or sections, if there are more than one section with the same name—to be renamed. |
| <i>oldname</i> | The section—or sections, if there are more than one section with the same name—to be renamed.                                                              |                |                                                                                               |

|              |                                                                                   |                                                                                                                                       |
|--------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
|              | <i>oldnumber</i>                                                                  | The number of the section to be renamed. Section numbers can be obtained from an object dump created using <code>ielfdumparm</code> . |
|              | <i>newname</i>                                                                    | The new name of the section.                                                                                                          |
| For use with | <code>iobjmanip</code>                                                            |                                                                                                                                       |
| Description  |                                                                                   | Use this option to make <code>iobjmanip</code> rename the specified section when generating the output file.                          |
|              |  | This option is not available in the IDE.                                                                                              |

## **--rename\_symbol**

|              |                                                                                     |                                                                                                             |
|--------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--rename_symbol oldname =newname</code>                                       |                                                                                                             |
| Parameters   | <i>oldname</i>                                                                      | The symbol to be renamed.                                                                                   |
|              | <i>newname</i>                                                                      | The new name of the symbol.                                                                                 |
| For use with | <code>iobjmanip</code>                                                              |                                                                                                             |
| Description  |                                                                                     | Use this option to make <code>iobjmanip</code> rename the specified symbol when generating the output file. |
|              |  | This option is not available in the IDE.                                                                    |

## **--replace, -r**

|            |                                                                                                                           |                                                                                                                                                                                  |
|------------|---------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax     | <code>--replace libraryfile objectfile1 ... objectfileN</code><br><code>-r libraryfile objectfile1 ... objectfileN</code> |                                                                                                                                                                                  |
| Parameters | <i>libraryfile</i>                                                                                                        | The library file that the command operates on.                                                                                                                                   |
|            | <i>objectfile1 ... objectfileN</i>                                                                                        | The object file(s) that the command operates on. The arguments can also be archive files, in which case each member in the archive file is processed as if specified separately. |

See also *Rules for specifying a filename or directory as parameters*, page 306



|              |                                                                                                                                                                                                                                                            |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| For use with | <code>iarchive</code>                                                                                                                                                                                                                                      |
| Description  | Use this command to replace or add object files (modules) and/or archive files to an existing library. The modules specified on the command line either replace existing modules in the library—if they have the same name—or are appended to the library. |



This option is not available in the IDE.

## **--reserve\_ranges**

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--reserve_ranges[=<i>symbol_prefix</i>]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Parameters   | <i>symbol_prefix</i> The prefix of symbols created by this option.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| For use with | <code>isymexport</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Description  | <p>Use this option to generate symbols for the areas in ROM and RAM that the image uses. One symbol will be generated for each such area. The name of each symbol is based on the name of the area and is prefixed by the optional parameter <i>symbol_prefix</i>.</p> <p>Generating symbols that cover an area in this way prevents the linker from placing other content at the affected addresses. This can be useful when linking against an existing image.</p> <p>If <code>--reserve_ranges</code> is used together with <code>--ram_reserve_ranges</code>, the RAM areas will get their prefix from the <code>--ram_reserve_ranges</code> option and the non-RAM areas will get their prefix from the <code>--reserve_ranges</code> option.</p> |
| See also     | <code>--ram_reserve_ranges</code> , page 645.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |



This option is not available in the IDE.

## **--section, -s**

|            |                                                                                                                                            |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax     | <code>--section <i>section_number</i> <i>section_name</i>[,...]</code><br><code>--s <i>section_number</i> <i>section_name</i>[,...]</code> |
| Parameters | <i>section_number</i> The number of the section to be dumped.                                                                              |

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                       |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------|
|              | <i>section_name</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | The name of the section to be dumped. |
| For use with | ielfdumparm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                       |
| Description  | <p>Use this option to dump the contents of a section with the specified number, or any section with the specified name. If a relocation section is associated with a selected section, its contents are output as well.</p> <p>If you use this option, the general properties of the input file will not be included in the output.</p> <p>You can specify multiple section numbers or names by separating them with commas, or by using this option more than once.</p> <p>By default, no section contents are included in the output.</p> |                                       |
| Example      | <pre>-s 3,17                /* Sections #3 and #17 -s .debug_frame,42    /* Any sections named .debug_frame and                     also section #42 */</pre>                                                                                                                                                                                                                                                                                                                                                                               |                                       |



This option is not available in the IDE.

## **--segment, -g**

|              |                                                                                                                                           |                                                                        |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| Syntax       | <pre>--segment <i>segment_number</i>[,...] -g <i>segment_number</i>[,...]</pre>                                                           |                                                                        |
| Parameters   | <i>segment_number</i>                                                                                                                     | The number of a segment whose contents will be included in the output. |
| For use with | ielfdumparm                                                                                                                               |                                                                        |
| Description  | <p>Use this option to select specific segments—parts of an executable image indicated by program headers—for inclusion in the output.</p> |                                                                        |



This option is not available in the IDE.

**--self\_reloc**

|              |                                                                                    |
|--------------|------------------------------------------------------------------------------------|
| Syntax       | <code>--self_reloc</code>                                                          |
| For use with | <code>ielftool</code>                                                              |
| Description  | This option is intentionally not documented as it is not intended for general use. |



This option is not available in the IDE.

**--show\_entry\_as**

|              |                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--show_entry_as name</code>                                                                        |
| Parameters   | <i>name</i> The name to give to the program entry point in the output file.                              |
| For use with | <code>isymexport</code>                                                                                  |
| Description  | Use this option to export the entry point of the application given as input under the name <i>name</i> . |



This option is not available in the IDE.

**--silent**

|              |                                                                                                                                                                                                                                                                                                                                     |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--silent</code>                                                                                                                                                                                                                                                                                                               |
| For use with | <code>ielftool</code>                                                                                                                                                                                                                                                                                                               |
| Description  | Causes the tool to operate without sending any messages to the standard output stream. By default, the tool sends various messages via the standard output stream. You can use this option to prevent this. The tool sends error and warning messages to the error output stream, so they are displayed regardless of this setting. |



This option is not available in the IDE.

## --simple

|              |                                                                                                       |
|--------------|-------------------------------------------------------------------------------------------------------|
| Syntax       | --simple                                                                                              |
| For use with | ielftool                                                                                              |
| Description  | Sets the format of the output file to Simple-code, a binary format that includes address information. |

**Note:** Simple-code can express addresses larger than  $2^{32}-1$ . If your application contains such addresses, a Simple-code file with a higher version number will be generated. Such files can only be read by Simple-code readers that can handle this higher version.



To set related options, choose:

**Project>Options>Output converter**

## --simple-ne

|              |                                                                                      |
|--------------|--------------------------------------------------------------------------------------|
| Syntax       | --simple-ne                                                                          |
| For use with | ielftool                                                                             |
| Description  | Sets the format of the output file to Simple code, but no entry record is generated. |



To set related options, choose:

**Project>Options>Output converter**

## --source

|              |                                                                                                                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | --source                                                                                                                                                                                                                                                                                                            |
| For use with | ielfdumparm                                                                                                                                                                                                                                                                                                         |
| Description  | Use this option to make <code>ielftool</code> include source for each statement before the code for that statement, when dumping code from an executable file. To make this work, the executable image must be built with debug information, and the source code must still be accessible in its original location. |



This option is not available in the IDE.

**--srec**

|              |                                                                                                                                                                                                                                                          |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--srec</code>                                                                                                                                                                                                                                      |
| For use with | <code>ielftool</code>                                                                                                                                                                                                                                    |
| Description  | Sets the format of the output file to Motorola S-records, a hexadecimal text format defined by Motorola. Note that you can use the <code>ielftool</code> options <code>--srec-len</code> and <code>--srec-s3only</code> to modify the exact format used. |

**Note:** Motorola S-records cannot express addresses larger than  $2^{32}-1$ . If your application contains such addresses, you must use another format.



To set related options, choose:

**Project>Options>Output converter**

**--srec-len**

|              |                                                                                                                                                                                             |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--srec-len=length</code>                                                                                                                                                              |
| Parameters   | <code>length</code> The number of data bytes in each S-record.                                                                                                                              |
| For use with | <code>ielftool</code>                                                                                                                                                                       |
| Description  | Sets the maximum number of data bytes in an S-record. This option can only be used together with the <code>--srec</code> option. By default, the number of data bytes in an S-record is 16. |



This option is not available in the IDE.

**--srec-s3only**

|              |                                                                                                                                                                               |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--srec-s3only</code>                                                                                                                                                    |
| For use with | <code>ielftool</code>                                                                                                                                                         |
| Description  | Restricts the S-record output to contain only a subset of records, that is S0, S3 and S7 records. This option can be used in combination with the <code>--srec</code> option. |



This option is not available in the IDE.

## --strip

|              |                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--strip</code>                                                                                                                                                                                                                                                                                                                                                                                                                               |
| For use with | <code>iobjmanip</code> and <code>ielftool</code> .                                                                                                                                                                                                                                                                                                                                                                                                 |
| Description  | Use this option to remove all sections containing debug information before the output file is written. <code>iobjmanip</code> will also remove the names of all module-local function, variable, and section symbols.<br><br><b>Note:</b> <code>ielftool</code> needs an unstripped input ELF image. If you use the <code>--strip</code> option in the linker, remove it and use the <code>--strip</code> option in <code>ielftool</code> instead. |



To set related options, choose:

**Project>Options>Linker>Output>Include debug information in output**

## --symbols

|              |                                                                                                                                                                                                                                                                                                                                                               |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--symbols libraryfile</code>                                                                                                                                                                                                                                                                                                                            |
| Parameters   | <code>libraryfile</code> The library file that the command operates on.<br><br>See also <i>Rules for specifying a filename or directory as parameters</i> , page 306                                                                                                                                                                                          |
| For use with | <code>iarchive</code>                                                                                                                                                                                                                                                                                                                                         |
| Description  | Use this command to list all external symbols that are defined by any object file (module) in the specified library, together with the name of the object file (module) that defines it.<br><br>In silent mode ( <code>--silent</code> ), this command performs symbol table-related syntax checks on the library file and displays only errors and warnings. |



This option is not available in the IDE.

## --text\_out

|            |                                                      |
|------------|------------------------------------------------------|
| Syntax     | <code>--text_out{utf8 utf16le utf16be locale}</code> |
| Parameters | <code>utf8</code> Uses the UTF-8 encoding            |

|              |                                                                                                                                                                                                                                                                                                                                                                            |                                        |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|
|              | <code>utf16le</code>                                                                                                                                                                                                                                                                                                                                                       | Uses the UTF-16 little-endian encoding |
|              | <code>utf16be</code>                                                                                                                                                                                                                                                                                                                                                       | Uses the UTF-16 big-endian encoding    |
|              | <code>locale</code>                                                                                                                                                                                                                                                                                                                                                        | Uses the system locale encoding        |
| For use with | <code>iarchive</code> , <code>ielfdumparm</code> , <code>iobjmanip</code> , and <code>isymexport</code>                                                                                                                                                                                                                                                                    |                                        |
| Description  | Use this option to specify the encoding to be used when generating a text output file. The default for the list files is to use the same encoding as the main source file. The default for all other text files is UTF-8 with a Byte Order Mark (BOM).<br><br>If you want text output in UTF-8 encoding without BOM, you can use the option <code>--no_bom</code> as well. |                                        |
| See also     | <code>--no_bom</code> , page 641 and <i>Text encodings</i> , page 300                                                                                                                                                                                                                                                                                                      |                                        |



This option is not available in the IDE.

## --titxt

|              |                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--titxt</code>                                                                                                                                                                                                |
| For use with | <code>ielftool</code>                                                                                                                                                                                               |
| Description  | Sets the format of the output file to Texas Instruments TI-TXT, a hexadecimal text format defined by Texas Instruments.<br><br><b>Note:</b> Texas Instruments TI-TXT can express addresses larger than $2^{32}-1$ . |




To set related options, choose:

**Project>Options>Output converter**


## --toc, -t

|            |                                                                         |
|------------|-------------------------------------------------------------------------|
| Syntax     | <code>--toc libraryfile</code><br><code>-t libraryfile</code>           |
| Parameters | <code>libraryfile</code> The library file that the command operates on. |

See also *Rules for specifying a filename or directory as parameters*, page 306

|              |                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| For use with | <code>iarchive</code>                                                                                                                                                                                                                                                                                                                                                                  |
| Description  | <p>Use this command to list the names of all object files (modules) in a specified library.</p> <p>In silent mode (<code>--silent</code>), this command performs basic syntax checks on the library file, and displays only errors and warnings.</p> <p> This option is not available in the IDE.</p> |

## **--update\_symbol**

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|---------------------------------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------------------------------------------------------------------------------------------|--------------|------------------------------------------|
| Syntax            | <code>--update_symbol symbol, {hexstring  (filename) } [, force]</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
| Parameters        | <table border="0"> <tr> <td style="vertical-align: top;"><i>symbol</i></td> <td>A symbol whose content you want to replace.</td> </tr> <tr> <td style="vertical-align: top;"><i>hexstring</i></td> <td>A hexadecimal string with the <code>0x</code> prefix, for example, <code>0xEF</code>, interpreted as a sequence of bytes where each pair of digits corresponds to one byte. <code>0x123456</code>, for example, is interpreted as the sequence of bytes <code>0x12</code>, <code>0x34</code>, and <code>0x56</code>. The specified bytes become the new content for the symbol.</td> </tr> <tr> <td style="vertical-align: top;"><i>(filename)</i></td> <td>A file containing the new content for the symbol. All bytes in the file are inserted as they are in the ELF file.</td> </tr> <tr> <td style="vertical-align: top;"><i>force</i></td> <td>Forces the update if there are warnings.</td> </tr> </table> | <i>symbol</i> | A symbol whose content you want to replace. | <i>hexstring</i> | A hexadecimal string with the <code>0x</code> prefix, for example, <code>0xEF</code> , interpreted as a sequence of bytes where each pair of digits corresponds to one byte. <code>0x123456</code> , for example, is interpreted as the sequence of bytes <code>0x12</code> , <code>0x34</code> , and <code>0x56</code> . The specified bytes become the new content for the symbol. | <i>(filename)</i> | A file containing the new content for the symbol. All bytes in the file are inserted as they are in the ELF file. | <i>force</i> | Forces the update if there are warnings. |
| <i>symbol</i>     | A symbol whose content you want to replace.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
| <i>hexstring</i>  | A hexadecimal string with the <code>0x</code> prefix, for example, <code>0xEF</code> , interpreted as a sequence of bytes where each pair of digits corresponds to one byte. <code>0x123456</code> , for example, is interpreted as the sequence of bytes <code>0x12</code> , <code>0x34</code> , and <code>0x56</code> . The specified bytes become the new content for the symbol.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
| <i>(filename)</i> | A file containing the new content for the symbol. All bytes in the file are inserted as they are in the ELF file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
| <i>force</i>      | Forces the update if there are warnings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
| For use with      | <code>ielftool</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |
| Description       | <p>This option replaces the ELF file content for the specified symbol. <code>ielftool</code> checks that the number of new content bytes (specified by a hexadecimal string, or read from a file) matches the current size of the symbol in the ELF file. If the sizes do not match, the operation is aborted.</p> <p>Use the <code>force</code> parameter to make <code>ielftool</code> perform the operation even if the sizes do not match—some ELF symbols do not have sizes (typically assembler-generated, or generated by a toolchain that does not set symbol sizes in general). If you force the operation, you must be careful so you do not accidentally use the file you are updating as input, because that will corrupt it.</p> <p> This option is not available in the IDE.</p>                                        |               |                                             |                  |                                                                                                                                                                                                                                                                                                                                                                                      |                   |                                                                                                                   |              |                                          |



## --update\_typeless\_globals

Syntax `--update_typeless_globals[=codeSectionName,dataSectionName]`

### Parameters

*codeSectionName* The name of the code section.

*dataSectionName* The name of the data section.

For use with `iobjmanip`

### Description

Use this option to update the type of relevant global symbols in an object file.

A global symbol that does not have an ELF type (ELF attribute `STT_NOTYPE`) will have its type set to Code (`STT_FUNC`) or Data (`STT_OBJECT`). When no parameters are specified, the attributes of the section that contains the symbol are used to determine if this is a Code or a Data symbol.

If the optional section names are used, then the symbols in sections that match the *dataSectionName* will be treated as Data. Similarly, the symbols in sections that match the *codeSectionName* will be treated as Code. If a section does not match either the *dataSectionName* or the *codeSectionName*, then a warning will be generated and any symbols in that section will not be updated.



This option is not available in the IDE.

## --use\_full\_std\_template\_names

Syntax `--use_full_std_template_names`

For use with `ielfdumparm`

### Description

Normally, the names of some standard C++ templates are used in the output in an abbreviated form in the demangled names of symbols, for example, "`std::string`" instead of "`std::basic_string<char, std::char_traits<char>, std::allocator<char>>`". Use this option to make `ielfdump` use the unabbreviated form.



This option is not available in the IDE.

## **--utf8\_text\_in**

|              |                                                                                                                                                                                                     |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--utf8_text_in</code>                                                                                                                                                                         |
| For use with | <code>iarchive</code> , <code>ielfdumparm</code> , <code>iobjmanip</code> , and <code>isymexport</code>                                                                                             |
| Description  | Use this option to specify that the tool shall use the UTF-8 encoding when reading a text input file with no Byte Order Mark (BOM).<br><br><b>Note:</b> This option does not apply to source files. |
| See also     | <i>Text encodings</i> , page 300                                                                                                                                                                    |



This option is not available in the IDE.

## **--verbose, -V**

|              |                                                                                                                  |
|--------------|------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--verbose</code><br><code>-V</code> ( <code>iarchive</code> only)                                          |
| For use with | <code>iarchive</code> and <code>ielftool</code> .                                                                |
| Description  | Use this option to make the tool report which operations it performs, in addition to giving diagnostic messages. |



This option is not available in the IDE because this setting is always enabled.

## **--version**

|              |                                                                                                                             |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| Syntax       | <code>--version</code>                                                                                                      |
| For use with | <code>iarchive</code> , <code>ielfdumparm</code> , <code>ielftool</code> , <code>iobjmanip</code> , <code>isymexport</code> |
| Description  | Use this option to make the tool send version information to the console and then exit.                                     |



This option is not available in the IDE.

**--vtoc**

Syntax `--vtoc libraryfile`

## Parameters

*libraryfile*      The library file that the command operates on.

See also *Rules for specifying a filename or directory as parameters*, page 306

## For use with

`iarchive`

## Description

Use this command to list the names, sizes, and modification times of all object files (modules) in a specified library.

In silent mode (`--silent`), this command performs basic syntax checks on the library file, and displays only errors and warnings.



This option is not available in the IDE.

**--wrap**

Syntax `--wrap symbol`

## Parameters

*symbol*      A function symbol that should be callable by clients of the output file of `iexe2obj`.

## For use with

`iexe2obj`

## Description

Use this option to generate a wrapper function for function symbols.



This option is not available in the IDE.



# Implementation-defined behavior for Standard C++

- Descriptions of implementation-defined behavior for C++
- Implementation quantities

If you are using C instead of C++, see *Implementation-defined behavior for Standard C*, page 699 or *Implementation-defined behavior for C89*, page 719, respectively.

---

## Descriptions of implementation-defined behavior for C++

This section follows the same order as the C++ 17 standard. Each item specifies (in parenthesis) whether it is related to the compiler (including the linker, etc) or to one or both libraries. Each heading starts with a reference to the ISO chapter and section that explains the implementation-defined behavior. A corresponding reference to the C++14 standard is also given for each item, if one exists.

**Note:** The IAR implementation adheres to a freestanding implementation of Standard C++. This means that parts of a standard library can be excluded from the implementation. The compiler adheres to the C++17 standard, with some additional features from later C++ standards.

### LIST OF TOPICS

#### 3.8 Diagnostics (Compiler)

Diagnostics are produced in the form:

```
filename, linenumber level[tag]: message
```

where *filename* is the name of the source file in which the error was encountered, *linenumber* is the line number at which the compiler detected the error, *level* is the level of seriousness of the message (remark, warning, error, or fatal error), *tag* is a unique tag that identifies the message, and *message* is an explanatory message, possibly several lines.

**C++14 reference:** 1.3.6

#### **4.1 Required libraries for freestanding implementation (C++14/C++17 libraries)**

See *C++ header files*, page 543 and *Not supported C/C++ functionality*, page 547, respectively, for information about which Standard C++ system headers that the IAR C/C++ Compiler does not support.

C++14 reference: 1.4

#### **4.4 Bits in a byte (Compiler)**

A byte contains 8 bits.

C++14 reference: 1.7

#### **4.6 Interactive devices (C++14/C++17 libraries)**

The streams `stdin`, `stdout`, and `stderr` are treated as interactive devices.

C++14 reference: 1.9

#### **4.7 Number of threads in a program under a freestanding implementation (Compiler)**

By default, the IAR runtime environment does not support more than one thread of execution. With an optional third-party RTOS, it might support several threads of execution.

C++14 reference: 1.10

#### **4.7.2 Requirement that the thread that executes main and the threads created by `std::thread` provide concurrent forward progress guarantees (Compiler)**

The thread system header is not supported.

C++14 reference: Not part of the implementation-defined behavior in C++14.

#### **5.2, C.4.1 Mapping physical source file characters to the basic source character set (Compiler)**

The source character set is the same as the physical source file multibyte character set. By default, the standard ASCII character set is used. However, it can be UTF-8, UTF-16, or the system locale. See *Text encodings*, page 300.

C++14 reference: 2.2

## 5.2 Physical source file characters (Compiler)

The source character set is the same as the physical source file multibyte character set. By default, the standard ASCII character set is used. However, it can be UTF-8, UTF-16, or the system locale. See *Text encodings*, page 300.

**C++14 reference:** 2.2

## 5.2 Converting characters from a source character set to the execution character set (Compiler)

The source character set is the set of legal characters that can appear in source files. It is dependent on the chosen encoding for the source file. See *Text encodings*, page 300. By default, the source character set is Raw.

The execution character set is the set of legal characters that can appear in the execution environment. These are the execution character sets for character constants and string literals, and their encoding types:

| Execution character set | Encoding type            |
|-------------------------|--------------------------|
| L                       | UTF-32                   |
| u                       | UTF-16                   |
| U                       | UTF-32                   |
| u8                      | UTF-8                    |
| none                    | The source character set |

*Table 56: Execution character sets and their encodings*

The DLIB runtime environment needs a multibyte character scanner to support a multibyte execution character set. See *Locale*, page 168.

**C++14 reference:** 2.2

## 5.2 Required availability of the source of translation units to locate template definitions (Compiler)

When locating the template definition related to template instantiations, the source of the translation units that define the template is not required.

**C++14 reference:** 2.2

## 5.3 The execution character set and execution wide-character set (Compiler)

The values of the members of the execution character set are the values of the ASCII character set, which can be augmented by the values of the extra characters in the source

file character set. The source file character set is determined by the chosen encoding for the source file. See *Text encodings*, page 300.

The wide character set consists of all the code points defined by ISO/IEC 10646.

**C++14 reference:** 2.3

### **5.8 Mapping header names to headers or external source files (Compiler)**

The header name is interpreted and mapped into an external source file in the most intuitive way. In both forms of the `#include` preprocessing directive, the character sequences that specify header names are interpreted exactly in the same way as for other source constructs. They are then mapped to external header source file names.

**C++14 reference:** 2.9

### **5.8 The meaning of `'`, `\`, `/*`, or `//` in a q-char-sequence or an h-char-sequence (Compiler)**

Characters in a q-char-sequence and a h-char-sequence are interpreted as a string literal.

**C++14 reference:** 2.9

#### **5.13.3 The value of multi-character literals (Compiler)**

An integer character constant that contains more than one character will be treated as an integer constant. The value will be calculated by treating the leftmost character as the most significant character, and the rightmost character as the least significant character, in an integer constant. A diagnostic message is issued if the value cannot be represented in an integer constant.

**C++14 reference:** 2.14.3

#### **5.13.3 The value of wide-character literals with single c-char that are not in the execution wide-character set (Compiler)**

All possible c-chars have a representation in the execution wide-character set.

**C++14 reference:** 2.14.3

#### **5.13.3 The value of wide-character literal containing multiple characters (Compiler)**

A diagnostic message is issued, and all but the first c-char is ignored.

**C++14 reference:** 2.14.3



### **5.13.3 The semantics of non-standard escape sequences (Compiler)**

No non-standard escape sequences are supported.

C++14 reference: 2.14.3

### **5.13.3 The value of character literal outside range of corresponding type (Compiler)**

The value is truncated to fit the type.

C++14 reference: 2.14.3

### **5.13.3 The encoding of universal character name not in execution character set (Compiler)**

A diagnostic message is issued.

C++14 reference: 2.14.3

### **5.13.3 The range defined for character literals (Compiler)**

The range is the same as an `int`.

C++14 reference: 2.14.3

### **5.13.4 The choice of larger or smaller value of floating-point literal (Compiler)**

For a floating-point literal whose scaled value cannot be represented as a floating-point value, the nearest even floating point-value is chosen.

C++14 reference: 2.14.4

### **5.13.5 Concatenation of various types of string literals (Compiler)**

Differently prefixed string literal tokens cannot be concatenated, except for those specified by the ISO C++ standard.

C++14 reference: 2.14.5

### **6.6.1 Defining `main` in a freestanding environment (Compiler)**

The `main` function must be defined.

C++14 reference: 3.6.1

### 6.6.1 Startup and termination in a freestanding environment (C++14/C++17 libraries)

See *Application execution—an overview*, page 66 and *System startup and termination*, page 153, for descriptions of the startup and termination of applications.

C++14 reference: 3.6.1

### 6.6.1 Parameters to main (C++14/C++17 libraries)

The only two permitted definitions for `main` are:

```
int main()
int main(int, char **)
```

C++14 reference: 3.6.1

### 6.6.1 Linkage of main (C++14/C++17 libraries)

The `main` function has external linkage.

C++14 reference: 3.6.1

### 6.6.3 Dynamic initialization of static variables before main (C++14/C++17 libraries)

Static variables are initialized before the first statement of `main`, except when the linker option `--manual_dynamic_initialization` is used.

C++14 reference: 3.6.2

### 6.6.3 Dynamic initialization of threaded local variables before entry (C++14/C++17 libraries)

By default, the IAR runtime environment does not support more than one thread of execution. With an optional third-party RTOS, it might support several threads of execution.

Thread-local variables are treated as static variables except when the linker option `--threaded_lib` is used. Then they are initialized by the RTOS.

C++14 reference: 3.6.2

### 6.6.3 Dynamic initialization of static inline variables before main (C++14/C++17 libraries)

Static inline variables are initialized before the first statement of `main`, except when the linker option `--manual_dynamic_initialization` is used.

C++14 reference: 3.6.2

### 6.6.3 Threads and program points at which deferred dynamic initialization is performed (C++14/C++17 libraries)

Dynamic initialization is not deferred, except when the linker option `--manual_dynamic_initialization` is used.

C++14 reference: 3.6.2

### 6.7 Use of an invalid pointer (Compiler)

Any other use of an invalid pointer than indirection through it and passing it to a deallocation function works as for a valid pointer.

C++14 reference: 3.7.4.2

#### 6.7.4.3 Relaxed or strict pointer safety for the implementation (Compiler)

The IAR implementation of Standard C++ has relaxed pointer safety.

C++14 reference: 3.7.4.3

### 6.9 The value of trivially copyable types (Compiler)

All bits in basic types are part of the value representation. Padding between basic types is copied verbatim.

C++14 reference: 3.9

#### 6.9.1 Representation and signage of char (Compiler)

A plain `char` is treated as an `unsigned char`. See `--char_is_signed`, page 316 and `--char_is_unsigned`, page 316.

C++14 reference: 3.9.1

#### 6.9.1 Extended signed integer types (Compiler)

No extended signed integer types exist in the implementation.

C++14 reference: 3.9.1

#### 6.9.1 Value representation of floating-point types (Compiler)

See *Basic data types—floating-point types*, page 415.

C++14 reference: 3.9.1

## **6.9.2 Value representation of pointer types (Compiler)**

See *Pointer types*, page 417.

C++14 reference: 3.9.2

## **6.11 Alignment (Compiler)**

See *Alignment*, page 407.

C++14 reference: 3.11

### **6.11 Alignment additional values (Compiler)**

See *Alignment*, page 407.

C++14 reference: 3.11

### **6.11 alignof expression additional values (Compiler)**

See *Alignment*, page 407.

C++14 reference: 3.11

## **7.1 lvalue-to-rvalue conversion for objects that contain an invalid pointer (Compiler)**

The conversion is made, but it is undefined what happens if the pointer value is used.

C++14 reference: 4.1

## **7.8 The value of the result of unsigned to signed conversion (Compiler)**

When an integer value is converted to a value of signed integer type, but cannot be represented by the destination type, the value is truncated to the number of bits of the destination type and then reinterpreted as a value of the destination type.

C++14 reference: 4.7

## **7.9 The result of inexact floating-point conversion (Compiler)**

When a floating-point value is converted to a value of a different floating-point type, and the value is within the range of the destination type but cannot be represented exactly, the value is rounded to the nearest floating-point value by default.

C++14 reference: 4.8

### **7.10 The value of the result of an inexact integer to floating-point conversion (Compiler)**

When an integer value is converted to a value of a floating-point type, and the value is within the range of the destination type but cannot be represented exactly, the value is rounded to the nearest floating-point value by default.

**C++14 reference:** 4.9

### **7.15 The rank of extended signed integer types (Compiler)**

The implementation has no extended signed integer types.

**C++14 reference:** 4.13

### **8.2.2 Passing argument of class type through ellipsis (Compiler)**

The result is a diagnostic and is then treated as a trivially copyable object.

**C++14 reference:** 5.2.2

### **8.2.2 Ending the lifetime of a parameter when the callee returns or at the end of the enclosing full-expression (Compiler)**

The lifetime of a parameter ends when the callee returns.

**C++14 reference:** 5.2.2

### **8.2.6 The value of a bitfield that cannot represent its incremented value (Compiler)**

The value is truncated to the correct number of bits.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **8.2.8 The derived type for typeid (C++14/C++17 libraries)**

The type of a `typeid` expression is an expression with dynamic type `std::type_info`.

**C++14 reference:** 5.2.8

### **8.2.10 Conversion from a pointer to an integer (Compiler)**

See *Casting*, page 418.

**C++14 reference:** 5.2.10

### **8.2.10 Conversion from an integer to a pointer (Compiler)**

See *Casting*, page 418.

C++14 reference: 5.2.10

### **8.2.10 Converting a function pointer to an object pointer and vice versa (Compiler)**

See *Casting*, page 418.

C++14 reference: 5.2.10

### **8.3.3 sizeof applied to fundamental types other than char, signed char, and unsigned char (Compiler)**

See *Basic data types—integer types*, page 409, *Basic data types—floating-point types*, page 415, and *Pointer types*, page 417.

C++14 reference: 5.3.3

### **8.3.4, 21.6.3.2 The maximum size of an allocated object (C++14/C++17 library)**

The maximum size of an allocated object is theoretically the maximum value of `size_t`, but in practice it is bounded by how much memory is allocated to the heap. See *Setting up heap memory*, page 120.

C++14 reference: 5.3.4

### **8.7, 21.2.4 The type of ptrdiff\_t (Compiler)**

See *ptrdiff\_t*, page 418.

C++14 reference: 5.7, 18.2

### **8.8 The result of right shift of negative value (Compiler)**

In a bitwise right shift operation of the form  $E1 \gg E2$ , if  $E1$  is of signed type and has a negative value, the value of the result is the integral part of the quotient  $E1 / (2^{**}E2)$ , except when  $E1$  is  $-1$ .

C++14 reference: 5.8

### **8.18 The value of a bitfield that cannot represent its assigned value (Compiler)**

The value is truncated to the correct number of bits.

C++14 reference: Not part of the implementation-defined behavior in C++14.

## **10 The meaning of the attribute declaration (Compiler)**

There are no other attributes supported than what is specified in the C++ standard. See *Extended keywords*, page 423, for supported attributes and ways to use them with objects.

C++14 reference: 7

### **10.1.7.1 Access to an object that has volatile-qualified type (Compiler)**

See *Declaring objects volatile*, page 420.

C++14 reference: 7.1.6.1

### **10.2 The underlying type for enumeration (Compiler)**

See *The enum type*, page 410.

C++14 reference: 7.2

### **10.4 The meaning of the asm declaration (Compiler)**

An `asm` declaration enables the direct use of assembler instructions.

C++14 reference: 7.4

### **10.5 The semantics of linkage specifiers (Compiler)**

Only the string-literals `"C"` and `"C++"` can be used in a linkage specifier.

C++14 reference: 7.5

### **10.5 Linkage of objects to other languages (Compiler)**

They should have `"C"` linkage.

C++14 reference: 7.5

### **10.6.1 The behavior of non-standard attributes (Compiler)**

There are no other attributes supported other than what is specified in the C++ standard. See *Extended keywords*, page 423, for a list supported attributes and ways to use them with objects.

C++14 reference: 7.6.1

### **11.4.1 The string resulting from `__func__` (Compiler)**

The value of `__func__` is the C++ function name.

C++14 reference: 8.4.1

### **11.6 The value of a bitfield that cannot represent its initializer (Compiler)**

The value is truncated to the correct number of bits.

C++14 reference: Not part of the implementation-defined behavior in C++14.

### **12.2.4 Allocation of bitfields within a class object (Compiler)**

See *Bitfields*, page 410.

C++14 reference: 9.6

### **17 The semantics of linkage specification on templates (Compiler)**

Only the string-literals "C" and "C++" can be used in a linkage specifier.

C++14 reference: 14

### **17.7.1 The maximum depth of recursive template instantiations (Compiler)**

The default maximum depth is 64. To change it, use the compiler option `--pending_instantiations`, page 347.

C++14 reference: 14.7.1

### **18.3, 18.5.1 Stack unwinding before calling `std::terminate()` (C++14/C++17 libraries)**

When no suitable catch handler is found, the stack is not unwound before calling `std::terminate()`.

C++14 reference: 15.3, 15.5.1

### **18.5.1 Stack unwinding before calling `std::terminate()` when a `noexcept` specification is violated (C++14/C++17 libraries)**

When a `noexcept` specification is violated, the stack is not unwound before calling `std::terminate()`.

C++14 reference: 15.5.1



## **19 Additional supported forms of preprocessing directives (Compiler)**

The preprocessor directives `#warning` and `#include_next` are supported. See *#warning*, page 536 and *#include\_next*, page 536.

C++14 reference: 16

### **19.1 The numeric values of character literals in #if directives (Compiler)**

Numeric values of character literals in the `#if` and `#elif` preprocessing directives match the values that they have in other expressions.

C++14 reference: 16.1

### **19.1 Negative value of character literal in preprocessor (Compiler)**

A plain `char` is treated as an `unsigned char`. See *--char\_is\_signed*, page 316 and *--char\_is\_unsigned*, page 316. If a `char` is treated as a signed character, then character literals in `#if` and `#elif` preprocessing directives can be negative.

C++14 reference: 16.1

### **19.2 Search locations for < > header (Compiler)**

See *Include file search procedure*, page 297.

C++14 reference: 16.2

### **19.2 The search procedure for included source file (Compiler)**

See *Include file search procedure*, page 297.

C++14 reference: 16.2

### **19.2 Search locations for "" header (Compiler)**

See *Include file search procedure*, page 297.

C++14 reference: 16.2

### **19.2 The sequence of places searched for a header (Compiler)**

See *Include file search procedure*, page 297.

C++14 reference: 16.2

### **19.2 Nesting limit for #include directives (Compiler)**

The amount of available memory sets the limit.

C++14 reference: 16.2

### **19.6 #pragma (Compiler)**

See *Recognized pragma directives (6.10.6)*, page 707.

C++14 reference: 16.6

### **19.8, C.1.10 The definition and meaning of \_\_STDC\_\_ (Compiler)**

\_\_STDC\_\_ is predefined to 1.

C++14 reference: 16.8

### **19.8 The text of \_\_DATE\_\_ when the date of translation is not available (Compiler)**

The date of the translation is always available.

C++14 reference: 16.8

### **19.8 The text of \_\_TIME\_\_ when the time of translation is not available (Compiler)**

The time of the translation is always available.

C++14 reference: 16.8

### **19.8 The definition and meaning of \_\_STDC\_VERSION\_\_ (Compiler)**

\_\_STDC\_VERSION\_\_ is predefined to 201710L.

C++14 reference: 16.8

### **20.5.1.2 Declaration of functions from Annex K of the C standard library when C++ headers are included (C++17 library)**

See *C bounds-checking interface*, page 549.

C++14 reference: Not part of the implementation-defined behavior in C++14.

### **20.5.1.3 Headers for a freestanding implementation (C++14/C++17 libraries)**

See *DLIB runtime environment—implementation details*, page 541.

C++14 reference: 17.6.1.3

### **20.5.2.3 Linkage of names from Standard C library (C++14/C++17 libraries)**

Declarations from the C library have "c" linkage.

C++14 reference: 17.6.2.3

### **20.5.5.8 Functions in Standard C++ library that can be recursively reentered (C++14/C++17 libraries)**

Functions can be recursively reentered, unless specified otherwise by the ISO C++ standard.

C++14 reference: 17.6.5.8

### **20.5.5.12 Exceptions thrown by standard library functions that do not have an exception specification (C++14/C++17 libraries)**

These functions do not throw any additional exceptions.

C++14 reference: 17.6.5.12

### **20.5.5.14 error\_category for errors originating outside of the operating system (C++14/C++17 libraries)**

There is no additional error category.

C++14 reference: 17.6.5.14

### **21.2.3, C.5.2.7 Definition of NULL (C++14/C++17 libraries)**

NULL is predefined as 0.

C++14 reference: 18.2

### **21.2.4 The type of ptrdiff\_t (Compiler)**

See *ptrdiff\_t*, page 418.

C++14 reference: 18.2

### **21.2.4 The type of size\_t (Compiler)**

See *size\_t*, page 418.

C++14 reference: 18.2

### **21.2.4 The type of ptrdiff\_t (Compiler)**

See 8.7, 21.2.4 *The type of ptrdiff\_t (Compiler)*, page 670.

### **21.5 Exit status (C++14/C++17 libraries)**

Control is returned to the `__exit` library function. See *\_\_exit*, page 161.

C++14 reference: 18.5

### **21.6.3.1 The return value of bad\_alloc::what (C++14/C++17 libraries)**

The return value is a pointer to "bad allocation".

C++14 reference: 18.6.2.1

### **21.6.3.2 The return value of bad\_array\_new\_length::what (C++14/C++17 libraries)**

C++17: The return value is a pointer to "bad array new length". C++14: The return value is a pointer to "bad allocation".

C++14 reference: 18.6.2.2

### **21.6.3.2 The maximum size of an allocated object (C++14/C++17 library)**

See 8.3.4, 21.6.3.2 *The maximum size of an allocated object (C++14/C++17 library)*, page 670.

### **21.7.2 The return value of type\_info::name() (C++14/C++17 libraries)**

The return value is a pointer to a C string containing the name of the type.

C++14 reference: 18.7.1

### **21.7.3 The return value of bad\_cast::what (C++14/C++17 libraries)**

The return value is a pointer to "bad cast".

C++14 reference: 18.7.2

### **21.7.4 The return value of bad\_typeid::what (C++14/C++17 libraries)**

The return value is a pointer to "bad typeid".

C++14 reference: 18.7.3

### **21.8.2 The return value of `exception::what` (C++14/C++17 libraries)**

C++17: The return value is a pointer to "unknown". C++14: The return value is a pointer to `std::exception`.

**C++14 reference:** 18.8.1

### **21.8.3 The return value of `bad_exception::what` (C++14/C++17 libraries)**

The return value is a pointer to "bad exception".

**C++14 reference:** 18.8.2

### **21.10 The use of non-POF functions as signal handlers (C++14/C++17 libraries)**

Non-Plain Old Functions (POF) can be used as signal handlers if no uncaught exceptions are thrown in the handler, and if the execution of the signal handler does not trigger undefined behavior.

**C++14 reference:** 18.10

### **23.6.5 The return value of `bad_optional_access::what` (C++17 library)**

The return value is a pointer to `bad_optional_access`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.7.3 variant support of over-aligned types (C++17 library)**

`variant` supports over-aligned types.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.7.11 The return value of `bad_variant_access::what` (C++17 library)**

The return value is a pointer to `bad_variant_access`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.8.2 The return value of `bad_any_access::what` (C++17 library)**

The return value is a pointer to "bad any cast".

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.10.4 `get_pointer_safety` returning `pointer_safety::relaxed` or `pointer_safety::preferred` when the implementation has relaxed pointer safety (C++14/C++17 libraries)**

The function `get_pointer_safety` always returns `std::pointer_safety::relaxed`.

**C++14 reference:** 20.7.4

### **23.11.2.1 The return value of `bad_weak_ptr::what` (C++17 library)**

The return value is a pointer to `bad_weak_ptr`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.11.2.2.1 The exception type when a `shared_ptr` constructor fails (C++14/C++17 libraries)**

Only `std::bad_alloc` is thrown.

**C++14 reference:** 20.8.2.2.1

### **23.12.5.2 The largest supported value to configure the largest allocation satisfied directly by a pool (C++17 library)**

Pool resource objects are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.12.5.2 The largest supported value to configure the maximum number of blocks to replenish a pool (C++17 library)**

Pool resource objects are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.12.5.4 The default configuration of a pool (C++17 library)**

Pool resource objects are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **23.12.6.1 The default `next_buffer_size` for a `monotonic_buffer_resource` (C++17 library)**

`monotonic_buffer_resource` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**23.12.6.2 The growth factor for `monotonic_buffer_resource` (C++17 library)**

`monotonic_buffer_resource` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**23.14.11, 23.14.11.4 The number of placeholders for bind expressions (C++17 library)**

There are ten placeholder objects.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**23.14.11.4 The assignability of placeholder objects (C++14/C++17 libraries)**

Placeholder objects are `CopyAssignable`.

**C++14 reference:** 20.9.9.1.4

**23.14.13.1.1 The return value of `bad_function_call::what` (C++17 library)**

The return value is a pointer to `std::bad_function_call`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**23.15.4.3 Scalar types that have unique object representations (C++17 library)**

All integer types, booleans, and characters have unique object representations.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**23.15.7.6 Support for extended alignment (C++14/C++17 libraries)**

Extended alignment is supported.

**C++14 reference:** 20.10.7.6

**23.17.7.1 Rounding or truncating values to the required precision when converting between `time_t` values and `time_point` objects (C++14/C++17 libraries)**

Values are truncated to the required precision when converting between `time_t` values and `time_point` objects.

**C++14 reference:** 20.12.7.1

### **23.19.3, 28.4.3 Additional execution policies supported by parallel algorithms (C++17 library)**

Parallel algorithms are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **24.2.3.1 The type of `streampos` (C++14/C++17 libraries)**

The type of `streampos` is `std::fpos<mbstate_t>`.

**C++14 references:** 21.2.3.1, D.6

#### **24.2.3.1 The type of `streamoff` (C++14/C++17 libraries)**

The type of `streamoff` is `long`.

**C++14 references:** 21.2.3.1, D.6

#### **24.2.3.1, 24.2.3.4 Supported multibyte character encoding rules (C++14/C++17 libraries)**

See *Locale*, page 168.

**C++14 references:** 21.2.3.1, 21.2.3.4

#### **24.2.3.2 The type of `u16streampos` (C++14/C++17 libraries)**

The type of `u16streampos` is `streampos`.

**C++14 reference:** 21.2.3.2

#### **24.2.3.2 The return value of `char_traits<char16_t>::eof` (C++14/C++17 libraries)**

The return value of `char_traits<char16_t>::eof` is EOF.

**C++14 reference:** 21.2.3.2

#### **24.2.3.3 The type of `u32streampos` (C++14/C++17 libraries)**

The type of `u32streampos` is `streampos`.

**C++14 reference:** 21.2.3.3

#### **24.2.3.3 The return value of `char_traits<char32_t>::eof` (C++14/C++17 libraries)**

The return value of `char_traits<char32_t>::eof` is EOF.

**C++14 reference:** 21.2.3.3



**24.2.3.4 The type of `wstreampos` (C++14/C++17 libraries)**

The type of `wstreampos` is `streampos`.

C++14 reference: 21.2.3.4

**24.2.3.4 The return value of `char_traits<wchar_t>::eof` (C++14/C++17 libraries)**

The return value of `char_traits<wchar_t>::eof` is EOF.

C++14 reference: 21.2.3.4

**24.2.3.4 Supported multibyte character encoding rules (C++14/C++17 libraries)**

See 24.2.3.1, 24.2.3.4 *Supported multibyte character encoding rules (C++14/C++17 libraries)*, page 680.

**24.3.2 The type of `basic_string::const_iterator` (C++17 library)**

The type of `basic_string::const_iterator` is `__wrap_iter<const_pointer>`.

C++14 reference: Not part of the implementation-defined behavior in C++14.

**24.3.2 The type of `basic_string::iterator` (C++17 library)**

The type of `basic_string::iterator` is `__wrap_iter<pointer>`.

C++14 reference: Not part of the implementation-defined behavior in C++14.

**24.4.2 The type of `basic_string_view::const_iterator` (C++17 library)**

The type of `basic_string_view::const_iterator` is `T const *`.

C++14 reference: Not part of the implementation-defined behavior in C++14.

**25.3.1 Locale object being global or per-thread (C++14/C++17 libraries)**

There is one global locale object for the entire application.

C++14 reference: 22.3.1

**25.3.1.1.1, 30.2.2 The set of character types that `iostreams` templates can be instantiated for (C++17 library)**

`iostreams` templates can be instantiated for `char`, `char16_t`, `char32_t`, and `wchar_t`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **25.3.1.2 Locale names (C++14/C++17 libraries)**

See *Locale*, page 168.

**C++14 reference:** 22.3.1.2

### **25.3.1.5 The effects on the C locale of calling locale::global (C++14/C++17 libraries)**

Calling this function with an unnamed locale has no effect.

**C++14 reference:** 22.3.1.5

### **25.3.1.5 The value of ctype<char>::table\_size (C++14/C++17 libraries)**

The value of `ctype<char>::table_size` is 256.

**C++14 reference:** 25.4.1.3

### **25.4.5.1.2 Additional formats for time\_get::do\_get\_date (C++14/C++17 libraries)**

No additional formats are accepted for `time_get::do_get_date`.

**C++14 reference:** 22.4.5.1.2

### **25.4.5.1.2 time\_get::do\_get\_year and two-digit year numbers (C++14/C++17 libraries)**

Two-digit year numbers are accepted by `time_get::do_get_year`. Years from 0 to 68 are parsed as meaning 2000 to 2068, and years from 69 to 99 are parsed as meaning 1969 to 1999.

**C++14 reference:** 22.4.5.1.2

### **25.4.5.3.2 Formatted character sequences generated by time\_put::do\_put in the C locale (C++14/C++17 libraries)**

The behavior is the same as that of the library function `strftime`.

**C++14 reference:** 22.4.5.3.2

### **25.4.7.1.2 Mapping from name to catalog when calling messages::do\_open (C++14/C++17 libraries)**

No mapping occurs because this function does not open a catalog.

C++14 reference: 22.4.7.1.2

#### **25.4.7.1.2 Mapping to message when calling `messages::do_get` (C++14/C++17 libraries)**

No mapping occurs because this function does not open a catalog. `df1t` is returned.

C++14 reference: 22.4.7.1.2

#### **25.4.7.1.2 Mapping to message when calling `messages::do_close` (C++14/C++17 libraries)**

The function cannot be called because no catalog can be open.

C++14 reference: 22.4.7.1.2

#### **25.4.7.1.2 Resource limits on a message catalog (C++17 library)**

The message catalog is not supported.

C++14 reference: Not part of the implementation-defined behavior in C++14.

#### **26.3.7.1 The type of `array::const_iterator` (C++14/C++17 libraries)**

The type of `array::const_iterator` is `T const *`.

C++14 reference: 23.3.2.1

#### **26.3.7.1 The type of `array::iterator` (C++14/C++17 libraries)**

The type of `array::iterator` is `T *`.

C++14 reference: 23.3.2.1

#### **26.3.8.1 The type of `deque::const_iterator` (C++17 library)**

The type of `deque::const_iterator` is `__deque_iterator<T, const_pointer, T const&, __map_const_pointer, difference_type>`.

C++14 reference: Not part of the implementation-defined behavior in C++14.

#### **26.3.8.1 The type of `deque::iterator` (C++17 library)**

The type of `deque::iterator` is `__deque_iterator<T, pointer, T&, __map_pointer, difference_type>`.

C++14 reference: Not part of the implementation-defined behavior in C++14.

### **26.3.9.1 The type of `forward_list::const_iterator` (C++17 library)**

The type of `forward_list::const_iterator` is `__base::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.9.1 The type of `forward_list::iterator` (C++17 library)**

The type of `forward_list::iterator` is `__base::iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.10.1 The type of `list::const_iterator` (C++17 library)**

The type of `list::const_iterator` is `__list_const_iterator<value_type, __void_pointer>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.10.1 The type of `list::iterator` (C++17 library)**

The type of `list::iterator` is `__list_iterator<value_type, __void_pointer>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.11.1 The type of `vector::const_iterator` (C++17 library)**

The type of `vector::const_iterator` is `__wrap_iter<const_pointer>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.11.1 The type of `vector::iterator` (C++17 library)**

The type of `vector::iterator` is `__wrap_iter<pointer>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.12 The type of `vector<bool>::const_iterator` (C++17 library)**

The type of `vector<bool>::const_iterator` is `const_pointer`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.3.12 The type of `vector<bool>::iterator` (C++17 library)**

The type of `vector<bool>::iterator` is `pointer`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.4.1 The type of `map::const_iterator` (C++17 library)**

The type of `map::const_iterator` is `__map_const_iterator<typename __base::const_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.4.1 The type of `map::iterator` (C++17 library)**

The type of `map::iterator` is `__map_iterator<typename __base::iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.5.1 The type of `multimap::const_iterator` (C++17 library)**

The type of `multimap::const_iterator` is `__map_const_iterator<typename __base::const_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.5.1 The type of `multimap::iterator` (C++17 library)**

The type of `multimap::iterator` is `__map_iterator<typename __base::iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.6.1 The type of `set::const_iterator` (C++17 library)**

The type of `set::const_iterator` is `__base::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.6.1 The type of `set::iterator` (C++17 library)**

The type of `set::iterator` is `__base::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.7.1 The type of `multiset::const_iterator` (C++17 library)**

The type of `multiset::const_iterator` is `__base::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**26.4.7.1 The type of `multiset::iterator` (C++17 library)**

The type of `multiset::iterator` is `__base::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.4.1 The type of `unordered_map::const_iterator` (C++17 library)**

The type of `unordered_map::const_iterator` is `__hash_map_const_iterator<typename __table::const_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.4.1 The type of `unordered_map::const_local_iterator` (C++17 library)**

The type of `unordered_map::const_local_iterator` is `__hash_map_const_iterator<typename __table::const_local_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.4.1 The type of `unordered_map::iterator` (C++17 library)**

The type of `unordered_map::iterator` is `__hash_map_iterator<typename __table::iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.4.1 The type of `unordered_map::local_iterator` (C++17 library)**

The type of `unordered_map::local_iterator` is `__hash_map_iterator<typename __table::local_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.4.2 The default number of buckets in `unordered_map` (C++14/C++17 libraries)**

The IAR C/C++ Compiler for Arm makes a default construction of the `unordered_map` before inserting the elements.

**C++14 reference:** 23.5.4.2

#### **26.5.5.2 The default number of buckets in `unordered_multimap` (C++14/C++17 libraries)**

The IAR C/C++ Compiler for Arm makes a default construction of the `unordered_multimap` before inserting the elements.

**C++14 reference:** 23.5.5.2

#### **26.5.6.1 The type of `unordered_set::const_iterator` (C++17 library)**

The type of `unordered_set::const_iterator` is `__table::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.6.1 The type of `unordered_set::const_local_iterator` (C++17 library)**

The type of `unordered_set::const_local_iterator` is `__table::const_local_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.6.1 The type of `unordered_set::iterator` (C++17 library)**

The type of `unordered_set::iterator` is `__table::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.6.1 The type of `unordered_set::local_iterator` (C++17 library)**

The type of `unordered_set::local_iterator` is `__table::const_local_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.6.2 The default number of buckets in `unordered_set` (C++14/C++17 libraries)**

The IAR C/C++ Compiler for Arm makes a default construction of the `unordered_set` before inserting the elements.

**C++14 reference:** 23.5.6.2

#### **26.5.7.1 The type of `unordered_multiset::const_iterator` (C++17 library)**

The type of `unordered_multiset::const_iterator` is `__table::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **26.5.7.1 The type of `unordered_multiset::const_local_iterator` (C++17 library)**

The type of `unordered_multiset::const_local_iterator` is `__table::const_local_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.5.7.1 The type of `unordered_multiset::iterator` (C++17 library)**

The type of `unordered_multiset::iterator` is `__table::const_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.5.7.1 The type of `unordered_multiset::local_iterator` (C++17 library)**

The type of `unordered_multiset::local_iterator` is `__table::const_local_iterator`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.5.7.2 The default number of buckets in `unordered_multiset` (C++14/C++17 libraries)**

The IAR C/C++ Compiler for Arm makes a default construction of the `unordered_multiset` before inserting the elements.

**C++14 reference:** 23.5.7.2

### **26.6.5.1 The type of `unordered_multimap::const_iterator` (C++17 library)**

The type of `unordered_multimap::const_iterator` is `__hash_map_const_iterator<typename __table::const_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.6.5.1 The type of `unordered_multimap::const_local_iterator` (C++17 library)**

The type of `unordered_multimap::const_local_iterator` is `__hash_map_const_iterator<typename __table::const_local_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **26.6.5.1 The type of `unordered_multimap::iterator` (C++17 library)**

The type of `unordered_multimap::iterator` is `__hash_map_iterator<typename __table::iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.



### 26.6.5.1 The type of `unordered_multimap::local_iterator` (C++17 library)

The type of `unordered_multimap::local_iterator` is `__hash_map_iterator<typename __table::local_iterator>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 28.4.3 Forward progress guarantees for implicit threads of parallel algorithms (if not defined for thread) (C++17 library)

Parallel algorithms are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 28.4.3 The semantics of parallel algorithms invoked with implementation-defined execution policies (C++17 library)

Parallel algorithms are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 28.4.3 Additional execution policies supported by parallel algorithms (C++17 library)

See 23.19.3, 28.4.3 *Additional execution policies supported by parallel algorithms (C++17 library)*, page 680.

### 28.6.13 The underlying source of random numbers for `random_shuffle` (C++14/C++17 libraries)

The underlying source is `rand()`.

**C++14 reference:** 25.3.12

### 29.4.1 The use of `<cfenv>` functions for managing floating-point status (C++17 library)

See *STDC FENV\_ACCESS*, page 466 and *Floating-point environment*, page 415.?

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.4.1 Support for `#pragma FENV_ACCESS` (C++17 library)

See *STDC FENV\_ACCESS*, page 466.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.5.8 The value of `pow(0,0)` (C++17 library)

`pow(0,0)` produces an `ERANGE` and returns `NaN`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.6.5 The type of `default_random_engine` (C++17 library)

The type of `default_random_engine` is `linear_congruential_engine<uint_fast32_t, 48271, 0, 2147483647>`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.6.6 The semantics and default value of a token parameter to `random_device` constructor (C++17 library)

The token is not used.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.6.6 The exception type when `random_device` constructor fails (C++17 library)

The constructor cannot fail.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.6.6 The exception type when `random_device::operator()` fails (C++17 library)

The `operator()` cannot fail.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.6.6 The way that `random_device::operator()` generates values (C++17 library)

`random_device::operator()` generates values using `std::rand()`.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### 29.6.8.1 The algorithm used for producing the standard random number distributions (C++17 library)

A linear congruential engine produces the standard random number distributions.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.6.9 rand() and the introduction of data races (C++17 library)**

`rand()` does not introduce a data race.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.9.5.1 The effects of calling associated Laguerre polynomials with  $n \geq 128$  or  $m \geq 128$  (C++17 library)**

`cmath::assoc_laguerre` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.9.5.2 The effects of calling associated Legendre polynomials with  $l \geq 128$  (C++17 library)**

`cmath::assoc_legendre` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.9.5.7 The effects of calling regular modified cylindrical Bessel functions with  $\nu \geq 128$  (C++17 library)**

`cyl_bessel_i` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.9.5.8 The effects of calling cylindrical Bessel functions of the first kind with  $\nu \geq 128$  (C++17 library)**

`cyl_bessel_j` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.9.5.9 The effects of calling irregular modified cylindrical Bessel functions with  $\nu \geq 128$  (C++17 library)**

`cyl_bessel_k` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**29.9.5.10 The effects of calling cylindrical Neumann functions with  $\nu \geq 128$  (C++17 library)**

`cyl_neumann` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **29.9.5.15 The effects of calling Hermite polynomials with $n \geq 128$ (C++17 library)**

`hermite` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **29.9.5.16 The effects of calling Laguerre polynomials with $n \geq 128$ (C++17 library)**

`laguerre` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **29.9.5.17 The effects of calling Legendre polynomials with $l \geq 128$ (C++17 library)**

`legendre` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **29.9.5.19 The effects of calling spherical Bessel functions with $n \geq 128$ (C++17 library)**

`sph_bessel` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **29.9.5.20 The effects of calling spherical associated Legendre functions with $l \geq 128$ (C++17 library)**

`sph_legendre` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **29.9.5.21 The effects of calling spherical Neumann functions with $n \geq 128$ (C++17 library)**

`sph_neumann` functions are not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

#### **30.2.2 The behavior of `iostream` classes when `traits::pos_type` is not `streampos` or when `traits::off_type` is not `streamoff` (C++14/C++17 libraries)**

No specific behavior has been implemented for this case.

**C++14 reference:** 27.2.2

### 30.2.2 The set of character types that iostreams templates can be instantiated for (C++17 library)

See 25.3.1.1.1, 30.2.2 *The set of character types that iostreams templates can be instantiated for (C++17 library)*, page 681.

### 30.5.3.4 The effects of calling `ios_base::sync_with_stdio` after any input or output operation on standard streams (C++14/C++17 libraries)

Previous input/output is not handled in any special way.

C++14 reference: 27.5.3.4

### 30.5.5.4 Argument values to construct `basic_ios::failure` (C++14/C++17 libraries)

When `basic_ios::clear` throws an exception, it throws an exception of type `basic_ios::failure` constructed with the `badbit/failbit/eofbit` set.

C++14 reference: 27.5.5.4

### 30.7.5.2.3 NTCTS in `basic_ostream<charT, traits>& operator<<(nullptr_t)` (C++17 library)

`s` is `nullptr`.

C++14 reference: Not part of the implementation-defined behavior in C++14.

### 30.8.2.1 The `basic_stringbuf` move constructor and the copying of sequence pointers (C++14/C++17 libraries)

The constructor copies the sequence pointers.

C++14 reference: 27.8.2.1

### 30.8.2.4 The effects of calling `basic_streambuf::setbuf` with non-zero arguments (C++14/C++17 libraries)

This function has no effect.

C++14 reference: 27.8.2.4

### 30.9.2.1 The `basic_filebuf` move constructor and the copying of sequence pointers (C++14/C++17 libraries)

The constructor copies the sequence pointers.

C++14 reference: 27.9.1.2

### **30.9.2.4 The effects of calling `basic_filebuf::setbuf` with non-zero arguments (C++14/C++17 libraries)**

C++17: The supplied buffer will be used in the `basic_filebuf`. C++14: This will offer the buffer to the C stream by calling `setvbuf()` with the associated file. If anything goes wrong, the stream is reinitialized.

**C++14 reference:** 27.9.1.5

### **30.9.2.4 The effects of calling `basic_filebuf::sync` when a get area exists (C++14/C++17 libraries)**

A `get` area cannot exist.

**C++14 reference:** 27.9.1.5

### **30.10.2.2 The operating system on which the implementation depends (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **30.10.6 The type of the `filesystem` trivial clock (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **30.10.8.1 Supported root names in addition to any operating system dependent root names (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **30.10.8.2.1 The meaning of dot-dot in the root directory (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

### **30.10.10.1 The interpretation of the path character sequence with `format_path::auto_format` (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**30.10.10.4 Additional file\_type enumerators for file systems supporting additional types of file (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**30.10.13 The type of a directory-like file (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**30.10.15.3 The effect of filesystem::copy (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**30.10.15.14 The result of filesystem::file\_size (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**30.10.15.35 The file type of the file argument of filesystem::status (C++17 library)**

The system header `filesystem` is not supported.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**31.5.1 The type of syntax\_option\_type (C++17 library)**

The type for `syntax_option_type` is enum. See *The enum type*, page 410.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**31.5.2 The type of regex\_constants::match\_flag\_type (C++17 library)**

The type for `match_flag_type` is enum. See *The enum type*, page 410.

**C++14 reference:** Not part of the implementation-defined behavior in C++14.

**31.5.3 The type of regex\_constants::error\_type (C++14/C++17 libraries)**

The type is an enum. See *The enum type*, page 410.

**C++14 reference:** 28.5.3

**32.5 The values of various `ATOMIC_..._LOCK_FREE` macros (C++14/C++17 libraries)**

In cases where atomic operations are supported, these macros will have the value 2. See *Atomic operations*, page 548.

C++14 reference: 29.4

**32.6, 32.6.1, 32.6.2, 32.6.3 Lock free operation of atomic types (C++17 library)**

See *Atomic operations*, page 548.

C++14 reference: Not part of the implementation-defined behavior in C++14.

**33.2.3 The presence and meaning of `native_handle_type` and `native_handle` (C++14/C++17 libraries)**

The `thread` system header is not supported.

C++14 reference: 30.2.3

**C.1.10 The definition and meaning of `__STDC__` (Compiler)**

See 19.8, *C.1.10 The definition and meaning of `__STDC__` (Compiler)*, page 674.

**C.4.1 Mapping physical source file characters to the basic source character set (Compiler)**

See 5.2, *C.4.1 Mapping physical source file characters to the basic source character set (Compiler)*, page 662.

**C.5.2.7 Definition of `NULL` (C++14/C++17 libraries)**

See 21.2.3, *C.5.2.7 Definition of `NULL` (C++14/C++17 libraries)*, page 675.

**D.9 Support for over-aligned types (Compiler, C++17/C++14 libraries)**

Over-aligned types are supported in `new` expressions and by the default allocator.

C++14 references: 5.3.4, 20.7.9.1, 20.7.11

---

## Implementation quantities

The IAR implementation of C++ is, like all implementations, limited in the size of the applications it can successfully process.



These limitations apply:

| <b>C++ feature</b>                                                                                                                | <b>Limitation</b>                                |
|-----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| Nesting levels of compound statements, iteration control structures, and selection control structures.                            | Limited only by memory.                          |
| Nesting levels of conditional inclusion.                                                                                          | Limited only by memory.                          |
| Pointer, array, and function declarators (in any combination) modifying a class, arithmetic, or incomplete type in a declaration. | Limited only by memory.                          |
| Nesting levels of parenthesized expressions within a full-expression.                                                             | Limited only by memory.                          |
| Number of characters in an internal identifier or macro name.                                                                     | Limited only by memory.                          |
| Number of characters in an external identifier.                                                                                   | Limited only by memory.                          |
| External identifiers in one translation unit.                                                                                     | Limited only by memory.                          |
| Identifiers with block scope declared in a block.                                                                                 | Limited only by memory.                          |
| Macro identifiers simultaneously defined in one translation unit.                                                                 | Limited only by memory.                          |
| Parameters in one function definition.                                                                                            | Limited only by memory.                          |
| Arguments in one function call.                                                                                                   | Limited only by memory.                          |
| Parameters in one macro definition.                                                                                               | Limited only by memory.                          |
| Arguments in one macro invocation.                                                                                                | Limited only by memory.                          |
| Characters in one logical source line.                                                                                            | Limited only by memory.                          |
| Characters in a string literal (after concatenation).                                                                             | Limited only by memory.                          |
| Size of an object.                                                                                                                | Limited only by memory.                          |
| Nesting levels for <code>#include</code> files.                                                                                   | Limited only by memory.                          |
| Case labels for a <code>switch</code> statement (excluding those for any nested <code>switch</code> statements).                  | Limited only by memory.                          |
| Data members in a single class.                                                                                                   | Limited only by memory.                          |
| Enumeration constants in a single enumeration.                                                                                    | Limited only by memory.                          |
| Levels of nested class definitions in a single member-specification.                                                              | Limited only by memory.                          |
| Functions registered by <code>atexit</code> .                                                                                     | Limited by heap memory in the built application. |
| Functions registered by <code>at_quick_exit</code> .                                                                              | Limited by heap memory in the built application. |

*Table 57: C++ implementation quantities*

| <b>C++ feature</b>                                                                                              | <b>Limitation</b>                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Direct and indirect base classes.                                                                               | Limited only by memory.                                                                                                    |
| Direct base classes for a single class.                                                                         | Limited only by memory.                                                                                                    |
| Members declared in a single class.                                                                             | Limited only by memory.                                                                                                    |
| Final overriding virtual functions in a class, accessible or not.                                               | Limited only by memory.                                                                                                    |
| Direct and indirect virtual bases of a class.                                                                   | Limited only by memory.                                                                                                    |
| Static members of a class.                                                                                      | Limited only by memory.                                                                                                    |
| Friend declarations in a class.                                                                                 | Limited only by memory.                                                                                                    |
| Access control declarations in a class.                                                                         | Limited only by memory.                                                                                                    |
| Member initializers in a constructor definition.                                                                | Limited only by memory.                                                                                                    |
| Scope qualifiers of one identifier.                                                                             | Limited only by memory.                                                                                                    |
| Nested external specifications.                                                                                 | Limited only by memory.                                                                                                    |
| Recursive <code>constexpr</code> function invocations.                                                          | 1000. This limit can be changed by using the compiler option <code>--max_cost_constexpr_call</code> .                      |
| Full-expressions evaluated within a core constant expression.                                                   | Limited only by memory.                                                                                                    |
| Template arguments in a template declaration.                                                                   | Limited only by memory.                                                                                                    |
| Recursively nested template instantiations, including substitution during template argument deduction (14.8.2). | 64 for a specific template. This limit can be changed by using the compiler option <code>--pending_instantiations</code> . |
| Handlers per try block.                                                                                         | Limited only by memory.                                                                                                    |
| Throw specifications on a single function declaration.                                                          | Limited only by memory.                                                                                                    |
| Number of placeholders (20.9.9.1.4).                                                                            | 20 placeholders from <code>_1</code> to <code>_20</code> .                                                                 |

*Table 57: C++ implementation quantities (Continued)*

# Implementation-defined behavior for Standard C

- Descriptions of implementation-defined behavior

If you are using C89 instead of Standard C, see *Implementation-defined behavior for C89*, page 719.

---

## Descriptions of implementation-defined behavior

This section follows the same order as the C standard. Each item includes references to the ISO chapter and section (in parenthesis) that explains the implementation-defined behavior.

**Note:** The IAR implementation adheres to a freestanding implementation of Standard C. This means that parts of a standard library can be excluded in the implementation.

### J.3.1 TRANSLATION

#### Diagnostics (3.10, 5.1.1.3)

Diagnostics are produced in the form:

*filename*, *linenumber* *level*[*tag*): *message*

where *filename* is the name of the source file in which the error was encountered, *linenumber* is the line number at which the compiler detected the error, *level* is the level of seriousness of the message (remark, warning, error, or fatal error), *tag* is a unique tag that identifies the message, and *message* is an explanatory message, possibly several lines.

#### White-space characters (5.1.1.2)

At translation phase three, each non-empty sequence of white-space characters is retained.

## J.3.2 ENVIRONMENT

### The character set (5.1.1.2)

The source character set is the same as the physical source file multibyte character set. By default, the standard ASCII character set is used. However, it can be UTF-8, UTF-16, or the system locale. See *Text encodings*, page 300.

### Main (5.1.2.1)

The function called at program startup is called `main`. No prototype is declared for `main`, and the only definition supported for `main` is:

```
int main(void)
```

To change this behavior, see *System initialization*, page 157.

### The effect of program termination (5.1.2.1)

Terminating the application returns the execution to the startup code (just after the call to `main`).

### Alternative ways to define main (5.1.2.2.1)

There is no alternative ways to define the `main` function.

### The `argv` argument to main (5.1.2.2.1)

The `argv` argument is not supported.

### Streams as interactive devices (5.1.2.3)

The streams `stdin`, `stdout`, and `stderr` are treated as interactive devices.

### Multithreaded environment (5.1.2.4)

By default, the IAR runtime environment does not support more than one thread of execution. With an optional third-party RTOS, it might support several threads of execution.

### Signals, their semantics, and the default handling (7.14)

In the DLIB runtime environment, the set of supported signals is the same as in Standard C. A raised signal will do nothing, unless the `signal` function is customized to fit the application.

### **Signal values for computational exceptions (7.14.1.1)**

In the DLIB runtime environment, there are no implementation-defined values that correspond to a computational exception.

### **Signals at system startup (7.14.1.1)**

In the DLIB runtime environment, there are no implementation-defined signals that are executed at system startup.

### **Environment names (7.22.4.6)**

In the DLIB runtime environment, there are no implementation-defined environment names that are used by the `getenv` function.

### **The system function (7.22.4.8)**

The `system` function is not supported.

## **J.3.3 IDENTIFIERS**

### **Multibyte characters in identifiers (6.4.2)**

Additional multibyte characters may appear in identifiers depending on the chosen encoding for the source file. The supported multibyte characters must be translatable to one Universal Character Name (UCN).

### **Significant characters in identifiers (5.2.4.1, 6.4.2)**

The number of significant initial characters in an identifier with or without external linkage is guaranteed to be no less than 200.

## **J.3.4 CHARACTERS**

### **Number of bits in a byte (3.6)**

A byte contains 8 bits.

### **Execution character set member values (5.2.1)**

The values of the members of the execution character set are the values of the ASCII character set, which can be augmented by the values of the extra characters in the source file character set. The source file character set is determined by the chosen encoding for the source file. See *Text encodings*, page 300.

### Alphabetic escape sequences (5.2.2)

The standard alphabetic escape sequences have the values `\a-7`, `\b-8`, `\f-12`, `\n-10`, `\r-13`, `\t-9`, and `\v-11`.

### Characters outside of the basic executive character set (6.2.5)

A character outside of the basic executive character set that is stored in a `char` is not transformed.

### Plain char (6.2.5, 6.3.1.1)

A plain `char` is treated as an `unsigned char`. See `--char_is_signed`, page 316 and `--char_is_unsigned`, page 316.

### Source and execution character sets (6.4.4.4, 5.1.1.2)

The source character set is the set of legal characters that can appear in source files. It is dependent on the chosen encoding for the source file. See *Text encodings*, page 300. By default, the source character set is Raw.

The execution character set is the set of legal characters that can appear in the execution environment. These are the execution character set for character constants and string literals and their encoding types:

| Execution character set | Encoding type            |
|-------------------------|--------------------------|
| L                       | UTF-32                   |
| u                       | UTF-16                   |
| U                       | UTF-32                   |
| u8                      | UTF-8                    |
| none                    | The source character set |

Table 58: Execution character sets and their encodings

The DLIB runtime environment needs a multibyte character scanner to support a multibyte execution character set. See *Locale*, page 168.

### Integer character constants with more than one character (6.4.4.4)

An integer character constant that contains more than one character will be treated as an integer constant. The value will be calculated by treating the leftmost character as the most significant character, and the rightmost character as the least significant character, in an integer constant. A diagnostic message will be issued if the value cannot be represented in an integer constant.

**Wide character constants with more than one character (6.4.4.4)**

A wide character constant that contains more than one multibyte character generates a diagnostic message.

**Locale used for wide character constants (6.4.4.4)**

See *Source and execution character sets (6.4.4.4, 5.1.1.2)*, page 702.

**Concatenating wide string literals with different encoding types (6.4.5)**

Wide string literals with different encoding types cannot be concatenated.

**Locale used for wide string literals (6.4.5)**

See *Source and execution character sets (6.4.4.4, 5.1.1.2)*, page 702.

**Source characters as executive characters (6.4.5)**

All source characters can be represented as executive characters.

**Encoding of `wchar_t`, `char16_t`, and `char32_t` (6.10.8.2)**

`wchar_t` has the encoding UTF-32, `char16_t` has the encoding UTF-16, and `char32_t` has the encoding UTF-32.

**J.3.5 INTEGERS****Extended integer types (6.2.5)**

There are no extended integer types.

**Range of integer values (6.2.6.2)**

The representation of integer values are in the two's complement form. The most significant bit holds the sign—1 for negative, 0 for positive and zero.

For information about the ranges for the different integer types, see *Basic data types—integer types*, page 409.

**The rank of extended integer types (6.3.1.1)**

There are no extended integer types.

**Signals when converting to a signed integer type (6.3.1.3)**

No signal is raised when an integer is converted to a signed integer type.

### **Signed bitwise operations (6.5)**

Bitwise operations on signed integers work the same way as bitwise operations on unsigned integers—in other words, the sign-bit will be treated as any other bit, except for the operator `>>` which will behave as an arithmetic right shift.

## **J.3.6 FLOATING POINT**

### **Accuracy of floating-point operations (5.2.4.2.2)**

The accuracy of floating-point operations is unknown.

### **Accuracy of floating-point conversions (5.2.4.2.2)**

The accuracy of floating-point conversions is unknown.

### **Rounding behaviors (5.2.4.2.2)**

There are no non-standard values of `FLT_ROUNDS`.

### **Evaluation methods (5.2.4.2.2)**

There are no non-standard values of `FLT_EVAL_METHOD`.

### **Converting integer values to floating-point values (6.3.1.4)**

When an integer value is converted to a floating-point value that cannot exactly represent the source value, the round-to-nearest rounding mode is used (`FLT_ROUNDS` is defined to 1).

### **Converting floating-point values to floating-point values (6.3.1.5)**

When a floating-point value is converted to a floating-point value that cannot exactly represent the source value, the round-to-nearest rounding mode is used (`FLT_ROUNDS` is defined to 1).

### **Denoting the value of floating-point constants (6.4.4.2)**

The round-to-nearest rounding mode is used (`FLT_ROUNDS` is defined to 1).

### **Contraction of floating-point values (6.5)**

Floating-point values are contracted. However, there is no loss in precision and because signaling is not supported, this does not matter.

### **Default state of `FENV_ACCESS` (7.6.1)**

The default state of the pragma directive `FENV_ACCESS` is `OFF`.



### **Additional floating-point mechanisms (7.6, 7.12)**

There are no additional floating-point exceptions, rounding-modes, environments, and classifications.

### **Default state of FP\_CONTRACT (7.12.2)**

The default state of the pragma directive `FP_CONTRACT` is `ON` unless the compiler option `--no_default_fp_contract` is used.

## **J.3.7 ARRAYS AND POINTERS**

### **Conversion from/to pointers (6.3.2.3)**

For information about casting of data pointers and function pointers, see *Casting*, page 418.

### **ptrdiff\_t (6.5.6)**

For information about `ptrdiff_t`, see *ptrdiff\_t*, page 418.

## **J.3.8 HINTS**

### **Honoring the register keyword (6.7.1)**

User requests for register variables are not honored.

### **Inlining functions (6.7.4)**

User requests for inlining functions increases the chance, but does not make it certain, that the function will actually be inlined into another function. See *Inlining functions*, page 92.

## **J.3.9 STRUCTURES, UNIONS, ENUMERATIONS, AND BITFIELDS**

### **Sign of 'plain' bitfields (6.7.2, 6.7.2.1)**

For information about how a 'plain' `int` bitfield is treated, see *Bitfields*, page 410.

### **Possible types for bitfields (6.7.2.1)**

All integer types can be used as bitfields in the compiler's extended mode, see *-e*, page 326.

**Atomic types for bitfields (6.7.2.1)**

Atomic types cannot be used as bitfields.

**Bitfields straddling a storage-unit boundary (6.7.2.1)**

Unless `__attribute__((packed))` (a GNU language extension) is used, a bitfield is always placed in one—and one only—storage unit, and thus does not straddle a storage-unit boundary.

**Allocation order of bitfields within a unit (6.7.2.1)**

For information about how bitfields are allocated within a storage unit, see *Bitfields*, page 410.

**Alignment of non-bitfield structure members (6.7.2.1)**

The alignment of non-bitfield members of structures is the same as for the member types, see *Alignment*, page 407.

**Integer type used for representing enumeration types (6.7.2.2)**

The chosen integer type for a specific enumeration type depends on the enumeration constants defined for the enumeration type. The chosen integer type is the smallest possible.

**J.3.10 QUALIFIERS****Access to volatile objects (6.7.3)**

Any reference to an object with `volatile` qualified type is an access, see *Declaring objects volatile*, page 420.

**J.3.11 PREPROCESSING DIRECTIVES****Locations in #pragma for header names (6.4, 6.4.7)**

These pragma directives take header names as parameters at the specified positions:

```
#pragma include_alias ("header", "header")
#pragma include_alias (<header>, <header>)
```

**Mapping of header names (6.4.7)**

Sequences in header names are mapped to source file names verbatim. A backslash `'\'` is not treated as an escape sequence. See *Overview of the preprocessor*, page 519.

### Character constants in constant expressions (6.10.1)

A character constant in a constant expression that controls conditional inclusion matches the value of the same character constant in the execution character set.

### The value of a single-character constant (6.10.1)

A single-character constant may only have a negative value if a plain character (`char`) is treated as a signed character, see `--char_is_signed`, page 316.

### Including bracketed filenames (6.10.2)

For information about the search algorithm used for file specifications in angle brackets `<>`, see *Include file search procedure*, page 297.

### Including quoted filenames (6.10.2)

For information about the search algorithm used for file specifications enclosed in quotes, see *Include file search procedure*, page 297.

### Preprocessing tokens in #include directives (6.10.2)

Preprocessing tokens in an `#include` directive are combined in the same way as outside an `#include` directive.

### Nesting limits for #include directives (6.10.2)

There is no explicit nesting limit for `#include` processing.

### # inserts \ in front of \u (6.10.3.2)

`#` (stringify argument) inserts a `\` character in front of a Universal Character Name (UCN) in character constants and string literals.

### Recognized pragma directives (6.10.6)

In addition to the pragma directives described in the chapter *Pragma directives*, the following directives are recognized and will have an indeterminate effect. If a pragma directive is listed both in the chapter *Pragma directives* and here, the information provided in the chapter *Pragma directives* overrides the information here.

- `alias_def`
- `alignment`
- `alternate_target_def`
- `baseaddr`
- `basic_template_matching`

- `building_runtime`
- `can_instantiate`
- `codeseg`
- `constseg`
- `cplusplus_neutral`
- `cspy_support`
- `cstat_dump`
- `dataseg`
- `define_type_info`
- `do_not_instantiate`
- `early_dynamic_initialization`
- `exception_neutral`
- `function`
- `function_category`
- `function_effects`
- `hdrstop`
- `important_typedef`
- `ident`
- `implements_aspect`
- `init_routines_only_for_needed_variables`
- `initialization_routine`
- `inline_template`
- `instantiate`
- `keep_definition`
- `library_default_requirements`
- `library_provides`
- `library_requirement_override`
- `memory`
- `module_name`
- `no_pch`
- `no_vtable_use`
- `once`
- `pop_macro`
- `preferred_typedef`

- `push_macro`
- `separate_init_routine`
- `set_generate_entries_without_bounds`
- `system_include`
- `uses_aspect`
- `vector`
- `warnings`

### Default `__DATE__` and `__TIME__` (6.10.8)

The definitions for `__TIME__` and `__DATE__` are always available.

## J.3.12 LIBRARY FUNCTIONS

### Additional library facilities (5.1.2.1)

Most of the standard library facilities are supported. Some of them—the ones that need an operating system—require a low-level implementation in the application. For more information, see *The DLIB runtime environment*, page 131.

### Diagnostic printed by the `assert` function (7.2.1.1)

The `assert()` function prints:

```
filename:linenr expression -- assertion failed
```

when the parameter evaluates to zero.

### Representation of the floating-point status flags (7.6.2.2)

There is no representation of floating-point status flags.

### `feraiseexcept` raising floating-point exception (7.6.2.3)

For information about the `feraiseexcept` function raising floating-point exceptions, see *Floating-point environment*, page 415.

### Strings passed to the `setlocale` function (7.11.1.1)

For information about strings passed to the `setlocale` function, see *Locale*, page 168.

### Types defined for `float_t` and `double_t` (7.12)

The `FLT_EVAL_METHOD` macro can only have the value 0.

### Domain errors (7.12.1)

No function generates other domain errors than what the standard requires.

### Return values on domain errors (7.12.1)

Mathematic functions return a floating-point NaN (not a number) for domain errors.

### Underflow errors (7.12.1)

Mathematic functions set `errno` to the macro `ERANGE` (a macro in `errno.h`) and return zero for underflow errors.

### fmod return value (7.12.10.1)

The `fmod` function sets `errno` to a domain error and returns a floating-point NaN when the second argument is zero.

### remainder return value (7.12.10.2)

The `remainder` function sets `errno` to a domain error and returns a floating-point NaN when the second argument is zero.

### The magnitude of remquo (7.12.10.3)

The magnitude is congruent modulo `INT_MAX`.

### remquo return value (7.12.10.3)

The `remquo` function sets `errno` to a domain error and returns a floating-point NaN when the second argument is zero.

### signal() (7.14.1.1)

The signal part of the library is not supported.

**Note:** The default implementation of `signal` does not perform anything. Use the template source code to implement application-specific signal handling. See *signal*, page 165 and *raise*, page 163, respectively.

### NULL macro (7.19)

The `NULL` macro is defined to 0.

### Terminating newline character (7.21.2)

Stream functions recognize either `newline` or end of file (EOF) as the terminating character for a line.

**Space characters before a newline character (7.21.2)**

Space characters written to a stream immediately before a newline character are preserved.

**Null characters appended to data written to binary streams (7.21.2)**

No null characters are appended to data written to binary streams.

**File position in append mode (7.21.3)**

The file position is initially placed at the beginning of the file when it is opened in append-mode.

**Truncation of files (7.21.3)**

Whether a write operation on a text stream causes the associated file to be truncated beyond that point, depends on the application-specific implementation of the low-level file routines. See *Briefly about input and output (I/O)*, page 132.

**File buffering (7.21.3)**

An open file can be either block-buffered, line-buffered, or unbuffered.

**A zero-length file (7.21.3)**

Whether a zero-length file exists depends on the application-specific implementation of the low-level file routines.

**Legal file names (7.21.3)**

The legality of a filename depends on the application-specific implementation of the low-level file routines.

**Number of times a file can be opened (7.21.3)**

Whether a file can be opened more than once depends on the application-specific implementation of the low-level file routines.

**Multibyte characters in a file (7.21.3)**

The encoding of multibyte characters in a file depends on the application-specific implementation of the low-level file routines.

**remove() (7.21.4.1)**

The effect of a remove operation on an open file depends on the application-specific implementation of the low-level file routines. See *Briefly about input and output (I/O)*, page 132.

**rename() (7.21.4.2)**

The effect of renaming a file to an already existing filename depends on the application-specific implementation of the low-level file routines. See *Briefly about input and output (I/O)*, page 132.

**Removal of open temporary files (7.21.4.3)**

Whether an open temporary file is removed depends on the application-specific implementation of the low-level file routines.

**Mode changing (7.21.5.4)**

`freopen` closes the named stream, then reopens it in the new mode. The streams `stdin`, `stdout`, and `stderr` can be reopened in any new mode.

**Style for printing infinity or NaN (7.21.6.1, 7.29.2.1)**

The style used for printing infinity or NaN for a floating-point constant is `inf` and `nan` (`INF` and `NAN` for the `F` conversion specifier), respectively. The `n`-char-sequence is not used for `nan`.

**%p in printf() (7.21.6.1, 7.29.2.1)**

The argument to a `%p` conversion specifier, print pointer, to `printf()` is treated as having the type `void *`. The value will be printed as a hexadecimal number, similar to using the `%x` conversion specifier.

**Reading ranges in scanf (7.21.6.2, 7.29.2.1)**

A `-` (dash) character is always treated as a range symbol.

**%p in scanf (7.21.6.2, 7.29.2.2)**

The `%p` conversion specifier, scan pointer, to `scanf()` reads a hexadecimal number and converts it into a value with the type `void *`.

**File position errors (7.21.9.1, 7.21.9.3, 7.21.9.4)**

On file position errors, the functions `fgetpos`, `ftell`, and `fsetpos` store `EFPOS` in `errno`.



**An n-char-sequence after nan (7.22.1.3, 7.29.4.1.1)**

An n-char-sequence after a NaN is read and ignored.

**errno value at underflow (7.22.1.3, 7.29.4.1.1)**

`errno` is set to `ERANGE` if an underflow is encountered.

**Zero-sized heap objects (7.22.3)**

A request for a zero-sized heap object will return a valid pointer and not a null pointer.

**Behavior of abort and exit (7.22.4.1, 7.22.4.5)**

A call to `abort()` or `_Exit()` will not flush stream buffers, not close open streams, and not remove temporary files.

**Termination status (7.22.4.1, 7.22.4.4, 7.22.4.5, 7.22.4.7)**

The termination status will be propagated to `__exit()` as a parameter. `exit()`, `_Exit()`, and `quick_exit` use the input parameter, whereas `abort` uses `EXIT_FAILURE`.

**The system function return value (7.22.4.8)**

The `system` function returns `-1` when its argument is not a null pointer.

**Range and precision of clock\_t and time\_t (7.27)**

The range and precision of `clock_t` is up to your implementation. The range and precision of `time_t` is 19000101 up to 20351231 in tics of a second if the 32-bit `time_t` is used. It is -9999 up to 9999 years in tics of a second if the 64-bit `time_t` is used. See *time.h*, page 550

**The time zone (7.27.1)**

The local time zone and daylight savings time must be defined by the application. For more information, see *time.h*, page 550.

**The era for clock() (7.27.2.1)**

The era for the `clock` function is up to your implementation.

**TIME\_UTC epoch (7.27.2.5)**

The epoch for `TIME_UTC` is up to your implementation.

### **%Z replacement string (7.27.3.5, 7.29.5.1)**

By default, ":" or "" (an empty string) is used as a replacement for %z. Your application should implement the time zone handling. See `__time32`, `__time64`, page 166.

### **Math functions rounding mode (F.10)**

The functions in `math.h` honor the rounding direction mode in `FLT-ROUNDS`.

## **J.3.13 ARCHITECTURE**

### **Values and expressions assigned to some macros (5.2.4.2, 7.20.2, 7.20.3)**

There are always 8 bits in a byte.

`MB_LEN_MAX` is at the most 6 bytes depending on the library configuration that is used.

For information about sizes, ranges, etc for all basic types, see *Data representation*, page 407.

The limit macros for the exact-width, minimum-width, and fastest minimum-width integer types defined in `stdint.h` have the same ranges as `char`, `short`, `int`, `long`, and `long long`.

The floating-point constant `FLT_ROUNDS` has the value 1 (to nearest) and the floating-point constant `FLT_EVAL_METHOD` has the value 0 (treat as is).

### **Accessing another thread's autos or thread locals (6.2.4)**

The IAR runtime environment does not allow multiple threads. With a third-party RTOS, the access will take place and work as intended as long as the accessed item has not gone out of its scope.

### **The number, order, and encoding of bytes (6.2.6.1)**

See *Data representation*, page 407.

### **Extended alignments (6.2.8)**

For information about extended alignments, see *data\_alignment*, page 448.

### **Valid alignments (6.2.8)**

For information about valid alignments on fundamental types, see the chapter *Data representation*.

**The value of the result of the sizeof operator (6.5.3.4)**

See *Data representation*, page 407.

**J.4 LOCALE****Members of the source and execution character set (5.2.1)**

By default, the compiler accepts all one-byte characters in the host's default character set. The chapter *Encodings* describes how to change the default encoding for the source character set, and by that the encoding for plain character constants and plain string literals in the execution character set.

**The meaning of the additional characters (5.2.1.2)**

Any multibyte characters in the extended source character set is translated into the following encoding for the execution character set:

| Execution character set | Encoding                             |
|-------------------------|--------------------------------------|
| <code>L</code> typed    | UTF-32                               |
| <code>u</code> typed    | UTF-16                               |
| <code>U</code> typed    | UTF-32                               |
| <code>u8</code> typed   | UTF-8                                |
| none typed              | The same as the source character set |

*Table 59: Translation of multibyte characters in the extended source character set*

It is up to your application with the support of the library configuration to handle the characters correctly.

**Shift states for encoding multibyte characters (5.2.1.2)**

No shift states are supported.

**Direction of successive printing characters (5.2.2)**

The application defines the characteristics of a display device.

**The decimal point character (7.1.1)**

For a library with the configuration Normal or Tiny, the default decimal-point character is a `'.'`. For a library with the configuration Full, the chosen locale defines what character is used for the decimal point.

**Printing characters (7.4, 7.30.2)**

The set of printing characters is determined by the chosen locale.

### Control characters (7.4, 7.30.2)

The set of control characters is determined by the chosen locale.

### Characters tested for (7.4.1.2, 7.4.1.3, 7.4.1.7, 7.4.1.9, 7.4.1.10, 7.4.1.11, 7.30.2.1.2, 7.30.5.1.3, 7.30.2.1.7, 7.30.2.1.9, 7.30.2.1.10, 7.30.2.1.11)

The set of characters tested for the character-based functions are determined by the chosen locale. The set of characters tested for the `wchar_t`-based functions are the UTF-32 code points `0x0` to `0x7F`.

### The native environment (7.1.1.1)

The native environment is the same as the "C" locale.

### Subject sequences for numeric conversion functions (7.22.1, 7.29.4.1)

There are no additional subject sequences that can be accepted by the numeric conversion functions.

### The collation of the execution character set (7.24.4.3, 7.29.4.4.2)

Collation is not supported.

### Message returned by `strerror` (7.24.6.2)

The messages returned by the `strerror` function depending on the argument is:

| Argument   | Message                   |
|------------|---------------------------|
| EZERO      | no error                  |
| EDOM       | domain error              |
| ERANGE     | range error               |
| EFPOS      | file positioning error    |
| EILSEQ     | multi-byte encoding error |
| <0    >99  | unknown error             |
| all others | error <i>nnn</i>          |

Table 60: Message returned by `strerror()`—DLIB runtime environment

### Formats for time and date (7.27.3.5, 7.29.5.1)

Time zone information is as you have implemented it in the low-level function `__getzone`.

**Character mappings (7.30.1)**

The character mappings supported are `tolower` and `toupper`.

**Character classifications (7.30.1)**

The character classifications that are supported are `alnum`, `cntrl`, `digit`, `graph`, `lower`, `print`, `punct`, `space`, `upper`, and `xdigit`.



# Implementation-defined behavior for C89

- Descriptions of implementation-defined behavior

If you are using Standard C instead of C89, see *Implementation-defined behavior for Standard C*, page 699.

---

## Descriptions of implementation-defined behavior

The descriptions follow the same order as the ISO appendix. Each item covered includes references to the ISO chapter and section (in parenthesis) that explains the implementation-defined behavior.

### TRANSLATION

#### Diagnostics (5.1.1.3)

Diagnostics are produced in the form:

```
filename, linenumber level[tag]: message
```

where *filename* is the name of the source file in which the error was encountered, *linenumber* is the line number at which the compiler detected the error, *level* is the level of seriousness of the message (remark, warning, error, or fatal error), *tag* is a unique tag that identifies the message, and *message* is an explanatory message, possibly several lines.

### ENVIRONMENT

#### Arguments to main (5.1.2.2.1)

The function called at program startup is called `main`. No prototype was declared for `main`, and the only definition supported for `main` is:

```
int main(void)
```

To change this behavior for the DLIB runtime environment, see *System initialization*, page 157.

### Interactive devices (5.1.2.3)

The streams `stdin` and `stdout` are treated as interactive devices.

## IDENTIFIERS

### Significant characters without external linkage (6.1.2)

The number of significant initial characters in an identifier without external linkage is 200.

### Significant characters with external linkage (6.1.2)

The number of significant initial characters in an identifier with external linkage is 200.

### Case distinctions are significant (6.1.2)

Identifiers with external linkage are treated as case-sensitive.

## CHARACTERS

### Source and execution character sets (5.2.1)

The source character set is the set of legal characters that can appear in source files. It is dependent on the chosen encoding for the source file. See *Text encodings*, page 300. By default, the source character set is Raw.

The execution character set is the set of legal characters that can appear in the execution environment. These are the execution character set for character constants and string literals and their encoding types:

| Execution character set | Encoding type            |
|-------------------------|--------------------------|
| L                       | UTF-32                   |
| u                       | UTF-16                   |
| U                       | UTF-32                   |
| u8                      | UTF-8                    |
| none                    | The source character set |

Table 61: Execution character sets and their encodings

The DLIB runtime environment needs a multibyte character scanner to support a multibyte execution character set. See *Locale*, page 168.

### Bits per character in execution character set (5.2.4.2.1)

The number of bits in a character is represented by the manifest constant `CHAR_BIT`. The standard include file `limits.h` defines `CHAR_BIT` as 8.



### Mapping of characters (6.1.3.4)

The mapping of members of the source character set (in character and string literals) to members of the execution character set is made in a one-to-one way. In other words, the same representation value is used for each member in the character sets except for the escape sequences listed in the ISO standard.

### Unrepresented character constants (6.1.3.4)

The value of an integer character constant that contains a character or escape sequence not represented in the basic execution character set or in the extended character set for a wide character constant generates a diagnostic message, and will be truncated to fit the execution character set.

### Character constant with more than one character (6.1.3.4)

An integer character constant that contains more than one character will be treated as an integer constant. The value will be calculated by treating the leftmost character as the most significant character, and the rightmost character as the least significant character, in an integer constant. A diagnostic message will be issued if the value cannot be represented in an integer constant.

A wide character constant that contains more than one multibyte character generates a diagnostic message.

### Converting multibyte characters (6.1.3.4)

See *Locale*, page 168.

### Range of 'plain' char (6.2.1.1)

A 'plain' `char` has the same range as an `unsigned char`.

## INTEGERS

### Range of integer values (6.1.2.5)

The representation of integer values are in the two's complement form. The most significant bit holds the sign—1 for negative, 0 for positive and zero.

See *Basic data types—integer types*, page 409, for information about the ranges for the different integer types.

### Demotion of integers (6.2.1.2)

Converting an integer to a shorter signed integer is made by truncation. If the value cannot be represented when converting an unsigned integer to a signed integer of equal

length, the bit-pattern remains the same. In other words, a large enough value will be converted into a negative value.

### **Signed bitwise operations (6.3)**

Bitwise operations on signed integers work the same way as bitwise operations on unsigned integers—in other words, the sign-bit will be treated as any other bit, except for the operator `>>` which will behave as an arithmetic right shift.

### **Sign of the remainder on integer division (6.3.5)**

The sign of the remainder on integer division is the same as the sign of the dividend.

### **Negative valued signed right shifts (6.3.7)**

The result of a right-shift of a negative-valued signed integral type preserves the sign-bit. For example, shifting `0xFF00` down one step yields `0xFF80`.

## **FLOATING POINT**

### **Representation of floating-point values (6.1.2.5)**

The representation and sets of the various floating-point numbers adheres to IEC 60559. A typical floating-point number is built up of a sign-bit (*s*), a biased exponent (*e*), and a mantissa (*m*).

See *Basic data types—floating-point types*, page 415, for information about the ranges and sizes for the different floating-point types: `float` and `double`.

### **Converting integer values to floating-point values (6.2.1.3)**

When an integral number is cast to a floating-point value that cannot exactly represent the value, the value is rounded (up or down) to the nearest suitable value.

### **Demoting floating-point values (6.2.1.4)**

When a floating-point value is converted to a floating-point value of narrower type that cannot exactly represent the value, the value is rounded (up or down) to the nearest suitable value.

## **ARRAYS AND POINTERS**

### **size\_t (6.3.3.4, 7.1.1)**

See *size\_t*, page 418, for information about `size_t`.

**Conversion from/to pointers (6.3.4)**

See *Casting*, page 418, for information about casting of data pointers and function pointers.

**ptrdiff\_t (6.3.6, 7.1.1)**

See *ptrdiff\_t*, page 418, for information about the `ptrdiff_t`.

**REGISTERS****Honoring the register keyword (6.5.1)**

User requests for register variables are not honored.

**STRUCTURES, UNIONS, ENUMERATIONS, AND BITFIELDS****Improper access to a union (6.3.2.3)**

If a union gets its value stored through a member and is then accessed using a member of a different type, the result is solely dependent on the internal storage of the first member.

**Padding and alignment of structure members (6.5.2.1)**

See the section *Basic data types—integer types*, page 409, for information about the alignment requirement for data objects.

**Sign of 'plain' bitfields (6.5.2.1)**

A 'plain' `int` bitfield is treated as an `unsigned int` bitfield. All integer types are allowed as bitfields.

**Allocation order of bitfields within a unit (6.5.2.1)**

Bitfields are allocated within an integer from least-significant to most-significant bit.

**Can bitfields straddle a storage-unit boundary (6.5.2.1)**

Bitfields cannot straddle a storage-unit boundary for the chosen bitfield integer type.

**Integer type chosen to represent enumeration types (6.5.2.2)**

The chosen integer type for a specific enumeration type depends on the enumeration constants defined for the enumeration type. The chosen integer type is the smallest possible.

## QUALIFIERS

### Access to volatile objects (6.5.3)

Any reference to an object with volatile qualified type is an access.

## DECLARATORS

### Maximum numbers of declarators (6.5.4)

The number of declarators is not limited. The number is limited only by the available memory.

## STATEMENTS

### Maximum number of case statements (6.6.4.2)

The number of case statements (case values) in a switch statement is not limited. The number is limited only by the available memory.

## PREPROCESSING DIRECTIVES

### Character constants and conditional inclusion (6.8.1)

The character set used in the preprocessor directives is the same as the execution character set. The preprocessor recognizes negative character values if a 'plain' character is treated as a `signed` character.

### Including bracketed filenames (6.8.2)

For file specifications enclosed in angle brackets, the preprocessor does not search directories of the parent files. A parent file is the file that contains the `#include` directive. Instead, it begins by searching for the file in the directories specified on the compiler command line.

### Including quoted filenames (6.8.2)

For file specifications enclosed in quotes, the preprocessor directory search begins with the directories of the parent file, then proceeds through the directories of any grandparent files. Thus, searching begins relative to the directory containing the source file currently being processed. If there is no grandparent file and the file is not found, the search continues as if the filename was enclosed in angle brackets.

## Character sequences (6.8.2)

Preprocessor directives use the source character set, except for escape sequences. Thus, to specify a path for an include file, use only one backslash:

```
#include "mydirectory\myfile"
```

Within source code, two backslashes are necessary:

```
file = fopen("mydirectory\\myfile", "rt");
```

## Recognized pragma directives (6.8.6)

In addition to the pragma directives described in the chapter *Pragma directives*, the following directives are recognized and will have an indeterminate effect. If a pragma directive is listed both in the chapter *Pragma directives* and here, the information provided in the chapter *Pragma directives* overrides the information here.

- alignment
- baseaddr
- basic\_template\_matching
- building\_runtime
- can\_instantiate
- codeseg
- constseg
- cspy\_support
- dataseg
- define\_type\_info
- do\_not\_instantiate
- early\_dynamic\_initialization
- function
- function\_effects
- hdrstop
- important\_typedef
- instantiate
- keep\_definition
- library\_default\_requirements
- library\_provides
- library\_requirement\_override
- memory

- `module_name`
- `no_pch`
- `once`
- `system_include`
- `vector`
- `warnings`

### **Default `__DATE__` and `__TIME__` (6.8.8)**

The definitions for `__TIME__` and `__DATE__` are always available.

## **LIBRARY FUNCTIONS FOR THE IAR DLIB RUNTIME ENVIRONMENT**

**Note:** Some items in this list only apply when file descriptors are supported by the library configuration. For more information about runtime library configurations, see the chapter *The DLIB runtime environment*.

### **NULL macro (7.1.6)**

The `NULL` macro is defined to 0.

### **Diagnostic printed by the `assert` function (7.2)**

The `assert()` function prints:

```
filename:linenr expression -- assertion failed
```

when the parameter evaluates to zero.

### **Domain errors (7.5.1)**

NaN (Not a Number) will be returned by the mathematic functions on domain errors.

### **Underflow of floating-point values sets `errno` to `ERANGE` (7.5.1)**

The mathematics functions set the integer expression `errno` to `ERANGE` (a macro in `errno.h`) on underflow range errors.

### **`fmod()` functionality (7.5.6.4)**

If the second argument to `fmod()` is zero, the function returns NaN—`errno` is set to `EDOM`.

**signal() (7.7.1.1)**

The signal part of the library is not supported.

**Note:** The default implementation of `signal` does not perform anything. Use the template source code to implement application-specific signal handling. See *signal*, page 165 and *raise*, page 163, respectively.

**Terminating newline character (7.9.2)**

`stdout` stream functions recognize either `newline` or end of file (EOF) as the terminating character for a line.

**Blank lines (7.9.2)**

Space characters written to the `stdout` stream immediately before a newline character are preserved. There is no way to read the line through the `stdin` stream that was written through the `stdout` stream.

**Null characters appended to data written to binary streams (7.9.2)**

No null characters are appended to data written to binary streams.

**Files (7.9.3)**

Whether the file position indicator of an append-mode stream is initially positioned at the beginning or the end of the file, depends on the application-specific implementation of the low-level file routines.

Whether a write operation on a text stream causes the associated file to be truncated beyond that point, depends on the application-specific implementation of the low-level file routines. See *Briefly about input and output (I/O)*, page 132.

The characteristics of the file buffering is that the implementation supports files that are unbuffered, line buffered, or fully buffered.

Whether a zero-length file actually exists depends on the application-specific implementation of the low-level file routines.

Rules for composing valid file names depends on the application-specific implementation of the low-level file routines.

Whether the same file can be simultaneously open multiple times depends on the application-specific implementation of the low-level file routines.

**remove() (7.9.4.1)**

The effect of a remove operation on an open file depends on the application-specific implementation of the low-level file routines. See *Briefly about input and output (I/O)*, page 132.

**rename() (7.9.4.2)**

The effect of renaming a file to an already existing filename depends on the application-specific implementation of the low-level file routines. See *Briefly about input and output (I/O)*, page 132.

**%p in printf() (7.9.6.1)**

The argument to a `%p` conversion specifier, print pointer, to `printf()` is treated as having the type `void *`. The value will be printed as a hexadecimal number, similar to using the `%x` conversion specifier.

**%p in scanf() (7.9.6.2)**

The `%p` conversion specifier, scan pointer, to `scanf()` reads a hexadecimal number and converts it into a value with the type `void *`.

**Reading ranges in scanf() (7.9.6.2)**

A - (dash) character is always treated as a range symbol.

**File position errors (7.9.9.1, 7.9.9.4)**

On file position errors, the functions `fgetpos` and `ftell` store `EFPOS` in `errno`.

**Message generated by perror() (7.9.10.4)**

The generated message is:

*usersuppliedprefix:errormessage*

**Allocating zero bytes of memory (7.10.3)**

The `calloc()`, `malloc()`, and `realloc()` functions accept zero as an argument. Memory will be allocated, a valid pointer to that memory is returned, and the memory block can be modified later by `realloc`.

**Behavior of abort() (7.10.4.1)**

The `abort()` function does not flush stream buffers, and it does not handle files, because this is an unsupported feature.



### Behavior of `exit()` (7.10.4.3)

The argument passed to the `exit` function will be the return value returned by the `main` function to `cstartup`.

### Environment (7.10.4.4)

The set of available environment names and the method for altering the environment list is described in *getenv*, page 161.

### `system()` (7.10.4.5)

How the command processor works depends on how you have implemented the `system` function. See *system*, page 166.

### Message returned by `strerror()` (7.11.6.2)

The messages returned by `strerror()` depending on the argument is:

| Argument   | Message                   |
|------------|---------------------------|
| EZERO      | no error                  |
| EDOM       | domain error              |
| ERANGE     | range error               |
| EFPOS      | file positioning error    |
| EILSEQ     | multi-byte encoding error |
| <0    >99  | unknown error             |
| all others | error <i>nnn</i>          |

Table 62: Message returned by `strerror()`—DLIB runtime environment

### The time zone (7.12.1)

The local time zone and daylight savings time implementation is described in `__time32`, `__time64`, page 166.

### `clock()` (7.12.2.1)

From where the system clock starts counting depends on how you have implemented the `clock` function. See *clock*, page 160.



## A

- a (ielfdump option) . . . . . 628
- AADWARF (AEABI support) . . . . . 239
- AAELF (AEABI support) . . . . . 239
- \_\_AAPCS\_\_ (predefined symbol) . . . . . 520
- aapcs (compiler option) . . . . . 313
- AAPCS (AEABI support) . . . . . 239
- \_\_AAPCS\_VFP\_\_ (predefined symbol) . . . . . 520
- AAPCS64 (AEABI support) . . . . . 239
- Aarch32 execution state . . . . . 56
- AArch64
  - data models . . . . . 57
  - exception levels . . . . . 57
  - execution state . . . . . 57
- aarch64 (compiler option) . . . . . 313
- \_\_aarch64\_\_ (predefined symbol) . . . . . 520
- abi (compiler option) . . . . . 314–315
- abi (linker option) . . . . . 368
- ABI, AEABI and IA64 . . . . . 238
- abort
  - implementation-defined behavior in C . . . . . 713
  - implementation-defined behavior in C89 (DLIB) . . . . . 728
  - system termination (DLIB) . . . . . 156
- \_\_absolute (extended keyword) . . . . . 427
- absolute location
  - data, placing at (@) . . . . . 253
  - language support for . . . . . 205
  - placing data in registers (@) . . . . . 255
  - #pragma location . . . . . 456
- ABT\_STACK . . . . . 225
- accurate\_math (linker option) . . . . . 368
- activation record. *See stack frame*
- advanced heap . . . . . 226
- advanced\_heap (linker option) . . . . . 368
- aeabi (compiler option) . . . . . 314
- AEABI compliance . . . . . 238
- AEABI support functions, runtime library syntax . . . . . 148
- \_\_AEABI\_PORTABILITY\_LEVEL
  - (preprocessor symbol) . . . . . 241
- \_\_AEABI\_PORTABLE (preprocessor symbol) . . . . . 241
- AES instructions, identifying support for . . . . . 523
- algorithm (library header file) . . . . . 543
- algorithms, parallel (C++17) . . . . . 548
- alias\_def (pragma directive) . . . . . 707
- alignment . . . . . 407
  - extended, implementation-defined behavior for C++ . . . . . 679
  - forcing stricter (#pragma data\_alignment) . . . . . 448
  - heap . . . . . 227
  - implementation-defined behavior for C++ . . . . . 668
  - in structures (#pragma pack) . . . . . 461
  - in structures, causing problems . . . . . 250
  - of an object (\_\_ALIGNOF\_\_) . . . . . 206
  - of data types . . . . . 408
  - restrictions for inline assembler . . . . . 177
  - stack . . . . . 224
- alignment (pragma directive) . . . . . 707, 725
- \_\_ALIGNOF\_\_ (operator) . . . . . 206
- alignof expression, implementation-defined behavior
  - for C++ . . . . . 668
- align\_sp\_on\_irq (compiler option) . . . . . 315
- all (ielfdump option) . . . . . 628
- alternate\_target\_def (pragma directive) . . . . . 707
- anonymous structures . . . . . 251
- ANSI C. *See* C89
- any (library header file) . . . . . 543
- application
  - building, overview of . . . . . 71
  - execution, overview of . . . . . 66
  - startup and termination (DLIB) . . . . . 153
  - startup, specifying to linker . . . . . 119
- architecture, Arm . . . . . 56, 75
  - specifying . . . . . 317
- argv (argument), implementation-defined behavior in C . . . . . 700
- Arm
  - and Thumb code, overview . . . . . 80
  - memory layout . . . . . 75
  - supported devices . . . . . 56

|                                                                  |     |                                                            |     |
|------------------------------------------------------------------|-----|------------------------------------------------------------|-----|
| __arm (extended keyword) . . . . .                               | 428 | __ARM_FEATURE_SHA2 (predefined symbol) . . . . .           | 525 |
| --arm (compiler option) . . . . .                                | 315 | __ARM_FEATURE_SHA3 (predefined symbol) . . . . .           | 525 |
| Arm TrustZone . . . . .                                          | 243 | __ARM_FEATURE_SHA512 (predefined symbol) . . . . .         | 526 |
| __ARMVFP__ (predefined symbol) . . . . .                         | 529 | __ARM_FEATURE_SIMD32 (predefined symbol) . . . . .         | 526 |
| __ARMVFPV2__ (predefined symbol) . . . . .                       | 529 | __ARM_FEATURE_SM3 (predefined symbol) . . . . .            | 526 |
| __ARMVFPV3__ (predefined symbol) . . . . .                       | 529 | __ARM_FEATURE_SM4 (predefined symbol) . . . . .            | 526 |
| __ARMVFPV4__ (predefined symbol) . . . . .                       | 529 | __ARM_FEATURE_UNALIGNED (predefined symbol) . . . . .      | 526 |
| __ARMVFPV5__ (predefined symbol) . . . . .                       | 529 | __ARM_FP (predefined symbol) . . . . .                     | 526 |
| __ARMVFP_D16__ (predefined symbol) . . . . .                     | 529 | __ARM_FP16_ARGS (predefined symbol) . . . . .              | 526 |
| __ARMVFP_SP__ (predefined symbol) . . . . .                      | 529 | __ARM_FP16_FML (predefined symbol) . . . . .               | 527 |
| Armv7 generation, properties . . . . .                           | 56  | __ARM_FP16_FORMAT_IEEE (predefined symbol) . . . . .       | 527 |
| Armv8-A/R (core), execution states . . . . .                     | 56  | __arm_idc (intrinsic function) . . . . .                   | 474 |
| __ARM_ADVANCED_SIMD__ (predefined symbol) . . . . .              | 521 | __arm_idcl (intrinsic function) . . . . .                  | 474 |
| __ARM_ALIGN_MAX_PWR (predefined symbol) . . . . .                | 521 | __arm_idcl2 (intrinsic function) . . . . .                 | 474 |
| __ARM_ALIGN_MAX_STACK_PWR<br>(predefined symbol) . . . . .       | 522 | __arm_idc2 (intrinsic function) . . . . .                  | 474 |
| __ARM_ARCH (predefined symbol) . . . . .                         | 522 | __arm_mcr (intrinsic function) . . . . .                   | 475 |
| __ARM_ARCH_ISA_ARM (predefined symbol) . . . . .                 | 522 | __arm_mcr2 (intrinsic function) . . . . .                  | 475 |
| __ARM_ARCH_ISA_A64 (predefined symbol) . . . . .                 | 522 | __arm_mcr2 (intrinsic function) . . . . .                  | 475 |
| __ARM_ARCH_ISA_THUMB (predefined symbol) . . . . .               | 522 | __ARM_MEDIA__ (predefined symbol) . . . . .                | 527 |
| __ARM_ARCH_PROFILE (predefined symbol) . . . . .                 | 522 | __arm_mrc (intrinsic function) . . . . .                   | 475 |
| __ARM_BIG_ENDIAN (predefined symbol) . . . . .                   | 523 | __arm_mrc2 (intrinsic function) . . . . .                  | 475 |
| __arm_cdp (intrinsic function) . . . . .                         | 473 | __arm_mrcc (intrinsic function) . . . . .                  | 475 |
| __arm_cdp2 (intrinsic function) . . . . .                        | 473 | __arm_mrcc2 (intrinsic function) . . . . .                 | 475 |
| __ARM_FEATURE_AES (predefined symbol) . . . . .                  | 523 | __ARM_NEON (predefined symbol) . . . . .                   | 527 |
| __ARM_FEATURE_CLZ (predefined symbol) . . . . .                  | 523 | __ARM_NEON_FP (predefined symbol) . . . . .                | 527 |
| __ARM_FEATURE_CMSE (predefined symbol) . . . . .                 | 523 | __ARM_PCS_AAPCS64 (predefined symbol) . . . . .            | 527 |
| __ARM_FEATURE_CRC32 (predefined symbol) . . . . .                | 523 | __ARM_PROFILE_M__ (predefined symbol) . . . . .            | 528 |
| __ARM_FEATURE_CRYPT0 (predefined symbol) . . . . .               | 524 | __ARM_ROPI (predefined symbol) . . . . .                   | 528 |
| __ARM_FEATURE_DIRECTED_ROUNDING<br>(predefined symbol) . . . . . | 524 | __arm_rsr (intrinsic function) . . . . .                   | 476 |
| __ARM_FEATURE_DSP (predefined symbol) . . . . .                  | 524 | __arm_rsrp (intrinsic function) . . . . .                  | 476 |
| __ARM_FEATURE_FMA (predefined symbol) . . . . .                  | 524 | __arm_rsr64 (intrinsic function) . . . . .                 | 476 |
| __ARM_FEATURE_FP16_FML (predefined symbol) . . . . .             | 524 | __ARM_RWPI (predefined symbol) . . . . .                   | 528 |
| __ARM_FEATURE_IDIV (predefined symbol) . . . . .                 | 524 | __ARM_SIZEOF_MINIMAL_ENUM<br>(predefined symbol) . . . . . | 528 |
| __ARM_FEATURE_NUMERIC_MAXMIN<br>(predefined symbol) . . . . .    | 525 | __ARM_SIZEOF_WCHAR_T (predefined symbol) . . . . .         | 528 |
| __ARM_FEATURE_QBIT (predefined symbol) . . . . .                 | 525 | __arm_stc (intrinsic function) . . . . .                   | 477 |
| __ARM_FEATURE_QRDMX (predefined symbol) . . . . .                | 525 | __arm_stcl (intrinsic function) . . . . .                  | 477 |
| __ARM_FEATURE_SAT (predefined symbol) . . . . .                  | 525 | __arm_stc2 (intrinsic function) . . . . .                  | 477 |
|                                                                  |     | __arm_stc2l (intrinsic function) . . . . .                 | 477 |

- `__arm_wsr` (intrinsic function) . . . . . 477
- `__arm__` (predefined symbol) . . . . . 521
- `__ARM_32BIT_STATE` (predefined symbol) . . . . . 521
- `__ARM_64BIT_STATE` (predefined symbol) . . . . . 521
- `__ARM4TM__` (predefined symbol) . . . . . 530
- `__ARM5__` (predefined symbol) . . . . . 530
- `__ARM5E__` (predefined symbol) . . . . . 530
- `__ARM6__` (predefined symbol) . . . . . 530
- `__ARM6M__` (predefined symbol) . . . . . 530
- `__ARM6SM__` (predefined symbol) . . . . . 530
- `__ARM7A__` (predefined symbol) . . . . . 530
- `__ARM7EM__` (predefined symbol) . . . . . 530
- `__ARM7M__` (predefined symbol) . . . . . 530
- `__ARM7R__` (predefined symbol) . . . . . 530
- `__ARM8A__` (predefined symbol) . . . . . 530
- `__ARM8EM_MAINLINE__` (predefined symbol) . . . . . 530
- `__ARM8M_BASELINE__` (predefined symbol) . . . . . 530
- `__ARM8M_MAINLINE__` (predefined symbol) . . . . . 530
- `__ARM8R__` (predefined symbol) . . . . . 530
- array (library header file) . . . . . 544
- arrays
  - flexible members of structures . . . . . 208
  - implementation-defined behavior . . . . . 705
  - implementation-defined behavior in C89 . . . . . 722
  - non-lvalue . . . . . 209
  - of incomplete types . . . . . 207, 221
  - single-value initialization . . . . . 209
  - zero length . . . . . 208
- `array::const_iterator`,  
implementation-defined behavior for C++ . . . . . 683
- `array::iterator`, implementation-defined behavior for C++ . . . . . 683
- `asm`, `__asm` (language extension) . . . . . 178
  - implementation-defined behavior for C++ . . . . . 671
- assembler code
  - calling from C . . . . . 186
  - calling from C++ . . . . . 189
  - inserting inline . . . . . 176
- assembler directives
  - for call frame information . . . . . 199
  - using in inline assembler code . . . . . 177
- assembler instructions
  - for software interrupts . . . . . 87
  - inserting inline . . . . . 176
- assembler labels
  - default for application startup . . . . . 71, 119
  - making public (`--public_equ`) . . . . . 349
- assembler language interface . . . . . 175
  - calling convention. *See* assembler code
- assembler list file, generating . . . . . 332
- assembler output file . . . . . 188
- assembler statements . . . . . 210
- assembly language. *See* assembler language
- asserts
  - implementation-defined behavior of in C . . . . . 709
  - implementation-defined behavior of in C89, (DLIB) . . . . . 726
  - including in application . . . . . 536
- `assert.h` (DLIB header file) . . . . . 542
- assignment of pointer types . . . . . 210
- `assoc_laguerre`,  
implementation-defined behavior for C++ . . . . . 691
- `assoc_legendre`,  
implementation-defined behavior for C++ . . . . . 691
- @ (operator)
  - placing at absolute address . . . . . 253
  - placing in sections . . . . . 254
- `atexit` limit, setting up . . . . . 120
- `atexit`, reserving space for calls . . . . . 120
- atomic accesses . . . . . 548
- atomic operations . . . . . 213, 548
- atomic types for bitfields,  
implementation-defined behavior in C . . . . . 706
- atomic types, lock free operation,  
implementation-defined behavior for C++ . . . . . 696
- `atomic` (library header file) . . . . . 544
- `ATOMIC_..._LOCK_FREE` macros,  
implementation-defined behavior for C++ . . . . . 696
- attribute declaration,  
implementation-defined behavior for C++ . . . . . 671

|                                                |     |
|------------------------------------------------|-----|
| attributes                                     |     |
| non-standard, implementation-defined behavior  |     |
| for C++                                        | 671 |
| object                                         | 425 |
| type                                           | 423 |
| auto variables                                 | 76  |
| at function entrance                           | 192 |
| programming hints for efficient code           | 263 |
| using in inline assembler statements           | 177 |
| automatic variables. <i>See</i> auto variables |     |
| auto_ptr (deprecated function), enabling       | 548 |
| auto_ptr_ref (deprecated function), enabling   | 548 |
| __auto_type (GNU C keyword)                    | 211 |
| auto, packing algorithm for initializers       | 571 |
| A64 code                                       |     |
| generating (--aarch64)                         | 313 |
| overview                                       | 80  |

## B

|                                                         |     |
|---------------------------------------------------------|-----|
| backtrace information <i>See</i> call frame information |     |
| bad_alloc::what,                                        |     |
| implementation-defined behavior for C++                 | 676 |
| bad_any_access::what,                                   |     |
| implementation-defined behavior for C++                 | 677 |
| bad_array_new_length::what,                             |     |
| implementation-defined behavior for C++                 | 676 |
| bad_cast::what,                                         |     |
| implementation-defined behavior for C++                 | 676 |
| bad_exception::what,                                    |     |
| implementation-defined behavior for C++                 | 677 |
| bad_function_call::what,                                |     |
| implementation-defined behavior for C++                 | 679 |
| bad_optional_access::what,                              |     |
| implementation-defined behavior for C++                 | 677 |
| bad_typeid::what,                                       |     |
| implementation-defined behavior for C++                 | 676 |
| bad_variant_access::what,                               |     |
| implementation-defined behavior for C++                 | 677 |

|                                             |          |
|---------------------------------------------|----------|
| bad_weak_ptr::what,                         |          |
| implementation-defined behavior for C++     | 678      |
| Barr, Michael                               | 47       |
| baseaddr (pragma directive)                 | 707, 725 |
| __BASE_FILE__ (predefined symbol)           | 529      |
| basic heap                                  | 226      |
| basic_filebuf move constructor,             |          |
| implementation-defined behavior for C++     | 693      |
| basic_filebuf::setbuf,                      |          |
| implementation-defined behavior for C++     | 694      |
| basic_filebuf::sync,                        |          |
| implementation-defined behavior for C++     | 694      |
| --basic_heap (linker option)                | 369      |
| basic_ios::failure,                         |          |
| implementation-defined behavior for C++     | 693      |
| basic_streambuf::setbuf,                    |          |
| implementation-defined behavior for C++     | 693      |
| basic_stringbuf move constructor,           |          |
| implementation-defined behavior for C++     | 693      |
| basic_string_view::const_iterator,          |          |
| implementation-defined behavior for C++     | 681      |
| basic_string::const_iterator,               |          |
| implementation-defined behavior for C++     | 681      |
| basic_string::iterator,                     |          |
| implementation-defined behavior for C++     | 681      |
| basic_template_matching (pragma directive)  | 707, 725 |
| batch files                                 |          |
| error return codes                          | 304      |
| none for building library from command line | 141      |
| Bessel functions,                           |          |
| implementation-defined behavior for C++     | 691      |
| Bessel polynomials,                         |          |
| implementation-defined behavior for C++     | 692      |
| --BE32 (linker option)                      | 369      |
| --BE8 (linker option)                       | 369      |
| __big_endian (extended keyword)             | 428      |
| big-endian (byte order)                     | 72       |
| --bin (ielftool option)                     | 629      |
| binary files, linker forcing inclusion of   | 382      |
| binary integer literals, support for        | 208      |

binary streams . . . . . 711  
 binary streams in C89 (DLIB) . . . . . 727  
 binary\_function (deprecated function), enabling . . . . . 548  
 bind expressions, placeholders,  
 implementation-defined behavior for C++ . . . . . 679  
 --bin-multi (ielftool option) . . . . . 629  
 bit negation . . . . . 264  
 bitfields  
   data representation of . . . . . 410  
   hints . . . . . 249  
   implementation-defined behavior for C++ . . . . . 672  
   implementation-defined behavior in C . . . . . 705  
   implementation-defined behavior in C89 . . . . . 723  
   non-standard types in . . . . . 206  
 bitfields (pragma directive) . . . . . 446  
 bitfield, value of,  
 implementation-defined behavior for C++ . . . . . 669–670, 672  
 bits in a byte, implementation-defined behavior in C . . . . . 701  
 bitset (library header file) . . . . . 544  
 bits, number of in one byte,  
 implementation-defined behavior for C++ . . . . . 662  
 bold style, in this guide . . . . . 48  
 bool (data type) . . . . . 409–410  
   adding support for in DLIB . . . . . 543, 547  
 --bounds\_table\_size (linker option) . . . . . 363  
 branches, eliminating redundant (optimization) . . . . . 258  
 .bss (ELF section) . . . . . 276, 595  
 buffer overflow, protection against . . . . . 94  
 build for directive (in linker configuration file) . . . . . 555  
 building\_runtime (pragma directive) . . . . . 708, 725  
 \_\_BUILD\_NUMBER\_\_ (predefined symbol) . . . . . 529  
 builtins. *See* built-in functions  
 built-in functions, GCC-style . . . . . 511  
 byte order . . . . . 72, 408  
   identifying . . . . . 532  
 Byte Order Mark, suppressing . . . . . 389  
 bytes, number of bits in,  
 implementation-defined behavior for C++ . . . . . 662

## C

C and C++ linkage . . . . . 190  
 C/C++ calling convention. *See* calling convention  
 C header files . . . . . 542  
 C language, overview . . . . . 203  
 C library functions, runtime library syntax . . . . . 146  
 call frame information . . . . . 199  
   disabling (--no\_call\_frame\_info) . . . . . 336  
   in assembler list file . . . . . 188  
   in assembler list file (-IA) . . . . . 332  
 call graph root (stack usage control directive) . . . . . 602  
 call stack . . . . . 199  
 callee-save registers, stored on stack . . . . . 76  
 calling convention  
   C++, requiring C linkage . . . . . 189  
   in compiler . . . . . 189  
 calloc (library function) . . . . . 77  
   *See also* heap  
   implementation-defined behavior in C89 (DLIB) . . . . . 728  
 calls (pragma directive) . . . . . 447  
 --call\_graph (linker option) . . . . . 370  
 call\_graph\_root (pragma directive) . . . . . 448  
 call-info (in stack usage control file) . . . . . 606  
 canaries. *See* stack canary  
 can\_instantiate (pragma directive) . . . . . 708, 725  
 case ranges, GNU style . . . . . 211  
 cassert (library header file) . . . . . 546  
 casting  
   implementation-defined behavior for C++ . . . . . 668–670  
   of pointers and integers . . . . . 418  
   pointers to integers, language extension . . . . . 208  
 category (in stack usage control file) . . . . . 605  
 ccomplex (library header file) . . . . . 546  
 ctype (DLIB header file) . . . . . 546  
 CDE intrinsic functions . . . . . 473  
 \_\_CDP (intrinsic function) . . . . . 478  
 \_\_CDP2 (intrinsic function) . . . . . 478  
 cerrno (DLIB header file) . . . . . 546

|                                                              |          |
|--------------------------------------------------------------|----------|
| cexit (system termination code)                              |          |
| customizing system termination . . . . .                     | 157      |
| in DLIB . . . . .                                            | 153      |
| <cfenv> functions and floating-point,                        |          |
| implementation-defined behavior for C++ . . . . .            | 689      |
| cfenv (library header file) . . . . .                        | 546      |
| CFI (assembler directive) . . . . .                          | 199      |
| CFI_COMMON_ARM (call frame information macro) . . . . .      | 202      |
| CFI_COMMON_Thumb (call frame information macro) . . . . .    | 202      |
| CFI_NAMES_BLOCK (call frame information macro) . . . . .     | 202      |
| cfloat (DLIB header file) . . . . .                          | 546      |
| char (data type) . . . . .                                   | 409      |
| changing default representation (--char_is_signed) . . . . . | 316      |
| changing representation (--char_is_unsigned) . . . . .       | 316      |
| implementation-defined behavior for C++ . . . . .            | 667      |
| implementation-defined behavior in C . . . . .               | 702      |
| signed and unsigned . . . . .                                | 410      |
| character literals,                                          |          |
| implementation-defined behavior for C++ . . . . .            | 665, 673 |
| character set                                                |          |
| implementation-defined behavior for C++ . . . . .            | 662–663  |
| implementation-defined behavior in C . . . . .               | 700      |
| characters                                                   |          |
| implementation-defined behavior in C . . . . .               | 701      |
| implementation-defined behavior in C89 . . . . .             | 720      |
| charconv (library header file) . . . . .                     | 544      |
| --char_is_signed (compiler option) . . . . .                 | 316      |
| --char_is_unsigned (compiler option) . . . . .               | 316      |
| char_traits<char16_t>::eof,                                  |          |
| implementation-defined behavior for C++ . . . . .            | 680      |
| char_traits<char32_t>::eof,                                  |          |
| implementation-defined behavior for C++ . . . . .            | 680      |
| char_traits<wchar_t>::eof,                                   |          |
| implementation-defined behavior for C++ . . . . .            | 681      |
| char16_t (data type) . . . . .                               | 410      |
| implementation-defined behavior in C . . . . .               | 703      |
| char32_t (data type) . . . . .                               | 410      |
| implementation-defined behavior in C . . . . .               | 703      |
| check that (linker directive) . . . . .                      | 585      |
| checksum                                                     |          |
| calculation of . . . . .                                     | 229      |
| display format in C-SPY for symbol . . . . .                 | 238      |
| --checksum (ielftool option) . . . . .                       | 630      |
| chrono (library header file) . . . . .                       | 544, 551 |
| steady_clock, not available in Libc++ . . . . .              | 544      |
| cinttypes (DLIB header file) . . . . .                       | 546      |
| ciso646 (library header file) . . . . .                      | 546      |
| class type, passing argument of,                             |          |
| implementation-defined behavior for C++ . . . . .            | 669      |
| CLIBABI (AEABI support) . . . . .                            | 239      |
| limits (DLIB header file) . . . . .                          | 546      |
| lobber . . . . .                                             | 177      |
| locale (DLIB header file) . . . . .                          | 547      |
| clock (DLIB library function),                               |          |
| implementation-defined behavior in C89 . . . . .             | 729      |
| CLOCKS_PER_SEC (time.h macro) . . . . .                      | 551      |
| and clock() . . . . .                                        | 160      |
| __CLREX (intrinsic function) . . . . .                       | 478      |
| clustering (compiler transformation) . . . . .               | 261      |
| disabling (--no_clustering) . . . . .                        | 336      |
| __CLZ (intrinsic function) . . . . .                         | 479      |
| CLZ instructions, identifying support for . . . . .          | 523      |
| cmain (system initialization code), in DLIB . . . . .        | 153      |
| CMake, using with ielftool . . . . .                         | 613      |
| cmath (DLIB header file) . . . . .                           | 547      |
| CMSE . . . . .                                               | 243      |
| --cmse (compiler option) . . . . .                           | 317      |
| __cmse_nonsecure_call (extended keyword) . . . . .           | 428      |
| __cmse_nonsecure_entry (extended keyword) . . . . .          | 429      |
| CMSIS integration . . . . .                                  | 241      |
| code                                                         |          |
| Arm and Thumb, overview . . . . .                            | 80       |
| dead, eliminating (optimization) . . . . .                   | 258      |
| facilitating for good generation of . . . . .                | 262      |
| hoisting (optimization) . . . . .                            | 258      |
| interruption of execution . . . . .                          | 83       |
| 32-bit, overview . . . . .                                   | 80       |
| 64-bit, overview . . . . .                                   | 80       |
| --code (ielfdump option) . . . . .                           | 633      |



- code motion (compiler transformation) . . . . . 260
  - disabling (`--no_code_motion`) . . . . . 336
- code pointers. *See* function pointers
- codecvt (library header file) . . . . . 544
- codeseg (pragma directive) . . . . . 708, 725
- coercion. *See* casting
- command line flags. *See* command line options
- command line options
  - See also* compiler options
  - See also* linker options
  - IAR utilities . . . . . 628
  - part of compiler invocation syntax . . . . . 295
  - part of linker invocation syntax . . . . . 296
  - passing . . . . . 296
  - typographic convention . . . . . 48
- command line switches. *See* command line options
- command prompt icon, in this guide . . . . . 49
- .comment (ELF section) . . . . . 594
- comments
  - after preprocessor directives . . . . . 209
- common block (call frame information) . . . . . 199
- common subexpr elimination (compiler transformation) . 260
  - disabling (`--no_cse`) . . . . . 337
- Common.i (CFI header example file) . . . . . 202
- compilation date
  - exact time of (`__TIME__`) . . . . . 535
  - identifying (`__DATE__`) . . . . . 530
- compiler
  - environment variables . . . . . 297
  - invocation syntax . . . . . 295
  - output from . . . . . 298
  - version number, testing . . . . . 535
- compiler listing, generating (-l) . . . . . 332
- compiler object file . . . . . 64
  - including debug information in (`--debug, -r`) . . . . . 320
  - output from compiler . . . . . 298
- compiler optimization levels. . . . . 258
- compiler options . . . . . 305
  - passing to compiler . . . . . 296
  - reading from file (-f) . . . . . 328
  - reading from file (--f) . . . . . 329
  - specifying parameters . . . . . 307
  - summary . . . . . 307
  - syntax . . . . . 305
    - for creating skeleton code . . . . . 188
    - instruction scheduling . . . . . 262
- compiler platform, identifying . . . . . 531
- compiler transformations . . . . . 256
- compiling
  - from the command line . . . . . 71
  - syntax . . . . . 295
- complex (library header file) . . . . . 544
- complex.h (library header file) . . . . . 542
- computer style (monospace font), typographic convention. 48
- concatenating strings. . . . . 211, 221
- concatenating wide string literals with different encoding types, implementation-defined behavior in C . . . . . 703
- condition\_variable (library header file) . . . . . 544
- config (linker option) . . . . . 370
- configuration
  - basic project settings . . . . . 71
  - `__low_level_init` . . . . . 157
- configuration files
  - for library project. *See* library configuration files
  - for linker. *See* linker configuration file
- configuration symbols
  - for file input and output . . . . . 168
  - in library configuration files. . . . . 141
  - in linker configuration files . . . . . 586
  - specifying for linker . . . . . 371
- config\_def (linker option) . . . . . 371
- config\_search (linker option) . . . . . 371
- consistency, module . . . . . 127
- constseg (pragma directive) . . . . . 708, 725
- const\_mem\_fun (deprecated function), enabling . . . . . 548
- const\_mem\_fun\_ref\_t (deprecated function), enabling . . 548
- const, declaring objects . . . . . 422
- contents, of this guide . . . . . 44
- control characters, implementation-defined behavior in C 716

|                                                                    |            |                                                         |          |
|--------------------------------------------------------------------|------------|---------------------------------------------------------|----------|
| conventions, used in this guide . . . . .                          | 48         | cstartup (system startup code) . . . . .                | 153      |
| conversion (type). <i>See</i> casting                              |            | customizing system initialization . . . . .             | 157      |
| copyright notice . . . . .                                         | 2          | source files for (DLIB) . . . . .                       | 153, 157 |
| __CORE__ (predefined symbol) . . . . .                             | 530        | cstat_disable (pragma directive) . . . . .              | 443      |
| core                                                               |            | cstat_dump (pragma directive) . . . . .                 | 708      |
| default . . . . .                                                  | 55         | cstat_enable (pragma directive) . . . . .               | 443      |
| identifying . . . . .                                              | 530        | cstat_restore (pragma directive) . . . . .              | 443      |
| selecting . . . . .                                                | 72–73, 317 | cstat_suppress (pragma directive) . . . . .             | 443      |
| Cortex-M, special considerations for interrupt functions . . . . . | 82         | csdalign (DLIB header file) . . . . .                   | 547      |
| cos (library function) . . . . .                                   | 540        | csdarg (DLIB header file) . . . . .                     | 547      |
| __COUNTER__ (predefined symbol) . . . . .                          | 530        | csdbool (DLIB header file) . . . . .                    | 547      |
| __cplusplus (predefined symbol) . . . . .                          | 530        | csddef (DLIB header file) . . . . .                     | 547      |
| cplusplus_neutral (pragma directive) . . . . .                     | 708        | csdstdio (DLIB header file) . . . . .                   | 547      |
| CPPABI (AEABI support) . . . . .                                   | 239        | csdstdlib (DLIB header file) . . . . .                  | 547      |
| CPPABI64 (AEABI support) . . . . .                                 | 239        | csdtnoreturn (DLIB header file) . . . . .               | 547      |
| --cpp_init_routine (linker option) . . . . .                       | 372        | cstring (DLIB header file) . . . . .                    | 547      |
| --cpu (compiler option) . . . . .                                  | 317        | ctgmath (library header file) . . . . .                 | 547      |
| --cpu (linker option) . . . . .                                    | 372        | cthreads (DLIB header file) . . . . .                   | 547      |
| __CPU_MODE__ (predefined symbol) . . . . .                         | 530        | ctime (DLIB header file) . . . . .                      | 547      |
| --cpu_mode (compiler option) . . . . .                             | 319        | cctype::table_size,                                     |          |
| CPU, specifying on command line for compiler . . . . .             | 317        | implementation-defined behavior for C++ . . . . .       | 682      |
| __crc32b (intrinsic function) . . . . .                            | 479        | ctype.h (library header file) . . . . .                 | 542      |
| __crc32cb (intrinsic function) . . . . .                           | 479        | cuchar (DLIB header file) . . . . .                     | 547      |
| __crc32cd (intrinsic function) . . . . .                           | 479        | cwctype.h (library header file) . . . . .               | 547      |
| __crc32ch (intrinsic function) . . . . .                           | 479        | cyl_bessel_i functions,                                 |          |
| __crc32cw (intrinsic function) . . . . .                           | 479        | implementation-defined behavior for C++ . . . . .       | 691      |
| __crc32d (intrinsic function) . . . . .                            | 479        | cyl_bessel_j functions,                                 |          |
| __crc32h (intrinsic function) . . . . .                            | 479        | implementation-defined behavior for C++ . . . . .       | 691      |
| __crc32w (intrinsic function) . . . . .                            | 479        | cyl_bessel_k functions,                                 |          |
| --create (iarchive option) . . . . .                               | 634        | implementation-defined behavior for C++ . . . . .       | 691      |
| cryptographic instructions, identifying support for . . . . .      | 524        | cyl_neumann functions,                                  |          |
| csetjmp (DLIB header file) . . . . .                               | 547        | implementation-defined behavior for C++ . . . . .       | 691      |
| csignal (DLIB header file) . . . . .                               | 547        | C_INCLUDE (environment variable) . . . . .              | 297      |
| cspy_support (pragma directive) . . . . .                          | 708, 725   | C-RUN runtime error checking, documentation . . . . .   | 46       |
| CSTACK . . . . .                                                   | 225        | C-SPY                                                   |          |
| CSTACK (ELF block) . . . . .                                       | 595        | debug support for C++ . . . . .                         | 218      |
| <i>See also</i> stack                                              |            | interface to system termination . . . . .               | 157      |
| setting up size for . . . . .                                      | 120        | C-STAT for static analysis, documentation for . . . . . | 46       |
|                                                                    |            | C++                                                     |          |
|                                                                    |            | absolute location . . . . .                             | 254      |

- calling convention . . . . . 189
  - header files . . . . . 543
  - implementation-defined behavior . . . . . 661
  - language extensions . . . . . 219
  - manual dynamic initialization . . . . . 372, 388
  - static member variables . . . . . 254
  - support for . . . . . 55
  - c++ (compiler option) . . . . . 319
  - C++ header files . . . . . 543
  - C++ library functions, runtime library syntax . . . . . 146–147
  - C++17. *See* Standard C++
  - C18. *See* Standard C
  - C89
    - implementation-defined behavior . . . . . 719
    - support for . . . . . 203
  - c89 (compiler option) . . . . . 316
  - C90 and C94. *See* C89
- ## D
- D (compiler option) . . . . . 320
  - d (iarchive option) . . . . . 634
  - DAIF (register)
    - disabling debug requests in . . . . . 480
    - disabling fast interrupt requests in . . . . . 480
    - disabling interrupt requests in . . . . . 480
    - enabling debug requests in . . . . . 481
    - enabling interrupt requests in . . . . . 482
    - enabling synchronous error requests in . . . . . 482
  - data
    - alignment of . . . . . 407
    - different ways of storing . . . . . 75
    - located, declaring extern . . . . . 254
    - placing . . . . . 252
      - at absolute location . . . . . 253
      - placing in registers . . . . . 255
      - representation of . . . . . 407
      - storage . . . . . 75
  - data block (call frame information) . . . . . 199
  - data model
    - overview . . . . . 57
    - specifying . . . . . 73, 314–315, 368
  - data pointers . . . . . 417
  - data types . . . . . 409
    - floating point . . . . . 415
    - in C++ . . . . . 422
    - integer types . . . . . 409
  - .data (ELF section) . . . . . 276, 595
  - dataseg (pragma directive) . . . . . 708, 725
  - data\_alignment (pragma directive) . . . . . 448
  - .data\_init (ELF section) . . . . . 595
  - \_\_DATE\_\_ (predefined symbol) . . . . . 530
    - implementation-defined behavior for C++ . . . . . 674
  - date (library function), configuring support for . . . . . 138
  - daylight savings time (DLIB), enabling . . . . . 402
  - DC32 (assembler directive) . . . . . 177
  - dead code elimination (optimization) . . . . . 258
  - debug (compiler option) . . . . . 320
  - debug information
    - excluding from executable image . . . . . 401
    - including in object file . . . . . 320
  - .debug (ELF section) . . . . . 594
  - debug\_heap (linker option) . . . . . 363
  - decimal point, implementation-defined behavior in C . . . 715
  - declarations
    - empty . . . . . 209
    - Kernighan & Ritchie . . . . . 264
    - of functions . . . . . 190
  - declarators, implementation-defined behavior in C89 . . . 724
  - default\_no\_bounds (pragma directive) . . . . . 443
  - default\_to\_complex\_ranges (linker option) . . . . . 372
  - define block (linker directive) . . . . . 563
  - define memory (linker directive) . . . . . 556
  - define overlay (linker directive) . . . . . 569
  - define region (linker directive) . . . . . 556
  - define section (linker directive) . . . . . 566
  - define symbol (linker directive) . . . . . 586
  - define\_symbol (linker option) . . . . . 373

|                                                             |          |                                                      |          |
|-------------------------------------------------------------|----------|------------------------------------------------------|----------|
| define_type_info (pragma directive) . . . . .               | 708, 725 | isymexport . . . . .                                 | 624      |
| define_without_bounds (pragma directive) . . . . .          | 444      | --diagnostics_tables (compiler option) . . . . .     | 324      |
| define_with_bounds (pragma directive) . . . . .             | 444      | --diagnostics_tables (linker option) . . . . .       | 376      |
| --delete (iarchive option) . . . . .                        | 634      | diag_default (pragma directive) . . . . .            | 451      |
| delete (keyword) . . . . .                                  | 77       | --diag_error (compiler option) . . . . .             | 322      |
| denormalized numbers. <i>See</i> subnormal numbers          |          | --no_fragments (compiler option) . . . . .           | 338      |
| --dependencies (compiler option) . . . . .                  | 321      | --diag_error (linker option) . . . . .               | 374      |
| --dependencies (linker option) . . . . .                    | 373      | diag_error (pragma directive) . . . . .              | 452      |
| deprecated (pragma directive) . . . . .                     | 451      | --diag_remark (compiler option) . . . . .            | 323      |
| --deprecated_feature_warnings (compiler option) . . . . .   | 322      | --diag_remark (linker option) . . . . .              | 375      |
| deque (library header file) . . . . .                       | 544      | diag_remark (pragma directive) . . . . .             | 452      |
| designated initializer ranges, GNU style . . . . .          | 211      | --diag_suppress (compiler option) . . . . .          | 323      |
| destructors and interrupts, using . . . . .                 | 217      | --diag_suppress (linker option) . . . . .            | 375      |
| device description files, preconfigured for C-SPY . . . . . | 58       | diag_suppress (pragma directive) . . . . .           | 453      |
| device support . . . . .                                    | 56       | --diag_warning (compiler option) . . . . .           | 324      |
| devices, interactive,                                       |          | --diag_warning (linker option) . . . . .             | 376      |
| implementation-defined behavior for C++ . . . . .           | 662      | diag_warning (pragma directive) . . . . .            | 453      |
| diagnostic messages . . . . .                               | 302      | directives                                           |          |
| classifying as compilation errors . . . . .                 | 322      | pragma . . . . .                                     | 59, 443  |
| classifying as compilation remarks . . . . .                | 323      | stack usage control . . . . .                        | 601      |
| classifying as compiler warnings . . . . .                  | 324      | to the linker . . . . .                              | 553      |
| classifying as errors . . . . .                             | 338      | directory, specifying as parameter . . . . .         | 306      |
| classifying as linker warnings . . . . .                    | 376      | disable_check (pragma directive) . . . . .           | 444      |
| classifying as linking errors . . . . .                     | 374      | __disable_debug (intrinsic function) . . . . .       | 480      |
| classifying as linking remarks . . . . .                    | 375      | __disable_fiq (intrinsic function) . . . . .         | 480      |
| disabling compiler warnings . . . . .                       | 345      | __disable_interrupt (intrinsic function) . . . . .   | 480      |
| disabling linker warnings . . . . .                         | 394      | __disable_irq (intrinsic function) . . . . .         | 480      |
| disabling wrapping of in compiler . . . . .                 | 345      | __disable_SError (intrinsic function) . . . . .      | 481      |
| disabling wrapping of in linker . . . . .                   | 395      | --disasm_data (ielfdump option) . . . . .            | 635      |
| enabling compiler remarks . . . . .                         | 350      | --discard_unused_publics (compiler option) . . . . . | 324      |
| enabling linker remarks . . . . .                           | 397      | disclaimer . . . . .                                 | 2        |
| listing all used by compiler . . . . .                      | 324      | DLIB . . . . .                                       | 541      |
| listing all used by linker . . . . .                        | 376      | configurations . . . . .                             | 142      |
| suppressing in compiler . . . . .                           | 323      | configuring . . . . .                                | 140, 325 |
| suppressing in linker . . . . .                             | 375      | C++ support . . . . .                                | 55       |
| diagnostics                                                 |          | naming convention . . . . .                          | 49       |
| iarchive . . . . .                                          | 611      | reference information . . . . .                      | 539      |
| implementation-defined behavior for C++ . . . . .           | 661      | runtime environment . . . . .                        | 131      |
| implementation-defined behavior in C . . . . .              | 699      | --dlib_config (compiler option) . . . . .            | 325      |
| iobjmanip . . . . .                                         | 618      |                                                      |          |

- DLib\_Defaults.h (library configuration file) . . . . . 141
  - \_\_DLIB\_FILE\_DESCRIPTOR (configuration symbol) . . 168
  - \_\_DMB (intrinsic function) . . . . . 481
  - do not initialize (linker directive) . . . . . 573
  - document conventions . . . . . 48
  - documentation
    - contents of this . . . . . 44
    - how to use this . . . . . 43
    - overview of guides . . . . . 45
    - who should read this . . . . . 43
  - \$\$ (in reserved identifiers) . . . . . 301
  - domain errors, implementation-defined behavior in C . . 710
  - domain errors, implementation-defined behavior in C89 (DLIB) . . . . . 726
  - double underscore (in reserved identifiers) . . . . . 301
  - double (data type) . . . . . 415
  - do\_explicit\_zero\_opt\_in\_named\_sections (compiler option) . . . . . 326
  - do\_not\_instantiate (pragma directive) . . . . . 708, 725
  - do\_segment\_pad (linker option) . . . . . 376
  - \_\_DSB (intrinsic function) . . . . . 481
  - duplicate section merging (linker optimization) . . . . . 130
  - DWARF64 (AEABI support) . . . . . 239
  - dynamic initialization . . . . . 153
    - and C++ . . . . . 106
  - dynamic linker
    - search path for . . . . . 290–291
  - dynamic linker, for loading shared objects . . . . . 270
  - dynamic memory . . . . . 77
  - dynamic RTTI data, including in the image . . . . . 390
  - .dynamic (ELF section) . . . . . 276
  - dynstr (ELF section) . . . . . 275
  - .dynsym (ELF section) . . . . . 275
- ## E
- e (compiler option) . . . . . 326
  - eager loading (of shared objects) . . . . . 272
  - early\_initialization (pragma directive) . . . . . 708, 725
  - edit (isymexport option) . . . . . 635
  - edition, of this guide . . . . . 2
  - ELF contents in image, extending . . . . . 376
  - ELF utilities . . . . . 609
  - ELF64 (AEABI support) . . . . . 239
  - embedded assembly function, declaring (\_\_naked) . . . . . 431
  - embedded systems, IAR special support for . . . . . 59
  - empty region (in linker configuration file) . . . . . 561
  - empty translation unit . . . . . 210
  - \_\_enable\_debug (intrinsic function) . . . . . 481
  - \_\_enable\_fiq (intrinsic function) . . . . . 482
  - enable\_hardware\_workaround (compiler option) . . . . . 327
  - enable\_hardware\_workaround (linker option) . . . . . 377
  - \_\_enable\_interrupt (intrinsic function) . . . . . 482
  - \_\_enable\_irq (intrinsic function) . . . . . 482
  - enable\_restrict (compiler option) . . . . . 327
  - \_\_enable\_SError (intrinsic function) . . . . . 482
  - enable\_stack\_usage (linker option) . . . . . 377
  - enabling restrict keyword . . . . . 327
  - encoding in text output file . . . . . 401
  - encodings . . . . . 300
    - Raw . . . . . 300
    - system default locale . . . . . 300
    - Unicode . . . . . 300
    - UTF-16 . . . . . 300
    - UTF-8 . . . . . 300
  - endianness. *See* byte order
  - entry (linker option) . . . . . 378
  - entry label, program . . . . . 154
  - entry point, setting to zero . . . . . 390
  - entry\_list\_in\_address\_order (linker option) . . . . . 378
  - entry, implementation-defined behavior for C++ . . . . . 666
  - enum (data type) . . . . . 410
  - enumerations
    - data representation . . . . . 410
    - forward declarations of . . . . . 208
    - implementation-defined behavior for C++ . . . . . 671
    - implementation-defined behavior in C . . . . . 705
    - implementation-defined behavior in C89 . . . . . 723

|                                                                 |     |                                                   |       |
|-----------------------------------------------------------------|-----|---------------------------------------------------|-------|
| --enum_is_int (compiler option) . . . . .                       | 328 | exception functions (64-bit mode) . . . . .       | 88    |
| environment                                                     |     | nested . . . . .                                  | 90    |
| implementation-defined behavior in C . . . . .                  | 700 | exception functions, installing . . . . .         | 84    |
| implementation-defined behavior in C89 . . . . .                | 719 | exception levels . . . . .                        | 57    |
| native, implementation-defined behavior in C . . . . .          | 716 | at system startup . . . . .                       | 154   |
| runtime (DLIB) . . . . .                                        | 131 | calling each other . . . . .                      | 91    |
| environment names,                                              |     | exception stack . . . . .                         | 225   |
| implementation-defined behavior in C . . . . .                  | 701 | exception vector table (64-bit mode) . . . . .    | 89    |
| environment variables                                           |     | placing . . . . .                                 | 90    |
| C_INCLUDE . . . . .                                             | 297 | __exception (extended keyword) . . . . .          | 429   |
| ILINKARM_CMD_LINE . . . . .                                     | 297 | exception (library header file) . . . . .         | 544   |
| QCCARM . . . . .                                                | 297 | __EXCEPTIONS (predefined symbol) . . . . .        | 531   |
| epilogue sequence, inhibiting generation of (__naked) . . . . . | 431 | exceptions                                        |       |
| EQU (assembler directive) . . . . .                             | 349 | code for in section . . . . .                     | 596   |
| ERANGE . . . . .                                                | 710 | excluded from stack usage analysis . . . . .      | 111   |
| ERANGE (C89) . . . . .                                          | 726 | linker forcing inclusion of . . . . .             | 381   |
| errno value at underflow,                                       |     | making sure there are none . . . . .              | 391   |
| implementation-defined behavior in C . . . . .                  | 713 | exception_neutral (pragma directive) . . . . .    | 708   |
| errno.h (library header file) . . . . .                         | 542 | --exception_tables (linker option) . . . . .      | 379   |
| error checking (C-RUN), documentation . . . . .                 | 46  | exception::what,                                  |       |
| error messages . . . . .                                        | 303 | implementation-defined behavior for C++ . . . . . | 677   |
| classifying . . . . .                                           | 338 | exclude (stack usage control directive) . . . . . | 602   |
| classifying for compiler . . . . .                              | 322 | .exc.text (ELF section) . . . . .                 | 596   |
| classifying for linker . . . . .                                | 374 | execution character set                           |       |
| range . . . . .                                                 | 125 | implementation-defined behavior for C++ . . . . . | 663   |
| error return codes . . . . .                                    | 304 | implementation-defined behavior in C . . . . .    | 701   |
| error (linker directive) . . . . .                              | 590 | execution mode . . . . .                          | 58    |
| error (pragma directive) . . . . .                              | 453 | specifying . . . . .                              | 72–73 |
| errors and warnings, listing all used by the compiler           |     | execution states                                  |       |
| (--diagnostics_tables) . . . . .                                | 324 | AArch32 . . . . .                                 | 56    |
| errors, causing linking to stop . . . . .                       | 378 | AArch64 . . . . .                                 | 57    |
| error_category,                                                 |     | execution wide-character set,                     |       |
| implementation-defined behavior for C++ . . . . .               | 675 | implementation-defined behavior for C++ . . . . . | 663   |
| Error_Handler_A64 (exception vector) . . . . .                  | 89  | _Exit (library function) . . . . .                | 156   |
| --error_limit (compiler option) . . . . .                       | 328 | exit (library function) . . . . .                 | 156   |
| --error_limit (linker option) . . . . .                         | 378 | implementation-defined behavior for C++ . . . . . | 676   |
| escape sequences                                                |     | implementation-defined behavior in C . . . . .    | 713   |
| implementation-defined behavior for C++ . . . . .               | 665 | implementation-defined behavior in C89 . . . . .  | 729   |
| implementation-defined behavior in C . . . . .                  | 702 | _exit (library function) . . . . .                | 156   |
| exception flags, for floating-point values . . . . .            | 415 | __exit (library function) . . . . .               | 156   |

- export (linker directive) . . . . . 586
  - export\_builtin\_config (linker option) . . . . . 379
  - export\_locals (isymexport option) . . . . . 635
  - expressions (in linker configuration file) . . . . . 587
  - extended alignment,
  - implementation-defined behavior for C++ . . . . . 679
  - extended command line file
    - for compiler . . . . . 328–329
    - for linker . . . . . 380–381
    - passing options. . . . . 296
  - extended keywords . . . . . 423
    - enabling (-e). . . . . 326
    - overview . . . . . 59
    - summary . . . . . 426
    - syntax
      - object attributes. . . . . 426
      - type attributes on data objects . . . . . 424
      - type attributes on functions . . . . . 425
  - extended-selectors (in linker configuration file) . . . . . 583
  - extern "C" linkage. . . . . 217
  - extract (iarchive option) . . . . . 636
  - extra\_init (linker option) . . . . . 380
- ## F
- f (compiler option). . . . . 328
  - f (IAR utility option) . . . . . 636
  - f (linker option) . . . . . 380
  - f (compiler option) . . . . . 329
  - f (linker option) . . . . . 381
  - f (IAR utility option) . . . . . 637
  - fake\_time (IAR utility option) . . . . . 637
  - fast interrupts . . . . . 85
    - disabling using intrinsic . . . . . 480
    - enabling using intrinsic . . . . . 482
  - fatal error messages . . . . . 303
  - fdopen, in stdio.h . . . . . 549
  - FENV\_ACCESS
    - implementation-defined behavior for C++ . . . . . 689
  - implementation-defined behavior in C . . . . . 704
  - fenv.h (library header file) . . . . . 542, 546
  - fgetpos (library function)
    - implementation-defined behavior in C . . . . . 712
    - implementation-defined behavior in C89 . . . . . 728
  - \_\_FILE\_\_ (predefined symbol). . . . . 531
  - file buffering, implementation-defined behavior in C . . . . 711
  - file dependencies, tracking . . . . . 321, 373
  - file input and output, configuration symbols for . . . . . 168
  - file paths, specifying for #include files . . . . . 331
  - file position, implementation-defined behavior in C . . . . 711
  - file (zero-length), implementation-defined behavior in C . 711
  - filename
    - extension for device description files . . . . . 58
    - extension for header files . . . . . 57
    - of object executable image. . . . . 395
    - of object file. . . . . 347, 395
    - suppressing . . . . . 393
    - search procedure for. . . . . 297
    - specifying as parameter . . . . . 306
  - filenames (legal), implementation-defined behavior in C . 711
  - fileno, in stdio.h . . . . . 549
  - filesystem::file\_size,
  - implementation-defined behavior for C++ . . . . . 695
  - filesystem::status,
  - implementation-defined behavior for C++ . . . . . 695
  - files, implementation-defined behavior in C
    - handling of temporary . . . . . 712
    - multibyte characters in. . . . . 711
    - opening . . . . . 711
  - fill (ielftool option). . . . . 638
  - \_\_fiq (extended keyword) . . . . . 430
  - FIQ\_Handler\_A64 (exception vector). . . . . 89
  - FIQ\_STACK. . . . . 225
  - float (data type). . . . . 415
  - floating-point constants
    - hints . . . . . 250
  - floating-point conversions
    - implementation-defined behavior for C++ . . . . . 668
    - implementation-defined behavior in C . . . . . 704

|                                                |               |                                                    |               |
|------------------------------------------------|---------------|----------------------------------------------------|---------------|
| floating-point environment, accessing or not   | 466           | freopen (function)                                 | 551           |
| floating-point expressions, contracting or not | 466           | --front_headers (ielftool option)                  | 639           |
| floating-point format                          | 415           | fsetpos (library function),                        |               |
| hints                                          | 249–250       | implementation-defined behavior in C               | 712           |
| implementation-defined behavior in C           | 704           | fstream (library header file)                      | 544           |
| implementation-defined behavior in C89         | 722           | ftell (library function)                           |               |
| special cases                                  | 416           | implementation-defined behavior in C               | 712           |
| 32-bits                                        | 415           | implementation-defined behavior in C89             | 728           |
| 64-bits                                        | 416           | Full DLIB (library configuration)                  | 143           |
| floating-point literals,                       |               | __func__ (predefined symbol)                       | 531           |
| implementation-defined behavior for C++        | 665           | implementation-defined behavior for C++            | 671           |
| floating-point status flags                    | 549           | __FUNCTION__ (predefined symbol)                   | 531           |
| floating-point types,                          |               | function calls                                     |               |
| implementation-defined behavior for C++        | 667           | calling convention                                 | 189           |
| floating-point unit                            | 330           | eliminating overhead of by inlining                | 93            |
| float.h (library header file)                  | 542           | preserved registers across                         | 191           |
| _Float16 (data type)                           | 415           | function declarations, Kernighan & Ritchie         | 264           |
| FLT_EVAL_METHOD,                               |               | function execution, in RAM                         | 81            |
| implementation-defined behavior in C           | 704, 709, 714 | function frame, inhibiting generation of (__naked) | 431           |
| FLT_ROUNDS,                                    |               | function inlining (compiler transformation)        | 260           |
| implementation-defined behavior in C           | 704, 714      | disabling (--no_inline)                            | 338           |
| __fma (intrinsic function)                     | 483           | function inlining (linker optimization)            | 129           |
| __fmaf (intrinsic function)                    | 483           | function pointer to object pointer conversion,     |               |
| fmod (library function),                       |               | implementation-defined behavior for C++            | 670           |
| implementation-defined behavior in C89         | 726           | function pointers                                  | 417           |
| --force_exceptions (linker option)             | 381           | function prototypes                                | 263           |
| --force_output (linker option)                 | 382           | enforcing                                          | 350           |
| formats                                        |               | function (pragma directive)                        | 708, 725      |
| floating-point values                          | 415           | function (stack usage control directive)           | 602           |
| standard IEC (floating point)                  | 415           | functional (library header file)                   | 544           |
| forward_list (library header file)             | 544           | functions                                          | 79            |
| --fpu (compiler option)                        | 330           | declaring                                          | 190, 263      |
| --fpu (linker option)                          | 382           | inlining                                           | 260, 263, 455 |
| FP_CONTRACT                                    |               | interrupt                                          | 83            |
| changing default behavior of                   | 337           | intrinsic                                          | 175, 263      |
| implementation-defined behavior in C           | 705           | parameters                                         | 192           |
| pragma directive for                           | 466           | placing in memory                                  | 252, 254      |
| __fp16 (data type)                             | 415           | recursive                                          |               |
| fragmentation, of heap memory                  | 77            | avoiding                                           | 263           |
| free (library function). <i>See also</i> heap  | 77            | storing data on stack                              | 76            |



reentrancy (DLIB) . . . . . 540  
 related extensions . . . . . 79  
 return values from . . . . . 195  
 functions from Annex K of the C standard,  
 implementation-defined behavior for C++ . . . . . 674  
 function\_category (pragma directive) . . . . . 454, 708  
 function\_effects (pragma directive) . . . . . 708, 725  
 function-spec (in stack usage control file) . . . . . 605  
 future (library header file) . . . . . 544

## G

-g (ielfdump option) . . . . . 650  
 GCC  
   supported builtins . . . . . 511  
   supported preprocessor symbols . . . . . 537  
 GCC attributes . . . . . 440  
 generate\_entry\_without\_bounds (pragma directive) . . . . . 444  
 --generate\_vfe\_header (isymexport option) . . . . . 639  
 getw, in stdio.h . . . . . 549  
 getzone (library function), configuring support for . . . . . 138  
 \_\_get\_BASEPRI (intrinsic function) . . . . . 483  
 \_\_get\_CONTROL (intrinsic function) . . . . . 483  
 \_\_get\_CPSR (intrinsic function) . . . . . 483  
 \_\_get\_FAULTMASK (intrinsic function) . . . . . 484  
 \_\_get\_FPSCR (intrinsic function) . . . . . 484  
 \_\_get\_interrupt\_state (intrinsic function) . . . . . 484  
 \_\_get\_IPSR (intrinsic function) . . . . . 485  
 \_\_get\_LR (intrinsic function) . . . . . 485  
 \_\_get\_MSP (intrinsic function) . . . . . 485  
 get\_pointer\_safety,  
 implementation-defined behavior for C++ . . . . . 678  
 \_\_get\_PRIMASK (intrinsic function) . . . . . 486  
 \_\_get\_PSP (intrinsic function) . . . . . 486  
 \_\_get\_PSR (intrinsic function) . . . . . 486  
 \_\_get\_return\_address (intrinsic function) . . . . . 487  
 \_\_get\_SB (intrinsic function) . . . . . 487  
 \_\_get\_SP (intrinsic function) . . . . . 487  
 get\_unexpected (deprecated function), enabling . . . . . 548

global offset table . . . . . 270–271, 274, 276  
 global symbols, updating typeless . . . . . 657  
 global variables  
   affected by static clustering . . . . . 261  
   handled during system termination . . . . . 156  
   hints for not using . . . . . 263  
   initialized during system startup . . . . . 155  
 GNU style  
   case ranges . . . . . 211  
   designated initializer ranges . . . . . 211  
   statement expressions . . . . . 211  
 .GOT (ELF section) . . . . . 276  
 GOT. *See* global offset table  
 GRP\_COMDAT, group type . . . . . 619  
 --guard\_calls (compiler option) . . . . . 331  
 guidelines for reading this guide . . . . . 43

## H

Harbison, Samuel P. . . . . 47  
 hardware support in compiler . . . . . 131  
 .hash (ELF section) . . . . . 275  
 hash\_map (library header file) . . . . . 544  
 hash\_set (library header file) . . . . . 544  
 hdrstop (pragma directive) . . . . . 708, 725  
 header files  
   C . . . . . 542  
   C++ . . . . . 543  
   library . . . . . 540  
   special function registers . . . . . 265  
   DLib\_Defaults.h . . . . . 141  
   implementation-defined behavior for C++ . . . . . 674  
   including stdbool.h for bool . . . . . 410  
   I/O . . . . . 57  
 header names  
   implementation-defined behavior for C++ . . . . . 664  
   implementation-defined behavior in C . . . . . 706  
 --header\_context (compiler option) . . . . . 331

|                                                         |     |
|---------------------------------------------------------|-----|
| heap                                                    |     |
| advanced                                                | 226 |
| alignment                                               | 227 |
| basic                                                   | 226 |
| dynamic memory                                          | 77  |
| no-free                                                 | 226 |
| storing data                                            | 75  |
| VLA allocated on                                        | 359 |
| heap sections                                           |     |
| placing                                                 | 120 |
| heap size                                               |     |
| and standard I/O                                        | 227 |
| changing default                                        | 120 |
| HEAP (ELF section)                                      | 596 |
| heap (zero-sized), implementation-defined behavior in C | 713 |
| hermite functions,                                      |     |
| implementation-defined behavior for C++                 | 692 |
| Hermite polynomials,                                    |     |
| implementation-defined behavior for C++                 | 692 |
| hide (isymexport directive)                             | 622 |
| --hide_symbols (iexe2obj option)                        | 639 |
| hints                                                   |     |
| for good code generation                                | 262 |
| implementation-defined behavior                         | 705 |
| using efficient data types                              | 249 |
| hoisting (optimization)                                 | 258 |
| Hypervisor stack                                        | 225 |
| HYP_STACK                                               | 225 |
| <b>I</b>                                                |     |
| -I (compiler option)                                    | 331 |
| IAR Command Line Build Utility                          | 141 |
| IAR Technical Support                                   | 304 |
| iarbuild.exe (utility)                                  | 141 |
| iararchive                                              | 609 |
| commands summary                                        | 610 |
| options summary                                         | 611 |
| __iar_cos_accuratef (library function)                  | 540 |
| __iar_cos_accuratel (library function)                  | 540 |
| iar_dlmalloc.h (library header file)                    |     |
| additional C functionality                              | 549 |
| __iar_maximum_atexit_calls                              | 120 |
| __iar_pow_accuratef (library function)                  | 540 |
| __iar_pow_accuratel (library function)                  | 540 |
| __iar_program_start (label)                             | 154 |
| __iar_ReportAssert (library function)                   | 159 |
| __iar_sin_accuratef (library function)                  | 540 |
| __iar_sin_accuratel (library function)                  | 540 |
| __IAR_SYSTEMS_ICC__ (predefined symbol)                 | 531 |
| __iar_tan_accuratef (library function)                  | 540 |
| __iar_tan_accuratel (library function)                  | 540 |
| __iar_tls\$\$DATA (ELF section)                         | 596 |
| __iar_tls\$\$INITDATA (ELF section)                     | 596 |
| .iar.debug (ELF section)                                | 594 |
| .iar.dynexit (ELF section)                              | 597 |
| .iar.locale_table (ELF section)                         | 597 |
| IA64 ABI                                                | 238 |
| __ICCARM__ (predefined symbol)                          | 532 |
| icons, in this guide                                    | 49  |
| IDE                                                     |     |
| building a library from                                 | 140 |
| overview of build tools                                 | 53  |
| ident (pragma directive)                                | 708 |
| identifiers                                             |     |
| implementation-defined behavior in C                    | 701 |
| implementation-defined behavior in C89                  | 720 |
| reserved                                                | 301 |
| IEC format, floating-point values                       | 415 |
| IEC 60559 floating-point standard                       | 203 |
| ielddump                                                | 615 |
| options summary                                         | 616 |
| ielftool                                                | 613 |
| options summary                                         | 614 |
| address ranges, specifying                              | 615 |
| iexe2obj                                                | 626 |
| if (linker directive)                                   | 590 |
| --ignore_uninstrumented_pointers (linker option)        | 364 |

- ihex (ielftool option) . . . . . 640
- ihex-len (ielftool option) . . . . . 640
- ILINKARM\_CMD\_LINE (environment variable) . . . . . 297
- ILINK. *See* linker
- ILP32 (data model) . . . . . 57
  - pointers . . . . . 417
  - specifying . . . . . 314–315
- \_\_ILP32\_\_ (predefined symbol) . . . . . 532
- image\_input (linker option) . . . . . 382
- image, forcing generation of . . . . . 382
- implements\_aspect (pragma directive) . . . . . 708
- important\_typedef (pragma directive) . . . . . 708, 725
- import\_cmse\_lib\_in (linker option) . . . . . 383
- import\_cmse\_lib\_out (linker option) . . . . . 384
- #include directive,
  - implementation-defined behavior for C++ . . . . . 674
- include files
  - including before source files . . . . . 348
  - search procedure implementation for C++ . . . . . 673
  - specifying . . . . . 297
- include (linker directive) . . . . . 591
- include\_alias (pragma directive) . . . . . 454
- #include\_next (preprocessor extension) . . . . . 536
- infinity . . . . . 416
- infinity (style for printing),
  - implementation-defined behavior in C . . . . . 712
- \_init (suffix for initializer sections) . . . . . 121
- initialization
  - changing default . . . . . 120
  - C++ dynamic . . . . . 106
  - dynamic . . . . . 153
  - manual . . . . . 121
  - packing algorithm for . . . . . 121
  - single-value . . . . . 209
  - suppressing . . . . . 121
- initialization routines, adding at end of table . . . . . 380
- initialization\_routine (pragma directive) . . . . . 708
- initialize (linker directive) . . . . . 570
- initializers, static . . . . . 208
- initializer\_list (library header file) . . . . . 544
- .init\_array (section) . . . . . 597
- init\_routines\_only\_for\_needed\_variables
  - (pragma directive) . . . . . 708
- inline (linker option) . . . . . 384
- inline assembler . . . . . 176
  - for passing values between C and assembler . . . . . 267
  - risks . . . . . 263
  - See also* assembler language interface
- inline (pragma directive) . . . . . 455
- inline\_template (pragma directive) . . . . . 708
- inlining functions . . . . . 93
  - at link time . . . . . 384
  - compiler transformation . . . . . 260
  - implementation-defined behavior . . . . . 705
  - linker optimization . . . . . 129
- installation directory . . . . . 48
- instantiate (pragma directive) . . . . . 708, 725
- instruction scheduling (compiler option) . . . . . 262
- int (data type) signed and unsigned . . . . . 409
- integer to floating- point conversion,
  - implementation-defined behavior for C++ . . . . . 669
- integer to pointer conversion,
  - implementation-defined behavior for C++ . . . . . 670
- integer types . . . . . 409
  - casting . . . . . 418
  - implementation-defined behavior . . . . . 703
  - implementation-defined behavior for C++ . . . . . 667, 669
  - implementation-defined behavior in C89 . . . . . 721
  - intptr\_t . . . . . 418
  - ptrdiff\_t . . . . . 418
  - size\_t . . . . . 418
  - uintptr\_t . . . . . 418
- integral promotion . . . . . 264
- Intel hex . . . . . 223
- Intel IA64 ABI . . . . . 238
- interactive devices,
  - implementation-defined behavior for C++ . . . . . 662
- internal error . . . . . 304
- interrupt functions . . . . . 83
  - fast interrupts . . . . . 85

|                                                         |     |
|---------------------------------------------------------|-----|
| in Cortex-M                                             | 82  |
| installing                                              | 84  |
| nested interrupts                                       | 86  |
| operations                                              | 88  |
| software interrupts                                     | 87  |
| interrupt handler stack                                 | 225 |
| interrupt handler. <i>See</i> interrupt service routine |     |
| interrupt service routine                               | 83  |
| interrupt state, restoring                              | 498 |
| interrupt vector table                                  | 88  |
| start address for                                       | 84  |
| interrupts                                              |     |
| Cortex-M with FPU                                       | 82  |
| enabling using intrinsic                                | 482 |
| initialization                                          | 70  |
| processor state                                         | 76  |
| using with C++ destructors                              | 217 |
| __interwork (extended keyword)                          | 430 |
| intptr_t (integer type)                                 | 418 |
| __intrinsic (extended keyword)                          | 430 |
| intrinsic functions                                     | 263 |
| CDE                                                     | 473 |
| for Neon                                                | 472 |
| MVE                                                     | 472 |
| overview                                                | 175 |
| summary                                                 | 471 |
| intrinsics.h (header file)                              | 471 |
| inttypes.h (library header file)                        | 542 |
| .intvec (ELF section)                                   | 597 |
| invocation syntax                                       | 295 |
| ioobjmanip                                              | 617 |
| options summary                                         | 618 |
| ioobjmanip (library header file)                        | 544 |
| ios (library header file)                               | 544 |
| iosfwd (library header file)                            | 544 |
| iostream classes,                                       |     |
| implementation-defined behavior for C++                 | 692 |
| iostream (library header file)                          | 544 |
| iostreams templates, instantiation,                     |     |
| implementation-defined behavior for C++                 | 681 |

|                                         |          |
|-----------------------------------------|----------|
| ios_base::sync_with_stdio,              |          |
| implementation-defined behavior for C++ | 693      |
| __irq (extended keyword)                | 430      |
| IRQ_Handler_A64 (exception vector)      | 89       |
| IRQ_STACK (section)                     | 225, 597 |
| __ISB (intrinsic function)              | 487      |
| iso646.h (library header file)          | 542      |
| istream (library header file)           | 544      |
| iswalnum (function)                     | 551      |
| iswxdigit (function)                    | 551      |
| isymexport                              | 620      |
| options summary                         | 621      |
| italic style, in this guide             | 48       |
| iterator (library header file)          | 544      |
| I/O header files                        | 57       |
| I/O register. <i>See</i> SFR            |          |

## K

|                                           |          |
|-------------------------------------------|----------|
| --keep (linker option)                    | 384      |
| keep symbol (linker directive)            | 589      |
| keep (linker directive)                   | 574      |
| keeping modules during linking            | 119      |
| keep_definition (pragma directive)        | 708, 725 |
| --keep_mode_symbols (iexe2obj option)     | 640      |
| Kernighan & Ritchie function declarations | 264      |
| disallowing                               | 350      |
| keywords                                  | 423      |
| extended, overview of                     | 59       |

## L

|                                       |     |
|---------------------------------------|-----|
| -l (compiler option)                  | 332 |
| for creating skeleton code            | 188 |
| -L (linker option)                    | 399 |
| labels                                | 209 |
| assembler, making public              | 349 |
| redundant, eliminating (optimization) | 258 |
| __iar_program_start                   | 154 |

- \_\_program\_start . . . . . 154
- Labrosse, Jean J. . . . . 47
- laguerre functions,
- implementation-defined behavior for C++ . . . . . 692
- Laguerre polynomials,
- implementation-defined behavior for C++ . . . . . 691–692
- language extensions
  - enabling using pragma . . . . . 456
  - enabling (-e) . . . . . 326
- language overview . . . . . 55
- language (pragma directive) . . . . . 456
- lazy loading (of shared objects) . . . . . 272
- \_\_LDC (intrinsic function) . . . . . 487
- \_\_LDCL (intrinsic function) . . . . . 487
- \_\_LDCL\_noidx (intrinsic function) . . . . . 488
- \_\_LDC\_noidx (intrinsic function) . . . . . 488
- \_\_LDC2 (intrinsic function) . . . . . 487
- \_\_LDC2L (intrinsic function) . . . . . 487
- \_\_LDC2L\_noidx (intrinsic function) . . . . . 488
- \_\_LDC2\_noidx (intrinsic function) . . . . . 488
- \_\_LDREX (intrinsic function) . . . . . 489
- \_\_LDREXB (intrinsic function) . . . . . 489
- \_\_LDREXD (intrinsic function) . . . . . 489
- \_\_LDREXH (intrinsic function) . . . . . 489
- legacy (compiler option) . . . . . 333
- Legendre functions,
- implementation-defined behavior for C++ . . . . . 692
- Legendre polynomials,
- implementation-defined behavior for C++ . . . . . 691–692
- \_\_LIBCPP (predefined symbol) . . . . . 532
- \_\_LIBCPP\_ENABLE\_CXX17\_REMOVED\_FEATURES  
(predefined symbol) . . . . . 221, 532
- Libc++
  - C++ support . . . . . 55
  - migrating from DLIB . . . . . 221
  - removed features . . . . . 221
- libc++ (compiler option) . . . . . 333
- libraries
  - reason for using . . . . . 64
  - required, implementation-defined behavior for C++ . . 662
  - using a prebuilt . . . . . 143
- library configuration files
  - DLIB . . . . . 142
  - DLib\_Defaults.h . . . . . 141
  - modifying . . . . . 141
  - specifying . . . . . 325
- library documentation . . . . . 539
- library files, linker search path to (--search) . . . . . 399
- library functions
  - summary, DLIB . . . . . 542
  - optimized (--use\_optimized\_variants) . . . . . 403
- library header files . . . . . 540
- library modules . . . . . 98
  - overriding . . . . . 139
- library object files . . . . . 540
- library project, building using a template . . . . . 140
- library\_default\_requirements (pragma directive) . . . 708, 725
- library\_provides (pragma directive) . . . . . 708, 725
- library\_requirement\_override (pragma directive) . . 708, 725
- lifetime of variables (optimization) . . . . . 258
- lightbulb icon, in this guide . . . . . 49
- limits (library header file) . . . . . 545
- limits.h (library header file) . . . . . 542
- \_\_LINE\_\_ (predefined symbol) . . . . . 532
- link editor. *See* linker
- link register, restrictions . . . . . 192
- linkage to other languages,
- implementation-defined behavior for C++ . . . . . 671
- linkage, C and C++ . . . . . 190
  - implementation-defined behavior for C++ . . 671–672, 675
- linker . . . . . 97
  - checking section types when linking . . . . . 555
  - getting version information . . . . . 404
  - output from . . . . . 299
- linker command line . . . . . 71
- linker configuration file
  - for placing code and data . . . . . 101
  - in depth . . . . . 553
  - overview of . . . . . 553
  - selecting . . . . . 115

|                                                                          |          |                                                                                   |          |
|--------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------|----------|
| specifying on the command line . . . . .                                 | 370      | locale.h (library header file) . . . . .                                          | 542      |
| linker configuration, exporting to file . . . . .                        | 379      | located data, declaring extern . . . . .                                          | 254      |
| linker messages, disabling . . . . .                                     | 400      | location (pragma directive) . . . . .                                             | 253, 456 |
| linker object executable image,<br>specifying filename of (-o) . . . . . | 395      | --log (linker option) . . . . .                                                   | 386      |
| linker optimizations . . . . .                                           | 129      | logging, enabling in linker (--log) . . . . .                                     | 386      |
| duplicate section merging . . . . .                                      | 130      | logical (linker directive) . . . . .                                              | 557      |
| small function inlining . . . . .                                        | 129      | --log_file (linker option) . . . . .                                              | 387      |
| virtual function elimination . . . . .                                   | 129      | long double (data type) . . . . .                                                 | 415      |
| linker options . . . . .                                                 | 363      | long float (data type), synonym for double . . . . .                              | 208      |
| typographic convention . . . . .                                         | 48       | long long (data type)<br>signed and unsigned . . . . .                            | 409      |
| reading from file (-f) . . . . .                                         | 380      | long (data type), signed and unsigned . . . . .                                   | 409      |
| reading from file (--f) . . . . .                                        | 381      | longjmp, restrictions for using . . . . .                                         | 541      |
| summary . . . . .                                                        | 363      | loop unrolling (compiler transformation) . . . . .                                | 260      |
| linking                                                                  |          | disabling . . . . .                                                               | 344, 460 |
| from the command line . . . . .                                          | 71       | preventing . . . . .                                                              | 468      |
| in the build process . . . . .                                           | 64       | #pragma unroll . . . . .                                                          | 468      |
| introduction . . . . .                                                   | 97       | loop-invariant expressions . . . . .                                              | 260      |
| keeping modules . . . . .                                                | 119      | __low_level_init . . . . .                                                        | 154      |
| process for . . . . .                                                    | 99       | customizing . . . . .                                                             | 157      |
| list (library header file) . . . . .                                     | 545      | initialization phase . . . . .                                                    | 67       |
| listing, generating in compiler (-l) . . . . .                           | 332      | low_level_init.c . . . . .                                                        | 153, 157 |
| literature, recommended . . . . .                                        | 47       | low-level processor operations . . . . .                                          | 204      |
| __LITTLE_ENDIAN__ (predefined symbol) . . . . .                          | 532      | accessing . . . . .                                                               | 175      |
| __little_endian (extended keyword) . . . . .                             | 431      | LP64 (data model) . . . . .                                                       | 57       |
| little-endian (byte order) . . . . .                                     | 72       | specifying . . . . .                                                              | 314–315  |
| live-dead analysis (optimization) . . . . .                              | 258      | __LP64__ (predefined symbol) . . . . .                                            | 533      |
| Li066 (linker error) . . . . .                                           | 280      | LR (register), restrictions . . . . .                                             | 192      |
| Li067 (linker error) . . . . .                                           | 280      | lvalue-to-rvalue conversion,<br>implementation-defined behavior for C++ . . . . . | 668      |
| Li068 (linker error) . . . . .                                           | 279      | lz77, packing algorithm for initializers . . . . .                                | 571      |
| Li069 (linker warning) . . . . .                                         | 280      |                                                                                   |          |
| local symbols, removing from linked image . . . . .                      | 393      |                                                                                   |          |
| local variables. <i>See</i> auto variables                               |          |                                                                                   |          |
| locale . . . . .                                                         | 168      |                                                                                   |          |
| changing at runtime . . . . .                                            | 169      |                                                                                   |          |
| implementation-defined behavior for C++ . . . . .                        | 682      |                                                                                   |          |
| implementation-defined behavior in C . . . . .                           | 703, 715 |                                                                                   |          |
| library header file . . . . .                                            | 545      |                                                                                   |          |
| linker section . . . . .                                                 | 597      |                                                                                   |          |
| locale object, implementation-defined behavior for C++ . . . . .         | 681      |                                                                                   |          |

## M

|                                        |          |
|----------------------------------------|----------|
| macros                                 |          |
| embedded in #pragma optimize . . . . . | 460      |
| ERANGE (in errno.h) . . . . .          | 710, 726 |
| inclusion of assert . . . . .          | 536      |

- NULL
  - implementation-defined behavior in C . . . . . 710
  - implementation-defined behavior in C89 for DLIB 726
  - substituted in #pragma directives . . . . . 204
- macro\_positions\_in\_diagnostics (compiler option) . . . . . 333
- main (function)
  - definition (C89) . . . . . 719
  - implementation-defined behavior for C++ . . . . . 665–667
  - implementation-defined behavior in C . . . . . 700
- make\_all\_definitions\_weak (compiler option) . . . . . 334
- malloc (library function)
  - See also* heap . . . . . 77
  - implementation-defined behavior in C89 . . . . . 728
- mangled\_names\_in\_messages (linker option) . . . . . 387
- Mann, Bernhard . . . . . 47
- manual\_dynamic\_initialization (linker option) . . . . . 388
- map (linker option) . . . . . 388
- map file (linker)
  - producing . . . . . 388
- map (library header file) . . . . . 545
- math functions
  - runtime library syntax . . . . . 147
- math functions rounding mode,
  - implementation-defined behavior in C . . . . . 714
- math functions (library functions) . . . . . 152
  - more accurate versions . . . . . 152
  - smaller versions . . . . . 152
  - accurate\_math . . . . . 368
  - small\_math . . . . . 400
- math.h (library header file) . . . . . 542
- max recursion depth (stack usage control directive) . . . . . 603
- max\_cost\_constexpr\_call (compiler option) . . . . . 334
- max\_depth\_constexpr\_call (compiler option) . . . . . 334
- MB\_LEN\_MAX, implementation-defined behavior in C 714
- \_\_MCR (intrinsic function) . . . . . 489
- \_\_MCRR (intrinsic function) . . . . . 490
- \_\_MCRR2 (intrinsic function) . . . . . 490
- \_\_MCR2 (intrinsic function) . . . . . 489
- memory
  - allocating in C++ . . . . . 77
  - dynamic . . . . . 77
  - heap . . . . . 77
  - non-initialized . . . . . 267
  - RAM, saving . . . . . 263
  - releasing in C++ . . . . . 77
  - stack . . . . . 76
    - saving . . . . . 263
    - used by global or static variables . . . . . 75
- memory clobber . . . . . 177
- memory layout, Arm . . . . . 75
- memory map
  - initializing SFRs . . . . . 157
  - linker configuration for . . . . . 116
  - output from linker . . . . . 300
  - producing (--map) . . . . . 388
- memory (library header file) . . . . . 545
- memory (pragma directive) . . . . . 708, 725
- merge duplicate sections . . . . . 130
- merge\_duplicate\_sections (linker option) . . . . . 389
- message catalog,
  - implementation-defined behavior for C++ . . . . . 683
- message (pragma directive) . . . . . 458
- messages
  - disabling in compiler . . . . . 355
  - disabling in linker . . . . . 400
  - forcing in compiler . . . . . 458
- messages::do\_close,
  - implementation-defined behavior for C++ . . . . . 683
- messages::do\_get,
  - implementation-defined behavior for C++ . . . . . 683
- messages::do\_open,
  - implementation-defined behavior for C++ . . . . . 682
- Meyers, Scott . . . . . 47
- mfc (compiler option) . . . . . 335
- migration
  - from DLIB to Libc++ . . . . . 221
  - migration, from earlier IAR compilers . . . . . 46
- mode changing, implementation-defined behavior in C . . 712
- module consistency . . . . . 127
  - rtmodel . . . . . 463

|                                                                |          |
|----------------------------------------------------------------|----------|
| modules                                                        |          |
| introduction                                                   | 98       |
| modules, keeping during linking                                | 119      |
| module_name (pragma directive)                                 | 708, 726 |
| module-spec (in stack usage control file)                      | 605      |
| Monitor stack                                                  | 225      |
| monospace font, meaning of in guide. <i>See</i> computer style |          |
| monotonic_buffer_resource,                                     |          |
| implementation-defined behavior for C++                        | 678–679  |
| MON_STACK                                                      | 225      |
| Motorola S-records                                             | 223      |
| __MRC (intrinsic function)                                     | 490      |
| __MRC2 (intrinsic function)                                    | 490      |
| __MRRC (intrinsic function)                                    | 491      |
| __MRRC2 (intrinsic function)                                   | 491      |
| multibyte characters                                           |          |
| implementation-defined behavior for C++                        | 680      |
| implementation-defined behavior in C                           | 701, 715 |
| support in printf                                              | 397      |
| support in scanf                                               | 398      |
| multithreaded environment                                      | 169      |
| implementation-defined behavior in C                           | 700      |
| multi-character literals, value of,                            |          |
| implementation-defined behavior for C++                        | 664      |
| multi-file compilation                                         | 257      |
| mutex (library header file)                                    | 545      |
| MVE intrinsic functions                                        | 472      |

## N

|                                               |         |
|-----------------------------------------------|---------|
| __naked (extended keyword)                    | 431     |
| name (in stack usage control file)            | 606     |
| names block (call frame information)          | 199     |
| naming conventions                            | 49      |
| NaN                                           |         |
| implementation of                             | 416     |
| implementation-defined behavior in C          | 712     |
| native environment,                           |         |
| implementation-defined behavior in C          | 716     |
| native_handle_type,                           |         |
| implementation-defined behavior for C++       | 696     |
| native_handle,                                |         |
| implementation-defined behavior for C++       | 696     |
| NDEBUG (preprocessor symbol)                  | 536     |
| negative values, right shifting,              |         |
| implementation-defined behavior for C++       | 670     |
| Neon intrinsic functions                      | 472     |
| __nested (extended keyword)                   | 431–432 |
| nested interrupts                             | 86      |
| Neumann functions,                            |         |
| implementation-defined behavior for C++       | 691–692 |
| new (keyword)                                 | 77      |
| new (library header file)                     | 545     |
| no calls from (stack usage control directive) | 604     |
| .noinit (ELF section)                         | 598     |
| --nonportable_path_warnings (compiler option) | 346     |
| non-initialized variables, hints for          | 267     |
| Non-Plain Old Functions (POF),                |         |
| implementation-defined behavior for C++       | 677     |
| non-scalar parameters, avoiding               | 263     |
| non-secure mode                               | 243     |
| NOP (assembler instruction)                   | 492     |
| __noreturn (extended keyword)                 | 434     |
| Normal DLIB (library configuration)           | 143     |
| Not a number. <i>See</i> NaN                  |         |
| now (function)                                | 551     |
| --no_alignment_reduction (compiler option)    | 335     |
| __no_alloc (extended keyword)                 | 432     |
| __no_alloc_str (operator)                     | 433     |
| __no_alloc_str16 (operator)                   | 433     |
| __no_alloc16 (extended keyword)               | 432     |
| --no_bom (ielfdump option)                    | 641     |
| --no_bom (iobjmanip option)                   | 641     |
| --no_bom (isymexport option)                  | 641     |
| --no_bom (compiler option)                    | 335     |
| --no_bom (iarchive option)                    | 641     |
| --no_bom (linker option)                      | 389     |
| no_bounds (pragma directive)                  | 445     |
| --no_call_frame_info (compiler option)        | 336     |



- no\_clustering (compiler option) . . . . . 336
  - no\_code\_motion (compiler option) . . . . . 336
  - no\_const\_align (compiler option) . . . . . 337
  - no\_cse (compiler option) . . . . . 337
  - no\_default\_fp\_contract (compiler option) . . . . . 337
  - no\_dynamic\_rtti\_elimination (linker option) . . . . . 390
  - no\_entry (linker option) . . . . . 390
  - no\_exceptions (compiler option) . . . . . 338
  - no\_exceptions (linker option) . . . . . 391
  - no\_fragments (linker option) . . . . . 391
  - no\_free\_heap (linker option) . . . . . 391
  - no\_header (ielfdump option) . . . . . 641
  - \_\_no\_init (extended keyword) . . . . . 267, 434
  - no\_inline (compiler option) . . . . . 338
  - no\_inline (linker option) . . . . . 392
  - no\_library\_search (linker option) . . . . . 392
  - no\_literal\_pool (compiler option) . . . . . 339
  - no\_literal\_pool (linker option) . . . . . 392
  - no\_locals (linker option) . . . . . 393
  - no\_loop\_align (compiler option) . . . . . 339
  - no\_mem\_idioms (compiler option) . . . . . 340
  - no\_normalize\_file\_macros (compiler option) . . . . . 340
  - \_\_no\_operation (intrinsic function) . . . . . 492
  - no\_out\_extension (linker option) . . . . . 393
  - no\_path\_in\_file\_macros (compiler option) . . . . . 340
  - no\_pch (pragma directive) . . . . . 708, 726
  - no\_range\_reservations (linker option) . . . . . 393
  - no\_rel\_section (ielfdump option) . . . . . 641
  - no\_remove (linker option) . . . . . 394
  - no\_rtti (compiler option) . . . . . 341
  - no\_rw\_dynamic\_init (compiler option) . . . . . 341
  - no\_scheduling (compiler option) . . . . . 341
  - no\_size\_constraints (compiler option) . . . . . 342
  - no\_stack\_protect (pragma directive) . . . . . 458
  - no\_static\_destruction (compiler option) . . . . . 342
  - no\_srtab (ielfdump option) . . . . . 642
  - no\_system\_include (compiler option) . . . . . 342
  - no\_tbaa (compiler option) . . . . . 343
  - no\_typedefs\_in\_diagnostics (compiler option) . . . . . 343
  - no\_unaligned\_access (compiler option) . . . . . 343
  - no\_uniform\_attribute\_syntax (compiler option) . . . . . 344
  - no\_unroll (compiler option) . . . . . 344
  - no\_utf8\_in (ielfdump option) . . . . . 642
  - no\_var\_align (compiler option) . . . . . 345
  - no\_vfe (linker option) . . . . . 394
  - no\_vtable\_use (pragma directive) . . . . . 708
  - no\_warnings (compiler option) . . . . . 345
  - no\_warnings (linker option) . . . . . 394
  - no\_wrap\_diagnostics (compiler option) . . . . . 345
  - no\_wrap\_diagnostics (linker option) . . . . . 395
  - no-free heap . . . . . 226
  - NTCTS in basic\_ostream& operator,  
implementation-defined behavior for C++ . . . . . 693
  - NULL
    - implementation-defined behavior for C++ . . . . . 675
    - implementation-defined behavior in C . . . . . 710
    - implementation-defined behavior in C89 (DLIB) . . . . . 726
    - pointer constant, relaxation to Standard C . . . . . 208
  - numbers (in linker configuration file) . . . . . 589
  - numeric conversion functions,  
implementation-defined behavior in C . . . . . 716
  - numeric (library header file) . . . . . 545
- ## O
- O (compiler option) . . . . . 346
  - o (compiler option) . . . . . 347
  - o (iarchive option) . . . . . 643
  - o (ielfdump option) . . . . . 643
  - o (linker option) . . . . . 395
  - object attributes . . . . . 425
  - object filename
    - specifying (-o) . . . . . 395
    - suppressing extension (--no\_out\_extension) . . . . . 393
  - object filename, specifying (-o) . . . . . 347
  - object files
    - linker search path to (--search) . . . . . 399
    - treating as specified on command line . . . . . 405

object pointer to function pointer conversion, implementation-defined behavior for C++ . . . . . 670

object\_attribute (pragma directive) . . . . . 267, 458

--offset (ielftool option) . . . . . 642

once (pragma directive) . . . . . 459, 708, 726

--only\_stdout (compiler option) . . . . . 347

--only\_stdout (linker option) . . . . . 395

open\_s (function) . . . . . 551

operation system stack . . . . . 225

operators

*See also* @ (operator)

    for region expressions . . . . . 561

    for section control . . . . . 206

    precision for 32-bit float . . . . . 416

    precision for 64-bit float . . . . . 416

    sizeof, implementation-defined behavior in C . . . . . 715

    \_\_ALIGNOF\_\_, for alignment control. . . . . 206

    ?, language extensions for . . . . . 219

optimization

    clustering, disabling . . . . . 336

    code motion, disabling . . . . . 336

    common sub-expression elimination, disabling . . . . . 337

    configuration . . . . . 73

    disabling . . . . . 259

    function inlining, disabling (--no\_inline) . . . . . 338

    hints . . . . . 262

    linker . . . . . 129

    loop unrolling, disabling . . . . . 344

    scheduling, disabling . . . . . 341

    specifying (-O) . . . . . 346

    techniques . . . . . 259

    type-based alias analysis, disabling (--tbaa) . . . . . 343

    using inline assembler code . . . . . 177

    using pragma directive . . . . . 459

optimization levels . . . . . 258

optimize (pragma directive) . . . . . 459

option parameters . . . . . 305

optional (library header file) . . . . . 545

options, compiler. *See* compiler options

options, iarchive. *See* iarchive options

options, ielfdump. *See* ielfdump options

options, ielftool. *See* ielftool options

options, iobjmanip. *See* iobjmanip options

options, isymexport. *See* isymexport options

options, linker. *See* linker options

Oram, Andy . . . . . 47

ostream (library header file) . . . . . 545

output

    from preprocessor . . . . . 349

    specifying for linker . . . . . 71

--output (compiler option) . . . . . 347

--output (iarchive option) . . . . . 643

--output (ielfdump option) . . . . . 643

--output (linker option) . . . . . 395

overhead, reducing . . . . . 260

over-aligned types, implementation-defined behavior for C++ . . . . . 696

## P

pack (pragma directive) . . . . . 419, 461

packbits, packing algorithm for initializers . . . . . 571

\_\_packed (extended keyword) . . . . . 434

packed structure types . . . . . 419

packing, algorithms for initializers . . . . . 571

parallel algorithms (C++17) . . . . . 548

parallel algorithms, implementation-defined behavior for C++ . . . . . 680, 689

parameters

    ending the lifetime of, implementation-defined behavior for C++ . . . . . 669

    function . . . . . 192

    hidden . . . . . 193

    non-scalar, avoiding . . . . . 263

    register . . . . . 193–194

    rules for specifying a file or directory . . . . . 306

    specifying . . . . . 307

    stack . . . . . 194

    typographic convention . . . . . 48

--parity (ielftool option) . . . . . 644

- part number, of this guide . . . . . 2
- partial evaluation. *See* optimization
- PC (register), restrictions . . . . . 192
- \_\_pcrel (extended keyword) . . . . . 427
- peephole optimization. . . . . 258
- pending\_instantiations (compiler option) . . . . . 347
- permanent registers . . . . . 191
- peror (library function),  
implementation-defined behavior in C89 . . . . . 728
- pi\_veneers (linker option) . . . . . 395
- \_\_PKHBT (intrinsic function). . . . . 492
- \_\_PKHTB (intrinsic function). . . . . 492
- place at (linker directive) . . . . . 574
- place in (linker directive) . . . . . 576
- placeholder objects,  
implementation-defined behavior for C++ . . . . . 679
- placement
  - in named sections. . . . . 254
  - of code and data, introduction to . . . . . 101
- place\_holder (linker option) . . . . . 396
- plain char
  - implementation-defined behavior for C++ . . . . . 667
  - implementation-defined behavior in C . . . . . 702
- \_\_PLD (intrinsic function) . . . . . 493
- \_\_PLDW (intrinsic function) . . . . . 493
- \_\_PLI (intrinsic function) . . . . . 493
- plt mode (linker option) . . . . . 281
- .PLT (ELF section) . . . . . 276
- PLT. *See* procedure linkage table
- pointer safety,  
implementation-defined behavior for C++ . . . . . 667, 678
- pointer to integer conversion,  
implementation-defined behavior for C++ . . . . . 669
- pointer types . . . . . 417
  - assigning . . . . . 210
  - implementation-defined behavior for C++ . . . . . 668
  - mixing . . . . . 208
- pointers
  - casting . . . . . 418
  - data . . . . . 417
  - function . . . . . 417
  - implementation-defined behavior . . . . . 705
  - implementation-defined behavior for C++ . . . . . 667
  - implementation-defined behavior in C89 . . . . . 722
  - to different function types . . . . . 210
  - 32-bit . . . . . 57
  - 64-bit . . . . . 57
- pointer\_safety::preferred,  
implementation-defined behavior for C++ . . . . . 678
- pointer\_safety::relaxed,  
implementation-defined behavior for C++ . . . . . 678
- polymorphic RTTI data, including in the image . . . . . 390
- pool resource objects,  
implementation-defined behavior for C++ . . . . . 678
- pop\_macro (pragma directive) . . . . . 708
- porting, code containing pragma directives. . . . . 446
- possible calls (stack usage control directive) . . . . . 604
- pow (library routine),  
alternative implementation of . . . . . 540
- pow(0,0), implementation-defined behavior for C++ . . . . . 690
- pragma directives . . . . . 59
  - summary . . . . . 443
  - for absolute located data . . . . . 253
  - implementation-defined behavior for C++ . . . . . 674
  - list of all recognized. . . . . 707
  - list of all recognized (C89). . . . . 725
  - pack . . . . . 419, 461
- #pragma FENV\_ACCESS,  
implementation-defined behavior for C++ . . . . . 689
- preconfig (linker option) . . . . . 396
- predefined macros, GCC. . . . . 537
- predefined symbols
  - GCC. . . . . 537
  - overview . . . . . 59
  - summary . . . . . 520
- predef\_macros (compiler option) . . . . . 348
- preferred\_typedef (pragma directive) . . . . . 708
- Prefetch\_Handler (exception function) . . . . . 85
- prefix (iexe2obj option) . . . . . 645
- preinclude (compiler option) . . . . . 348

|                                         |                    |
|-----------------------------------------|--------------------|
| .preinit_array (section)                | 598                |
| .prepreinit_array (section)             | 598                |
| --preprocess (compiler option)          | 349                |
| preprocessor directives                 |                    |
| comments at the end of                  | 209                |
| implementation-defined behavior for C++ | 673                |
| implementation-defined behavior in C    | 706                |
| implementation-defined behavior in C89  | 724                |
| #pragma                                 | 443                |
| implementation-defined behavior for C++ | 674                |
| preprocessor extensions                 |                    |
| NDEBUG                                  | 536                |
| __STDC_WANT_LIB_EXT1__                  | 536                |
| #include_next                           | 536                |
| #warning                                | 536                |
| preprocessor output                     | 349                |
| preprocessor symbols                    | 520, 537           |
| defining                                | 320, 373           |
| preserved registers                     | 191                |
| __PRETTY_FUNCTION__ (predefined symbol) | 533                |
| print formatter, selecting              | 149                |
| printf (library function)               | 148                |
| choosing formatter                      | 148                |
| implementation-defined behavior in C    | 712                |
| implementation-defined behavior in C89  | 728                |
| __printf_args (pragma directive)        | 461                |
| --printf_multibytes (linker option)     | 397                |
| printing characters,                    |                    |
| implementation-defined behavior in C    | 715                |
| procedure linkage table                 | 271, 274, 276, 281 |
| processor configuration                 |                    |
| 32-bit mode                             | 72                 |
| 64-bit mode                             | 73                 |
| processor operations                    |                    |
| accessing                               | 175                |
| low-level                               | 204                |
| program entry label                     | 154                |
| program termination,                    |                    |
| implementation-defined behavior in C    | 700                |
| programming hints                       | 262                |

|                                                       |          |
|-------------------------------------------------------|----------|
| __program_start (label)                               | 154      |
| projects                                              |          |
| basic settings for                                    | 71       |
| setting up for a library                              | 140      |
| prologue sequence, inhibiting generation of (__naked) | 431      |
| prototypes, enforcing                                 | 350      |
| ptrdiff_t (integer type)                              | 418      |
| implementation-defined behavior for C++               | 670, 675 |
| PUBLIC (assembler directive)                          | 349      |
| publication date, of this guide                       | 2        |
| --public_equ (compiler option)                        | 349      |
| public_equ (pragma directive)                         | 462      |
| push_macro (pragma directive)                         | 709      |
| putenv (library function), absent from DLIB           | 161      |
| putw, in stdio.h                                      | 549      |

## Q

|                                        |     |
|----------------------------------------|-----|
| __QADD (intrinsic function)            | 493 |
| __QADD8 (intrinsic function)           | 494 |
| __QADD16 (intrinsic function)          | 494 |
| __QASX (intrinsic function)            | 494 |
| QCCARM (environment variable)          | 297 |
| __QCFlag (intrinsic function)          | 494 |
| __QDADD (intrinsic function)           | 493 |
| __QDOUBLE (intrinsic function)         | 494 |
| __QDSUB (intrinsic function)           | 493 |
| __QFlag (intrinsic function)           | 494 |
| __QSAX (intrinsic function)            | 494 |
| __QSUB (intrinsic function)            | 493 |
| __QSUB16 (intrinsic function)          | 494 |
| __QSUB8 (intrinsic function)           | 494 |
| qualifiers                             |     |
| const and volatile                     | 420 |
| implementation-defined behavior        | 706 |
| implementation-defined behavior in C89 | 724 |
| ? (in reserved identifiers)            | 302 |
| queue (library header file)            | 545 |
| quick_exit (library function)          | 156 |

- # R
- r (compiler option) . . . . . 320
  - r (iarchive option) . . . . . 648
  - RAM
    - example of declaring region . . . . . 102
    - execution . . . . . 81
    - initializers copied from ROM . . . . . 69
    - reserving space . . . . . 118
    - running code from . . . . . 124
    - saving memory . . . . . 263
    - \_\_ramfunc (extended keyword) . . . . . 81, 436
    - ram\_reserve\_ranges (ismexport option) . . . . . 645
  - random number distributions,
    - implementation-defined behavior for C++ . . . . . 690
  - random (library header file) . . . . . 545
  - random\_device constructor,
    - implementation-defined behavior for C++ . . . . . 690
  - random\_device::operator,
    - implementation-defined behavior for C++ . . . . . 690
  - random\_shuffle (deprecated feature), enabling . . . . . 548
  - random\_shuffle,
    - implementation-defined behavior for C++ . . . . . 689
  - rand(), implementation-defined behavior for C++ . . . . . 691
  - range (ielfdump option) . . . . . 646
  - range errors, in linker . . . . . 125
  - ratio (library header file) . . . . . 545
  - raw (ielfdump option) . . . . . 646
  - \_\_RBIT (intrinsic function) . . . . . 495
  - read formatter, selecting . . . . . 151
  - reading guidelines . . . . . 43
  - reading, recommended . . . . . 47
  - realloc (library function) . . . . . 77
    - implementation-defined behavior in C89 . . . . . 728
    - See also* heap
  - recursive functions
    - avoiding . . . . . 263
    - implementation-defined behavior for C++ . . . . . 675
    - storing data on stack . . . . . 76
  - recursive template instantiations, maximum depth of,
    - implementation-defined behavior for C++ . . . . . 672
  - redirect (linker option) . . . . . 397
  - reentrancy (DLIB) . . . . . 540
  - reference information, typographic convention . . . . . 48
  - regex\_constants::error\_type,
    - implementation-defined behavior for C++ . . . . . 695
  - regex\_constants::match\_flag\_type,
    - implementation-defined behavior for C++ . . . . . 695
  - region expression (in linker configuration file) . . . . . 560
  - region literal (in linker configuration file) . . . . . 559
  - register keyword, implementation-defined behavior . . . . . 705
  - register parameters . . . . . 193–194
  - register synonyms . . . . . 177
  - registered trademarks . . . . . 2
  - registers
    - assigning to parameters . . . . . 193–194
    - callee-save, stored on stack . . . . . 76
    - for function returns . . . . . 195
    - implementation-defined behavior in C89 . . . . . 723
    - in assembler-level routines . . . . . 190
    - preserved . . . . . 191
    - scratch . . . . . 191
  - .rel (ELF section) . . . . . 594
  - .rela (ELF section) . . . . . 594
  - relaxed\_fp (compiler option) . . . . . 349
  - relay, *see* veneers . . . . . 125
  - relocatable ELF object files, creating . . . . . 626
  - relocation errors, resolving . . . . . 126
  - .rel.dyn (ELF section) . . . . . 275
  - .rel.plt (ELF section) . . . . . 275
  - remark (diagnostic message) . . . . . 303
    - classifying for compiler . . . . . 323
    - classifying for linker . . . . . 375
    - enabling in compiler . . . . . 350
    - enabling in linker . . . . . 397
  - remarks (compiler option) . . . . . 350
  - remarks (linker option) . . . . . 397
  - remove (library function)
    - implementation-defined behavior in C . . . . . 712

|                                                         |          |
|---------------------------------------------------------|----------|
| implementation-defined behavior in C89 (DLIB) . . . . . | 728      |
| --remove_file_path (iobjmanip option) . . . . .         | 647      |
| --remove_section (iobjmanip option) . . . . .           | 647      |
| remquo, magnitude of . . . . .                          | 710      |
| rename (isymexport directive) . . . . .                 | 623      |
| rename (library function)                               |          |
| implementation-defined behavior in C . . . . .          | 712      |
| implementation-defined behavior in C89 (DLIB) . . . . . | 728      |
| --rename_section (iobjmanip option) . . . . .           | 647      |
| --rename_symbol (iobjmanip option) . . . . .            | 648      |
| --replace (iarchive option) . . . . .                   | 648      |
| required (pragma directive) . . . . .                   | 462      |
| --require_prototypes (compiler option) . . . . .        | 350      |
| reserve region (linker directive) . . . . .             | 577      |
| reserved identifiers . . . . .                          | 301      |
| --reserve_ranges (isymexport option) . . . . .          | 649      |
| reserving space in RAM . . . . .                        | 118      |
| reset address (64-bit mode) . . . . .                   | 92       |
| reset vector table . . . . .                            | 597      |
| __reset_QC_flag (intrinsic function) . . . . .          | 495      |
| __reset_Q_flag (intrinsic function) . . . . .           | 495      |
| restrict keyword, enabling . . . . .                    | 327      |
| return values, from functions . . . . .                 | 195      |
| __REV (intrinsic function) . . . . .                    | 495      |
| __REVSH (intrinsic function) . . . . .                  | 495      |
| __REV16 (intrinsic function) . . . . .                  | 495      |
| __rintn (intrinsic function) . . . . .                  | 496      |
| __rintnf (intrinsic function) . . . . .                 | 496      |
| .rodata (ELF section) . . . . .                         | 598      |
| ROM to RAM, copying . . . . .                           | 123      |
| ROM, reserving space in . . . . .                       | 396      |
| root                                                    |          |
| make symbol treated as . . . . .                        | 378      |
| __root (extended keyword) . . . . .                     | 437      |
| __ROPI__ (predefined symbol) . . . . .                  | 533      |
| --ropi (compiler option) . . . . .                      | 351      |
| --ropi_cb (compiler option) . . . . .                   | 352      |
| __ROR (intrinsic function) . . . . .                    | 496      |
| routines, time-critical . . . . .                       | 175, 204 |

|                                                       |     |
|-------------------------------------------------------|-----|
| __ro_placement (extended keyword) . . . . .           | 436 |
| __RRX (intrinsic function) . . . . .                  | 496 |
| RTABI (AEABI support) . . . . .                       | 239 |
| rtmodel (assembler directive) . . . . .               | 128 |
| rtmodel (pragma directive) . . . . .                  | 463 |
| __RTTI__ (predefined symbol) . . . . .                | 533 |
| RTTI data (dynamic), including in the image . . . . . | 390 |
| run time. <i>See</i> runtime                          |     |
| runtime environment                                   |     |
| DLIB . . . . .                                        | 131 |
| setting up (DLIB) . . . . .                           | 137 |
| runtime error checking, documentation . . . . .       | 46  |
| runtime libraries                                     |     |
| configuring for threads . . . . .                     | 401 |
| disabling automatic inclusion of . . . . .            | 392 |
| runtime libraries (DLIB)                              |     |
| introduction . . . . .                                | 539 |
| customizing system startup code . . . . .             | 157 |
| filename syntax . . . . .                             | 145 |
| overriding modules in . . . . .                       | 139 |
| using prebuilt . . . . .                              | 143 |
| runtime libraries (Libc++)                            |     |
| introduction . . . . .                                | 539 |
| runtime model attributes . . . . .                    | 127 |
| runtime model definitions . . . . .                   | 463 |
| __RWPI__ (predefined symbol) . . . . .                | 533 |
| --rwp (compiler option) . . . . .                     | 352 |
| --rwp_near (compiler option) . . . . .                | 353 |
| R13 (register), restrictions . . . . .                | 192 |
| R14 (register), restrictions . . . . .                | 192 |
| R15 (register), restrictions . . . . .                | 192 |

## S

|                                         |     |
|-----------------------------------------|-----|
| -s (ielfdump option) . . . . .          | 649 |
| __SADD8 (intrinsic function) . . . . .  | 496 |
| __SADD16 (intrinsic function) . . . . . | 496 |
| __SASX (intrinsic function) . . . . .   | 496 |
| __sbrel (extended keyword) . . . . .    | 427 |

- scalar type representation,
    - implementation-defined behavior for C++ . . . . . 679
  - scanf (library function)
    - choosing formatter (DLIB) . . . . . 150
    - implementation-defined behavior in C . . . . . 712
    - implementation-defined behavior in C89 (DLIB) . . . . . 728
  - \_\_scanf\_args (pragma directive) . . . . . 464
  - scanf\_multibytes (linker option) . . . . . 398
  - scheduling (compiler transformation) . . . . . 262
    - disabling . . . . . 341
  - scoped\_allocator (library header file) . . . . . 545
  - scratch registers . . . . . 191
    - for veneers and jumps . . . . . 125
  - search directory, for linker configuration files
    - (--config\_search) . . . . . 371
  - search path to library files (--search) . . . . . 399
  - search path to object files (--search) . . . . . 399
  - search (linker option) . . . . . 399
  - section (ielfdump option) . . . . . 649
  - section fragment handling, disabling . . . . . 391
  - section (compiler option) . . . . . 353
  - sections . . . . . 98
    - summary . . . . . 593
    - allocation of . . . . . 101
    - checking type at link-time . . . . . 555
    - declaring (#pragma section) . . . . . 464
    - forcing inclusion of . . . . . 394
    - linker merging duplicate . . . . . 389
    - renaming (--section\_prefix) . . . . . 354
    - renaming (--section) . . . . . 353
    - renaming (#pragma section\_prefix) . . . . . 465
    - specifying (--section) . . . . . 353
  - \_\_section\_begin (extended operator) . . . . . 206
  - \_\_section\_end (extended operator) . . . . . 206
  - section\_prefix (compiler option) . . . . . 354
  - \_\_section\_size (extended operator) . . . . . 206
  - section-selectors (in linker configuration file) . . . . . 580
  - secure mode . . . . . 243
  - segment (ielfdump option) . . . . . 650
  - segment (pragma directive) . . . . . 464
  - \_\_SEL (intrinsic function) . . . . . 497
  - self\_reloc (ielftool option) . . . . . 651
  - semihosting (linker option) . . . . . 399
  - semihosting support functions, runtime library syntax . . . 148
  - semihosting, overview . . . . . 151
  - separate\_init\_routine (pragma directive) . . . . . 709
  - set (library header file) . . . . . 545
  - setjmp.h (library header file) . . . . . 542
  - setlocale (library function) . . . . . 169
  - settings, basic for project configuration . . . . . 71
    - \_\_set\_BASEPRI (intrinsic function) . . . . . 497
    - \_\_set\_CONTROL (intrinsic function) . . . . . 497
    - \_\_set\_CPSR (intrinsic function) . . . . . 498
    - \_\_set\_FAULTMASK (intrinsic function) . . . . . 498
    - \_\_set\_FPSCR (intrinsic function) . . . . . 498
  - set\_generate\_entries\_without\_bounds (pragma directive) . 709
  - \_\_set\_interrupt\_state (intrinsic function) . . . . . 498
  - \_\_set\_LR (intrinsic function) . . . . . 499
  - \_\_set\_MSP (intrinsic function) . . . . . 499
  - \_\_set\_PRIMASK (intrinsic function) . . . . . 499
  - \_\_set\_PSP (intrinsic function) . . . . . 499
  - \_\_set\_SB (intrinsic function) . . . . . 500
  - \_\_set\_SP (intrinsic function) . . . . . 500
- set\_unexpected (deprecated function), enabling . . . . . 548
- \_\_SEV (intrinsic function) . . . . . 500
  - severity level, of diagnostic messages . . . . . 303
    - specifying . . . . . 303
- SFR**
- accessing special function registers . . . . . 265
  - declaring extern special function registers . . . . . 254
  - \_\_SHADD8 (intrinsic function) . . . . . 500
  - \_\_SHADD16 (intrinsic function) . . . . . 500
- shared libraries. *See* shared objects
- shared objects . . . . . 269
    - adding symbol to from Std Library . . . . . 284, 288
    - alignment . . . . . 286
    - compiling code for . . . . . 281
    - create dependencies for . . . . . 290
    - debugging . . . . . 273

|                                                          |          |
|----------------------------------------------------------|----------|
| exporting symbol out of                                  | 282, 287 |
| importing symbol into                                    | 283, 288 |
| in linker map file                                       | 389      |
| layout                                                   | 274      |
| limitations                                              | 269–270  |
| linking                                                  | 271, 282 |
| loading                                                  | 269, 272 |
| locating in memory                                       | 272      |
| naming                                                   | 289      |
| overview                                                 | 269      |
| requirements                                             | 270      |
| sample contents dump                                     | 277      |
| troubleshooting                                          | 279      |
| unloading                                                | 272      |
| --shared (compiler option)                               | 281      |
| --shared (linker option)                                 | 282      |
| shared_mutex (library header file)                       | 545      |
| shared_ptr constructor,                                  |          |
| implementation-defined behavior for C++                  | 678      |
| __SHASX (intrinsic function)                             | 500      |
| short (data type)                                        | 409      |
| show (isymexport directive)                              | 623      |
| --show_entry_as (isymexport option)                      | 651      |
| show-root (isymexport directive)                         | 624      |
| show-weak (isymexport directive)                         | 624      |
| __SHSAX (intrinsic function)                             | 500      |
| .shstrtab (ELF section)                                  | 594      |
| __SHSUB16 (intrinsic function)                           | 500      |
| __SHSUB8 (intrinsic function)                            | 500      |
| signal (library function)                                |          |
| implementation-defined behavior in C                     | 710      |
| implementation-defined behavior in C89                   | 727      |
| signals, implementation-defined behavior in C            | 700      |
| at system startup                                        | 701      |
| signal.h (library header file)                           | 542      |
| signed char (data type)                                  | 409–410  |
| specifying                                               | 316      |
| signed int (data type)                                   | 409      |
| signed long long (data type)                             | 409      |
| signed long (data type)                                  | 409      |
| signed short (data type)                                 | 409      |
| --silent (compiler option)                               | 355      |
| --silent (iarchive option)                               | 651      |
| silent operation                                         |          |
| specifying in compiler                                   | 355      |
| specifying in linker                                     | 400      |
| --silent (ielftool option)                               | 651      |
| --silent (linker option)                                 | 400      |
| --simple (ielftool option)                               | 652      |
| --simple-ne (ielftool option)                            | 652      |
| sin (library function)                                   | 540      |
| 64-bits (floating-point format)                          | 416      |
| 64-bit mode                                              | 58       |
| code generation                                          | 80, 313  |
| identifying using predefined symbol                      | 521      |
| size (in stack usage control file)                       | 607      |
| sizeof and fundamental types,                            |          |
| implementation-defined behavior for C++                  | 670      |
| sizeof, implementation-defined behavior for C++          | 670      |
| size_t (integer type)                                    | 418      |
| implementation-defined behavior for C++                  | 675      |
| skeleton code, creating for assembler language interface | 187      |
| slist (library header file)                              | 545      |
| small function inlining (linker optimization)            | 129      |
| excluding functions from                                 | 392      |
| smallest, packing algorithm for initializers             | 571      |
| --small_math (linker option)                             | 400      |
| __SMLABB (intrinsic function)                            | 501      |
| __SMLABT (intrinsic function)                            | 501      |
| __SMLAD (intrinsic function)                             | 501      |
| __SMLADX (intrinsic function)                            | 501      |
| __SMLALBB (intrinsic function)                           | 501      |
| __SMLALBT (intrinsic function)                           | 501      |
| __SMLALD (intrinsic function)                            | 501      |
| __SMLALDX (intrinsic function)                           | 501      |
| __SMLALTB (intrinsic function)                           | 501      |
| __SMLALTT (intrinsic function)                           | 501      |
| __SMLATB (intrinsic function)                            | 501      |
| __SMLATT (intrinsic function)                            | 501      |
| __SMLAWB (intrinsic function)                            | 501      |



- \_\_SMLAWT (intrinsic function) . . . . . 501
- \_\_SMLSJ (intrinsic function) . . . . . 501
- \_\_SMLSJDX (intrinsic function) . . . . . 501
- \_\_SMLSLD (intrinsic function) . . . . . 501
- \_\_SMLSLDX (intrinsic function) . . . . . 501
- \_\_SMMLA (intrinsic function) . . . . . 502
- \_\_SMMLAR (intrinsic function) . . . . . 502
- \_\_SMMLS (intrinsic function) . . . . . 502
- \_\_SMMLSR (intrinsic function) . . . . . 502
- \_\_SMMUL (intrinsic function) . . . . . 502
- \_\_SMMULR (intrinsic function) . . . . . 502
- \_\_SMUAD (intrinsic function) . . . . . 502
- \_\_SMUL (intrinsic function) . . . . . 503
- \_\_SMULBB (intrinsic function) . . . . . 503
- \_\_SMULBT (intrinsic function) . . . . . 503
- \_\_SMULTB (intrinsic function) . . . . . 503
- \_\_SMULTT (intrinsic function) . . . . . 503
- \_\_SMULWB (intrinsic function) . . . . . 503
- \_\_SMULWT (intrinsic function) . . . . . 503
- \_\_SMUSD (intrinsic function) . . . . . 502
- \_\_SMUSDJ (intrinsic function) . . . . . 502
- software interrupt handlers . . . . . 87
  - installing . . . . . 84
- software interrupts . . . . . 87
  - excluded from stack usage analysis . . . . . 111
- source (ielfdump option) . . . . . 652
- source files, list all referred. . . . . 331
- source\_encoding (compiler option) . . . . . 355
- so\_alignment (linker directive) . . . . . 286
- so\_bss (ELF section) . . . . . 291
- so\_code (ELF section) . . . . . 291
- so\_const (ELF section) . . . . . 292
- so\_data (ELF section) . . . . . 292
- so\_export (linker directive) . . . . . 286
- so\_export (linker option) . . . . . 282
- so\_import (linker directive) . . . . . 287
- so\_import (linker option) . . . . . 283
- so\_internalize (linker directive) . . . . . 288
- so\_internalize (linker option) . . . . . 284
- so\_internalize\_stdlib (linker option) . . . . . 284
- so\_name (linker directive) . . . . . 289
- so\_needed (linker directive) . . . . . 290
- so\_rpath (linker directive) . . . . . 290
- so\_runpath (linker directive) . . . . . 291
- SP (register), restrictions. . . . . 192
- space characters, implementation-defined behavior in C . 711
- special function registers (SFR) . . . . . 265
- sph\_bessel functions,
  - implementation-defined behavior for C++ . . . . . 692
- sph\_legendre functions,
  - implementation-defined behavior for C++ . . . . . 692
- sph\_neumann functions,
  - implementation-defined behavior for C++ . . . . . 692
- sprintf (library function) . . . . . 148
  - choosing formatter . . . . . 148
- \_\_sqrt (intrinsic function) . . . . . 503
- \_\_sqrtf (intrinsic function) . . . . . 503
- src (ielftool option) . . . . . 653
- src-len (ielftool option) . . . . . 653
- src-s3only (ielftool option) . . . . . 653
- \_\_SSAT (intrinsic function) . . . . . 503
- \_\_SSAT16 (intrinsic function) . . . . . 504
- \_\_SSAX (intrinsic function) . . . . . 496
- sscanf (library function)
  - choosing formatter (DLIB) . . . . . 150
- sstream (library header file) . . . . . 545
- \_\_SSUB16 (intrinsic function) . . . . . 496
- \_\_SSUB8 (intrinsic function) . . . . . 496
- stack . . . . . 76
  - advantages and problems using . . . . . 76
  - alignment . . . . . 224
  - block for holding . . . . . 595
  - cleaning after function return . . . . . 196
  - contents of . . . . . 76
  - exception . . . . . 225
  - frame, specifying size of . . . . . 606
  - Hypervisor mode . . . . . 225
  - interrupt handler. . . . . 225
  - layout . . . . . 194

|                                                    |          |
|----------------------------------------------------|----------|
| Monitor mode                                       | 225      |
| operation system                                   | 225      |
| saving space                                       | 263      |
| setting up size for                                | 120      |
| size                                               | 224      |
| undefined instruction interrupt                    | 225      |
| User mode                                          | 225      |
| stack buffer overflow                              | 94       |
| stack canary                                       | 94       |
| stack cookie. <i>See</i> stack canary              |          |
| stack parameters                                   | 194      |
| stack pointer                                      | 76       |
| stack pointer register, restrictions               | 192      |
| stack protection                                   | 94       |
| stack smashing                                     | 94       |
| stack usage analysis                               |          |
| enabling on the command line                       | 370, 377 |
| stack usage control file                           |          |
| in depth                                           | 601      |
| overview of                                        | 601      |
| specifying                                         | 400      |
| stack (library header file)                        | 545      |
| __stackless (extended keyword)                     | 437      |
| stack_protect (pragma directive)                   | 465      |
| --sack_protection (compiler option)                | 355      |
| --stack_usage_control (linker option)              | 400      |
| stack-size (in stack usage control file)           | 606      |
| Standard C                                         | 203, 327 |
| specifying strict usage                            | 356      |
| Standard C++                                       |          |
| enabling deprecated features                       | 532, 548 |
| implementation quantities                          | 696      |
| implementation-defined behavior                    | 661      |
| standard error                                     |          |
| redirecting in compiler                            | 347      |
| redirecting in linker                              | 395      |
| <i>See also</i> diagnostic messages                | 299      |
| standard library functions,                        |          |
| implementation-defined behavior for C++            | 675      |
| standard output                                    |          |
| specifying in compiler                             | 347      |
| specifying in linker                               | 395      |
| start up system. <i>See</i> system startup         |          |
| statement expressions, GNU style                   | 211      |
| statements, implementation-defined behavior in C89 | 724      |
| static analysis tool, documentation for            | 46       |
| static clustering (compiler transformation)        | 261      |
| static variables                                   | 75       |
| taking the address of                              | 263      |
| status flags for floating-point                    | 549      |
| __STC (intrinsic function)                         | 504      |
| __STCL (intrinsic function)                        | 504      |
| __STCL_noidx (intrinsic function)                  | 505      |
| __STC_noidx (intrinsic function)                   | 505      |
| __STC2 (intrinsic function)                        | 504      |
| __STC2L (intrinsic function)                       | 504      |
| __STC2L_noidx (intrinsic function)                 | 505      |
| __STC2_noidx (intrinsic function)                  | 505      |
| stdalign.h (library header file)                   | 542      |
| stdarg.h (library header file)                     | 543      |
| stdatomic.h (library header file)                  | 543      |
| stdbool.h (library header file)                    | 410, 543 |
| __STDC__ (predefined symbol)                       | 534      |
| implementation-defined behavior for C++            | 674      |
| STDC CX_LIMITED_RANGE (pragma directive)           | 465      |
| STDC FENV_ACCESS (pragma directive)                | 466      |
| STDC FP_CONTRACT (pragma directive)                | 466      |
| __STDC_LIB_EXT1__ (predefined symbol)              | 534      |
| __STDC_NO_ATOMICS__ (preprocessor symbol)          | 534      |
| __STDC_NO_THREADS__ (preprocessor symbol)          | 534      |
| __STDC_NO_VLA__ (preprocessor symbol)              | 534      |
| __STDC_UTF16__ (preprocessor symbol)               | 534      |
| __STDC_UTF32__ (preprocessor symbol)               | 534      |
| __STDC_VERSION__ (predefined symbol)               | 535      |
| implementation-defined behavior for C++            | 674      |
| __STDC_WANT_LIB_EXT1__ (preprocessor symbol)       | 536      |
| stddef.h (library header file)                     | 543      |
| stderr                                             | 138, 347 |

- stdexcept (library header file) . . . . . 545
- stdin . . . . . 138
  - implementation-defined behavior in C89 (DLIB) . . . . . 727
- stdint.h (library header file) . . . . . 543, 547
- stdio.h (library header file) . . . . . 543
- stdio.h, additional C functionality . . . . . 549
- stdlib.h (library header file) . . . . . 543
- stdnoreturn.h (library header file) . . . . . 543
- stdout . . . . . 138, 347
  - implementation-defined behavior in C . . . . . 710
  - implementation-defined behavior in C89 (DLIB) . . . . . 727
- std::auto\_ptr, removed in Libc++ . . . . . 221
- std::mem\_fun, removed in Libc++ . . . . . 221
- std::random\_shuffle, removed in Libc++ . . . . . 221
- std::terminate,
  - implementation-defined behavior for C++ . . . . . 672
- Steele, Guy L. . . . . 47
- steering file, input to isymexport . . . . . 622
- storage
  - data . . . . . 75
  - See also* memory
- strcasecmp, in string.h . . . . . 550
- strcoll (function) . . . . . 551
- strdup, in string.h . . . . . 550
- streambuf (library header file) . . . . . 545
- streamoff, implementation-defined behavior for C++ . . . . . 680
- streampos, implementation-defined behavior for C++ . . . . . 680
- streams, implementation-defined behavior in C . . . . . 700
- strerror (library function)
  - implementation-defined behavior in C . . . . . 716
  - implementation-defined behavior in C89 (DLIB) . . . . . 729
- \_\_STREX (intrinsic function) . . . . . 505
- \_\_STREXB (intrinsic function) . . . . . 505
- \_\_STREXD (intrinsic function) . . . . . 505
- \_\_STREXH (intrinsic function) . . . . . 505
- strict (compiler option) . . . . . 356
- string literals, implementation-defined behavior for C++ . . . . . 665
- string (library header file) . . . . . 545
- string\_view (library header file) . . . . . 545
- string.h (library header file) . . . . . 543
  - string.h, additional C functionality . . . . . 550
  - strip (ielftool option) . . . . . 654
  - strip (iobjmanip option) . . . . . 654
  - strip (linker option) . . . . . 401
  - strncasecmp, in string.h . . . . . 550
  - strlen, in string.h . . . . . 550
  - strstream (library header file) . . . . . 545
  - .strtab (ELF section) . . . . . 594
  - structure types
    - alignment . . . . . 418–419
    - layout of . . . . . 419
    - packed . . . . . 419
  - structures
    - aligning . . . . . 461
    - anonymous . . . . . 251
    - flexible array members . . . . . 208
    - implementation-defined behavior in C . . . . . 705
    - implementation-defined behavior in C89 . . . . . 723
    - packing and unpacking . . . . . 251
  - strxfrm (function) . . . . . 551
  - subnormal numbers . . . . . 415–416
  - \$Sub\$\$ pattern . . . . . 248
  - supervisor call . . . . . 91
  - supervisor-defined (SVC) functions . . . . . 91
  - \$Super\$\$ pattern . . . . . 248
  - support, technical . . . . . 304
  - Sutter, Herb. . . . . 47
  - \_\_svc (extended keyword) . . . . . 438
  - SVC functions . . . . . 91
  - SVC #immed, for software interrupts . . . . . 87
  - svc\_number (pragma directive) . . . . . 467
  - SVC\_STACK . . . . . 225
  - SVr4 DSO-like PLT Linkage, adherence to . . . . . 270
  - \_\_swi (extended keyword) . . . . . 427
  - SWI\_Handler (exception function) . . . . . 85
  - SWO, directing stdout/stderr via . . . . . 136
  - \_\_SWP (intrinsic function) . . . . . 506
  - \_\_SWPB (intrinsic function) . . . . . 506
  - \_\_SXTAB (intrinsic function) . . . . . 506

|                                                                   |          |
|-------------------------------------------------------------------|----------|
| __SXTAB16 (intrinsic function) . . . . .                          | 506      |
| __SXTAH (intrinsic function) . . . . .                            | 506      |
| __SXTB16 (intrinsic function) . . . . .                           | 506      |
| symbols                                                           |          |
| directing from one to another . . . . .                           | 397      |
| in shared objects. <i>See</i> symbols in shared objects           |          |
| including in output . . . . .                                     | 462      |
| linker always including . . . . .                                 | 384      |
| local, removing from linked image . . . . .                       | 393      |
| overview of predefined . . . . .                                  | 59       |
| patching using \$Super\$\$ and \$Sub\$\$ . . . . .                | 248      |
| preprocessor, defining . . . . .                                  | 320, 373 |
| replacing contents of in ELF image . . . . .                      | 656      |
| treated as root. . . . .                                          | 378      |
| --symbols (iarchive option) . . . . .                             | 654      |
| symbols in shared objects                                         |          |
| adding from Std Library . . . . .                                 | 284, 288 |
| exporting . . . . .                                               | 282, 287 |
| importing . . . . .                                               | 283, 288 |
| symbols (global), updating typeless . . . . .                     | 657      |
| .symtab (ELF section) . . . . .                                   | 594      |
| Synchronous_Handler_A64 (exception vector) . . . . .              | 89       |
| syntax                                                            |          |
| command line options . . . . .                                    | 305      |
| extended keywords . . . . .                                       | 424–426  |
| invoking compiler and linker . . . . .                            | 295      |
| syntax_option_type,                                               |          |
| implementation-defined behavior for C++ . . . . .                 | 695      |
| system function,                                                  |          |
| implementation-defined behavior in C . . . . .                    | 701, 713 |
| system initialization functions, runtime library syntax . . . . . | 148      |
| system register bit (FPCCR.ASPEN),                                |          |
| interrupts on Cortex-M . . . . .                                  | 82       |
| system startup                                                    |          |
| customizing . . . . .                                             | 157      |
| DLIB . . . . .                                                    | 153      |
| implementation-defined behavior for C++ . . . . .                 | 666      |
| initialization phase . . . . .                                    | 67       |
| system startup functions, runtime library syntax . . . . .        | 148      |

|                                                         |          |
|---------------------------------------------------------|----------|
| system termination                                      |          |
| C-SPY interface to . . . . .                            | 157      |
| DLIB . . . . .                                          | 156      |
| implementation-defined behavior for C++ . . . . .       | 666      |
| system (library function)                               |          |
| implementation-defined behavior in C89 (DLIB) . . . . . | 729      |
| system_error (library header file) . . . . .            | 546      |
| system_include (pragma directive) . . . . .             | 709, 726 |
| --system_include_dir (compiler option) . . . . .        | 356      |

## T

|                                                              |          |
|--------------------------------------------------------------|----------|
| -t (iarchive option) . . . . .                               | 655      |
| tan (library function) . . . . .                             | 540      |
| __task (extended keyword) . . . . .                          | 439      |
| technical support, IAR . . . . .                             | 304      |
| template support                                             |          |
| in C++ . . . . .                                             | 217      |
| Terminal I/O window                                          |          |
| not supported when . . . . .                                 | 139      |
| termination of system. <i>See</i> system termination         |          |
| termination status, implementation-defined behavior in C 713 |          |
| text encodings . . . . .                                     | 300      |
| text input file, specifying UTF-8 . . . . .                  | 403      |
| text output file, specifying encoding . . . . .              | 401      |
| .text (ELF section) . . . . .                                | 276, 599 |
| --text_out (iarchive option) . . . . .                       | 654, 656 |
| --text_out (ielfdump option) . . . . .                       | 654, 656 |
| --text_out (iobjmanip option) . . . . .                      | 654, 656 |
| --text_out (isymexport option) . . . . .                     | 654      |
| --text_out (linker option) . . . . .                         | 401      |
| --text_out (compiler option) . . . . .                       | 356      |
| tgmath.h (library header file) . . . . .                     | 543      |
| 32-bits (floating-point format) . . . . .                    | 415      |
| 32-bit mode . . . . .                                        | 58       |
| code generation . . . . .                                    | 80       |
| identifying using predefined symbol . . . . .                | 521      |
| this (pointer) . . . . .                                     | 189      |
| thread support functions, runtime library syntax . . . . .   | 147      |

- thread (library header file) . . . . . 546
- threaded environment . . . . . 169
- threaded\_lib (linker option) . . . . . 401
- threads
  - configuring runtime library for . . . . . 401
  - forward progress, implementation-defined behavior for C++ . . . . . 662
  - number of, implementation-defined behavior for C++ . . . . . 662
- threads.h (library header file) . . . . . 543
- \_\_thumb (extended keyword) . . . . . 439
- thumb (compiler option) . . . . . 357
- \_\_thumb\_\_ (predefined symbol) . . . . . 535
- \_\_TIME\_\_ (predefined symbol) . . . . . 535
- implementation-defined behavior for C++ . . . . . 674
- time zone (library function)
  - enabling . . . . . 402
  - implementation-defined behavior in C . . . . . 713
  - implementation-defined behavior in C89 . . . . . 729
- \_\_TIMESTAMP\_\_ (predefined symbol) . . . . . 535
- timezone functions, runtime library syntax . . . . . 147
- timezone\_lib (linker option) . . . . . 402
- time\_get::do\_get\_date, implementation-defined behavior for C++ . . . . . 682
- time\_get::do\_get\_year, implementation-defined behavior for C++ . . . . . 682
- time\_put::do\_put, implementation-defined behavior for C++ . . . . . 682
- time\_t value to time\_point object conversion, implementation-defined behavior for C++ . . . . . 679
- time-critical routines . . . . . 175, 204
- time.h (library header file) . . . . . 543
  - additional C functionality . . . . . 550
- time32 (library function), configuring support for . . . . . 138
- time64 (library function), configuring support for . . . . . 138
- tips, programming . . . . . 262
- titxt (ielftool option) . . . . . 655
- toc (iarchive option) . . . . . 655
- tools icon, in this guide . . . . . 49
- towlower (function) . . . . . 551
- towupper (function) . . . . . 551
- trademarks . . . . . 2
- trailing comma . . . . . 221
- transformations, compiler . . . . . 256
  - See also* optimization
- translation
  - implementation-defined behavior . . . . . 699
  - implementation-defined behavior for C++ . . . . . 663
  - implementation-defined behavior in C89 . . . . . 719
- translation process . . . . . 64
- treat\_rvct\_modules\_as\_softfp (linker option) . . . . . 402
- TrustZone . . . . . 95, 243
  - in 64-bit mode . . . . . 246
- \_\_TT (intrinsic function) . . . . . 506
- \_\_TTA (intrinsic function) . . . . . 506
- \_\_TTAT (intrinsic function) . . . . . 506
- \_\_TTT (intrinsic function) . . . . . 506
- tuple (library header file) . . . . . 546
- type attributes . . . . . 423
  - specifying . . . . . 467
- type conversion. *See* casting
- type qualifiers
  - const and volatile . . . . . 420
  - implementation-defined behavior . . . . . 706
  - implementation-defined behavior in C89 . . . . . 724
- typedefs
  - excluding from diagnostics . . . . . 343
  - repeated . . . . . 208
- typeid, derived type for, implementation-defined behavior for C++ . . . . . 669
- typeindex (library header file) . . . . . 546
- typeid (library header file) . . . . . 546
- typeof operator (GNU extension) . . . . . 211
- types, trivially copyable, implementation-defined behavior for C++ . . . . . 667
- typetraits (library header file) . . . . . 546
- type\_attribute (pragma directive) . . . . . 467
- type\_info::name, implementation-defined behavior for C++ . . . . . 676
- type-based alias analysis (compiler transformation) . . . . . 261
  - disabling . . . . . 343

typographic conventions . . . . . 48

## U

\_\_UADD8 (intrinsic function) . . . . . 507  
\_\_UADD16 (intrinsic function) . . . . . 507  
\_\_UASX (intrinsic function). . . . . 507  
uchar.h (library header file) . . . . . 543  
\_\_UHADD8 (intrinsic function) . . . . . 507  
\_\_UHADD16 (intrinsic function) . . . . . 507  
\_\_UHASX (intrinsic function) . . . . . 507  
\_\_UHSAX (intrinsic function) . . . . . 507  
\_\_UHSUB16 (intrinsic function) . . . . . 507  
\_\_UHSUB8 (intrinsic function) . . . . . 507  
uintptr\_t (integer type) . . . . . 418  
\_\_UMAAL (intrinsic function). . . . . 507  
unary\_function (deprecated function), enabling . . . . . 548  
undefined instruction interrupt stack. . . . . 225  
underflow errors,  
implementation-defined behavior in C . . . . . 710  
underflow range errors,  
implementation-defined behavior in C89 . . . . . 726  
underscore  
    double in reserved identifiers. . . . . 301  
    followed by uppercase letter (reserved identifier) . . . . 301  
UND\_STACK . . . . . 225  
\_\_ungetchar, in stdio.h . . . . . 549  
Unicode . . . . . 300  
uniform attribute syntax . . . . . 424  
--uniform\_attribute\_syntax (compiler option). . . . . 357  
.uninit (ELF section). . . . . 277  
unions  
    anonymous. . . . . 251  
    implementation-defined behavior in C. . . . . 705  
    implementation-defined behavior in C89. . . . . 723  
universal character names  
    implementation-defined behavior for C++. . . . . 665  
    implementation-defined behavior in C. . . . . 707

unordered\_map (library header file) . . . . . 546  
    implementation-defined behavior for C++. . . . . 686  
unordered\_multimap,  
implementation-defined behavior for C++ . . . . . 686  
unordered\_multiset,  
implementation-defined behavior for C++ . . . . . 688  
unordered\_set (library header file) . . . . . 546  
    implementation-defined behavior for C++. . . . . 687  
unreachable code. *See* dead code  
unroll (pragma directive) . . . . . 468  
unsigned char (data type) . . . . . 409–410  
    changing to signed char . . . . . 316  
unsigned int (data type). . . . . 409  
unsigned long long (data type) . . . . . 409  
unsigned long (data type) . . . . . 409  
unsigned short (data type). . . . . 409  
unsigned to signed conversion,  
implementation-defined behavior for C++ . . . . . 668  
--update\_symbol (ielftool option) . . . . . 656  
--update\_typeless\_globals (iobjmanip option) . . . . . 657  
\_\_UQADD8 (intrinsic function) . . . . . 508  
\_\_UQADD16 (intrinsic function) . . . . . 508  
\_\_UQASX (intrinsic function) . . . . . 508  
\_\_UQSAX (intrinsic function) . . . . . 508  
\_\_UQSUB16 (intrinsic function) . . . . . 508  
\_\_UQSUB8 (intrinsic function) . . . . . 508  
\_\_USADA8 (intrinsic function) . . . . . 508  
\_\_USAD8 (intrinsic function). . . . . 508  
\_\_USAT (intrinsic function). . . . . 508  
\_\_USAT16 (intrinsic function). . . . . 509  
\_\_USAX (intrinsic function). . . . . 507  
use init table (linker directive) . . . . . 577  
User mode stack . . . . . 225  
uses\_aspect (pragma directive) . . . . . 709  
--use\_cplusplus\_inline (compiler option) . . . . . 358  
--use\_full\_std\_template\_names (ielfdump option) . . . . . 657  
--use\_full\_std\_template\_names (linker option). . . . . 402  
--use\_optimized\_variants (linker option) . . . . . 403  
--use\_paths\_as\_written (compiler option). . . . . 358  
--use\_unix\_directory\_separators (compiler option). . . . . 358

- USR\_STACK . . . . . 225
  - \_\_USUB16 (intrinsic function) . . . . . 507
  - \_\_USUB8 (intrinsic function) . . . . . 507
  - UTF-16 . . . . . 300
  - UTF-8 . . . . . 300
    - in text input file . . . . . 403
  - utf8\_text\_in (compiler option) . . . . . 359
  - utf8\_text\_in (iarchive option) . . . . . 658
  - utf8\_text\_in (ielfdump option) . . . . . 658
  - utf8\_text\_in (iobjmanip option) . . . . . 658
  - utf8\_text\_in (isymexport option) . . . . . 658
  - utf8\_text\_in (linker option) . . . . . 403
  - utilities (ELF) . . . . . 609
  - utility (library header file) . . . . . 546
  - \_\_UXTAB (intrinsic function) . . . . . 509
  - \_\_UXTAB16 (intrinsic function) . . . . . 509
  - \_\_UXTAH (intrinsic function) . . . . . 509
  - \_\_UXTB16 (intrinsic function) . . . . . 509
  - u16streampos, implementation-defined behavior for C++ 680
  - u32streampos, implementation-defined behavior for C++ 680
- ## V
- V (iarchive option) . . . . . 658
  - valarray (library header file) . . . . . 546
  - variables
    - auto . . . . . 76
    - defined inside a function . . . . . 76
    - global
      - placement in memory . . . . . 75
    - hints for choosing . . . . . 263
    - life of (optimization) . . . . . 258
    - life of. *See* optimization levels
    - local. *See* auto variables
    - non-initialized . . . . . 267
    - placing at absolute addresses . . . . . 254
    - placing in named sections . . . . . 254
    - static
      - placement in memory . . . . . 75
      - taking the address of . . . . . 263
  - variant support of over-aligned types,
    - implementation-defined behavior for C++ . . . . . 677
  - variant (library header file) . . . . . 546
  - vector floating-point unit . . . . . 330
  - vector (library header file) . . . . . 546
  - vector (pragma directive) . . . . . 709, 726
  - vectorization (compiler transformation) . . . . . 262
  - vectorize (compiler option) . . . . . 359
  - vectorize (pragma directive) . . . . . 468
  - \_\_vector\_table, array holding vector table . . . . . 82
  - veneers . . . . . 125
  - verbose (iarchive option) . . . . . 658
  - verbose (ielftool option) . . . . . 658
  - version
    - identifying C standard in use (\_\_STDC\_VERSION\_\_) 535
    - of compiler (\_\_VER\_\_) . . . . . 535
    - of linker (--version) . . . . . 404
  - version number, of this guide . . . . . 2
  - version (IAR utilities option) . . . . . 658
  - version (linker option) . . . . . 404
  - version (compiler option) . . . . . 359
  - VFABIA64 (AEABI support) . . . . . 239
  - vfe (linker option) . . . . . 404
  - \_\_VFMA\_F32 (intrinsic function) . . . . . 509
  - \_\_VFMA\_F64 (intrinsic function) . . . . . 509
  - \_\_VFMS\_F32 (intrinsic function) . . . . . 509
  - \_\_VFMS\_F64 (intrinsic function) . . . . . 509
  - \_\_VFNMA\_F32 (intrinsic function) . . . . . 509
  - \_\_VFNMA\_F64 (intrinsic function) . . . . . 509
  - \_\_VFNMS\_F32 (intrinsic function) . . . . . 509
  - \_\_VFNMS\_F64 (intrinsic function) . . . . . 509
  - VFP . . . . . 330
  - virtual function elimination (linker optimization) . . . . . 129
    - disabling (--no\_vfe) . . . . . 394
    - enabling (--vfe) . . . . . 404
    - forcing . . . . . 404
  - visibility (compiler option) . . . . . 285
  - vla (compiler option) . . . . . 359
  - \_\_VMAXNM\_F32 (intrinsic function) . . . . . 510

|                                                        |     |
|--------------------------------------------------------|-----|
| __VMAXNM_F64 (intrinsic function) . . . . .            | 510 |
| __VMINNM_F32 (intrinsic function) . . . . .            | 510 |
| __VMINNM_F64 (intrinsic function) . . . . .            | 510 |
| void, pointers to . . . . .                            | 208 |
| volatile                                               |     |
| and const, declaring objects . . . . .                 | 422 |
| declaring objects . . . . .                            | 420 |
| protecting simultaneously accesses variables . . . . . | 265 |
| rules for access . . . . .                             | 421 |
| volatile-qualified type,                               |     |
| implementation-defined behavior for C++ . . . . .      | 671 |
| __VRINTA_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTA_F64 (intrinsic function) . . . . .            | 510 |
| __VRINTM_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTM_F64 (intrinsic function) . . . . .            | 510 |
| __VRINTN_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTN_F64 (intrinsic function) . . . . .            | 510 |
| __VRINTP_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTP_F64 (intrinsic function) . . . . .            | 510 |
| __VRINTR_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTR_F64 (intrinsic function) . . . . .            | 510 |
| __VRINTX_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTX_F64 (intrinsic function) . . . . .            | 510 |
| __VRINTZ_F32 (intrinsic function) . . . . .            | 510 |
| __VRINTZ_F64 (intrinsic function) . . . . .            | 510 |
| __VSQRT_F32 (intrinsic function) . . . . .             | 511 |
| __VSQRT_F64 (intrinsic function) . . . . .             | 511 |
| --vtoc (iarchive option) . . . . .                     | 659 |

## W

|                                                       |     |
|-------------------------------------------------------|-----|
| #warning (preprocessor extension) . . . . .           | 536 |
| warnings . . . . .                                    | 303 |
| classifying in compiler . . . . .                     | 324 |
| classifying in linker . . . . .                       | 376 |
| constructors with incomplete initialization . . . . . | 360 |
| disabling in compiler . . . . .                       | 345 |
| disabling in linker . . . . .                         | 394 |
| exit code in compiler . . . . .                       | 361 |

|                                                               |          |
|---------------------------------------------------------------|----------|
| exit code in linker . . . . .                                 | 405      |
| structure without explicit initializers . . . . .             | 360      |
| warnings icon, in this guide . . . . .                        | 49       |
| warnings (pragma directive) . . . . .                         | 709, 726 |
| --warnings_affect_exit_code (compiler option) . . . . .       | 304, 361 |
| --warnings_affect_exit_code (linker option) . . . . .         | 304, 405 |
| --warnings_are_errors (compiler option) . . . . .             | 361      |
| --warnings_are_errors (linker option) . . . . .               | 405      |
| --warn_about_c_style_casts (compiler option) . . . . .        | 360      |
| --warn_about_incomplete_constructors                          |          |
| (compiler option) . . . . .                                   | 360      |
| --warn_about_missing_field_initializers                       |          |
| (compiler option) . . . . .                                   | 360      |
| wchar_t (data type) . . . . .                                 | 410      |
| implementation-defined behavior in C . . . . .                | 703      |
| wchar.h (library header file) . . . . .                       | 543, 547 |
| wctype.h (library header file) . . . . .                      | 543      |
| __weak (extended keyword) . . . . .                           | 440      |
| weak (pragma directive) . . . . .                             | 469      |
| web sites, recommended . . . . .                              | 47       |
| __WFE (intrinsic function) . . . . .                          | 511      |
| __WFI (intrinsic function) . . . . .                          | 511      |
| white-space characters, implementation-defined behavior       | 699      |
| --whole_archive (linker option) . . . . .                     | 405      |
| wide-character literals,                                      |          |
| implementation-defined behavior for C++ . . . . .             | 664      |
| --wrap (iexe2obj option) . . . . .                            | 659      |
| __write_array, in stdio.h . . . . .                           | 549      |
| __write_buffered (DLIB library function) . . . . .            | 137      |
| wstreampos, implementation-defined behavior for C++ . . . . . | 681      |

## X

|                                           |     |
|-------------------------------------------|-----|
| -x (iarchive option) . . . . .            | 636 |
| _Xtime_get_ticks (C++ function) . . . . . | 551 |
| _XTIME_NSECS_PER_TICK (macro) . . . . .   | 551 |
| X30 (register), restrictions . . . . .    | 192 |



# Y

`__YIELD` (intrinsic function) . . . . . 511

# Z

zeros, packing algorithm for initializers . . . . . 571

# Symbols

`__AEABI_PORTABILITY_LEVEL`  
(preprocessor symbol) . . . . . 241

`__AEABI_PORTABLE` (preprocessor symbol) . . . . . 241

`__Exit` (library function) . . . . . 156

`__exit` (library function) . . . . . 156

`__Float16` (data type) . . . . . 415

`__init` (suffix for initializer sections) . . . . . 121

`__LIBCPP_ENABLE_CXX17_REMOVED_FEATURES`  
(predefined symbol) . . . . . 221, 532, 548

`__Xtime_get_ticks` (C++ function) . . . . . 551

`__XTIME_NSECS_PER_TICK` (macro) . . . . . 551

`__AAPCS_VFP__` (predefined symbol) . . . . . 520

`__AAPCS__` (predefined symbol) . . . . . 520

`__aarch64__` (predefined symbol) . . . . . 520

`__absolute` (extended keyword) . . . . . 427

`__ALIGNOF__` (operator) . . . . . 206

`__arm` (extended keyword) . . . . . 428

`__ARMVFPV2__` (predefined symbol) . . . . . 529

`__ARMVFPV3__` (predefined symbol) . . . . . 529

`__ARMVFPV4__` (predefined symbol) . . . . . 529

`__ARMVFPV5__` (predefined symbol) . . . . . 529

`__ARMVFP_D16__` (predefined symbol) . . . . . 529

`__ARMVFP_SP__` (predefined symbol) . . . . . 529

`__ARMVFP__` (predefined symbol) . . . . . 529

`__ARM_ADVANCED_SIMD__` (predefined symbol) . . 521

`__ARM_ALIGN_MAX_PWR` (predefined symbol) . . . 521

`__ARM_ALIGN_MAX_STACK_PWR`  
(predefined symbol) . . . . . 522

`__ARM_ARCH` (predefined symbol) . . . . . 522

`__ARM_ARCH_ISA_ARM` (predefined symbol) . . . . . 522

`__ARM_ARCH_ISA_A64` (predefined symbol) . . . . . 522

`__ARM_ARCH_ISA_THUMB` (predefined symbol) . . . 522

`__ARM_ARCH_PROFILE` (predefined symbol) . . . . . 522

`__ARM_BIG_ENDIAN` (predefined symbol) . . . . . 523

`__arm_cdp` (intrinsic function) . . . . . 473

`__arm_cdp2` (intrinsic function) . . . . . 473

`__ARM_FEATURE_AES` (predefined symbol) . . . . . 523

`__ARM_FEATURE_CLZ` (predefined symbol) . . . . . 523

`__ARM_FEATURE_CMSE` (predefined symbol) . . . . . 523

`__ARM_FEATURE_CRC32` (predefined symbol) . . . . . 523

`__ARM_FEATURE_CRYPTO` (predefined symbol) . . . 524

`__ARM_FEATURE_DIRECTED_ROUNDING`  
(predefined symbol) . . . . . 524

`__ARM_FEATURE_DSP` (predefined symbol) . . . . . 524

`__ARM_FEATURE_FMA` (predefined symbol) . . . . . 524

`__ARM_FEATURE_FP16_FML` (predefined symbol) . . 524

`__ARM_FEATURE_IDIV` (predefined symbol) . . . . . 524

`__ARM_FEATURE_NUMERIC_MAXMIN`  
(predefined symbol) . . . . . 525

`__ARM_FEATURE_QBIT` (predefined symbol) . . . . . 525

`__ARM_FEATURE_QRDMX` (predefined symbol) . . . . 525

`__ARM_FEATURE_SAT` (predefined symbol) . . . . . 525

`__ARM_FEATURE_SHA2` (predefined symbol) . . . . . 525

`__ARM_FEATURE_SHA3` (predefined symbol) . . . . . 525

`__ARM_FEATURE_SHA512` (predefined symbol) . . . . 526

`__ARM_FEATURE_SIMD32` (predefined symbol) . . . . 526

`__ARM_FEATURE_SM3` (predefined symbol) . . . . . 526

`__ARM_FEATURE_SM4` (predefined symbol) . . . . . 526

`__ARM_FEATURE_UNALIGNED` (predefined symbol) 526

`__ARM_FP` (predefined symbol) . . . . . 526

`__ARM_FP16_ARGS` (predefined symbol) . . . . . 526

`__ARM_FP16_FML` (predefined symbol) . . . . . 527

`__ARM_FP16_FORMAT_IEEE` (predefined symbol) . . 527

`__arm_idc` (intrinsic function) . . . . . 474

`__arm_idcl` (intrinsic function) . . . . . 474

`__arm_idcl2` (intrinsic function) . . . . . 474

`__arm_idc2` (intrinsic function) . . . . . 474

`__arm_mcr` (intrinsic function) . . . . . 475

|                                                                         |     |                                                                      |     |
|-------------------------------------------------------------------------|-----|----------------------------------------------------------------------|-----|
| <code>__arm_mcorr</code> (intrinsic function) . . . . .                 | 475 | <code>__ARM8M_BASELINE__</code> (predefined symbol) . . . . .        | 530 |
| <code>__arm_mcorr2</code> (intrinsic function) . . . . .                | 475 | <code>__ARM8M_MAINLINE__</code> (predefined symbol) . . . . .        | 530 |
| <code>__arm_mcr2</code> (intrinsic function) . . . . .                  | 475 | <code>__ARM8R__</code> (predefined symbol) . . . . .                 | 530 |
| <code>__ARM_MEDIA__</code> (predefined symbol) . . . . .                | 527 | <code>__asm</code> (language extension) . . . . .                    | 178 |
| <code>__arm_mrc</code> (intrinsic function) . . . . .                   | 475 | <code>__auto_type</code> (GNU C keyword) . . . . .                   | 211 |
| <code>__arm_mrc2</code> (intrinsic function) . . . . .                  | 475 | <code>__BASE_FILE__</code> (predefined symbol) . . . . .             | 529 |
| <code>__arm_mrrc</code> (intrinsic function) . . . . .                  | 475 | <code>__big_endian</code> (extended keyword) . . . . .               | 428 |
| <code>__arm_mrrc2</code> (intrinsic function) . . . . .                 | 475 | <code>__BUILD_NUMBER__</code> (predefined symbol) . . . . .          | 529 |
| <code>__ARM_NEON</code> (predefined symbol) . . . . .                   | 527 | <code>__CDP</code> (intrinsic function) . . . . .                    | 478 |
| <code>__ARM_NEON_FP</code> (predefined symbol) . . . . .                | 527 | <code>__CDP2</code> (intrinsic function) . . . . .                   | 478 |
| <code>__ARM_PCS_AAPCS64</code> (predefined symbol) . . . . .            | 527 | <code>__CLREX</code> (intrinsic function) . . . . .                  | 478 |
| <code>__ARM_PROFILE_M__</code> (predefined symbol) . . . . .            | 528 | <code>__CLZ</code> (intrinsic function) . . . . .                    | 479 |
| <code>__ARM_ROPI</code> (predefined symbol) . . . . .                   | 528 | <code>__cmse_nonsecure_call</code> (extended keyword) . . . . .      | 428 |
| <code>__arm_rsr</code> (intrinsic function) . . . . .                   | 476 | <code>__cmse_nonsecure_entry</code> (extended keyword) . . . . .     | 429 |
| <code>__arm_rsrp</code> (intrinsic function) . . . . .                  | 476 | <code>__CORE__</code> (predefined symbol) . . . . .                  | 530 |
| <code>__arm_rsr64</code> (intrinsic function) . . . . .                 | 476 | <code>__COUNTER__</code> (predefined symbol) . . . . .               | 530 |
| <code>__ARM_RWPI</code> (predefined symbol) . . . . .                   | 528 | <code>__cplusplus</code> (predefined symbol) . . . . .               | 530 |
| <code>__ARM_SIZEOF_MINIMAL_ENUM</code><br>(predefined symbol) . . . . . | 528 | <code>__CPU_MODE__</code> (predefined symbol) . . . . .              | 530 |
| <code>__ARM_SIZEOF_WCHAR_T</code> (predefined symbol) . . . . .         | 528 | <code>__crc32b</code> (intrinsic function) . . . . .                 | 479 |
| <code>__arm_stc</code> (intrinsic function) . . . . .                   | 477 | <code>__crc32cb</code> (intrinsic function) . . . . .                | 479 |
| <code>__arm_stcl</code> (intrinsic function) . . . . .                  | 477 | <code>__crc32cd</code> (intrinsic function) . . . . .                | 479 |
| <code>__arm_stc2</code> (intrinsic function) . . . . .                  | 477 | <code>__crc32ch</code> (intrinsic function) . . . . .                | 479 |
| <code>__arm_stc21</code> (intrinsic function) . . . . .                 | 477 | <code>__crc32cw</code> (intrinsic function) . . . . .                | 479 |
| <code>__arm_wsr</code> (intrinsic function) . . . . .                   | 477 | <code>__crc32d</code> (intrinsic function) . . . . .                 | 479 |
| <code>__arm__</code> (predefined symbol) . . . . .                      | 521 | <code>__crc32h</code> (intrinsic function) . . . . .                 | 479 |
| <code>__ARM_32BIT_STATE</code> (predefined symbol) . . . . .            | 521 | <code>__crc32w</code> (intrinsic function) . . . . .                 | 479 |
| <code>__ARM_64BIT_STATE</code> (predefined symbol) . . . . .            | 521 | <code>__DATE__</code> (predefined symbol) . . . . .                  | 530 |
| <code>__ARM4TM__</code> (predefined symbol) . . . . .                   | 530 | implementation-defined behavior for C++ . . . . .                    | 674 |
| <code>__ARM5E__</code> (predefined symbol) . . . . .                    | 530 | <code>__disable_debug</code> (intrinsic function) . . . . .          | 480 |
| <code>__ARM5__</code> (predefined symbol) . . . . .                     | 530 | <code>__disable_fiq</code> (intrinsic function) . . . . .            | 480 |
| <code>__ARM6M__</code> (predefined symbol) . . . . .                    | 530 | <code>__disable_interrupt</code> (intrinsic function) . . . . .      | 480 |
| <code>__ARM6SM__</code> (predefined symbol) . . . . .                   | 530 | <code>__disable_irq</code> (intrinsic function) . . . . .            | 480 |
| <code>__ARM6__</code> (predefined symbol) . . . . .                     | 530 | <code>__disable_SError</code> (intrinsic function) . . . . .         | 481 |
| <code>__ARM7A__</code> (predefined symbol) . . . . .                    | 530 | <code>__DLIB_FILE_DESCRIPTOR</code> (configuration symbol) . . . . . | 168 |
| <code>__ARM7EM__</code> (predefined symbol) . . . . .                   | 530 | <code>__DMB</code> (intrinsic function) . . . . .                    | 481 |
| <code>__ARM7M__</code> (predefined symbol) . . . . .                    | 530 | <code>__DSB</code> (intrinsic function) . . . . .                    | 481 |
| <code>__ARM7R__</code> (predefined symbol) . . . . .                    | 530 | <code>__enable_debug</code> (intrinsic function) . . . . .           | 481 |
| <code>__ARM8A__</code> (predefined symbol) . . . . .                    | 530 | <code>__enable_fiq</code> (intrinsic function) . . . . .             | 482 |
| <code>__ARM8EM_MAINLINE__</code> (predefined symbol) . . . . .          | 530 | <code>__enable_interrupt</code> (intrinsic function) . . . . .       | 482 |

|                                                                   |     |                                                              |          |
|-------------------------------------------------------------------|-----|--------------------------------------------------------------|----------|
| <code>__enable_irq</code> (intrinsic function) . . . . .          | 482 | <code>__irq</code> (extended keyword) . . . . .              | 430      |
| <code>__enable_SError</code> (intrinsic function) . . . . .       | 482 | <code>__ISB</code> (intrinsic function) . . . . .            | 487      |
| <code>__exception</code> (extended keyword) . . . . .             | 429 | <code>__LDC</code> (intrinsic function) . . . . .            | 487      |
| <code>__EXCEPTIONS</code> (predefined symbol) . . . . .           | 531 | <code>__LDCL</code> (intrinsic function) . . . . .           | 487      |
| <code>__exit</code> (library function) . . . . .                  | 156 | <code>__LDCL_noidx</code> (intrinsic function) . . . . .     | 488      |
| <code>__FILE__</code> (predefined symbol) . . . . .               | 531 | <code>__LDC_noidx</code> (intrinsic function) . . . . .      | 488      |
| <code>__fiq</code> (extended keyword) . . . . .                   | 430 | <code>__LDC2</code> (intrinsic function) . . . . .           | 487      |
| <code>__fma</code> (intrinsic function) . . . . .                 | 483 | <code>__LDC2L</code> (intrinsic function) . . . . .          | 487      |
| <code>__fmaf</code> (intrinsic function) . . . . .                | 483 | <code>__LDC2L_noidx</code> (intrinsic function) . . . . .    | 488      |
| <code>__fp16</code> (data type) . . . . .                         | 415 | <code>__LDC2_noidx</code> (intrinsic function) . . . . .     | 488      |
| <code>__FUNCTION__</code> (predefined symbol) . . . . .           | 531 | <code>__LDREX</code> (intrinsic function) . . . . .          | 489      |
| <code>__func__</code> (predefined symbol) . . . . .               | 531 | <code>__LDREXB</code> (intrinsic function) . . . . .         | 489      |
| implementation-defined behavior for C++ . . . . .                 | 671 | <code>__LDREXD</code> (intrinsic function) . . . . .         | 489      |
| <code>__gets</code> , in <code>stdio.h</code> . . . . .           | 549 | <code>__LDREXH</code> (intrinsic function) . . . . .         | 489      |
| <code>__get_BASEPRI</code> (intrinsic function) . . . . .         | 483 | <code>__LIBCPP</code> (predefined symbol) . . . . .          | 532      |
| <code>__get_CONTROL</code> (intrinsic function) . . . . .         | 483 | <code>__LINE__</code> (predefined symbol) . . . . .          | 532      |
| <code>__get_CPSR</code> (intrinsic function) . . . . .            | 483 | <code>__little_endian</code> (extended keyword) . . . . .    | 431      |
| <code>__get_FAULTMASK</code> (intrinsic function) . . . . .       | 484 | <code>__LITTLE_ENDIAN__</code> (predefined symbol) . . . . . | 532      |
| <code>__get_FPSCR</code> (intrinsic function) . . . . .           | 484 | <code>__low_level_init</code> . . . . .                      | 154      |
| <code>__get_interrupt_state</code> (intrinsic function) . . . . . | 484 | initialization phase . . . . .                               | 67       |
| <code>__get_IPSR</code> (intrinsic function) . . . . .            | 485 | <code>__low_level_init</code> , customizing . . . . .        | 157      |
| <code>__get_LR</code> (intrinsic function) . . . . .              | 485 | <code>__LP64__</code> (predefined symbol) . . . . .          | 533      |
| <code>__get_MSP</code> (intrinsic function) . . . . .             | 485 | <code>__MCR</code> (intrinsic function) . . . . .            | 489      |
| <code>__get_PRIMASK</code> (intrinsic function) . . . . .         | 486 | <code>__MCRR</code> (intrinsic function) . . . . .           | 490      |
| <code>__get_PSP</code> (intrinsic function) . . . . .             | 486 | <code>__MCRR2</code> (intrinsic function) . . . . .          | 490      |
| <code>__get_PSR</code> (intrinsic function) . . . . .             | 486 | <code>__MCR2</code> (intrinsic function) . . . . .           | 489      |
| <code>__get_return_address</code> (intrinsic function) . . . . .  | 487 | <code>__MRC</code> (intrinsic function) . . . . .            | 490      |
| <code>__get_SB</code> (intrinsic function) . . . . .              | 487 | <code>__MRC2</code> (intrinsic function) . . . . .           | 490      |
| <code>__get_SP</code> (intrinsic function) . . . . .              | 487 | <code>__MRRC</code> (intrinsic function) . . . . .           | 491      |
| <code>__iar_maximum_atexit_calls</code> . . . . .                 | 120 | <code>__MRRC2</code> (intrinsic function) . . . . .          | 491      |
| <code>__iar_program_start</code> (label) . . . . .                | 154 | <code>__naked</code> (extended keyword) . . . . .            | 431      |
| <code>__iar_ReportAssert</code> (library function) . . . . .      | 159 | <code>__nested</code> (extended keyword) . . . . .           | 431–432  |
| <code>__IAR_SYSTEMS_ICC__</code> (predefined symbol) . . . . .    | 531 | <code>__noreturn</code> (extended keyword) . . . . .         | 434      |
| <code>__iar_tls\$\$DATA</code> (ELF section) . . . . .            | 596 | <code>__no_alloc</code> (extended keyword) . . . . .         | 432      |
| <code>__iar_tls\$\$INITDATA</code> (ELF section) . . . . .        | 596 | <code>__no_alloc_str</code> (operator) . . . . .             | 433      |
| <code>__ICCARM__</code> (predefined symbol) . . . . .             | 532 | <code>__no_alloc_str16</code> (operator) . . . . .           | 433      |
| <code>__ILP32__</code> (predefined symbol) . . . . .              | 532 | <code>__no_alloc16</code> (extended keyword) . . . . .       | 432      |
| <code>__interwork</code> (extended keyword) . . . . .             | 430 | <code>__no_init</code> (extended keyword) . . . . .          | 267, 434 |
| <code>__intrinsic</code> (extended keyword) . . . . .             | 430 | <code>__no_operation</code> (intrinsic function) . . . . .   | 492      |

|                                                   |         |                                                      |     |
|---------------------------------------------------|---------|------------------------------------------------------|-----|
| __packed (extended keyword) . . . . .             | 434     | __SADD8 (intrinsic function) . . . . .               | 496 |
| __pcrel (extended keyword) . . . . .              | 427     | __SADD16 (intrinsic function) . . . . .              | 496 |
| __PKHBT (intrinsic function) . . . . .            | 492     | __SASX (intrinsic function) . . . . .                | 496 |
| __PKHTB (intrinsic function) . . . . .            | 492     | __sbrel (extended keyword) . . . . .                 | 427 |
| __PLD (intrinsic function) . . . . .              | 493     | __scanf_args (pragma directive) . . . . .            | 464 |
| __PLDW (intrinsic function) . . . . .             | 493     | __section_begin (extended operator) . . . . .        | 206 |
| __PLI (intrinsic function) . . . . .              | 493     | __section_end (extended operator) . . . . .          | 206 |
| __PRETTY_FUNCTION__ (predefined symbol) . . . . . | 533     | __section_size (extended operator) . . . . .         | 206 |
| __printf_args (pragma directive) . . . . .        | 461     | __SEL (intrinsic function) . . . . .                 | 497 |
| __program_start (label) . . . . .                 | 154     | __set_BASEPRI (intrinsic function) . . . . .         | 497 |
| __QADD (intrinsic function) . . . . .             | 493     | __set_CONTROL (intrinsic function) . . . . .         | 497 |
| __QADD8 (intrinsic function) . . . . .            | 494     | __set_CPSR (intrinsic function) . . . . .            | 498 |
| __QADD16 (intrinsic function) . . . . .           | 494     | __set_FAULTMASK (intrinsic function) . . . . .       | 498 |
| __QASX (intrinsic function) . . . . .             | 494     | __set_FPSCR (intrinsic function) . . . . .           | 498 |
| __QCFlag (intrinsic function) . . . . .           | 494     | __set_interrupt_state (intrinsic function) . . . . . | 498 |
| __QDADD (intrinsic function) . . . . .            | 493     | __set_LR (intrinsic function) . . . . .              | 499 |
| __QDOUBLE (intrinsic function) . . . . .          | 494     | __set_MSP (intrinsic function) . . . . .             | 499 |
| __QDSUB (intrinsic function) . . . . .            | 493     | __set_PRIMASK (intrinsic function) . . . . .         | 499 |
| __QFlag (intrinsic function) . . . . .            | 494     | __set_PSP (intrinsic function) . . . . .             | 499 |
| __QSAX (intrinsic function) . . . . .             | 494     | __set_SB (intrinsic function) . . . . .              | 500 |
| __QSUB (intrinsic function) . . . . .             | 493     | __set_SP (intrinsic function) . . . . .              | 500 |
| __QSUB16 (intrinsic function) . . . . .           | 494     | __SEV (intrinsic function) . . . . .                 | 500 |
| __QSUB8 (intrinsic function) . . . . .            | 494     | __SHADD8 (intrinsic function) . . . . .              | 500 |
| __ramfunc (extended keyword) . . . . .            | 81, 436 | __SHADD16 (intrinsic function) . . . . .             | 500 |
| __RBIT (intrinsic function) . . . . .             | 495     | __SHASX (intrinsic function) . . . . .               | 500 |
| __reset_QC_flag (intrinsic function) . . . . .    | 495     | __SHSUB16 (intrinsic function) . . . . .             | 500 |
| __reset_Q_flag (intrinsic function) . . . . .     | 495     | __SHSUB8 (intrinsic function) . . . . .              | 500 |
| __REV (intrinsic function) . . . . .              | 495     | __SMLABB (intrinsic function) . . . . .              | 501 |
| __REVSH (intrinsic function) . . . . .            | 495     | __SMLABT (intrinsic function) . . . . .              | 501 |
| __REV16 (intrinsic function) . . . . .            | 495     | __SMLAD (intrinsic function) . . . . .               | 501 |
| __rintn (intrinsic function) . . . . .            | 496     | __SMLADX (intrinsic function) . . . . .              | 501 |
| __rintnf (intrinsic function) . . . . .           | 496     | __SMLALBB (intrinsic function) . . . . .             | 501 |
| __root (extended keyword) . . . . .               | 437     | __SMLALBT (intrinsic function) . . . . .             | 501 |
| __ROPI__ (predefined symbol) . . . . .            | 533     | __SMLALD (intrinsic function) . . . . .              | 501 |
| __ROR (intrinsic function) . . . . .              | 496     | __SMLALDX (intrinsic function) . . . . .             | 501 |
| __ro_placement (extended keyword) . . . . .       | 436     | __SMLALTB (intrinsic function) . . . . .             | 501 |
| __RRX (intrinsic function) . . . . .              | 496     | __SMLALTT (intrinsic function) . . . . .             | 501 |
| __RTTI__ (predefined symbol) . . . . .            | 533     | __SMLATB (intrinsic function) . . . . .              | 501 |
| __RWPI__ (predefined symbol) . . . . .            | 533     |                                                      |     |

|                                                           |     |                                                                     |     |
|-----------------------------------------------------------|-----|---------------------------------------------------------------------|-----|
| <code>__SMLATT</code> (intrinsic function) . . . . .      | 501 | <code>__STDC_LIB_EXT1__</code> (predefined symbol) . . . . .        | 534 |
| <code>__SMLAWB</code> (intrinsic function) . . . . .      | 501 | <code>__STDC_NO_ATOMICS__</code> (preprocessor symbol) . . . . .    | 534 |
| <code>__SMLAWT</code> (intrinsic function) . . . . .      | 501 | <code>__STDC_NO_THREADS__</code> (preprocessor symbol) . . . . .    | 534 |
| <code>__SMLSDD</code> (intrinsic function) . . . . .      | 501 | <code>__STDC_NO_VLA__</code> (preprocessor symbol) . . . . .        | 534 |
| <code>__SMLSDDX</code> (intrinsic function) . . . . .     | 501 | <code>__STDC_UTF16__</code> (preprocessor symbol) . . . . .         | 534 |
| <code>__SMLSLD</code> (intrinsic function) . . . . .      | 501 | <code>__STDC_UTF32__</code> (preprocessor symbol) . . . . .         | 534 |
| <code>__SMLSLDX</code> (intrinsic function) . . . . .     | 501 | <code>__STDC_VERSION__</code> (predefined symbol) . . . . .         | 535 |
| <code>__SMMLA</code> (intrinsic function) . . . . .       | 502 | implementation-defined behavior for C++ . . . . .                   | 674 |
| <code>__SMMLAR</code> (intrinsic function) . . . . .      | 502 | <code>__STDC_WANT_LIB_EXT1__</code> (preprocessor symbol) . . . . . | 536 |
| <code>__SMMLS</code> (intrinsic function) . . . . .       | 502 | <code>__STDC__</code> (predefined symbol) . . . . .                 | 534 |
| <code>__SMMLSR</code> (intrinsic function) . . . . .      | 502 | implementation-defined behavior for C++ . . . . .                   | 674 |
| <code>__SMMUL</code> (intrinsic function) . . . . .       | 502 | <code>__STREX</code> (intrinsic function) . . . . .                 | 505 |
| <code>__SMMULR</code> (intrinsic function) . . . . .      | 502 | <code>__STREXB</code> (intrinsic function) . . . . .                | 505 |
| <code>__SMUAD</code> (intrinsic function) . . . . .       | 502 | <code>__STREXD</code> (intrinsic function) . . . . .                | 505 |
| <code>__SMUL</code> (intrinsic function) . . . . .        | 503 | <code>__STREXH</code> (intrinsic function) . . . . .                | 505 |
| <code>__SMULBB</code> (intrinsic function) . . . . .      | 503 | <code>__svc</code> (extended keyword) . . . . .                     | 438 |
| <code>__SMULBT</code> (intrinsic function) . . . . .      | 503 | <code>__swi</code> (extended keyword) . . . . .                     | 427 |
| <code>__SMULTB</code> (intrinsic function) . . . . .      | 503 | <code>__SWP</code> (intrinsic function) . . . . .                   | 506 |
| <code>__SMULTT</code> (intrinsic function) . . . . .      | 503 | <code>__SWPB</code> (intrinsic function) . . . . .                  | 506 |
| <code>__SMULWB</code> (intrinsic function) . . . . .      | 503 | <code>__SXTAB</code> (intrinsic function) . . . . .                 | 506 |
| <code>__SMULWT</code> (intrinsic function) . . . . .      | 503 | <code>__SXTAB16</code> (intrinsic function) . . . . .               | 506 |
| <code>__SMUSD</code> (intrinsic function) . . . . .       | 502 | <code>__SXTAH</code> (intrinsic function) . . . . .                 | 506 |
| <code>__SMUSDX</code> (intrinsic function) . . . . .      | 502 | <code>__SXTB16</code> (intrinsic function) . . . . .                | 506 |
| <code>__sqrt</code> (intrinsic function) . . . . .        | 503 | <code>__task</code> (extended keyword) . . . . .                    | 439 |
| <code>__sqrtf</code> (intrinsic function) . . . . .       | 503 | <code>__thumb</code> (extended keyword) . . . . .                   | 439 |
| <code>__SSAT</code> (intrinsic function) . . . . .        | 503 | <code>__thumb__</code> (predefined symbol) . . . . .                | 535 |
| <code>__SSAT16</code> (intrinsic function) . . . . .      | 504 | <code>__TIMESTAMP__</code> (predefined symbol) . . . . .            | 535 |
| <code>__SSAX</code> (intrinsic function) . . . . .        | 496 | <code>__TIME__</code> (predefined symbol) . . . . .                 | 535 |
| <code>__SSUB16</code> (intrinsic function) . . . . .      | 496 | implementation-defined behavior for C++ . . . . .                   | 674 |
| <code>__SSUB8</code> (intrinsic function) . . . . .       | 496 | <code>__TT</code> (intrinsic function) . . . . .                    | 506 |
| <code>__stackless</code> (extended keyword) . . . . .     | 437 | <code>__TTA</code> (intrinsic function) . . . . .                   | 506 |
| <code>__STC</code> (intrinsic function) . . . . .         | 504 | <code>__TTAT</code> (intrinsic function) . . . . .                  | 506 |
| <code>__STCL</code> (intrinsic function) . . . . .        | 504 | <code>__TTT</code> (intrinsic function) . . . . .                   | 506 |
| <code>__STCL_noidx</code> (intrinsic function) . . . . .  | 505 | <code>__UADD8</code> (intrinsic function) . . . . .                 | 507 |
| <code>__STC_noidx</code> (intrinsic function) . . . . .   | 505 | <code>__UADD16</code> (intrinsic function) . . . . .                | 507 |
| <code>__STC2</code> (intrinsic function) . . . . .        | 504 | <code>__UASX</code> (intrinsic function) . . . . .                  | 507 |
| <code>__STC2L</code> (intrinsic function) . . . . .       | 504 | <code>__UHADD8</code> (intrinsic function) . . . . .                | 507 |
| <code>__STC2L_noidx</code> (intrinsic function) . . . . . | 505 | <code>__UHADD16</code> (intrinsic function) . . . . .               | 507 |
| <code>__STC2_noidx</code> (intrinsic function) . . . . .  | 505 | <code>__UHASX</code> (intrinsic function) . . . . .                 | 507 |

|                                             |     |                                                    |     |
|---------------------------------------------|-----|----------------------------------------------------|-----|
| __UHSAX (intrinsic function) . . . . .      | 507 | __VRINTN_F64 (intrinsic function). . . . .         | 510 |
| __UHSUB16 (intrinsic function) . . . . .    | 507 | __VRINTP_F32 (intrinsic function). . . . .         | 510 |
| __UHSUB8 (intrinsic function) . . . . .     | 507 | __VRINTP_F64 (intrinsic function). . . . .         | 510 |
| __UMAAL (intrinsic function). . . . .       | 507 | __VRINTR_F32 (intrinsic function). . . . .         | 510 |
| __ungetchar, in stdio.h . . . . .           | 549 | __VRINTR_F64 (intrinsic function). . . . .         | 510 |
| __UQADD8 (intrinsic function) . . . . .     | 508 | __VRINTX_F32 (intrinsic function). . . . .         | 510 |
| __UQADD16 (intrinsic function) . . . . .    | 508 | __VRINTX_F64 (intrinsic function). . . . .         | 510 |
| __UQASX (intrinsic function) . . . . .      | 508 | __VRINTZ_F32 (intrinsic function). . . . .         | 510 |
| __UQSAX (intrinsic function) . . . . .      | 508 | __VRINTZ_F64 (intrinsic function). . . . .         | 510 |
| __UQSUB16 (intrinsic function) . . . . .    | 508 | __VSQRT_F32 (intrinsic function) . . . . .         | 511 |
| __UQSUB8 (intrinsic function) . . . . .     | 508 | __VSQRT_F64 (intrinsic function) . . . . .         | 511 |
| __USADA8 (intrinsic function) . . . . .     | 508 | __weak (extended keyword) . . . . .                | 440 |
| __USAD8 (intrinsic function). . . . .       | 508 | __WFE (intrinsic function) . . . . .               | 511 |
| __USAT (intrinsic function) . . . . .       | 508 | __WFI (intrinsic function) . . . . .               | 511 |
| __USAT16 (intrinsic function) . . . . .     | 509 | __write_array, in stdio.h . . . . .                | 549 |
| __USAX (intrinsic function). . . . .        | 507 | __write_buffered (DLIB library function) . . . . . | 137 |
| __USUB16 (intrinsic function). . . . .      | 507 | __YIELD (intrinsic function) . . . . .             | 511 |
| __USUB8 (intrinsic function). . . . .       | 507 | -a (ielfdump option) . . . . .                     | 628 |
| __UXTAB (intrinsic function) . . . . .      | 509 | -D (compiler option) . . . . .                     | 320 |
| __UXTAB16 (intrinsic function) . . . . .    | 509 | -d (iarchive option) . . . . .                     | 634 |
| __UXTAH (intrinsic function) . . . . .      | 509 | -e (compiler option) . . . . .                     | 326 |
| __UXTB16 (intrinsic function). . . . .      | 509 | -f (compiler option). . . . .                      | 328 |
| __VFMA_F32 (intrinsic function) . . . . .   | 509 | -f (IAR utility option) . . . . .                  | 636 |
| __VFMA_F64 (intrinsic function) . . . . .   | 509 | -f (linker option) . . . . .                       | 380 |
| __VFMS_F32 (intrinsic function). . . . .    | 509 | -g (ielfdump option) . . . . .                     | 650 |
| __VFMS_F64 (intrinsic function). . . . .    | 509 | -I (compiler option). . . . .                      | 331 |
| __VFNMA_F32 (intrinsic function) . . . . .  | 509 | -l (compiler option) . . . . .                     | 332 |
| __VFNMA_F64 (intrinsic function) . . . . .  | 509 | for creating skeleton code . . . . .               | 188 |
| __VFNMS_F32 (intrinsic function) . . . . .  | 509 | -L (linker option) . . . . .                       | 399 |
| __VFNMS_F64 (intrinsic function) . . . . .  | 509 | -O (compiler option) . . . . .                     | 346 |
| __VMAXNM_F32 (intrinsic function). . . . .  | 510 | -o (compiler option) . . . . .                     | 347 |
| __VMAXNM_F64 (intrinsic function). . . . .  | 510 | -o (iarchive option). . . . .                      | 643 |
| __VMINNM_F32 (intrinsic function). . . . .  | 510 | -o (ielfdump option) . . . . .                     | 643 |
| __VMINNM_F64 (intrinsic function). . . . .  | 510 | -o (linker option). . . . .                        | 395 |
| __VRINTA_F32 (intrinsic function). . . . .  | 510 | -r (compiler option). . . . .                      | 320 |
| __VRINTA_F64 (intrinsic function). . . . .  | 510 | -r (iarchive option) . . . . .                     | 648 |
| __VRINTM_F32 (intrinsic function) . . . . . | 510 | -s (ielfdump option) . . . . .                     | 649 |
| __VRINTM_F64 (intrinsic function) . . . . . | 510 | -t (iarchive option) . . . . .                     | 655 |
| __VRINTN_F32 (intrinsic function). . . . .  | 510 | -V (iarchive option) . . . . .                     | 658 |

- x (iarchive option) . . . . . 636
- aapcs (compiler option) . . . . . 313
- aarch64 (compiler option) . . . . . 313
- abi (compiler option) . . . . . 314–315
- abi (linker option) . . . . . 368
- accurate\_math (linker option) . . . . . 368
- advanced\_heap (linker option) . . . . . 368
- aeabi (compiler option) . . . . . 314
- align\_sp\_on\_irq (compiler option) . . . . . 315
- all (ielfdump option) . . . . . 628
- arm (compiler option) . . . . . 315
- basic\_heap (linker option) . . . . . 369
- BE32 (linker option) . . . . . 369
- BE8 (linker option) . . . . . 369
- bin (ielftool option) . . . . . 629
- bin-multi (ielftool option) . . . . . 629
- bounds\_table\_size (linker option) . . . . . 363
- call\_graph (linker option) . . . . . 370
- char\_is\_signed (compiler option) . . . . . 316
- char\_is\_unsigned (compiler option) . . . . . 316
- checksum (ielftool option) . . . . . 630
- cmse (compiler option) . . . . . 317
- code (ielfdump option) . . . . . 633
- config (linker option) . . . . . 370
- config\_def (linker option) . . . . . 371
- config\_search (linker option) . . . . . 371
- cpp\_init\_routine (linker option) . . . . . 372
- cpu (compiler option) . . . . . 317
- cpu (linker option) . . . . . 372
- cpu\_mode (compiler option) . . . . . 319
- create (iarchive option) . . . . . 634
- c++ (compiler option) . . . . . 319
- c89 (compiler option) . . . . . 316
- debug (compiler option) . . . . . 320
- debug\_heap (linker option) . . . . . 363
- default\_to\_complex\_ranges (linker option) . . . . . 372
- define\_symbol (linker option) . . . . . 373
- delete (iarchive option) . . . . . 634
- dependencies (compiler option) . . . . . 321
- dependencies (linker option) . . . . . 373
- deprecated\_feature\_warnings (compiler option) . . . . . 322
- diagnostics\_tables (compiler option) . . . . . 324
- diagnostics\_tables (linker option) . . . . . 376
- diag\_error (compiler option) . . . . . 322
- diag\_error (linker option) . . . . . 374
- diag\_remark (compiler option) . . . . . 323
- diag\_remark (linker option) . . . . . 375
- diag\_suppress (compiler option) . . . . . 323
- diag\_suppress (linker option) . . . . . 375
- diag\_warning (compiler option) . . . . . 324
- diag\_warning (linker option) . . . . . 376
- disasm\_data (ielfdump option) . . . . . 635
- discard\_unused\_publics (compiler option) . . . . . 324
- dlib\_config (compiler option) . . . . . 325
- do\_explicit\_zero\_opt\_in\_named\_sections (compiler option) . . . . . 326
- do\_segment\_pad (linker option) . . . . . 376
- edit (isymexport option) . . . . . 635
- enable\_hardware\_workaround (compiler option) . . . . . 327
- enable\_hardware\_workaround (linker option) . . . . . 377
- enable\_restrict (compiler option) . . . . . 327
- enable\_stack\_usage (linker option) . . . . . 377
- entry (linker option) . . . . . 378
- entry\_list\_in\_address\_order (linker option) . . . . . 378
- enum\_is\_int (compiler option) . . . . . 328
- error\_limit (compiler option) . . . . . 328
- error\_limit (linker option) . . . . . 378
- exception\_tables (linker option) . . . . . 379
- export\_builtin\_config (linker option) . . . . . 379
- export\_locals (isymexport option) . . . . . 635
- extract (iarchive option) . . . . . 636
- extra\_init (linker option) . . . . . 380
- f (compiler option) . . . . . 329
- f (IAR utility option) . . . . . 637
- f (linker option) . . . . . 381
- fake\_time (IAR utility option) . . . . . 637
- fill (ielftool option) . . . . . 638
- force\_exceptions (linker option) . . . . . 381
- force\_output (linker option) . . . . . 382

|                                                              |     |                                                          |     |
|--------------------------------------------------------------|-----|----------------------------------------------------------|-----|
| --fpu (compiler option) . . . . .                            | 330 | --no_default_fp_contract (compiler option) . . . . .     | 337 |
| --fpu (linker option) . . . . .                              | 382 | --no_dynamic_rtti_elimination (linker option) . . . . .  | 390 |
| --front_headers (ielftool option) . . . . .                  | 639 | --no_entry (linker option) . . . . .                     | 390 |
| --generate_vfe_header (ismexport option) . . . . .           | 639 | --no_exceptions (compiler option) . . . . .              | 338 |
| --guard_calls (compiler option) . . . . .                    | 331 | --no_exceptions (linker option) . . . . .                | 391 |
| --header_context (compiler option) . . . . .                 | 331 | --no_fragments (compiler option) . . . . .               | 338 |
| --hide_symbols (iexe2obj option) . . . . .                   | 639 | --no_fragments (linker option) . . . . .                 | 391 |
| --ignore_uninstrumented_pointers (linker option) . . . . .   | 364 | --no_free_heap (linker option) . . . . .                 | 391 |
| --ihex (ielftool option) . . . . .                           | 640 | --no_header (ielfdump option) . . . . .                  | 641 |
| --ihex-len (ielftool option) . . . . .                       | 640 | --no_inline (compiler option) . . . . .                  | 338 |
| --image_input (linker option) . . . . .                      | 382 | --no_inline (linker option) . . . . .                    | 392 |
| --import_cmse_lib_in (linker option) . . . . .               | 383 | --no_library_search (linker option) . . . . .            | 392 |
| --import_cmse_lib_out (linker option) . . . . .              | 384 | --no_literal_pool (compiler option) . . . . .            | 339 |
| --inline (linker option) . . . . .                           | 384 | --no_literal_pool (linker option) . . . . .              | 392 |
| --keep (linker option) . . . . .                             | 384 | --no_locals (linker option) . . . . .                    | 393 |
| --keep_mode_symbols (iexe2obj option) . . . . .              | 640 | --no_loop_align (compiler option) . . . . .              | 339 |
| --legacy (compiler option) . . . . .                         | 333 | --no_mem_idioms (compiler option) . . . . .              | 340 |
| --libc++ (compiler option) . . . . .                         | 333 | --no_normalize_file_macros (compiler option) . . . . .   | 340 |
| --log (linker option) . . . . .                              | 386 | --no_out_extension (linker option) . . . . .             | 393 |
| --log_file (linker option) . . . . .                         | 387 | --no_path_in_file_macros (compiler option) . . . . .     | 340 |
| --macro_positions_in_diagnostics (compiler option) . . . . . | 333 | --no_range_reservations (linker option) . . . . .        | 393 |
| --make_all_definitions_weak (compiler option) . . . . .      | 334 | --no_rel_section (ielfdump option) . . . . .             | 641 |
| --mangled_names_in_messages (linker option) . . . . .        | 387 | --no_remove (linker option) . . . . .                    | 394 |
| --manual_dynamic_initialization (linker option) . . . . .    | 388 | --no_rtti (compiler option) . . . . .                    | 341 |
| --map (linker option) . . . . .                              | 388 | --no_rw_dynamic_init (compiler option) . . . . .         | 341 |
| --merge_duplicate_sections (linker option) . . . . .         | 389 | --no_scheduling (compiler option) . . . . .              | 341 |
| --mfc (compiler option) . . . . .                            | 335 | --no_size_constraints (compiler option) . . . . .        | 342 |
| --nonportable_path_warnings (compiler option) . . . . .      | 346 | --no_static_destruction (compiler option) . . . . .      | 342 |
| --no_alignment_reduction (compiler option) . . . . .         | 335 | --no_strtab (ielfdump option) . . . . .                  | 642 |
| --no_bom (compiler option) . . . . .                         | 335 | --no_system_include (compiler option) . . . . .          | 342 |
| --no_bom (ielfdump option) . . . . .                         | 641 | --no_typedefs_in_diagnostics (compiler option) . . . . . | 343 |
| --no_bom (iobjmanip option) . . . . .                        | 641 | --no_unaligned_access (compiler option) . . . . .        | 343 |
| --no_bom (ismexport option) . . . . .                        | 641 | --no_unroll (compiler option) . . . . .                  | 344 |
| --no_bom (linker option) . . . . .                           | 389 | --no_utf8_in (ielfdump option) . . . . .                 | 642 |
| --no_call_frame_info (compiler option) . . . . .             | 336 | --no_var_align (compiler option) . . . . .               | 345 |
| --no_clustering (compiler option) . . . . .                  | 336 | --no_vfe (linker option) . . . . .                       | 394 |
| --no_code_motion (compiler option) . . . . .                 | 336 | --no_warnings (compiler option) . . . . .                | 345 |
| --no_const_align (compiler option) . . . . .                 | 337 | --no_warnings (linker option) . . . . .                  | 394 |
| --no_cse (compiler option) . . . . .                         | 337 | --no_wrap_diagnostics (compiler option) . . . . .        | 345 |



- no\_wrap\_diagnostics (linker option) . . . . . 395
- offset (ielftool option) . . . . . 642
- only\_stdout (compiler option) . . . . . 347
- only\_stdout (linker option) . . . . . 395
- output (compiler option) . . . . . 347
- output (iarchive option) . . . . . 643
- output (ielfdump option) . . . . . 643
- output (linker option) . . . . . 395
- parity (ielftool option) . . . . . 644
- pending\_instantiations (compiler option) . . . . . 347
- pi\_veneers (linker option) . . . . . 395
- place\_holder (linker option) . . . . . 396
- plt mode (linker option) . . . . . 281
- preconfig (linker option) . . . . . 396
- predef\_macros (compiler option) . . . . . 348
- prefix (ixex2obj option) . . . . . 645
- preinclude (compiler option) . . . . . 348
- preprocess (compiler option) . . . . . 349
- printf\_multibytes (linker option) . . . . . 397
- ram\_reserve\_ranges (isymexport option) . . . . . 645
- range (ielfdump option) . . . . . 646
- raw (ielfdump] option) . . . . . 646
- redirect (linker option) . . . . . 397
- relaxed\_fp (compiler option) . . . . . 349
- remarks (compiler option) . . . . . 350
- remarks (linker option) . . . . . 397
- remove\_file\_path (iobjmanip option) . . . . . 647
- remove\_section (iobjmanip option) . . . . . 647
- rename\_section (iobjmanip option) . . . . . 647
- rename\_symbol (iobjmanip option) . . . . . 648
- replace (iarchive option) . . . . . 648
- require\_prototypes (compiler option) . . . . . 350
- reserve\_ranges (isymexport option) . . . . . 649
- ropi (compiler option) . . . . . 351
- ropi\_cb (compiler option) . . . . . 352
- rwpi (compiler option) . . . . . 352
- rwpi\_near (compiler option) . . . . . 353
- scanf\_multibytes (linker option) . . . . . 398
- search (linker option) . . . . . 399
- section (compiler option) . . . . . 353
- section (ielfdump option) . . . . . 649
- section\_prefix (compiler option) . . . . . 354
- segment (ielfdump option) . . . . . 650
- self\_reloc (ielftool option) . . . . . 651
- semihosting (linker option) . . . . . 399
- shared (compiler option) . . . . . 281
- shared (linker option) . . . . . 282
- show\_entry\_as (isymexport option) . . . . . 651
- silent (compiler option) . . . . . 355
- silent (iarchive option) . . . . . 651
- silent (ielftool option) . . . . . 651
- silent (linker option) . . . . . 400
- simple (ielftool option) . . . . . 652
- simple-ne (ielftool option) . . . . . 652
- small\_math (linker option) . . . . . 400
- source (ielfdump option) . . . . . 652
- so\_export (linker option) . . . . . 282
- so\_import (linker option) . . . . . 283
- so\_internalize (linker option) . . . . . 284
- so\_internalize\_stdlib (linker option) . . . . . 284
- srec (ielftool option) . . . . . 653
- srec-len (ielftool option) . . . . . 653
- srec-s3only (ielftool option) . . . . . 653
- stack\_protection (compiler option) . . . . . 355
- stack\_usage\_control (linker option) . . . . . 400
- strict (compiler option) . . . . . 356
- strip (ielftool option) . . . . . 654
- strip (iobjmanip option) . . . . . 654
- strip (linker option) . . . . . 401
- symbols (iarchive option) . . . . . 654
- system\_include\_dir (compiler option) . . . . . 356
- text\_out (iarchive option) . . . . . 654, 656
- text\_out (ielfdump option) . . . . . 654, 656
- text\_out (iobjmanip option) . . . . . 654, 656
- text\_out (isymexport option) . . . . . 654
- text\_out (linker option) . . . . . 401
- threaded\_lib (linker option) . . . . . 401
- thumb (compiler option) . . . . . 357

|                                                                                                      |          |                                                                          |          |
|------------------------------------------------------------------------------------------------------|----------|--------------------------------------------------------------------------|----------|
| --timezone_lib (linker option) . . . . .                                                             | 402      | .data_init (ELF section) . . . . .                                       | 595      |
| --tixt (ielftool option) . . . . .                                                                   | 655      | .debug (ELF section) . . . . .                                           | 594      |
| --toc (iarchive option) . . . . .                                                                    | 655      | .dynamic (ELF section) . . . . .                                         | 276      |
| --treat_rvct_modules_as_softfp (linker option) . . . . .                                             | 402      | .dynstr (ELF section) . . . . .                                          | 275      |
| --update_symbol (ielftool option) . . . . .                                                          | 656      | .dynsym (ELF section) . . . . .                                          | 275      |
| --update_typeless_globals (iobjmanip option) . . . . .                                               | 657      | .exc.text (ELF section) . . . . .                                        | 596      |
| --use_c++_inline (compiler option) . . . . .                                                         | 358      | .GOT (ELF section) . . . . .                                             | 276      |
| --use_full_std_template_names (ielfdump option) . . . . .                                            | 657      | .hash (ELF section) . . . . .                                            | 275      |
| --use_full_std_template_names (linker option) . . . . .                                              | 402      | .iar.debug (ELF section) . . . . .                                       | 594      |
| --use_optimized_variants (linker option) . . . . .                                                   | 403      | .iar.dynexit (ELF section) . . . . .                                     | 597      |
| --use_paths_as_written (compiler option) . . . . .                                                   | 358      | .iar.locale_table (ELF section) . . . . .                                | 597      |
| --use_unix_directory_separators (compiler option) . . . . .                                          | 358      | .init_array (section) . . . . .                                          | 597      |
| --utf8_text_in (linker option) . . . . .                                                             | 403      | .intvec (ELF section) . . . . .                                          | 597      |
| --vectorize (compiler option) . . . . .                                                              | 359      | .noinit (ELF section) . . . . .                                          | 598      |
| --verbose (iarchive option) . . . . .                                                                | 658      | .PLT (ELF section) . . . . .                                             | 276      |
| --verbose (ielftool option) . . . . .                                                                | 658      | .preinit_array (section) . . . . .                                       | 598      |
| --version (compiler option) . . . . .                                                                | 359      | .prepreinit_array (section) . . . . .                                    | 598      |
| --version (IAR utilities option) . . . . .                                                           | 658      | .rel (ELF section) . . . . .                                             | 594      |
| --version (linker option) . . . . .                                                                  | 404      | .rela (ELF section) . . . . .                                            | 594      |
| --vfe (linker option) . . . . .                                                                      | 404      | .rel.dyn (ELF section) . . . . .                                         | 275      |
| --visibility (compiler option) . . . . .                                                             | 285      | .rel.plt (ELF section) . . . . .                                         | 275      |
| --vla (compiler option) . . . . .                                                                    | 359      | .rodata (ELF section) . . . . .                                          | 598      |
| --vtoc (iarchive option) . . . . .                                                                   | 659      | .shstrtab (ELF section) . . . . .                                        | 594      |
| --warnings_affect_exit_code (compiler option) . . . . .                                              | 304, 361 | .strtab (ELF section) . . . . .                                          | 594      |
| --warnings_affect_exit_code (linker option) . . . . .                                                | 304, 405 | .symtab (ELF section) . . . . .                                          | 594      |
| --warnings_are_errors (compiler option) . . . . .                                                    | 361      | .text (ELF section) . . . . .                                            | 276, 599 |
| --warnings_are_errors (linker option) . . . . .                                                      | 405      | .textrw (ELF section) . . . . .                                          | 599      |
| --warn_about_c_style_casts (compiler option) . . . . .                                               | 360      | .textrw_init (ELF section) . . . . .                                     | 599      |
| --warn_about_incomplete_constructors<br>(compiler option) . . . . .                                  | 360      | .uninit (ELF section) . . . . .                                          | 277      |
| --warn_about_missing_field_initializers<br>(compiler option) . . . . .                               | 360      | @ (operator)                                                             |          |
| --whole_archive (linker option) . . . . .                                                            | 405      | placing at absolute address . . . . .                                    | 253      |
| --wrap (iexe2obj option) . . . . .                                                                   | 659      | placing in sections . . . . .                                            | 254      |
| ' , \, /*, or // in q-char- or h-char-sequence,<br>implementation-defined behavior for C++ . . . . . | 664      | #include directive,<br>implementation-defined behavior for C++ . . . . . | 674      |
| ? (in reserved identifiers) . . . . .                                                                | 302      | #include files, specifying . . . . .                                     | 297, 331 |
| .bss (ELF section) . . . . .                                                                         | 276, 595 | #include_next . . . . .                                                  | 210      |
| .comment (ELF section) . . . . .                                                                     | 594      | #include_next (preprocessor extension) . . . . .                         | 536      |
| .data (ELF section) . . . . .                                                                        | 276, 595 | #pragma directive . . . . .                                              | 443      |
|                                                                                                      |          | implementation-defined behavior for C++ . . . . .                        | 674      |

#pragma FENV\_ACCESS,  
 implementation-defined behavior for C++ . . . . . 689  
 #warning . . . . . 211  
 #warning (preprocessor extension) . . . . . 536  
 %Z replacement string,  
 implementation-defined behavior in C . . . . . 714  
 <cfenv> functions and floating-point,  
 implementation-defined behavior for C++ . . . . . 689  
 \$Sub\$\$ pattern . . . . . 248  
 \$Super\$\$ pattern . . . . . 248  
 \$\$ (in reserved identifiers) . . . . . 301

## Numerics

32-bit mode. . . . . 58  
     code generation . . . . . 80  
 32-bits (floating-point format) . . . . . 415  
 64-bit mode. . . . . 58  
     code generation . . . . . 80, 313  
 64-bits (floating-point format) . . . . . 416