



**IAR Embedded
Workbench**

C-SPY® Debugging Guide

for the 8051

Microcontroller Architecture

COPYRIGHT NOTICE

© 2011–2021 IAR Systems AB.

No part of this document may be reproduced without the prior written consent of IAR Systems AB. The software described in this document is furnished under a license and may only be used or copied in accordance with the terms of such a license.

DISCLAIMER

The information in this document is subject to change without notice and does not represent a commitment on any part of IAR Systems. While the information contained herein is assumed to be accurate, IAR Systems assumes no responsibility for any errors or omissions.

In no event shall IAR Systems, its employees, its contractors, or the authors of this document be liable for special, direct, indirect, or consequential damage, losses, costs, charges, claims, demands, claim for lost profits, fees, or expenses of any nature or kind.

TRADEMARKS

IAR Systems, IAR Embedded Workbench, Embedded Trust, C-Trust, IAR Connect, C-SPY, C-RUN, C-STAT, IAR Visual State, IAR KickStart Kit, I-jet, I-jet Trace, I-scope, IAR Academy, IAR, and the logotype of IAR Systems are trademarks or registered trademarks owned by IAR Systems AB.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Intel® is a registered trademark of Intel Corporation.

Adobe and Acrobat Reader are registered trademarks of Adobe Systems Incorporated.

All other product names are trademarks or registered trademarks of their respective owners.

EDITION NOTICE

Sixth edition: March 2021

Part number: UCS8051-6

This guide applies to version 10.x of IAR Embedded Workbench® for 8051.

The *C-SPY® Debugging Guide for 8051* replaces all debugging information in the *IAR Embedded Workbench IDE User Guide* and the hardware debugger guides for 8051.

Internal reference: M23, Mym8.3, IJOA.

Brief contents

Tables	21
Preface	23
Part 1. Basic debugging	29
The IAR C-SPY Debugger	31
Getting started using C-SPY	43
Executing your application	57
Variables and expressions	79
Breakpoints	105
Memory and registers	131
Part 2. Analyzing your application	173
Trace	175
The application timeline	189
Profiling	211
Code coverage	221
Part 3. Advanced debugging	227
Interrupts	229
C-SPY macros	253
The C-SPY command line utility—cspybat	309
Part 4. Additional reference information	361
Debugger options	363

Additional information on C-SPY drivers	387
Target-adapting the ROM-monitor	397
Index	413

Contents

Tables	21
Preface	23
Who should read this guide	23
Required knowledge	23
What this guide contains	23
Part 1. Basic debugging	23
Part 2. Analyzing your application	24
Part 3. Advanced debugging	24
Part 4. Additional reference information	24
Other documentation	25
User and reference guides	25
The online help system	25
Web sites	26
Document conventions	26
Typographic conventions	26
Naming conventions	27
 Part I. Basic debugging	 29
The IAR C-SPY Debugger	31
Introduction to C-SPY	31
An integrated environment	31
General C-SPY debugger features	32
RTOS awareness	33
Debugger concepts	33
C-SPY and target systems	34
The debugger	35
The target system	35
The application	35
C-SPY debugger systems	35
The ROM-monitor program	36

Third-party debuggers	36
C-SPY plugin modules	36
C-SPY drivers overview	37
Differences between the C-SPY drivers	38
The IAR C-SPY Simulator	38
Supported features	39
The C-SPY hardware debugger drivers	39
Installing extra software	40
Target system with or without a debug probe	40
The C-SPY Infineon driver	41
ROM-monitor on target hardware	41
Getting started using C-SPY	43
Setting up C-SPY	43
Setting up for debugging	43
Executing from reset	44
Using a setup macro file	44
Selecting a device description file	45
Loading plugin modules	45
Starting C-SPY	45
Starting a debug session	46
Loading executable files built outside of the IDE	46
Starting a debug session with source files missing	46
Loading multiple debug images	47
Editing in C-SPY windows	48
Adapting for target hardware	49
Modifying a device description file	49
Initializing target hardware before C-SPY starts	49
Reference information on starting C-SPY	50
C-SPY Debugger main window	50
Images window	54
Get Alternative File dialog box	55

Executing your application	57
Introduction to application execution	57
Briefly about application execution	57
Source and disassembly mode debugging	57
Single stepping	58
Troubleshooting slow stepping speed	60
Running the application	61
Highlighting	62
Viewing the call stack	63
Terminal input and output	63
Debug logging	64
Reference information on application execution	64
Disassembly window	65
Call Stack window	70
Terminal I/O window	72
Terminal I/O Log File dialog box	73
Debug Log window	74
Log File dialog box	75
Report Assert dialog box	76
Autostep settings dialog box	77
Cores window	77
Variables and expressions	79
Introduction to working with variables and expressions	79
Briefly about working with variables and expressions	79
C-SPY expressions	80
Limitations on variable information	82
Working with variables and expressions	83
Using the windows related to variables and expressions	83
Viewing assembler variables	84
Reference information on working with variables and expressions	85
Auto window	85
Locals window	87

Watch window	89
Live Watch window	91
Statics window	94
Quick Watch window	97
Symbols window	100
Resolve Symbol Ambiguity dialog box	102
Breakpoints	105
Introduction to setting and using breakpoints	105
Reasons for using breakpoints	105
Briefly about setting breakpoints	105
Breakpoint types	106
Breakpoint icons	108
Breakpoints in the C-SPY simulator	108
Breakpoints in the C-SPY hardware debugger drivers	108
Breakpoint consumers	110
Setting breakpoints	111
Various ways to set a breakpoint	111
Toggling a simple code breakpoint	112
Setting breakpoints using the dialog box	112
Setting a data breakpoint in the Memory window	113
Setting breakpoints using system macros	114
Useful breakpoint hints	115
Reference information on breakpoints	116
Breakpoints window	117
Breakpoint Usage window	119
Code breakpoints dialog box	120
Log breakpoints dialog box	121
Range breakpoints dialog box	123
Data breakpoints dialog box	124
Data Log breakpoints dialog box	126
Immediate breakpoints dialog box	127
Enter Location dialog box	128
Resolve Source Ambiguity dialog box	130

Memory and registers	131
Introduction to monitoring memory and registers	131
Briefly about monitoring memory and registers	131
C-SPY memory zones	132
Memory configuration for the C-SPY simulator	133
Memory configuration for C-SPY hardware debugger drivers	134
Monitoring memory and registers	135
Defining application-specific register groups	135
Monitoring stack usage	136
Reference information on memory and registers	139
Memory window	140
Memory Save dialog box	144
Memory Restore dialog box	145
Fill dialog box	146
Symbolic Memory window	147
Stack window	150
Registers window	154
Register User Groups Setup window	157
SFR Setup window	159
Edit SFR dialog box	162
Memory Configuration dialog box	
for C-SPY hardware debugger drivers	164
Edit Memory Range dialog box	
for C-SPY hardware debugger drivers	167
Memory Access Setup dialog box	169
Edit Memory Access dialog box	171
 Part 2. Analyzing your application	173
Trace	175
Introduction to using trace	175
Reasons for using trace	175
Briefly about trace	175

Requirements for using trace	176
Collecting and using trace data	176
Getting started with trace	176
Trace data collection using breakpoints	176
Searching in trace data	177
Browsing through trace data	177
Reference information on trace	178
Trace window	178
Function Trace window	181
Trace Start breakpoint dialog box	182
Trace Stop breakpoint dialog box	183
Trace Expressions window	184
Find in Trace dialog box	186
Find in Trace window	187
The application timeline	189
Introduction to analyzing your application's timeline	189
Briefly about analyzing the timeline	189
Requirements for timeline support	190
Analyzing your application's timeline	190
Displaying a graph in the Timeline window	191
Navigating in the graphs	191
Analyzing performance using the graph data	192
Getting started using data logging	193
Reference information on application timeline	194
Timeline window—Call Stack graph	194
Timeline window—Data Log graph	198
Data Log window	202
Data Log Summary window	205
Viewing Range dialog box	208
Profiling	211
Introduction to the profiler	211
Reasons for using the profiler	211
Briefly about the profiler	211

Requirements for using the profiler	212
Using the profiler	212
Getting started using the profiler on function level	212
Analyzing the profiling data	213
Getting started using the profiler on instruction level	215
Reference information on the profiler	216
Function Profiler window	216
Code coverage	221
Introduction to code coverage	221
Reasons for using code coverage	221
Briefly about code coverage	221
Requirements and restrictions for using code coverage	221
Using code coverage	222
Getting started using code coverage	222
Reference information on code coverage	222
Code Coverage window	223
 Part 3. Advanced debugging	227
Interrupts	229
Introduction to interrupts	229
Briefly about the interrupt simulation system	229
Interrupt characteristics	230
Interrupt simulation states	231
C-SPY system macros for interrupt simulation	232
Target-adapting the interrupt simulation system	233
Briefly about interrupt logging	233
Using the interrupt system	233
Simulating a simple interrupt	234
Simulating an interrupt in a multi-task system	236
Getting started using interrupt logging	236
Reference information on interrupts	237
Interrupt Setup dialog box	237

Edit Interrupt dialog box	239
Forced Interrupt window	240
Interrupt Status window	241
Interrupt Log window	243
Interrupt Log Summary window	246
Timeline window—Interrupt Log graph	248
C-SPY macros	253
Introduction to C-SPY macros	253
Reasons for using C-SPY macros	253
Briefly about using C-SPY macros	254
Briefly about setup macro functions and files	254
Briefly about the macro language	254
Using C-SPY macros	255
Registering C-SPY macros—an overview	256
Executing C-SPY macros—an overview	256
Registering and executing using setup macros and setup files	257
Executing macros using Quick Watch	257
Executing a macro by connecting it to a breakpoint	258
Aborting a C-SPY macro	259
Reference information on the macro language	260
Macro functions	260
Macro variables	260
Macro parameters	261
Macro strings	261
Macro statements	262
Formatted output	263
Reference information on reserved setup macro function names	265
execUserPreload	265
execUserExecutionStarted	266
execUserExecutionStopped	266
execUserSetup	267
execUserPreReset	267

execUserReset	267
execUserExit	268
Reference information on C-SPY system macros	268
__abortLaunch	270
__cancelAllInterrupts	271
__cancelInterrupt	271
__clearBreak	271
__closeFile	272
__delay	272
__disableInterrupts	272
__driverType	273
__enableInterrupts	274
__evaluate	274
__fillMemory8	275
__fillMemory16	275
__fillMemory32	276
__getSelectedCore	277
__isBatchMode	277
__loadImage	278
__memoryRestore	279
__memorySave	279
__messageBoxYesCancel	280
__messageBoxYesNo	281
__openFile	281
__orderInterrupt	283
__popSimulatorInterruptExecutingStack	284
__readFile	284
__readFileByte	285
__readMemory8, __readMemoryByte	285
__readMemory16	286
__readMemory32	286
__registerMacroFile	287
__resetFile	287
__selectCore	287

__setCodeBreak	288
__setDataBreak	289
__setDataLogBreak	290
__setLogBreak	291
__setSimBreak	292
__setTraceStartBreak	293
__setTraceStopBreak	294
__sourcePosition	295
__strFind	295
__subString	296
__targetDebuggerVersion	296
__toLower	297
__toString	297
__toUpper	298
__unloadImage	298
__writeFile	299
__writeFileByte	299
__writeMemory8, __writeMemoryByte	300
__writeMemory16	300
__writeMemory32	301
Graphical environment for macros	301
Macro Registration window	302
Debugger Macros window	304
Macro Quicklaunch window	306
The C-SPY command line utility—cspybat	309
Using C-SPY in batch mode	309
Starting cspybat	309
Output	310
Invocation syntax	310
Summary of C-SPY command line options	311
General cspybat options	311
Options available for all C-SPY drivers	312
Options available for the simulator driver	314

Options available for the Texas Instruments driver	314
Options available for the FS2 driver	315
Options available for the Infineon driver	315
Options available for the Segger J-Link driver	316
Options available for the Nordic Semiconductor driver	316
Options available for the ROM-monitor driver	316
Options available for the Analog Devices driver	317
Options available for the Silicon Labs driver	317
Reference information on C-SPY command line options ...	318
--ADe_protocol	318
--application_args	318
--attach_to_running_target	319
--backend	320
--banked_xdata	320
--baud_rate	320
--boot_lock	321
--code_coverage_file	322
--communication_logfile	322
--connect_to	323
--core	323
--core_clock_frequency	323
--cycles	324
--debug_file	324
--debug_lock	325
--devices_after	325
--devices_before	325
--disable_interrupts	326
--download_only	326
--drv_communication_log	326
--drv_silabs_page_size	327
--drv_suppress_download	327
--drv_verify_download	327
--erase_data_flash	328
--erase_flash	328

-f	328
--fs2_configuration	329
--fs2_flash_cfg_entry	329
--fs2_flash_in_code	330
--fs2_ram_in_code	330
--function_profiling	330
--handshake_at_9600	331
--infineon_ram_in_code	331
--jlink_connection_id	332
--jlink_log_file	332
--jlink_power	332
--jlink_speed	333
--key_noN	333
--leave_target_running	334
--lock_bits	334
--lock_bits_pages	335
--macro	335
--macro_param	335
--mapu	336
--multiple_devices	336
--nr_of_extra_images	337
--number_of_banks	337
-p	338
--plugin	338
--power_target	339
--preserve_hex_files	339
--proc_alternative_sfr_addresses	339
--proc_code_model	340
--proc_codebank_end	340
--proc_codebank_mask	341
--proc_codebank_reg	341
--proc_codebank_start	341
--proc_core	342
--proc_data_addr_24	342

--proc_data_model	342
--proc_DPH <i>n</i>	343
--proc_DPL <i>n</i>	343
--proc_dptr_automod_op	344
--proc_dptr_automod_type	344
--proc_dptr_DPC	345
--proc_dptr_DPS	345
--proc_dptr_mask	345
--proc_dptr_nr_of	346
--proc_dptr_switch_method	346
--proc_dptr_visibility	347
--proc_DPX <i>n</i>	347
--proc_driver	348
--proc_exclude_exit_breakpoint	348
--proc_exclude_getchar_breakpoint	349
--proc_exclude_putchar_breakpoint	349
--proc_extended_stack	349
--proc_nr_virtual_regs	350
--proc_pc_readonly	350
--proc_pdata_bank_ext_reg_addr	350
--proc_pdata_bank_reg_addr	351
--proc_silent	351
--proc_xdata_banking	351
--reduce_speed	352
--registers_after	352
--registers_before	352
--retain_memory	353
--retain_pages	353
--rom_serial_port	354
--serial_port	354
--server_address	355
--server_name	355
--silabs_2wire_interface	356
--silent	356

--sim_guard_stacks	356
--software_breakpoints	357
--stack_overflow	357
--suppress_download	357
--timeout	358
--toggle_DTR	358
--toggle_RTS	358
--usb_id	359
--usb_interface	359
--verify_all	359
--verify_download	360

Part 4. Additional reference information 361

Debugger options 363

Setting debugger options 363

Reference information on general debugger options 364

Setup 365

Images 366

Extra Options 367

Plugins 368

Third-Party Driver options 369

Reference information on

C-SPY Texas Instruments driver options 370

Download options for Texas Instruments 370

Target options for Texas Instruments 372

Reference information on C-SPY FS2 driver options 373

Download options for FS2 373

Target options for FS2 374

Reference information on C-SPY Infineon driver options .. 375

Download options for Infineon 375

Target options for Infineon 376

Reference information on	
C-SPY Segger J-Link driver options	377
Download options for Segger J-Link	377
Communication options for Segger J-Link	378
Reference information on	
C-SPY Nordic Semiconductor driver options	379
Download options for Nordic Semiconductor	379
Reference information on	
C-SPY ROM-monitor driver options	380
Download options for the ROM-monitor	380
Serial Port options for the ROM-monitor	381
Reference information on	
C-SPY Analog Devices driver options	382
Download options for Analog Devices	382
Serial Port options for Analog Devices	383
Reference information on	
C-SPY Silicon Labs driver options	383
Download options for Silicon Labs	384
Serial Port options for Silicon Labs	385
Additional information on C-SPY drivers	387
Reference information on C-SPY driver menus	387
<i>C-SPY driver</i>	387
Simulator menu	388
Texas Instruments Emulator menu	390
Infineon Emulator menu	390
J-Link menu	391
Silicon Labs Emulator menu	391
Reference information on the C-SPY simulator	391
Simulated Frequency dialog box	392
Reference information on	
the C-SPY hardware debugger drivers	392
Serial Number dialog box	392
Server Selection dialog box	393

USB Device Selection dialog box	393
Resolving problems	394
Write failure during load	394
No contact with the target hardware	395
Monitor works, but application will not run	395
No contact with the monitor	395
Target-adapting the ROM-monitor	397
Building your own ROM-monitor	397
Setting up your ROM-monitor project	397
Adapting the source files	398
Debugging the ROM-monitor	400
Building and downloading your ROM-monitor	401
The ROM-monitor in detail	402
Early initializations	403
The protocol loop	406
Leaving the ROM-monitor	409
Entering the ROM-monitor	411
Resources used by the ROM-monitor	412
Index	413

Tables

1: Typographic conventions used in this guide	26
2: Naming conventions used in this guide	27
3: Driver differences	38
4: C-SPY assembler symbols expressions	81
5: Handling name conflicts between hardware registers and assembler labels	81
6: Available breakpoints in C-SPY hardware debugger drivers	109
7: C-SPY macros for breakpoints	114
8: Supported graphs in the Timeline window	190
9: Project options for enabling the profiler	212
10: Project options for enabling code coverage	222
11: Timer interrupt settings	235
12: Examples of C-SPY macro variables	261
13: Summary of system macros	268
14: __cancelInterrupt return values	271
15: __disableInterrupts return values	272
16: __driverType return values	273
17: __enableInterrupts return values	274
18: __evaluate return values	274
19: __isBatchMode return values	277
20: __loadImage return values	278
21: __messageBoxYesCancel return values	281
22: __messageBoxYesNo return values	281
23: __openFile return values	282
24: __readFile return values	284
25: __setCodeBreak return values	288
26: __setDataBreak return values	289
27: __setDataLogBreak return values	290
28: __setLogBreak return values	291
29: __setSimBreak return values	293
30: __setTraceStartBreak return values	293
31: __setTraceStopBreak return values	294

32: __sourcePosition return values	295
33: __unloadImage return values	299
34: cspybat parameters	310
35: Options specific to the C-SPY drivers you are using	364

Preface

Welcome to the *C-SPY® Debugging Guide for 8051*. The purpose of this guide is to help you fully use the features in the IAR C-SPY® Debugger for debugging your application based on the 8051 microcontroller.

Who should read this guide

Read this guide if you plan to develop an application using IAR Embedded Workbench and want to get the most out of the features available in C-SPY.

REQUIRED KNOWLEDGE

To use the tools in IAR Embedded Workbench, you should have working knowledge of:

- The architecture and instruction set of the 8051 microcontroller (refer to the chip manufacturer's documentation)
- The C or C++ programming language
- Application development for embedded systems
- The operating system of your host computer.

For more information about the other development tools incorporated in the IDE, refer to their respective documentation, see *Other documentation*, page 25.

What this guide contains

Below is a brief outline and summary of the chapters in this guide.

Note: Some of the screenshots in this guide are taken from a similar product and not from IAR Embedded Workbench for 8051.

PART I. BASIC DEBUGGING

- *The IAR C-SPY Debugger* introduces you to the C-SPY debugger and to the concepts that are related to debugging in general and to C-SPY in particular. The chapter also introduces the various C-SPY drivers. The chapter briefly shows the difference in functionality that the various C-SPY drivers provide.
- *Getting started using C-SPY* helps you get started using C-SPY, which includes setting up, starting, and adapting C-SPY for target hardware.

- *Executing your application* describes the conceptual differences between source and disassembly mode debugging, the facilities for executing your application, and finally, how you can handle terminal input and output.
- *Variables and expressions* describes the syntax of the expressions and variables used in C-SPY, as well as the limitations on variable information. The chapter also demonstrates the various methods for monitoring variables and expressions.
- *Breakpoints* describes the breakpoint system and the various ways to set breakpoints.
- *Memory and registers* shows how you can examine memory and registers.

PART 2. ANALYZING YOUR APPLICATION

- *Trace* describes how you can inspect the program flow up to a specific state using trace data.
- *The application timeline* describes the **Timeline** window, and how to use the information in it to analyze your application's behavior.
- *Profiling* describes how the profiler can help you find the functions in your application source code where the most time is spent during execution.
- *Code coverage* describes how the code coverage functionality can help you verify whether all parts of your code have been executed, thus identifying parts which have not been executed.

PART 3. ADVANCED DEBUGGING

- *Interrupts* contains detailed information about the C-SPY interrupt simulation system and how to configure the simulated interrupts to make them reflect the interrupts of your target hardware.
- *C-SPY macros* describes the C-SPY macro system, its features, the purposes of these features, and how to use them.
- *The C-SPY command line utility—cspybat* describes how to use C-SPY in batch mode.

PART 4. ADDITIONAL REFERENCE INFORMATION

- *Debugger options* describes the options you must set before you start the C-SPY debugger.
- *Additional information on C-SPY drivers* describes menus and features provided by the C-SPY drivers not described in any dedicated topics.
- *Target-adapting the ROM-monitor* describes how you can easily adapt the generic ROM-monitor provided with IAR Embedded Workbench to suit a device that does not have an existing debug solution supported by IAR Systems.

Other documentation

User documentation is available as hypertext PDFs and as a context-sensitive online help system in HTML format. You can access the documentation from the Information Center or from the **Help** menu in the IAR Embedded Workbench IDE. The online help system is also available via the F1 key.

USER AND REFERENCE GUIDES

The complete set of IAR Systems development tools is described in a series of guides. Information about:

- System requirements and information about how to install and register the IAR Systems products are available in the *Installation and Licensing Quick Reference Guide* and the *Licensing Guide*.
- Using the IDE for project management and building, is available in the *IDE Project Management and Building Guide for 8051*.
- Using the IAR C-SPY® Debugger, is available in the *C-SPY® Debugging Guide for 8051*.
- Programming for the IAR C/C++ Compiler for 8051, is available in the *IAR C/C++ Compiler User Guide for 8051*.
- Using the IAR XLINK Linker, the IAR XAR Library Builder, and the IAR XLIB Librarian, is available in the *IAR Linker and Library Tools Reference Guide*.
- Programming for the IAR Assembler for 8051, is available in the *IAR Assembler User Guide for 8051*.
- Performing a static analysis using C-STAT and the required checks, is available in the *C-STAT® Static Analysis Guide*.
- Developing safety-critical applications using the MISRA C guidelines, is available in the *IAR Embedded Workbench® MISRA C:2004 Reference Guide* or the *IAR Embedded Workbench® MISRA C:1998 Reference Guide*.
- Porting application code and projects created with a previous version of the IAR Embedded Workbench for 8051, is available in the *IAR Embedded Workbench® Migration Guide*.

Note: Additional documentation might be available depending on your product installation.

THE ONLINE HELP SYSTEM

The context-sensitive online help contains:

- Information about project management, editing, and building in the IDE
- Information about debugging using the IAR C-SPY® Debugger

- Reference information about the menus, windows, and dialog boxes in the IDE
- Compiler reference information
- Keyword reference information for the DLIB library functions. To obtain reference information for a function, select the function name in the editor window and press F1. Note that if you select a function name in the editor window and press F1 while using the CLIB C standard library, you will get reference information for the DLIB C standard library.

WEB SITES

Recommended web sites:

- The chip manufacturer’s web site.
- The IAR Systems web site, **www.iar.com**, that holds application notes and other product information.
- The web site of the C standardization working group, **www.open-std.org/jtc1/sc22/wg14**.
- The web site of the C++ Standards Committee, **www.open-std.org/jtc1/sc22/wg21**.
- The C++ programming language web site, **isocpp.org**. This web site also has a list of recommended books about C++ programming.
- The C and C++ reference web site, **en.cppreference.com**.

Document conventions

When, in the IAR Systems documentation, we refer to the programming language C, the text also applies to C++, unless otherwise stated.

When referring to a directory in your product installation, for example 8051\doc, the full path to the location is assumed, for example c:\Program Files\IAR Systems\Embedded Workbench N.n\8051\doc, where the initial digit of the version number reflects the initial digit of the version number of the IAR Embedded Workbench shared components.

TYPOGRAPHIC CONVENTIONS

The IAR Systems documentation set uses the following typographic conventions:

Style	Used for
computer	<ul style="list-style-type: none">• Source code examples and file paths.• Text on the command line.• Binary, hexadecimal, and octal numbers.

Table 1: Typographic conventions used in this guide





Style	Used for
<i>parameter</i>	A placeholder for an actual value used as a parameter, for example <i>filename.h</i> where <i>filename</i> represents the name of the file.
[option]	An optional part of a directive, where [and] are not part of the actual directive, but any [,], {, or } are part of the directive syntax.
{option}	A mandatory part of a directive, where { and } are not part of the actual directive, but any [,], {, or } are part of the directive syntax.
[option]	An optional part of a command line option, pragma directive, or library filename.
[a b c]	An optional part of a command line option, pragma directive, or library filename with alternatives.
{a b c}	A mandatory part of a command line option, pragma directive, or library filename with alternatives.
bold	Names of menus, menu commands, buttons, and dialog boxes that appear on the screen.
<i>italic</i>	<ul style="list-style-type: none"> • A cross-reference within this guide or to another guide. • Emphasis.
...	An ellipsis indicates that the previous item can be repeated an arbitrary number of times.
	Identifies instructions specific to the IAR Embedded Workbench® IDE interface.
	Identifies instructions specific to the command line interface.
	Identifies helpful tips and programming hints.
	Identifies warnings.

Table 1: Typographic conventions used in this guide (Continued)

NAMING CONVENTIONS

The following naming conventions are used for the products and tools from IAR Systems®, when referred to in the documentation:

Brand name	Generic term
IAR Embedded Workbench® for 8051	IAR Embedded Workbench®
IAR Embedded Workbench® IDE for 8051	the IDE
IAR C-SPY® Debugger for 8051	C-SPY, the debugger
IAR C-SPY® Simulator	the simulator

Table 2: Naming conventions used in this guide

Brand name	Generic term
IAR C/C++ Compiler™ for 8051	the compiler
IAR Assembler™ for 8051	the assembler
IAR XLINK Linker™	XLINK, the linker
IAR XAR Library Builder™	the library builder
IAR XLIB Librarian™	the librarian
IAR CLIB Runtime Environment™	the CLIB runtime environment
IAR DLIB Runtime Environment™	the DLIB runtime environment


Table 2: Naming conventions used in this guide (Continued)

Note: In this guide, *8051 microcontroller* refers to all microcontrollers compatible with the 8051 microcontroller architecture.

Part I. Basic debugging

This part of the *C-SPY® Debugging Guide for 8051* includes these chapters:

- The IAR C-SPY Debugger
- Getting started using C-SPY
- Executing your application
- Variables and expressions
- Breakpoints
- Memory and registers

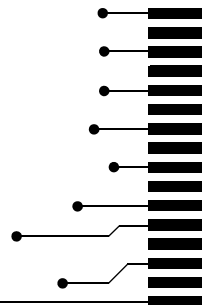



The IAR C-SPY Debugger

- Introduction to C-SPY
- Debugger concepts
- C-SPY drivers overview
- The IAR C-SPY Simulator
- The C-SPY hardware debugger drivers

Introduction to C-SPY

These topics are covered:

- An integrated environment
- General C-SPY debugger features
- RTOS awareness

AN INTEGRATED ENVIRONMENT

C-SPY is a high-level-language debugger for embedded applications. It is designed for use with the IAR Systems compilers and assemblers, and is completely integrated in the IDE, providing development and debugging within the same application. This will give you possibilities such as:

- *Editing while debugging*

During a debug session, you can make corrections directly in the same source code window that is used for controlling the debugging. Changes will be included in the next project rebuild.

- *Setting breakpoints at any point during the development cycle*

You can inspect and modify breakpoint definitions also when the debugger is not running, and breakpoint definitions flow with the text as you edit. Your debug settings, such as watch properties, window layouts, and register groups will be preserved between your debug sessions.

All windows that are open in the IAR Embedded Workbench workspace will stay open when you start the C-SPY Debugger. In addition, a set of C-SPY-specific windows are opened.

GENERAL C-SPY DEBUGGER FEATURES

Because IAR Systems provides an entire toolchain, the output from the compiler and linker can include extensive debug information for the debugger, resulting in good debugging possibilities for you.

C-SPY offers these general features:

- *Source and disassembly level debugging*
C-SPY allows you to switch between source and disassembly debugging as required, for both C or C++ and assembler source code.
- *Single-stepping on a function call level*
Compared to traditional debuggers, where the finest granularity for source level stepping is line by line, C-SPY provides a finer level of control by identifying every statement and function call as a step point. This means that each function call—inside expressions, and function calls that are part of parameter lists to other functions—can be single-stepped. The latter is especially useful when debugging C++ code, where numerous extra function calls are made, for example to object constructors.
- *Code and data breakpoints*
The C-SPY breakpoint system lets you set breakpoints of various kinds in the application being debugged, allowing you to stop at locations of particular interest. For example, you set breakpoints to investigate whether your program logic is correct or to investigate how and when the data changes.
- *Monitoring variables and expressions*
For variables and expressions there is a wide choice of facilities. You can easily monitor values of a specified set of variables and expressions, continuously or on demand. You can also choose to monitor only local variables, static variables, etc.
- *Container awareness*
When you run your application in C-SPY, you can view the elements of library data types such as STL lists and vectors. This gives you a very good overview and debugging opportunities when you work with C++ STL containers.
- *Call stack information*
The compiler generates extensive call stack information. This allows the debugger to show, without any runtime penalty, the complete stack of function calls wherever the program counter is. You can select any function in the call stack, and for each function you get valid information for local variables and available registers.
- *Powerful macro system*
C-SPY includes a powerful internal macro system, to allow you to define complex sets of actions to be performed. C-SPY macros can be used on their own or in

conjunction with complex breakpoints and—if you are using the simulator—the interrupt simulation system to perform a wide variety of tasks.

Additional general C-SPY debugger features

This list shows some additional features:

- Threaded execution keeps the IDE responsive while running the target application
- Automatic stepping
- The source browser provides easy navigation to functions, types, and variables
- Extensive type recognition of variables
- Configurable registers (CPU and peripherals) and memory windows
- Graphical stack view with overflow detection
- Support for code coverage and function level profiling
- The target application can access files on the host PC using file I/O (requires the DLIB library)
- UBROF, Intel-extended, and Motorola input formats supported
- Optional terminal I/O emulation

RTOS AWARENESS

C-SPY supports RTOS-aware debugging. For information about which operating systems that are currently supported, see the Information Center, available from the **Help** menu.

RTOS plugin modules can be provided by IAR Systems, and by third-party suppliers. Contact your software distributor or IAR Systems representative, alternatively visit the IAR Systems web site, for information about supported RTOS modules.

A C-SPY RTOS awareness plugin module gives you a high level of control and visibility over an application built on top of an RTOS. It displays RTOS-specific items like task lists, queues, semaphores, mailboxes, and various RTOS system variables. Task-specific breakpoints and task-specific stepping make it easier to debug tasks.

A loaded plugin will add its own menu, set of windows, and buttons when a debug session is started (provided that the RTOS is linked with the application). For information about other RTOS awareness plugin modules, refer to the manufacturer of the plugin module.

Debugger concepts

This section introduces some of the concepts and terms that are related to debugging in general and to C-SPY in particular. This section does not contain specific information

related to C-SPY features. Instead, you will find such information in the other chapters of this documentation. The IAR Systems user documentation uses the terms described in this section when referring to these concepts.


These topics are covered:

- C-SPY and target systems
- The debugger
- The target system
- The application
- C-SPY debugger systems
- The ROM-monitor program
- Third-party debuggers
- C-SPY plugin modules

C-SPY AND TARGET SYSTEMS

You can use C-SPY to debug either a software target system or a hardware target system.

This figure gives an overview of C-SPY and possible target systems:

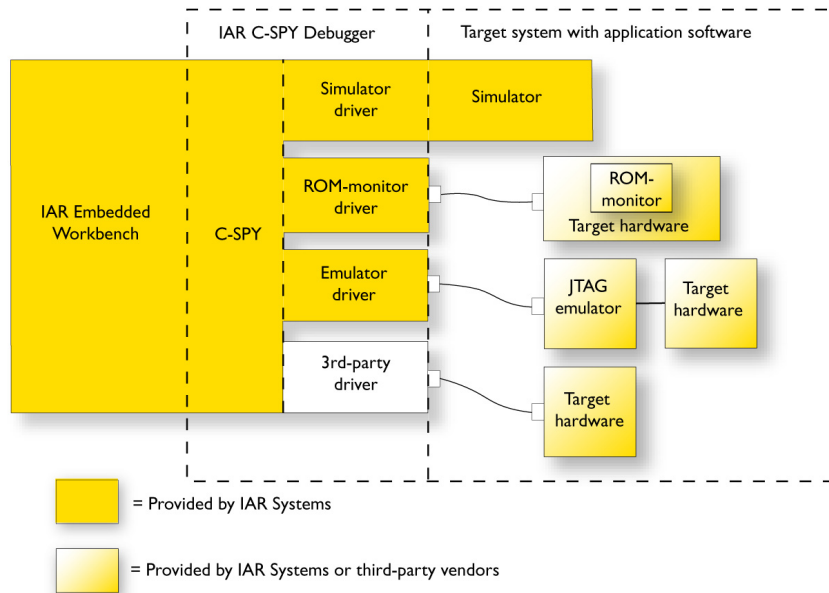

THE DEBUGGER

The debugger, for instance C-SPY, is the program that you use for debugging your applications on a target system.

THE TARGET SYSTEM

The target system is the system on which you execute your application when you are debugging it. The target system can consist of hardware, either an evaluation board or your own hardware design. It can also be completely or partially simulated by software. Each type of target system needs a dedicated C-SPY driver.

THE APPLICATION

A user application is the software you have developed and which you want to debug using C-SPY.

C-SPY DEBUGGER SYSTEMS

C-SPY consists of both a general part which provides a basic set of debugger features, and a target-specific back end. The back end consists of two components: a processor

module—one for every microcontroller, which defines the properties of the microcontroller, and a *C-SPY driver*. The C-SPY driver is the part that provides communication with and control of the target system. The driver also provides the user interface—menus, windows, and dialog boxes—to the functions provided by the target system, for instance, special breakpoints.

Typically, there are three main types of C-SPY drivers:

- Simulator driver
- ROM-monitor driver
- Emulator driver

C-SPY is available with a simulator driver, and depending on your product package, optional drivers for hardware debugger systems. For an overview of the available C-SPY drivers and the functionality provided by each driver, see *C-SPY drivers overview*, page 37.

THE ROM-MONITOR PROGRAM

The ROM-monitor program is a piece of firmware that is loaded to non-volatile memory on your target hardware; it runs in parallel with your application. The ROM-monitor communicates with the debugger and provides services needed for debugging the application, for instance stepping and breakpoints.

THIRD-PARTY DEBUGGERS

You can use a third-party debugger together with the IAR Systems toolchain as long as the third-party debugger can read any of the output formats provided by XLINK, such as UBROF, ELF/DWARF, COFF, Intel-extended, Motorola, or any other available format. For information about which format to use with a third-party debugger, see the user documentation supplied with that tool.

C-SPY PLUGIN MODULES

C-SPY is designed as a modular architecture with an open SDK that can be used for implementing additional functionality to the debugger in the form of plugin modules. These modules can be seamlessly integrated in the IDE.

Plugin modules are provided by IAR Systems, or can be supplied by third-party vendors. Examples of such modules are:

- The various C-SPY drivers for debugging using certain debug systems.
- RTOS plugin modules for support for real-time OS aware debugging.
- C-SPYLink that bridges IAR Visual State and IAR Embedded Workbench to make true high-level state machine debugging possible directly in C-SPY, in addition to

the normal C level symbolic debugging. For more information, see the documentation provided with IAR Visual State.

For more information about the C-SPY SDK, contact IAR Systems.

C-SPY drivers overview

These topics are covered:

- Differences between the C-SPY drivers

At the time of writing this guide, the IAR C-SPY Debugger for the 8051 microcontrollers is available with drivers for these target systems and evaluation boards:

- Simulator
- Texas instruments CCxxxx evaluation boards and the CC debugger
- FS2 System Navigator for CAST 8051, Mentor Graphics M8051EW, and processors from Handshake Solutions and NXP Semiconductors
- Infineon's DAS (Device Access Server) protocol for debugging XC8xx devices
- Nordic Semiconductor's nRFGO development platform
- Nuvoton Technology Corporation's Nu-Link debug adapter for Nuvoton's N76E Series MCUs
- IAR ROM-monitor (including prebuilt ROM-monitors for NXP 93x, Analog Devices ADu 84x, and Texas Instruments MSC 1211 evaluation boards and a template project for building your own ROM-monitor)
- Analog Devices' ADuC8xx and ADe development boards
- Silicon Labs' USB and serial debug adapters for C8051Fxxx MCUs.
- Segger J-Link debug probe for Silicon Labs' 8051 EFM8 MCUs.

Note: In addition to the drivers supplied with IAR Embedded Workbench, you can also load debugger drivers supplied by a third-party vendor; see *Third-Party Driver options*, page 369.

DIFFERENCES BETWEEN THE C-SPY DRIVERS

This table summarizes the key differences between the C-SPY drivers:

Feature	Simulator	TI / Nordic Semi / Analog Devices / Segger J-Link / Nu-Link	FS2 / Infineon / Silicon Labs	ROM- monitor
Code breakpoints ¹	Yes	Yes	Yes	Yes
Data breakpoints	Yes	—	Yes	Yes
Execution in real time	—	Yes	Yes	Yes
Zero memory footprint ¹	Yes	Yes	Yes	—
Simulated interrupts	Yes	—	—	—
Real interrupts	—	Yes	Yes	Yes
Interrupt logging	Yes	—	—	—
Data logging	Yes	—	—	—
Live watch	Yes	—	—	—
Cycle counter	Yes	—	—	—
Code coverage	Yes	—	—	—
Data coverage	Yes	—	—	—
Function/ instruction profiling	Yes	—	—	—
Trace	Yes	—	—	—

Table 3: Driver differences

1 With specific requirements or restrictions, see the respective chapter in this guide.

The IAR C-SPY Simulator

The C-SPY Simulator simulates the functions of the target processor entirely in software, which means that you can debug the program logic long before any hardware is available. Because no hardware is required, it is also the most cost-effective solution for many applications.

SUPPORTED FEATURES

The C-SPY Simulator supports:

- Instruction-level simulation
- Memory configuration and validation
- Interrupt simulation
- Peripheral simulation (using the C-SPY macro system in conjunction with immediate breakpoints).

Simulating hardware instead of using a hardware debugging system means that some limitations do not apply, but that there are other limitations instead. For example:

- You can set an unlimited number of breakpoints in the simulator.
- When you stop executing your application, time actually stops in the simulator. When you stop application execution on a hardware debugging system, there might still be activities in the system. For example, peripheral units might still be active and reading from or writing to SFR ports.
- Application execution is significantly much slower in a simulator compared to when using a hardware debugging system. However, during a debug session, this might not necessarily be a problem.
- The simulator is not cycle accurate.
- Peripheral simulation is limited in the C-SPY Simulator and therefore the simulator is suitable mostly for debugging code that does not interact too much with peripheral units.

The C-SPY hardware debugger drivers

C-SPY can connect to a hardware debugger using a C-SPY hardware debugger driver as an interface. The C-SPY hardware debugger drivers are automatically installed during the installation of IAR Embedded Workbench.

IAR Embedded Workbench for 8051 comes with several C-SPY hardware debugger drivers and you use the driver that matches the hardware debugger you are using.

These topics are covered:

- Installing extra software
- Target system with or without a debug probe
- The C-SPY Infineon driver
- ROM-monitor on target hardware

INSTALLING EXTRA SOFTWARE


For these drivers, you might need to install extra software:

- Texas Instruments
- FS2 System Navigator
- Infineon
- Nordic Semiconductor
- Nuvoton Nu-Link
- Analog Devices
- Segger J-Link


See the release notes for these drivers, available from the Information Center.

TARGET SYSTEM WITH OR WITHOUT A DEBUG PROBE

Some systems have an emulator, a debug probe or a debug adapter connected between the host computer and the evaluation board:

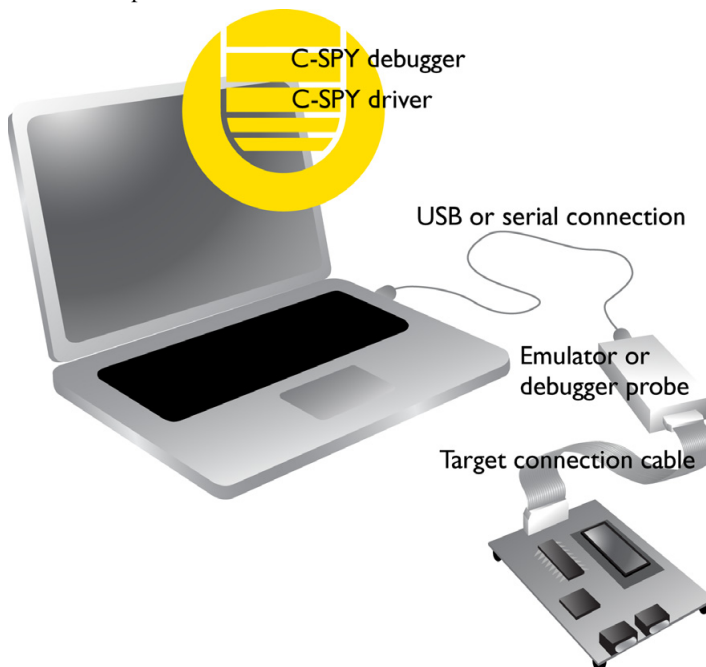

Other target systems have all debugger functionality located on the target board itself:

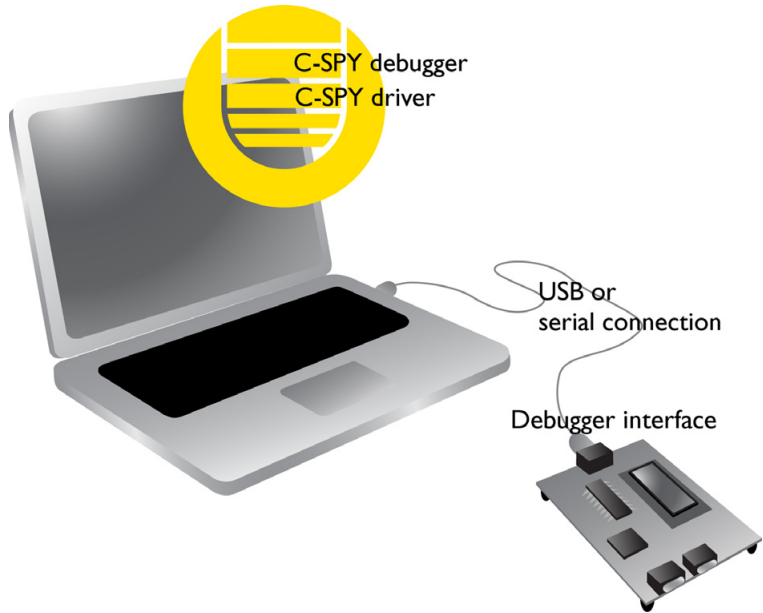

THE C-SPY INFINEON DRIVER


The C-SPY Infineon driver works as an interface to the DAS server from Infineon. The C-SPY driver connects to a DAS server, which in turn connects to the target system.

ROM-MONITOR ON TARGET HARDWARE

There are still devices that lack on-chip debug support. For these, a ROM-monitor provides a working debug solution. It has a small memory footprint, it occupies only 4 Kbytes of non-volatile memory and uses 256 bytes in xdata memory and 5–7 bytes in idata memory.

IAR Embedded Workbench comes with a set of ready-made ROM-monitors for some devices. In addition, a generic ROM-monitor framework is provided, which you can adapt for your own target board.

Using the C-SPY ROM-monitor driver, C-SPY can connect to various target hardware that have the ROM-monitor located in memory.

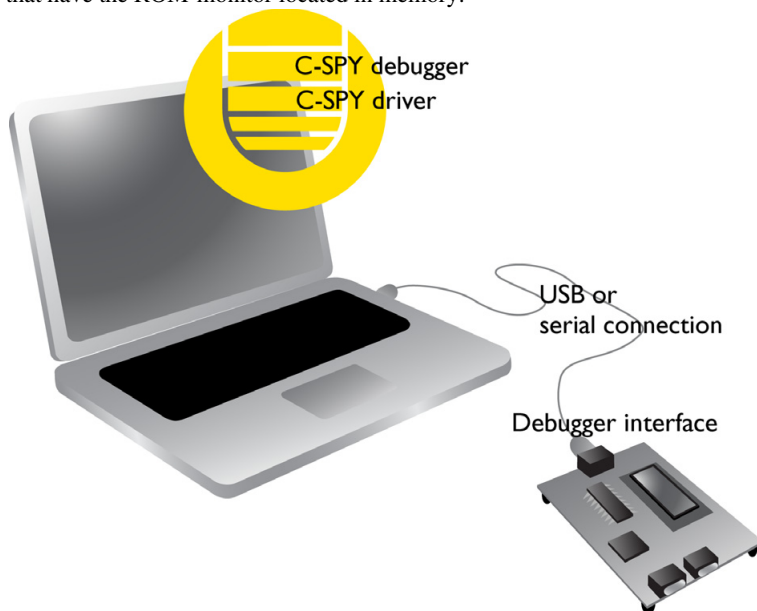

Before you can use the IAR C-SPY ROM-monitor driver, you must make sure that ROM-monitor firmware is located on the target board. A template for creating firmware is available from the **Create New Project** dialog box. There are firmware images for some devices in the `8051\src\rom\monitor_image` directory. The source code for these images is located in the `8051\src\rom` directory.

A set of ready-made ROM-monitors for some devices are located in the directory `8051\src\rom`. For a generic ROM-monitor framework which you can adapt for your own target board, see the chapter *Target-adapting the ROM-monitor*, page 397.

Getting started using C-SPY

- Setting up C-SPY
- Starting C-SPY
- Adapting for target hardware
- Reference information on starting C-SPY

Setting up C-SPY

These tasks are covered:

- Setting up for debugging
- Executing from reset
- Using a setup macro file
- Selecting a device description file
- Loading plugin modules

SETTING UP FOR DEBUGGING

- 1 Before you start C-SPY, choose **Project>Options>Debugger>Setup** and select the C-SPY driver that matches your debugger system—simulator or hardware debugger system.
- 2 In the **Category** list, select the appropriate C-SPY driver and make your settings. For information about these options, see *Debugger options*, page 363.
- 3 Click **OK**.
- 4 Choose **Tools>Options** to open the **IDE Options** dialog box:
 - Select **Debugger** to configure the debugger behavior
 - Select **Stack** to configure the debugger's tracking of stack usage.

For more information about these options, see the *IDE Project Management and Building Guide for 8051*. See also *Adapting for target hardware*, page 49.

EXECUTING FROM RESET

The **Run to** option—available on the **Debugger>Setup** page—specifies a location you want C-SPY to run to when you start a debug session as well as after each reset. C-SPY will place a temporary breakpoint at this location and all code up to this point is executed before stopping at the location. Note that this temporary breakpoint is removed when the debugger stops, regardless of how. If you stop the execution before the **Run to** location has been reached, the execution will not stop at that location when you start the execution again.

The default location to run to is the `main` function. Type the name of the location if you want C-SPY to run to a different location. You can specify assembler labels or whatever can be evaluated to such, for instance function names.

If you leave the check box empty, the program counter will contain the regular hardware reset address at each reset. The reset address is set by C-SPY.

If no breakpoints are available when C-SPY starts, a warning message notifies you that single stepping will be required and that this is time consuming. You can then continue execution in single-step mode or stop at the first instruction. If you choose to stop at the first instruction, the debugger starts executing with the PC (program counter) at the default reset location instead of the location you typed in the **Run to** box.

Note: This message will never be displayed in the C-SPY simulator, where breakpoints are unlimited.

USING A SETUP MACRO FILE

A setup macro file is a macro file that you choose to load automatically when C-SPY starts. You can define the setup macro file to perform actions according to your needs, using setup macro functions and system macros. Thus, if you load a setup macro file you can initialize C-SPY to perform actions automatically.

For more information about setup macro files and functions, see *Introduction to C-SPY macros*, page 253.

For an example of how to use a setup macro file, see *Initializing target hardware before C-SPY starts*, page 49.

To register a setup macro file:

- 1 Before you start C-SPY, choose **Project>Options>Debugger>Setup**.
- 2 Select **Use macro file** and type the path and name of your setup macro file, for example `Setup.mac`. If you do not type a filename extension, the extension `mac` is assumed.

SELECTING A DEVICE DESCRIPTION FILE

C-SPY uses device description files to handle device-specific information.

A default device description file is automatically used based on your project settings. If you want to override the default file, you must select your device description file. Device description files from IAR Systems are provided in the `8051\config` directory and they have the filename extension `.ddf`.

For more information about device description files, see *Adapting for target hardware*, page 49.

To override the default device description file:

- 1 Before you start C-SPY, choose **Project>Options>Debugger>Setup**.
- 2 Select the **Override default** option, and choose a file using the **Device description file** browse button.

Note: You can easily view your device description files that are used for your project. Choose **Project>Open Device Description File** and select the file you want to view.

LOADING PLUGIN MODULES

On the **Plugins** page you can specify C-SPY plugin modules to load and make available during debug sessions. Plugin modules can be provided by IAR Systems, and by third-party suppliers. Contact your software distributor or IAR Systems representative, or visit the IAR Systems web site, for information about available modules.

For more information, see *Plugins*, page 368.

Starting C-SPY

When you have set up the debugger, you are ready to start a debug session.

These tasks are covered:

- Starting a debug session
- Loading executable files built outside of the IDE
- Starting a debug session with source files missing
- Loading multiple debug images
- Editing in C-SPY windows

STARTING A DEBUG SESSION

You can choose to start a debug session with or without loading the current executable file.



To start C-SPY and download the current executable file, click the **Download and Debug** button. Alternatively, choose **Project>Download and Debug**.



To start C-SPY without downloading the current executable file, click the **Debug without Downloading** button. Alternatively, choose **Project>Debug without Downloading**.

LOADING EXECUTABLE FILES BUILT OUTSIDE OF THE IDE

You can also load C-SPY with an application that was built outside the IDE, for example applications built on the command line. To load an externally built executable file and to set build options you must first create a project for it in your workspace.

To create a project for an externally built file:


- 1 Choose **Project>Create New Project**, and specify a project name.
- 2 To add the executable file to the project, choose **Project>Add Files** and make sure to choose **All Files** in the file type drop-down list. Locate the executable file.
- 3 To start the executable file, click the **Download and Debug** button. The project can be reused whenever you rebuild your executable file.

The only project options that are meaningful to set for this kind of project are options in the **General Options** and **Debugger** categories. Make sure to set up the general project options in the same way as when the executable file was built.

STARTING A DEBUG SESSION WITH SOURCE FILES MISSING

Normally, when you use the IAR Embedded Workbench IDE to edit source files, build your project, and start the debug session, all required files are available and the process works as expected.

However, if C-SPY cannot automatically find the source files, for example if the application was built on another computer, the **Get Alternative File** dialog box is displayed:

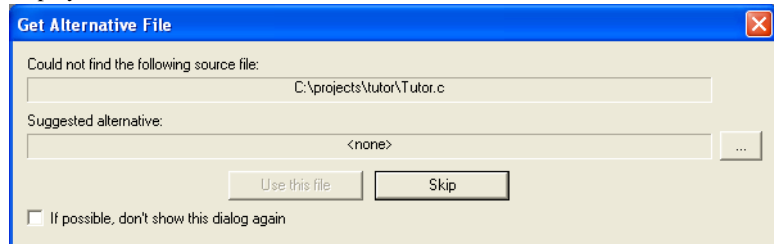

Typically, you can use the dialog box like this:

- The source files are not available: Select **If possible, don't show this dialog again** and then click **Skip**. C-SPY will assume that there is no source file available. The dialog box will not appear again, and the debug session will not try to display the source code.
- Alternative source files are available at another location: Specify an alternative source code file, select **If possible, don't show this dialog again**, and then click **Use this file**. C-SPY will assume that the alternative file should be used. The dialog box will not appear again, unless a file is needed for which there is no alternative file specified and which cannot be located automatically.

If you restart the IAR Embedded Workbench IDE, the **Get Alternative File** dialog box will be displayed again once even if you have selected **If possible, don't show this dialog again**. This gives you an opportunity to modify your previous settings.

For more information, see *Get Alternative File dialog box*, page 55.

LOADING MULTIPLE DEBUG IMAGES

Normally, a debuggable application consists of a single file that you debug. However, you can also load additional debug files (debug images). This means that the complete program consists of several debug images.

Typically, this is useful if you want to debug your application in combination with a prebuilt ROM image that contains an additional library for some platform-provided features. The ROM image and the application are built using separate projects in the IAR Embedded Workbench IDE and generate separate output files.

If more than one debug image has been loaded, you will have access to the combined debug information for all the loaded debug images. In the **Images** window you can choose whether you want to have access to debug information for a single debug image or for all images.

To load additional debug images at C-SPY startup:

- 1 Choose **Project>Options>Debugger>Images** and specify up to three additional debug images to be loaded. For more information, see *Images*, page 366.
- 2 Start the debug session.

To load additional debug images at a specific moment:

Use the `__loadImage` system macro and execute it using either one of the methods described in *Using C-SPY macros*, page 255.

To display a list of loaded debug images:

Choose **Images** from the **View** menu. The **Images** window is displayed, see *Images window*, page 54.

EDITING IN C-SPY WINDOWS

You can edit the contents of the **Memory**, **Symbolic Memory**, **Registers**, **Register User Groups Setup**, **Auto**, **Watch**, **Locals**, **Statics**, **Live Watch**, and **Quick Watch** windows.

Use these keyboard keys to edit the contents of these windows:

Enter Makes an item editable and saves the new value.

Esc Cancels a new value.

In windows where you can edit the **Expression** field and in the **Quick Watch** window, you can specify the number of elements to be displayed in the field by adding a semicolon followed by an integer. For example, to display only the three first elements of an array named `myArray`, or three elements in sequence starting with the element pointed to by a pointer, write:

```
myArray;3
```

To display three elements pointed to by `myPtr`, `myPtr+1`, and `myPtr+2`, write:

```
myPtr;3
```

Optionally, add a comma and another integer that specifies which element to start with. For example, to display elements 10–14, write:

```
myArray;5,10
```

To display `myPtr+10`, `myPtr+11`, `myPtr+12`, `myPtr+13`, and `myPtr+14`, write:

```
myPtr;5,10
```

Note: For pointers, there are no built-in limits on displayed element count, and no validation of the pointer value.

Adapting for target hardware

These tasks are covered:

- Modifying a device description file
- Initializing target hardware before C-SPY starts

MODIFYING A DEVICE DESCRIPTION FILE

C-SPY uses device description files provided with the product to handle several of the target-specific adaptations, see *Selecting a device description file*, page 45. Device description files contain device-specific information such as:

- Memory information for device-specific memory zones, see *C-SPY memory zones*, page 132. If you are using a C-SPY hardware debugger driver, the memory information retrieved from the device description file is not always sufficient, see *Memory Configuration dialog box for C-SPY hardware debugger drivers*, page 164.
- Definitions for device-specific interrupts, which makes it possible to simulate these interrupts in the C-SPY simulator, see *Interrupts*, page 229.
- Definitions of interrupt vectors, SFR paging registers, memory-mapped peripheral units, device-specific CPU registers, and groups of these.

Normally, you do not need to modify the device description file. However, if the predefinitions are not sufficient for some reason, you can edit the file. Note, however, that the format of these descriptions might be updated in future upgrades of the product.

Make a copy of the device description file that best suits your needs, and modify it according to the description in the file. Reload the project to make the changes take effect.

For information about how to load a device description file, see *Selecting a device description file*, page 45.

INITIALIZING TARGET HARDWARE BEFORE C-SPY STARTS

You can use C-SPY macros to initialize target hardware before C-SPY starts. For example, if your hardware uses external memory that must be enabled before code can be downloaded to it, C-SPY needs a macro to perform this action before your application can be downloaded.

- 1 Create a new text file and define your macro function.

By using the built-in `execUserPreload` setup macro function, your macro function will be executed directly after the communication with the target system is established but before C-SPY downloads your application.

For example, a macro that enables external SDRAM could look like this:

```
/* Your macro function. */
enableExternalSDRAM()
{
    __message "Enabling external SDRAM\n";
    __writeMemory32(...);
}

/* Setup macro determines time of execution. */
execUserPreload()
{
    enableExternalSDRAM();
}
```

- 2 Save the file with the filename extension `mac`.
- 3 Before you start C-SPY, choose **Project>Options>Debugger** and click the **Setup** tab.
- 4 Select the **Use macro file** option, and choose the macro file you just created.

Your setup macro will now be loaded during the C-SPY startup sequence.

Reference information on starting C-SPY

Reference information about:

- *C-SPY Debugger main window*, page 50
- *Images window*, page 54
- *Get Alternative File dialog box*, page 55

See also:

- Tools options for the debugger in the *IDE Project Management and Building Guide for 8051*.

C-SPY Debugger main window

When you start a debug session, these debugger-specific items appear in the main IAR Embedded Workbench IDE window:

- A dedicated **Debug** menu with commands for executing and debugging your application
- Depending on the C-SPY driver you are using, a driver-specific menu, often referred to as the *Driver menu* in this documentation. Typically, this menu contains menu commands for opening driver-specific windows and dialog boxes.

- A special debug toolbar
- Several windows and dialog boxes specific to C-SPY

The C-SPY main window might look different depending on which components of the product installation you are using.

Menu bar

These menus are available during a debug session:

Debug


Provides commands for executing and debugging the source application. Most of the commands are also available as icon buttons on the debug toolbar.

C-SPY driver menu

Provides commands specific to a C-SPY driver. The driver-specific menu is only available when the driver is used. For information about the driver-specific menu commands, see *Reference information on C-SPY driver menus*, page 387.

Debug menu

The **Debug** menu is available during a debug session. The **Debug** menu provides commands for executing and debugging the source application. Most commands are also available as icon buttons on the debug toolbar.

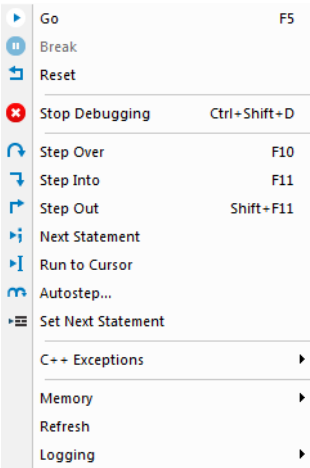

These commands are available:



Go (F5)

Executes from the current statement or instruction until a breakpoint or program exit is reached.

**Break**

Stops the application execution.

**Reset**

Resets the target processor. Click the drop-down button to access a menu with additional commands.

Enable Run to 'label', where *label* typically is *main*. Enables and disables the project option **Run to** without exiting the debug session. This menu command is only available if you have selected **Run to** in the **Options** dialog box.

Reset strategies, which contains a list of reset strategies supported by the C-SPY driver you are using. This means that you can choose a different reset strategy than the one used initially without exiting the debug session. Reset strategies are only available if the C-SPY driver you are using supports alternate reset strategies.

**Stop Debugging (Ctrl+Shift+D)**

Stops the debugging session and returns you to the project manager.

**Step Over (F10)**

Executes the next statement, function call, or instruction, without entering C or C++ functions or assembler subroutines.

**Step Into (F11)**

Executes the next statement or instruction, or function call, entering C or C++ functions or assembler subroutines.

**Step Out (Shift+F11)**

Executes from the current statement up to the statement after the call to the current function.

**Next Statement**

Executes directly to the next statement without stopping at individual function calls.

**Run to Cursor**

Executes from the current statement or instruction up to a selected statement or instruction.

**Autostep**

Displays a dialog box where you can customize and perform autostepping, see *Autostep settings dialog box*, page 77.



Set Next Statement

Moves the program counter directly to where the cursor is, without executing any source code. Note, however, that this creates an anomaly in the program flow and might have unexpected effects.

C++ Exceptions>Break on Throw

This menu command is not supported by your product package.

C++ Exceptions>Break on Uncaught Exception

This menu command is not supported by your product package.

Memory>Save

Displays a dialog box where you can save the contents of a specified memory area to a file, see *Memory Save dialog box*, page 144.

Memory>Restore

Displays a dialog box where you can load the contents of a file in, for example Intel-extended or Motorola s-record format to a specified memory zone, see *Memory Restore dialog box*, page 145.

Refresh

Refreshes the contents of all debugger windows. Because window updates are automatic, this is needed only in unusual situations, such as when target memory is modified in ways C-SPY cannot detect. It is also useful if code that is displayed in the **Disassembly** window is changed.

Logging>Set Log file

Displays a dialog box where you can choose to log the contents of the **Debug Log** window to a file. You can select the type and the location of the log file. You can choose what you want to log: errors, warnings, system information, user messages, or all of these. See *Log File dialog box*, page 75.

Logging>Set Terminal I/O Log file

Displays a dialog box where you can choose to log simulated target access communication to a file. You can select the destination of the log file. See *Terminal I/O Log File dialog box*, page 73

C-SPY windows

Depending on the C-SPY driver you are using, these windows specific to C-SPY are available during a debug session:


- C-SPY Debugger main window
- Disassembly window
- Memory window

- Symbolic Memory window
- Registers window
- Watch window
- Locals window
- Auto window
- Live Watch window
- Quick Watch window
- Statics window
- Call Stack window
- Trace window
- Function Trace window
- Timeline window, see *Reference information on application timeline*, page 194
- Terminal I/O window
- Code Coverage window
- Function Profiler window
- Images window
- Stack window
- Symbols window

Additional windows are available depending on which C-SPY driver you are using.

Images window

The **Images** window is available from the **View** menu.

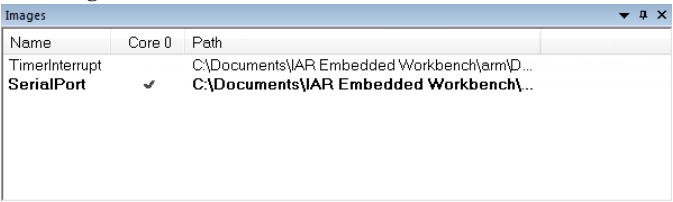

Name	Core 0	Path
TimerInterrupt		C:\Documents\IAR Embedded Workbench\arm\D...
SerialPort	✓	C:\Documents\IAR Embedded Workbench\...

This window lists all currently loaded debug images (debug files).

Normally, a source application consists of a single debug image that you debug. However, you can also load additional images. This means that the complete debuggable unit consists of several debug images. See also *Loading multiple debug images*, page 47.

Requirements

None; this window is always available.

Display area

C-SPY can use debug information from one or more of the loaded debug images simultaneously. Double-click on a row to make C-SPY use debug information from that debug image. The current choices are highlighted.

This area lists the loaded debug images in these columns:

Name

The name of the loaded debug image.

Core *N*

Double-click in this column to toggle using debug information from the debug image when that core is in focus.

Path

The path to the loaded debug image.


Related information

For related information, see:

- *Loading multiple debug images*, page 47
- *Images*, page 366
- *__loadImage*, page 278

Get Alternative File dialog box

The **Get Alternative File** dialog box is displayed if C-SPY cannot automatically find the source files to be loaded, for example if the application was built on another computer.

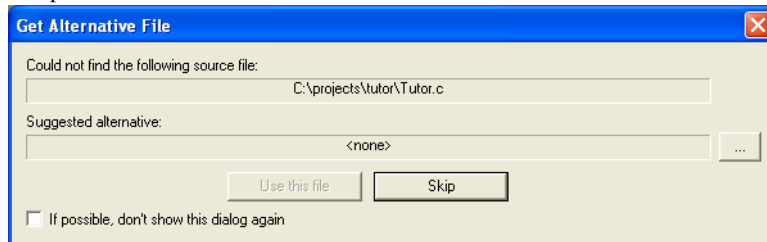

See also *Starting a debug session with source files missing*, page 46.

Could not find the following source file

The missing source file.

Suggested alternative

Specify an alternative file.

Use this file

After you have specified an alternative file, **Use this file** establishes that file as the alias for the requested file. Note that after you have chosen this action, C-SPY will automatically locate other source files if these files reside in a directory structure similar to the first selected alternative file.

The next time you start a debug session, the selected alternative file will be preloaded automatically.

Skip

C-SPY will assume that the source file is not available for this debug session.

If possible, don't show this dialog again

Instead of displaying the dialog box again for a missing source file, C-SPY will use the previously supplied response.

Related information

For related information, see *Starting a debug session with source files missing*, page 46.

Executing your application

- Introduction to application execution
- Reference information on application execution

Introduction to application execution

These topics are covered:

- Briefly about application execution
- Source and disassembly mode debugging
- Single stepping
- Troubleshooting slow stepping speed
- Running the application
- Highlighting
- Viewing the call stack
- Terminal input and output
- Debug logging

BRIEFLY ABOUT APPLICATION EXECUTION

C-SPY allows you to monitor and control the execution of your application. By single-stepping through it, and setting breakpoints, you can examine details about the application execution, for example the values of variables and registers. You can also use the call stack to step back and forth in the function call chain.

The terminal I/O and debug log features let you interact with your application.

You can find commands for execution on the **Debug** menu and on the toolbar.

SOURCE AND DISASSEMBLY MODE DEBUGGING

C-SPY allows you to switch between source mode and disassembly mode debugging as needed.

Source debugging provides the fastest and easiest way of developing your application, without having to worry about how the compiler or assembler has implemented the code. In the editor windows you can execute the application one statement at a time while monitoring the values of variables and data structures.

Disassembly mode debugging lets you focus on the critical sections of your application, and provides you with precise control of the application code. You can open a disassembly window which displays a mnemonic assembler listing of your application based on actual memory contents rather than source code, and lets you execute the application exactly one machine instruction at a time.

Regardless of which mode you are debugging in, you can display registers and memory, and change their contents.

SINGLE STEPPING

C-SPY allows more stepping precision than most other debuggers because it is not line-oriented but statement-oriented. The compiler generates detailed stepping information in the form of *step points* at each statement, and at each function call. That is, source code locations where you might consider whether to execute a step into or a step over command. Because the step points are located not only at each statement but also at each function call, the step functionality allows a finer granularity than just stepping on statements.

There are several factors that can slow down the stepping speed. If you find it too slow, see *Troubleshooting slow stepping speed*, page 60 for some tips.

The step commands

There are four step commands:

- **Step Into**
- **Step Over**
- **Next Statement**
- **Step Out**

Using the **Autostep settings** dialog box, you can automate the single stepping. For more information, see *Autostep settings dialog box*, page 77.

Consider this example and assume that the previous step has taken you to the `f(i)` function call (highlighted):

```
extern int g(int);
int f(int n)
{
    value = g(n-1) + g(n-2) + g(n-3);
    return value;
}
int main()
{
    ...
    f(i);
    value ++;
}
```

Step Into

While stepping, you typically consider whether to step into a function and continue stepping inside the function or subroutine. The **Step Into** command takes you to the first step point within the subroutine `g(n-1)`:

```
extern int g(int);
int f(int n)
{
    value = g(n-1) + g(n-2) + g(n-3);
    return value;
}
```

The **Step Into** command executes to the next step point in the normal flow of control, regardless of whether it is in the same or another function.

Step Over

The **Step Over** command executes to the next step point in the same function, without stopping inside called functions. The command would take you to the `g(n-2)` function call, which is not a statement on its own but part of the same statement as `g(n-1)`. Thus, you can skip uninteresting calls which are parts of statements and instead focus on critical parts:

```
extern int g(int);
int f(int n)
{
    value = g(n-1) + g(n-2) + g(n-3);
    return value;
}
```

Next Statement

The **Next Statement** command executes directly to the next statement, in this case `return value`, allowing faster stepping:

```
extern int g(int);
int f(int n)
{
    value = g(n-1) + g(n-2) + g(n-3);
    return value;
}
```

Step Out

When inside the function, you can—if you wish—use the **Step Out** command to step out of it before it reaches the exit. This will take you directly to the statement immediately after the function call:

```
extern int g(int);
int f(int n)
{
    value = g(n-1) + g(n-2) + g(n-3);
    return value;
}
int main()
{
    ...
    f(i);
    value ++;
}
```

The possibility of stepping into an individual function that is part of a more complex statement is particularly useful when you use C code containing many nested function calls. It is also very useful for C++, which tends to have many implicit function calls, such as constructors, destructors, assignment operators, and other user-defined operators.

This detailed stepping can in some circumstances be either invaluable or unnecessarily slow. For this reason, you can also step only on statements, which means faster stepping.

TROUBLESHOOTING SLOW STEPPING SPEED

If you find that stepping speed is slow, these troubleshooting tips might speed up stepping:

- If you are using a hardware debugger system, keep track of how many hardware breakpoints that are used and make sure some of them are left for stepping.

Stepping in C-SPY is normally performed using breakpoints. When C-SPY performs a step command, a breakpoint is set on the next statement and the application executes until it reaches this breakpoint. If you are using a hardware debugger system, the number of hardware breakpoints—typically used for setting a stepping breakpoint in code that is located in flash/ROM memory—is limited. If you, for example, step into a `C switch` statement, breakpoints are set on each branch; this might consume several hardware breakpoints. If the number of available hardware breakpoints is exceeded, C-SPY switches into single stepping on assembly level, which can be very slow.

For more information, see *Breakpoints in the C-SPY hardware debugger drivers*, page 108 and *Breakpoint consumers*, page 110.

- Disable trace data collection, using the **Enable/Disable** button in both the **Trace** and the **Function Profiling** windows. Trace data collection might slow down stepping because the collected trace data is processed after each step. Note that it is not sufficient to just close the corresponding windows to disable trace data collection.
- Choose to view only a limited selection of SFR registers. You can choose between two alternatives. Either type `#SFR_name` (where *SFR_name* reflects the name of the SFR you want to monitor) in the **Watch** window, or create your own filter for displaying a limited group of SFRs in the **Registers** window. Displaying many SFR registers might slow down stepping because all registers must be read from the hardware after each step. See *Defining application-specific register groups*, page 135.
- Close the **Memory** and **Symbolic Memory** windows if they are open, because the visible memory must be read after each step and that might slow down stepping.
- Close any window that displays expressions such as **Watch**, **Live Watch**, **Locals**, **Statics** if it is open, because all these windows read memory after each step and that might slow down stepping.
- Close the **Stack** window if it is open. Choose **Tools>Options>Stack** and disable the **Enable graphical stack display and stack usage tracking** option if it is enabled.
- If possible, increase the communication speed between C-SPY and the target board/emulator.

RUNNING THE APPLICATION

Go


The **Go** command continues execution from the current position until a breakpoint or program exit is reached.

Run to Cursor

The **Run to Cursor** command executes to the position in the source code where you have placed the cursor. The **Run to Cursor** command also works in the **Disassembly** window and in the **Call Stack** window.

HIGHLIGHTING

At each stop, C-SPY highlights the corresponding C or C++ source or instruction with a green color, in the editor and the **Disassembly** window respectively. In addition, a green arrow appears in the editor window when you step on C or C++ source level, and in the **Disassembly** window when you step on disassembly level. This is determined by which of the windows is the active window. If none of the windows are active, it is determined by which of the windows was last active.

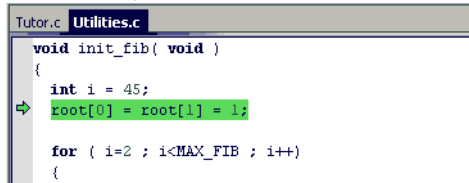

```

Tutor.c Utilities.c
void init_fib( void )
{
    int i = 45;
    root[0] = root[1] = 1;
    for ( i=2 ; i<MAX_FIB ; i++)
    {

```

For simple statements without function calls, the whole statement is typically highlighted. When stopping at a statement with function calls, C-SPY highlights the first call because this illustrates more clearly what **Step Into** and **Step Over** would mean at that time.

Occasionally, you will notice that a statement in the source window is highlighted using a pale variant of the normal highlight color. This happens when the program counter is at an assembler instruction which is part of a source statement but not exactly at a step point. This is often the case when stepping in the **Disassembly** window. Only when the program counter is at the first instruction of the source statement, the ordinary highlight color is used.


Code coverage

From the context menu in the **Code Coverage** window, you can toggle highlight colors and icons in the editor window that show code coverage analysis for the source code, see *Code Coverage window*, page 223.

These are the colors and icons that are used:

- Red highlight color and a red diamond: the code range has not been executed.
- Green highlight color: 100% of the code range has been executed.
- Yellow highlight color and a red diamond: parts of the code range have been executed.

This figure illustrates all three code coverage highlight colors:

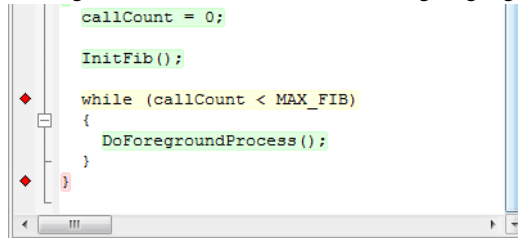

VIEWING THE CALL STACK

The compiler generates extensive call frame information. This allows C-SPY to show, without any runtime penalty, the complete function call chain at any time.



Typically, this is useful for two purposes:

- Determining in what context the current function has been called
- Tracing the origin of incorrect values in variables and in parameters, thus locating the function in the call chain where the problem occurred.

The **Call Stack** window shows a list of function calls, with the current function at the top. When you inspect a function in the call chain, the contents of all affected windows are updated to display the state of that particular call frame. This includes the editor, **Locals**, **Register**, **Watch**, and **Disassembly** windows. A function would normally not make use of all registers, so these registers might have undefined states and be displayed as dashes (---).

In the editor and **Disassembly** windows, a green highlight indicates the topmost, or current, call frame; a yellow highlight is used when inspecting other frames.

For your convenience, it is possible to select a function in the call stack and click the **Run to Cursor** command to execute to that function.

Assembler source code does not automatically contain any call frame information. To see the call chain also for your assembler modules, you can add the appropriate `CFI` assembler directives to the assembler source code. For more information, see the *IAR Assembler User Guide for 8051*.

Note: For highly optimized code, C-SPY might not be able to identify all calls. This means that for highly optimized code, the call stack is not entirely trustworthy.

TERMINAL INPUT AND OUTPUT

Sometimes you might have to debug constructions in your application that use `stdin` and `stdout` without an actual hardware device for input and output. The **Terminal I/O**

window lets you enter input to your application, and display output from it. You can also direct terminal I/O to a file, using the **Terminal I/O Log Files** dialog box.



This facility is useful in two different contexts:

- If your application uses `stdin` and `stdout`
- For producing debug trace printouts

For more information, see *Terminal I/O window*, page 72 and *Terminal I/O Log File dialog box*, page 73.

DEBUG LOGGING

The **Debug Log** window displays debugger output, such as diagnostic messages, macro-generated output, and information about trace.



It can sometimes be convenient to log the information to a file where you can easily inspect it, see *Log File dialog box*, page 75. The two main advantages are:

- The file can be opened in another tool, for instance an editor, so you can navigate and search within the file for particularly interesting parts.
- The file provides history about how you have controlled the execution, for instance, which breakpoints that have been triggered etc.

Reference information on application execution


Reference information about:

- *Disassembly window*, page 65
- *Call Stack window*, page 70
- *Terminal I/O window*, page 72
- *Terminal I/O Log File dialog box*, page 73
- *Debug Log window*, page 74
- *Log File dialog box*, page 75
- *Report Assert dialog box*, page 76
- *Autostep settings dialog box*, page 77
- *Cores window*, page 77

See also Terminal I/O options in the *IDE Project Management and Building Guide for 8051*.

Disassembly window

The C-SPY **Disassembly** window is available from the **View** menu.

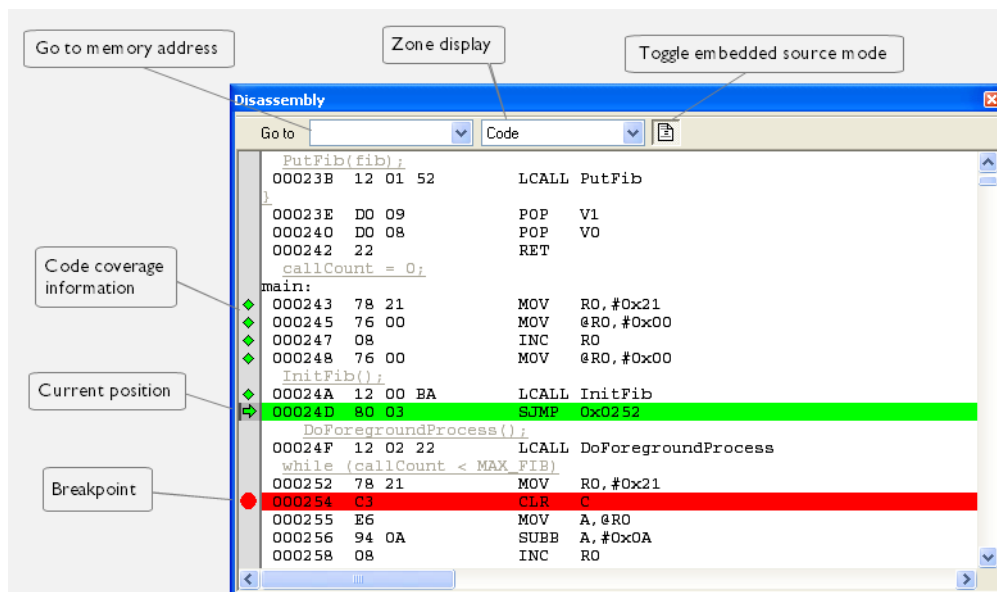

This window shows the application being debugged as disassembled application code.

To change the default color of the source code in the Disassembly window:

- 1 Choose **Tools>Options>Debugger**.
- 2 Set the default color using the **Source code color in disassembly window** option.



To view the corresponding assembler code for a function, you can select it in the editor window and drag it to the **Disassembly** window.

See also *Source and disassembly mode debugging*, page 57.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Toolbar

The toolbar contains:

Go to

The memory location or symbol you want to view.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Toggle Mixed-Mode

Toggles between displaying only disassembled code or disassembled code together with the corresponding source code. Source code requires that the corresponding source file has been compiled with debug information

Display area


The display area shows the disassembled application code. This area contains these graphic elements:

Green highlight color	Indicates the current position, that is the next assembler instruction to be executed. To move the cursor to any line in the Disassembly window, click the line. Alternatively, move the cursor using the navigation keys.
Yellow highlight color	Indicates a position other than the current position, such as when navigating between frames in the Call Stack window or between items in the Trace window.
Red dot	Indicates a breakpoint. Double-click in the gray left-side margin of the window to set a breakpoint. For more information, see <i>Breakpoints</i> , page 105.
Green diamond	Code coverage icon—indicates code that has been executed.
Red diamond	Code coverage icon—indicates code that has <i>not</i> been executed.
Red/yellow diamond (red top/yellow bottom)	Code coverage icon—indicates a branch that is <i>never</i> taken.
Red/yellow diamond (red left side/yellow right side)	Code coverage icon—indicates a branch that is <i>always</i> taken.

If instruction profiling has been enabled from the context menu, an extra column in the left-side margin appears with information about how many times each instruction has been executed.

Context menu

This context menu is available:

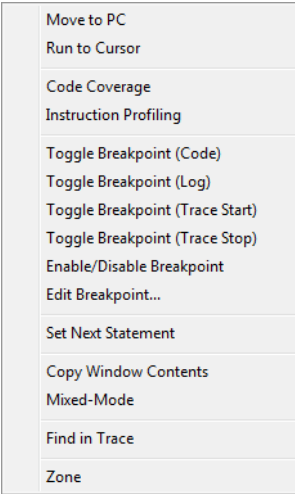

Note: The contents of this menu are dynamic, which means that the commands on the menu might depend on your product package.

These commands are available:

Move to PC

Displays code at the current program counter location.

Run to Cursor

Executes the application from the current position up to the line containing the cursor.

Code Coverage

Displays a submenu that provides commands for controlling code coverage. This command is only enabled if the driver you are using supports it.

Enable	Toggles code coverage on or off.
Show	Toggles the display of code coverage on or off. Code coverage is indicated by a red, green, and red/yellow diamonds in the left margin.
Clear	Clears all code coverage information.

Next Different Coverage >	Moves the insertion point to the next line in the window with a different code coverage status than the selected line.
Previous Different Coverage <	Moves the insertion point to the closest preceding line in the window with a different code coverage status than the selected line.

Instruction Profiling

Displays a submenu that provides commands for controlling instruction profiling. This command is only enabled if the driver you are using supports it.

Enable	Toggles instruction profiling on or off.
Show	Toggles the display of instruction profiling on or off. For each instruction, the left-side margin displays how many times the instruction has been executed.
Clear	Clears all instruction profiling information.

Toggle Breakpoint (Code)

Toggles a code breakpoint. Assembler instructions and any corresponding label at which code breakpoints have been set are highlighted in red. For more information, see *Code breakpoints dialog box*, page 120.

Toggle Breakpoint (Log)

Toggles a log breakpoint for trace printouts. Assembler instructions at which log breakpoints have been set are highlighted in red. For more information, see *Log breakpoints dialog box*, page 121.

Toggle Breakpoint (Trace Start)

Toggles a Trace Start breakpoint. When the breakpoint is triggered, the trace data collection starts. Note that this menu command is only available if the C-SPY driver you are using supports trace. For more information, see *Trace Start breakpoint dialog box*, page 182.

Toggle Breakpoint (Trace Stop)

Toggles a Trace Stop breakpoint. When the breakpoint is triggered, the trace data collection stops. Note that this menu command is only available if the C-SPY driver you are using supports trace. For more information, see *Trace Stop breakpoint dialog box*, page 183.

Enable/Disable Breakpoint

Enables and Disables a breakpoint. If there is more than one breakpoint at a specific line, all those breakpoints are affected by the **Enable/Disable** command.

Edit Breakpoint

Displays the breakpoint dialog box to let you edit the currently selected breakpoint. If there is more than one breakpoint on the selected line, a submenu is displayed that lists all available breakpoints on that line.

Set Next Statement

Sets the program counter to the address of the instruction at the insertion point.

Copy Window Contents

Copies the selected contents of the **Disassembly** window to the clipboard.

Mixed-Mode

Toggles between showing only disassembled code or disassembled code together with the corresponding source code. Source code requires that the corresponding source file has been compiled with debug information.

Find in Trace


Searches the contents of the **Trace** window for occurrences of the given location—the position of the insertion point in the source code—and reports the result in the **Find in Trace** window. This menu command requires support for Trace in the C-SPY driver you are using, see *Differences between the C-SPY drivers*, page 38.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Call Stack window

The **Call Stack** window is available from the **View** menu.

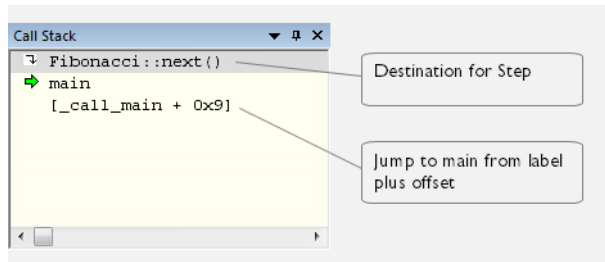

This window displays the C function call stack with the current function at the top. To inspect a function call, double-click it. C-SPY now focuses on that call frame instead.

If the next **Step Into** command would step to a function call, the name of the function is displayed in the gray bar at the top of the window. This is especially useful for implicit function calls, such as C++ constructors, destructors, and operators.

See also *Viewing the call stack*, page 63.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.


Display area

Each entry in the display area is formatted in one of these ways:

<code>function(values)***</code>	A C/C++ function with debug information. Provided that Show Arguments is enabled, <i>values</i> is a list of the current values of the parameters, or empty if the function does not take any parameters. ***, if present, indicates that the function has been inlined by the compiler. For information about function inlining, see the <i>IAR C/C++ Compiler User Guide for 8051</i> .
<code>[label + offset]</code>	An assembler function, or a C/C++ function without debug information.
<code><exception_frame></code>	An interrupt.

Context menu

This context menu is available:

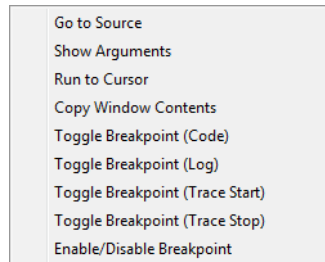

These commands are available:

Go to Source

Displays the selected function in the **Disassembly** or editor windows.

Show Arguments

Shows function arguments.

Run to Cursor

Executes until return to the function selected in the call stack.

Copy Window Contents

Copies the contents of the **Call Stack** window and stores them on the clipboard.

Toggle Breakpoint (Code)

Toggles a code breakpoint.

Toggle Breakpoint (Log)

Toggles a log breakpoint.

Toggle Breakpoint (Trace Start)

Toggles a Trace Start breakpoint. When the breakpoint is triggered, trace data collection starts. Note that this menu command is only available if the C-SPY driver you are using supports it.

Toggle Breakpoint (Trace Stop)


Toggles a Trace Stop breakpoint. When the breakpoint is triggered, trace data collection stops. Note that this menu command is only available if the C-SPY driver you are using supports it.

Enable/Disable Breakpoint

Enables or disables the selected breakpoint

Terminal I/O window

The **Terminal I/O** window is available from the **View** menu.

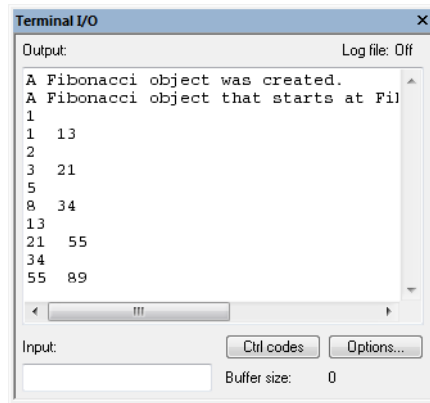

Use this window to enter input to your application, and display output from it.

To use this window, you must:

- I Link your application with the option **With I/O emulation modules**.

C-SPY will then direct `stdin`, `stdout` and `stderr` to this window. If the **Terminal I/O** window is closed, C-SPY will open it automatically when input is required, but not for output.

See also *Terminal input and output*, page 63.

Requirements


Can be used with all C-SPY debugger drivers and debug probes.

Input

Type the text that you want to input to your application.

Ctrl codes

Opens a menu for input of special characters, such as EOF (end of file) and NUL.




Options

Opens the **IDE Options** dialog box where you can set options for terminal I/O. For information about the options available in this dialog box, see *Terminal I/O options* in *IDE Project Management and Building Guide for 8051*.

Terminal I/O Log File dialog box

The **Terminal I/O Log File** dialog box is available by choosing **Debug>Logging>Set Terminal I/O Log File**.

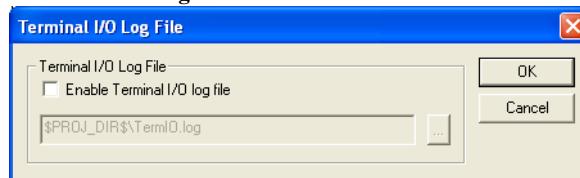

Use this dialog box to select a destination log file for terminal I/O from C-SPY.

See also *Terminal input and output*, page 63.

Requirements


Can be used with all C-SPY debugger drivers and debug probes.

Terminal I/O Log Files

Controls the logging of terminal I/O. To enable logging of terminal I/O to a file, select **Enable Terminal I/O log file** and specify a filename. The default filename extension is `.log`. A browse button is available for your convenience.

Debug Log window

The **Debug Log** window is available by choosing **View>Messages>Debug Log**.

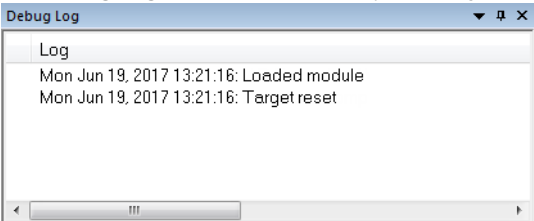

This window displays debugger output, such as diagnostic messages, macro-generated output, and information about trace. This output is only available during a debug session. When opened, this window is, by default, grouped together with the other message windows, see *IDE Project Management and Building Guide for 8051*.

Double-click any rows in one of the following formats to display the corresponding source code in the editor window:

```
<path> (<row>) :<message>  
<path> (<row>, <column>) :<message>
```


See also *Debug logging*, page 64 and *Log File dialog box*, page 75.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Context menu

This context menu is available:

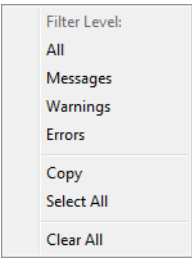

These commands are available:

All

Shows all messages sent by the debugging tools and drivers.

Messages

Shows all C-SPY messages.

Warnings

Shows warnings and errors.

Errors

Shows errors only.

Copy

Copies the contents of the window.

Select All


Selects the contents of the window.

Clear All

Clears the contents of the window.

Log File dialog box

The **Log File** dialog box is available by choosing **Debug>Logging>Set Log File**.

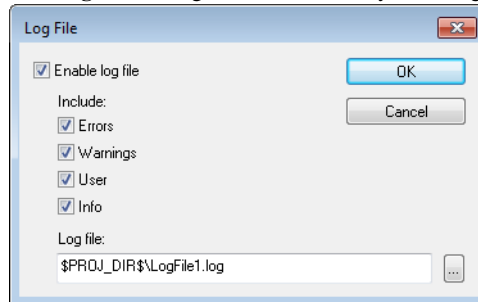

Use this dialog box to log output from C-SPY to a file.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Enable log file

Enables or disables logging to the file.

Include

The information printed in the file is, by default, the same as the information listed in the **Debug Log** window. Use the browse button, to override the default file and location

of the log file (the default filename extension is `log`). To change the information logged, choose between:

Errors

C-SPY has failed to perform an operation.

Warnings

An error or omission of concern.

User


Messages from C-SPY macros, that is, your messages using the `__message` statement.

Info

Progress information about actions C-SPY has performed.

Report Assert dialog box

The **Report Assert** dialog box appears if you have a call to the `assert` function in your application source code, and the assert condition is false. In this dialog box you can choose how to proceed.

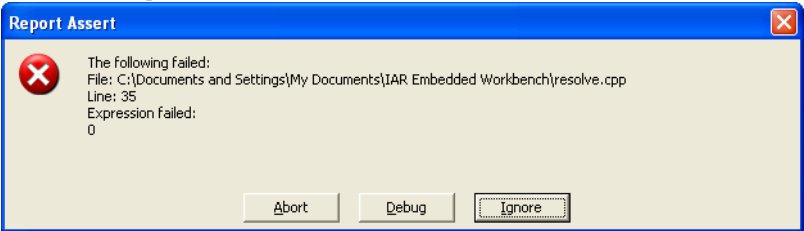

Abort

The application stops executing and the runtime library function `abort`, which is part of your application on the target system, will be called. This means that the application itself terminates its execution.

Debug


C-SPY stops the execution of the application and returns control to you.

Ignore

The assertion is ignored and the application continues to execute.

Autostep settings dialog box

The **Autostep settings** dialog box is available by choosing **Debug>Autostep**.

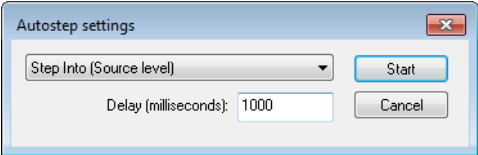

Use this dialog box to customize autostepping.

The drop-down menu lists the available step commands, see *Single stepping*, page 58.

Requirements


Can be used with all C-SPY debugger drivers and debug probes.

Delay (milliseconds)

Specify the delay between each step in milliseconds.

Cores window

The **Cores** window is available from the **View** menu.

Cores				
Core	Status	PC	Cycles	
 0: Core 0	Stopped	0xE0055F	74	

This window displays information about the executing core, such as its execution state. This information is primarily useful for IAR Embedded Workbench products that support multicore debugging.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area








A row in this area shows information about a core, in these columns:

Execution state

Displays one of these icons to indicate the execution state of the core.



in focus, not executing

	not in focus, not executing
	in focus, executing
	not in focus, executing
	in focus, in sleep mode
	not in focus, in sleep mode
	in focus, unknown status
	not in focus, unknown status

Core

The name of the core.

Status

The status of the execution, which can be one of **Stopped**, **Running**, **Sleeping**, or **Unknown**.

PC

The value of the program counter.

Cycles | Time

The value of the cycle counter or the execution time since the start of the execution, depending on the debugger driver you are using.

Variables and expressions

- Introduction to working with variables and expressions
- Working with variables and expressions
- Reference information on working with variables and expressions

Introduction to working with variables and expressions

This section introduces different methods for looking at variables and introduces some related concepts.

These topics are covered:

- Briefly about working with variables and expressions
- C-SPY expressions
- Limitations on variable information

BRIEFLY ABOUT WORKING WITH VARIABLES AND EXPRESSIONS

There are several methods for looking at variables and calculating their values. These methods are suitable for basic debugging:

- **Tooltip watch**—in the editor window—provides the simplest way of viewing the value of a variable or more complex expressions. Just point at the variable with the mouse pointer. The value is displayed next to the variable.
- The **Auto** window displays a useful selection of variables and expressions in, or near, the current statement. The window is automatically updated when execution stops.
- The **Locals** window displays the local variables, that is, auto variables and function parameters for the active function. The window is automatically updated when execution stops.
- The **Watch** window allows you to monitor the values of C-SPY expressions and variables. The window is automatically updated when execution stops.
- The **Live Watch** window repeatedly samples and displays the values of expressions while your application is executing. Variables in the expressions must be statically located, such as global variables.
- The **Statics** window displays the values of variables with static storage duration. The window is automatically updated when execution stops.

- The **Macro Quicklaunch** window and the **Quick Watch** window give you precise control over when to evaluate an expression.
- The **Symbols** window displays all symbols with a static location, that is, C/C++ functions, assembler labels, and variables with static storage duration, including symbols from the runtime library.

These additional methods for looking at variables are suitable for more advanced analysis:

- The **Data Log** window and the **Data Log Summary** window display logs of accesses to up to four different memory locations you choose by setting data log breakpoints. Data logging can help you locate frequently accessed data. You can then consider whether you should place that data in more efficient memory.

For more information about these windows, see *The application timeline*, page 189.

C-SPY EXPRESSIONS

C-SPY expressions can include any type of C expression, except for calls to functions. The following types of symbols can be used in expressions:

- C/C++ symbols
- Assembler symbols (register names and assembler labels)
- C-SPY macro functions
- C-SPY macro variables

Expressions that are built with these types of symbols are called C-SPY expressions and there are several methods for monitoring these in C-SPY. Examples of valid C-SPY expressions are:

```
i + j
i = 42
myVar = cVar
cVar = myVar + 2
#asm_label
#R2
#PC
my_macro_func(19)
```

If you have a static variable with the same name declared in several different functions, use the notation `function::variable` to specify which variable to monitor.

C/C++ symbols

C symbols are symbols that you have defined in the C source code of your application, for instance variables, constants, and functions (functions can be used as symbols but cannot be executed). C symbols can be referenced by their names. Note that C++

symbols might implicitly contain function calls which are not allowed in C-SPY symbols and expressions.

Note: Some attributes available in C/C++, like `volatile`, are not fully supported by C-SPY. For example, this line will not be accepted by C-SPY:

```
sizeof(unsigned char volatile __memattr *)
```

However, this line will be accepted:

```
sizeof(unsigned char __memattr *)
```

Assembler symbols

Assembler symbols can be assembler labels or registers, for example the program counter, the stack pointer, or other CPU registers. If a device description file is used, all memory-mapped peripheral units, such as I/O ports, can also be used as assembler symbols in the same way as the CPU registers. See *Modifying a device description file*, page 49.

Assembler symbols can be used in C-SPY expressions if they are prefixed by `#`.

Example	What it does
<code>#PC++</code>	Increments the value of the program counter.
<code>myVar = #SP</code>	Assigns the current value of the stack pointer register to your C-SPY variable.
<code>myVar = #label</code>	Sets <code>myVar</code> to the value of an integer at the address of <code>label</code> .
<code>myptr = &#label7</code>	Sets <code>myptr</code> to an <code>int *</code> pointer pointing at <code>label7</code> .

Table 4: C-SPY assembler symbols expressions

In case of a name conflict between a hardware register and an assembler label, hardware registers have a higher precedence. To refer to an assembler label in such a case, you must enclose the label in back quotes ` (ASCII character 0x60). For example:

Example	What it does
<code>#PC</code>	Refers to the program counter.
<code>#`PC`</code>	Refers to the assembler label <code>PC</code> .

Table 5: Handling name conflicts between hardware registers and assembler labels

Which processor-specific symbols are available by default can be seen in the **Registers** window, using the CPU Registers register group. See *Registers window*, page 154.

C-SPY macro functions

Macro functions consist of C-SPY macro variable definitions and macro statements which are executed when the macro is called.

For information about C-SPY macro functions and how to use them, see *Briefly about the macro language*, page 254.

C-SPY macro variables

Macro variables are defined and allocated outside your application, and can be used in a C-SPY expression. In case of a name conflict between a C symbol and a C-SPY macro variable, the C-SPY macro variable will have a higher precedence than the C variable. Assignments to a macro variable assign both its value and type.

For information about C-SPY macro variables and how to use them, see *Reference information on the macro language*, page 260.

Using sizeof

According to standard C, there are two syntactical forms of `sizeof`:

```
sizeof(type)
sizeof expr
```

The former is for types and the latter for expressions.

Note: In C-SPY, do not use parentheses around an expression when you use the `sizeof` operator. For example, use `sizeof x+2` instead of `sizeof (x+2)`.

LIMITATIONS ON VARIABLE INFORMATION

The value of a C variable is valid only on step points, that is, the first instruction of a statement and on function calls. This is indicated in the editor window with a bright green highlight color. In practice, the value of the variable is accessible and correct more often than that.

When the program counter is inside a statement, but not at a step point, the statement or part of the statement is highlighted with a pale variant of the ordinary highlight color.

Effects of optimizations

The compiler is free to optimize the application software as much as possible, as long as the expected behavior remains. The optimization can affect the code so that debugging might be more difficult because it will be less clear how the generated code relates to the source code. Typically, using a high optimization level can affect the code in a way that will not allow you to view a value of a variable as expected.

Consider this example:

```
myFunction()
{
    int i = 42;
    ...
    x = computer(i); /* Here, the value of i is known to C-SPY */
    ...
}
```

From the point where the variable `i` is declared until it is actually used, the compiler does not need to waste stack or register space on it. The compiler can optimize the code, which means that C-SPY will not be able to display the value until it is actually used. If you try to view the value of a variable that is temporarily unavailable, C-SPY will display the text:

Unavailable

If you need full information about values of variables during your debugging session, you should use the lowest optimization level during compilation, that is, **None**.

Working with variables and expressions

These tasks are covered:

- Using the windows related to variables and expressions
- Viewing assembler variables

See also *Analyzing your application's timeline*, page 190.

USING THE WINDOWS RELATED TO VARIABLES AND EXPRESSIONS

Where applicable, you can add, modify, and remove expressions, and change the display format in the windows related to variables and expressions.

To add a value you can also click in the dotted rectangle and type the expression you want to examine. To modify the value of an expression, click the **Value** field and modify its content. To remove an expression, select it and press the Delete key.



For text that is too wide to fit in a column—in any of these windows, except the **Trace** window—and thus is truncated, just point at the text with the mouse pointer and tooltip information is displayed.


Right-click in any of the windows to access the context menu which contains additional commands. Convenient drag-and-drop between windows is supported, except for in the

Locals window, data logging windows, and the **Quick Watch** window where it is not relevant.

VIEWING ASSEMBLER VARIABLES

An assembler label does not convey any type information at all, which means C-SPY cannot easily display data located at that label without getting extra information. To view data conveniently, C-SPY by default treats all data located at assembler labels as variables of type `int`. However, in the **Watch**, **Live Watch**, and **Quick Watch** windows, you can select a different interpretation to better suit the declaration of the variables.

In this figure, you can see four variables in the **Watch** window and their corresponding declarations in the assembler source file to the left:

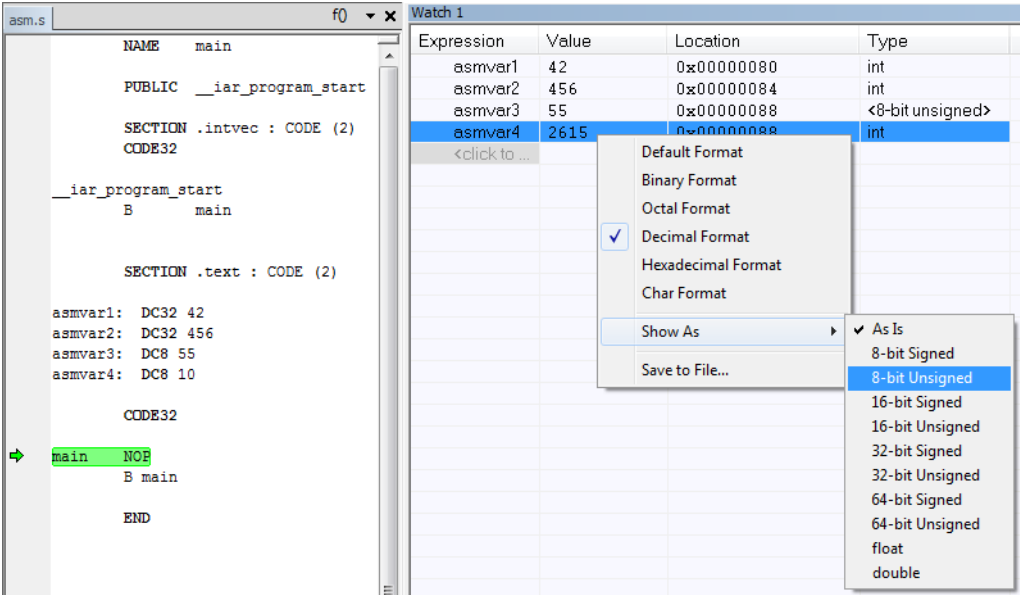

Note that `asmvar4` is displayed as an `int`, although the original assembler declaration probably intended for it to be a single byte quantity. From the context menu you can make C-SPY display the variable as, for example, an 8-bit unsigned variable. This has already been specified for the `asmvar3` variable.

Reference information on working with variables and expressions

Reference information about:

- *Auto window*, page 85
- *Locals window*, page 87
- *Watch window*, page 89
- *Live Watch window*, page 91
- *Statics window*, page 94
- *Quick Watch window*, page 97
- *Symbols window*, page 100
- *Resolve Symbol Ambiguity dialog box*, page 102

See also:

- *Reference information on trace*, page 178 for trace-related reference information
- *Macro Quicklaunch window*, page 306

Auto window

The **Auto** window is available from the **View** menu.

Auto				
Expression	Value	Location	Type	
NextCounter	NextCounter {0x40B}		void (___...	
fib	1	Memory: 0xFE74	uint32_t	
GetFib	GetFib {0x141}		uint32_t (...)	
callCount	3	Memory: 0xFEFA8	signed int	

This window displays a useful selection of variables and expressions in, or near, the current statement. Every time execution in C-SPY stops, the values in the **Auto** window are recalculated. Values that have changed since the last stop are highlighted in red.


See also *Editing in C-SPY windows*, page 48.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Context menu

This context menu is available:

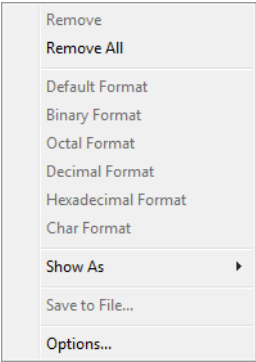

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Remove

Removes the selected expression from the window.

Remove All

Removes all expressions listed in the window.

Default Format

Binary Format

Octal Format

Decimal Format

Hexadecimal Format

Char Format

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:

Variables	The display setting affects only the selected variable, not other variables.
Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.

Structure fields All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Show As Displays a submenu that provides commands for changing the default type interpretation of variables. The commands on this submenu are mainly useful for assembler variables—data at assembler labels—because these are, by default, displayed as integers. For more information, see *Viewing assembler variables*, page 84.

Save to File Saves content to a file in a tab-separated format.

Options Displays the **IDE Options** dialog box where you can set various options for C-SPY windows.

Locals window

The **Locals** window is available from the **View** menu.

Locals			
Variable	Value	Location	Type
i	1244	Memory : 0xPEF72	signed int

This window displays the local variables and parameters for the current function. Every time execution in C-SPY stops, the values in the window are recalculated. Values that have changed since the last stop are highlighted in red.


See also *Editing in C-SPY windows*, page 48.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Context menu

This context menu is available:

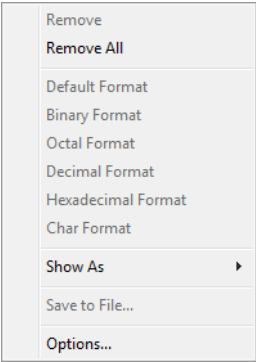

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Remove

Removes the selected expression from the window.

Remove All

Removes all expressions listed in the window.

Default Format

Binary Format

Octal Format

Decimal Format

Hexadecimal Format

Char Format

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:

Variables	The display setting affects only the selected variable, not other variables.
Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.

Structure fields

All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Show As

Displays a submenu that provides commands for changing the default type interpretation of variables. The commands on this submenu are mainly useful for assembler variables—data at assembler labels—because these are, by default, displayed as integers. For more information, see *Viewing assembler variables*, page 84.

Save to File

Saves content to a file in a tab-separated format.

Options

Displays the **IDE Options** dialog box where you can set various options for C-SPY windows.

Watch window

The **Watch** window is available from the **View** menu.

Watch 1			
Expression	Value	Location	Type
callCount	2	Memory : 0xFEFA8	signed int
Fib	<array>	Memory : 0xFEFA0	uint32_t[10]
[0]	1	Memory : 0xFEFA0	uint32_t
[1]	1	Memory : 0xFEFA4	uint32_t
[2]	2	Memory : 0xFEFA8	uint32_t
[3]	3	Memory : 0xFEFA8C	uint32_t
[4]	5	Memory : 0xFEFA90	uint32_t
[5]	8	Memory : 0xFEFA94	uint32_t
[6]	13	Memory : 0xFEFA98	uint32_t
[7]	21	Memory : 0xFEFA9C	uint32_t
[8]	34	Memory : 0xFEFAA0	uint32_t
[9]	55	Memory : 0xFEFAA4	uint32_t
<click to ad...>			

Use this window to monitor the values of C-SPY expressions or variables. You can open up to four instances of this window, where you can view, add, modify, and remove expressions. Tree structures of arrays, structs, and unions are expandable, which means that you can study each item of these.

Every time execution in C-SPY stops, the values in the **Watch** window are recalculated. Values that have changed since the last stop are highlighted in red.



Be aware that expanding very large arrays can cause an out-of-memory crash. To avoid this, expansion is automatically performed in steps of 5000 elements.


See also *Editing in C-SPY windows*, page 48.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Context menu

This context menu is available:

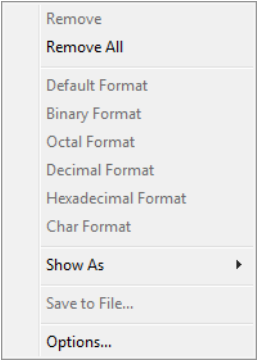

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Remove

Removes the selected expression from the window.

Remove All

Removes all expressions listed in the window.

Default Format

Binary Format

Octal Format

Decimal Format

Hexadecimal Format

Char Format

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:

- Variables** The display setting affects only the selected variable, not other variables.
- Array elements** The display setting affects the complete array, that is, the same display format is used for each array element.
- Structure fields** All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Show As

Displays a submenu that provides commands for changing the default type interpretation of variables. The commands on this submenu are mainly useful for assembler variables—data at assembler labels—because these are, by default, displayed as integers. For more information, see *Viewing assembler variables*, page 84.

Save to File

Saves content to a file in a tab-separated format.

Options

Displays the **IDE Options** dialog box where you can set various options for C-SPY windows.

Live Watch window

The **Live Watch** window is available from the **View** menu.

Live Watch				
Expression	Value	Location	Type	
GetFib	GetFib {0x141}		uint32_t (__ne...	
	GetFib {0x141}	Memory: 0x141	uint32_t (int_f...	
<click to ad...				

This window repeatedly samples and displays the value of expressions while your application is executing. Variables in the expressions must be statically located, such as global variables.

See also *Editing in C-SPY windows*, page 48.

Requirements

The C-SPY simulator.

Display area

This area contains these columns:

Expression

The name of the variable. The base name of the variable is followed by the full name, which includes module, class, or function scope. This column is not editable.

Value

The value of the variable. Values that have changed are highlighted in red.

Dragging text or a variable from another window and dropping it on the **Value** column will assign a new value to the variable in that row.

This column is editable.

Location


The location in memory where this variable is stored.

Type

The data type of the variable.

Context menu

This context menu is available:

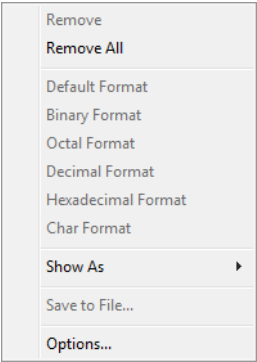

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Remove

Removes the selected expression from the window.

Remove All

Removes all expressions listed in the window.

Default Format**Binary Format****Octal Format****Decimal Format****Hexadecimal Format****Char Format**

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:

Variables	The display setting affects only the selected variable, not other variables.
Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.
Structure fields	All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Show As

Displays a submenu that provides commands for changing the default type interpretation of variables. The commands on this submenu are mainly useful for assembler variables—data at assembler labels—because these are, by default, displayed as integers. For more information, see *Viewing assembler variables*, page 84.

Save to File


Saves content to a file in a tab-separated format.

Options

Displays the **IDE Options** dialog box where you can set various options for C-SPY windows.

Statics window

The **Statics** window is available from the **View** menu.

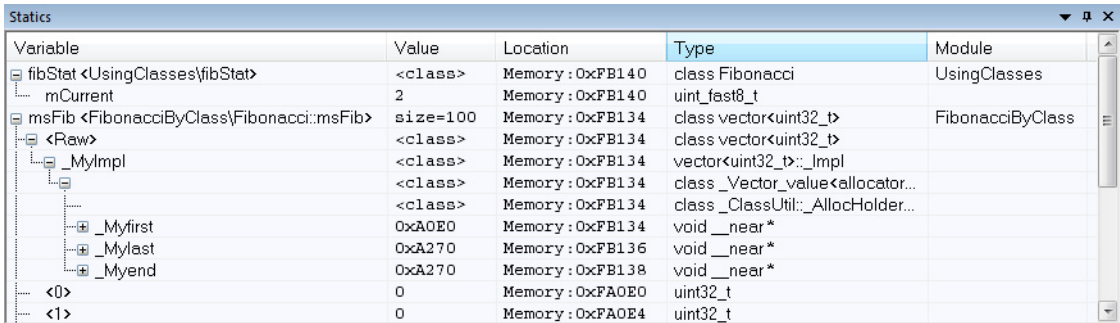

Variable	Value	Location	Type	Module
fibStat <UsingClasses\fibStat>	<class>	Memory : 0xFB140	class Fibonacci	UsingClasses
mCurrent	2	Memory : 0xFB140	uint_fast8_t	
msFib <FibonacciByClass\Fibonacci::msFib>	size=100	Memory : 0xFB134	class vector<uint32_t>	FibonacciByClass
<Raw>	<class>	Memory : 0xFB134	class vector<uint32_t>	
MyImpl	<class>	Memory : 0xFB134	vector<uint32_t>::Impl	
	<class>	Memory : 0xFB134	class _Vector_value<allocator...	
	<class>	Memory : 0xFB134	class _ClassUtil::_AllocHolder...	
Myfirst	0xA0E0	Memory : 0xFB134	void __near*	
Mylast	0xA270	Memory : 0xFB136	void __near*	
Myend	0xA270	Memory : 0xFB138	void __near*	
<0>	0	Memory : 0xFA0E0	uint32_t	
<1>	0	Memory : 0xFA0E4	uint32_t	

This window displays the values of variables with static storage duration that you have selected. Typically, that is variables with file scope but it can also be static variables in functions and classes. Note that `volatile` declared variables with static storage duration will not be displayed.

Every time execution in C-SPY stops, the values in the **Statics** window are recalculated. Values that have changed since the last stop are highlighted in red.

Click any column header (except for **Value**) to sort on that column.

See also *Editing in C-SPY windows*, page 48.

To select variables to monitor:

- 1 In the window, right-click and choose **Select Statics** from the context menu. The window now lists all variables with static storage duration.
- 2 Either individually select the variables you want to display, or choose one of the **Select** commands from the context menu.
- 3 When you have made your selections, choose **Select Statics** from the context menu to toggle back to normal display mode.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area contains these columns:

Variable

The name of the variable. The base name of the variable is followed by the full name, which includes module, class, or function scope. This column is not editable.

Value

The value of the variable. Values that have changed are highlighted in red.

Dragging text or a variable from another window and dropping it on the **Value** column will assign a new value to the variable in that row.

This column is editable.

Location

The location in memory where this variable is stored.

Type


The data type of the variable.

Module

The module of the variable.

Context menu

This context menu is available:

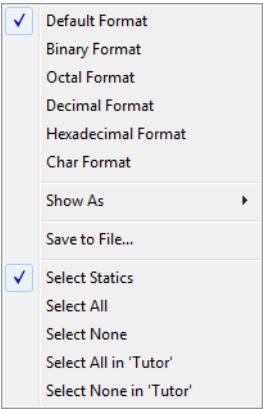

These commands are available:

- Default Format
- Binary Format
- Octal Format
- Decimal Format
- Hexadecimal Format
- Char Format

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:

Variables	The display setting affects only the selected variable, not other variables.
Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.
Structure fields	All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Show As

Displays a submenu that provides commands for changing the default type interpretation of variables. The commands on this submenu are mainly useful for assembler variables—data at assembler labels—because these are, by default, displayed as integers. For more information, see *Viewing assembler variables*, page 84.

Save to File

Saves the content of the **Statics** window to a log file.

Select Statics

Selects all variables with static storage duration; this command also enables all **Select** commands below. Select the variables you want to monitor. When you have made your selections, select this menu command again to toggle back to normal display mode.

Select All

Selects all variables.

Select None

Deselects all variables.

Select All in *module*


Selects all variables in the selected module.

Select None in *module*

Deselects all variables in the selected module.

Quick Watch window

The **Quick Watch** window is available from the **View** menu and from the context menu in the editor window.

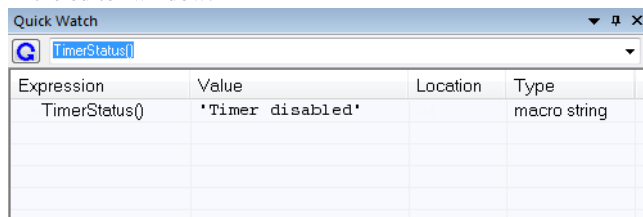


Use this window to watch the value of a variable or expression and evaluate expressions at a specific point in time.

In contrast to the **Watch** window, the **Quick Watch** window gives you precise control over when to evaluate the expression. For single variables this might not be necessary,

but for expressions with possible side effects, such as assignments and C-SPY macro functions, it allows you to perform evaluations under controlled conditions.

See also *Editing in C-SPY windows*, page 48.

To evaluate an expression:

- 1** In the editor window, right-click on the expression you want to examine and choose **Quick Watch** from the context menu that appears.
 - 2** The expression will automatically appear in the **Quick Watch** window.
- Alternatively:
- 3** In the **Quick Watch** window, type the expression you want to examine in the **Expressions** text box.
 -  **4** Click the **Recalculate** button to calculate the value of the expression.


For an example, see *Using C-SPY macros*, page 255.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Context menu

This context menu is available:

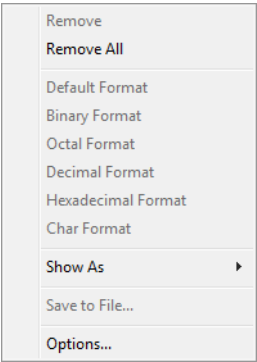

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Remove

Removes the selected expression from the window.

Remove All

Removes all expressions listed in the window.

Default Format**Binary Format****Octal Format****Decimal Format****Hexadecimal Format****Char Format**

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:

Variables	The display setting affects only the selected variable, not other variables.
Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.
Structure fields	All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Show As

Displays a submenu that provides commands for changing the default type interpretation of variables. The commands on this submenu are mainly useful for assembler variables—data at assembler labels—because these are, by default, displayed as integers. For more information, see *Viewing assembler variables*, page 84.

Save to File


Saves content to a file in a tab-separated format.

Options

Displays the **IDE Options** dialog box where you can set various options for C-SPY windows.

Symbols window

The **Symbols** window is available from the **View** menu.

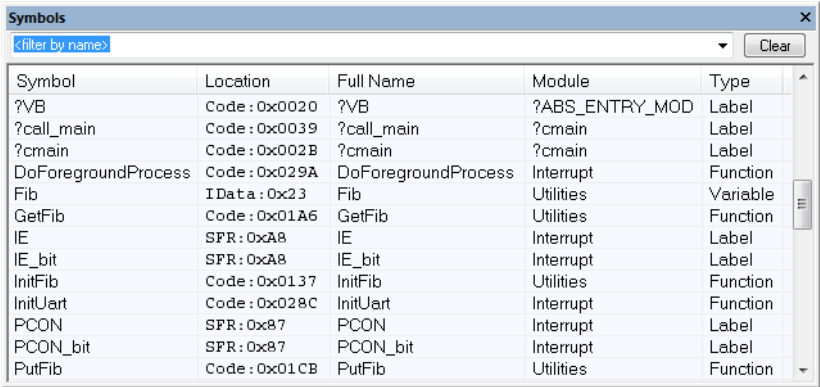

Symbol	Location	Full Name	Module	Type
?VB	Code : 0x0020	?VB	?ABS_ENTRY_MOD	Label
?call_main	Code : 0x0039	?call_main	?cmain	Label
?cmain	Code : 0x002B	?cmain	?cmain	Label
DoForegroundProcess	Code : 0x029A	DoForegroundProcess	Interrupt	Function
Fib	IData : 0x23	Fib	Utilities	Variable
GetFib	Code : 0x01A6	GetFib	Utilities	Function
IE	SFR : 0xA8	IE	Interrupt	Label
IE_bit	SFR : 0xA8	IE_bit	Interrupt	Label
InitFib	Code : 0x0137	InitFib	Utilities	Function
InitUart	Code : 0x028C	InitUart	Interrupt	Function
PCON	SFR : 0x87	PCON	Interrupt	Label
PCON_bit	SFR : 0x87	PCON_bit	Interrupt	Label
PutFib	Code : 0x01CB	PutFib	Utilities	Function

This window displays all symbols with a static location, that is, C/C++ functions, assembler labels, and variables with static storage duration, including symbols from the runtime library.

You can drag the contents of cells in the **Symbol**, **Location**, and **Full Name** columns and drop in some other windows in the IDE.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Toolbar

The toolbar contains:

<filter by name>

Type the first characters of the symbol names that you want to find, and press Enter. All symbols (of the types you have selected on the context menu) whose name starts with these characters will be displayed. If you have chosen not to display some types of symbols, the window will list how many of those that were found but are not displayed.

Use the drop-down list to use old search strings. The search box has a history depth of eight search entries.

Clear

Cancels the effects of the search filter and restores all symbols in the window.

Display area

This area contains these columns:

Symbol

The symbol name.

Location

The memory address.

Full name

The symbol name; often the same as the contents of the **Symbol** column but differs for example for C++ member functions.

Module

The program module where the symbol is defined.


Type

The symbol type, whether it is a function, label, or variable.

Click the column headers to sort the list by symbol name, location, full name, module, or type.

Context menu

This context menu is available:

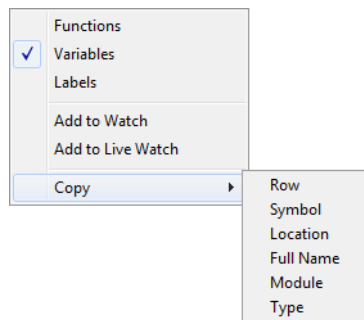

These commands are available:

Functions

Toggles the display of function symbols on or off in the list.

Variables

Toggles the display of variables on or off in the list.

Labels

Toggles the display of labels on or off in the list.

Add to Watch

Adds the selected symbol to the **Watch** window.

Add to Live Watch

Adds the selected symbol to the **Live Watch** window.


Copy

Copies the contents of the cells on the selected line.

Row	Copies all contents of the selected line
Symbol	Copies the contents of the Symbol cell on the selected line
Location	Copies the contents of the Location cell on the selected line
Full Name	Copies the contents of the Full Name cell on the selected line
Module	Copies the contents of the Module cell on the selected line
Type	Copies the contents of the Type cell on the selected line

Resolve Symbol Ambiguity dialog box

The **Resolve Symbol Ambiguity** dialog box appears, for example, when you specify a symbol in the **Disassembly** window to go to, and there are several instances of the same symbol due to templates or function overloading.

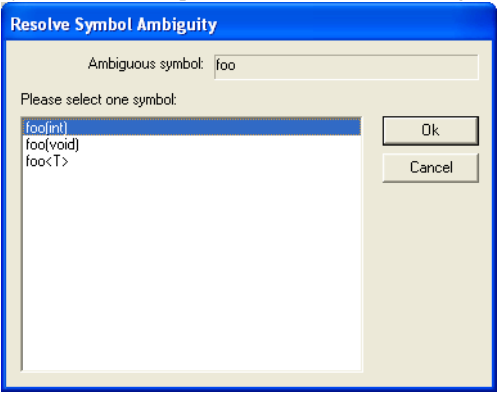

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Ambiguous symbol

Indicates which symbol that is ambiguous.

Please select one symbol

A list of possible matches for the ambiguous symbol. Select the one you want to use.

Breakpoints

- Introduction to setting and using breakpoints
- Setting breakpoints
- Reference information on breakpoints

Introduction to setting and using breakpoints

These topics are covered:

- Reasons for using breakpoints
- Briefly about setting breakpoints
- Breakpoint types
- Breakpoint icons
- Breakpoints in the C-SPY simulator
- Breakpoints in the C-SPY hardware debugger drivers
- Breakpoint consumers

REASONS FOR USING BREAKPOINTS

C-SPY® lets you set various types of breakpoints in the application you are debugging, allowing you to stop at locations of particular interest. You can set a breakpoint at a *code* location to investigate whether your program logic is correct, or to get trace printouts. In addition to code breakpoints, and depending on what C-SPY driver you are using, additional breakpoint types might be available. For example, you might be able to set a *data* breakpoint, to investigate how and when the data changes.

You can let the execution stop under certain *conditions*, which you specify. You can also let the breakpoint trigger a *side effect*, for instance executing a C-SPY macro function, by transparently stopping the execution and then resuming. The macro function can be defined to perform a wide variety of actions, for instance, simulating hardware behavior.

All these possibilities provide you with a flexible tool for investigating the status of your application.

BRIEFLY ABOUT SETTING BREAKPOINTS

You can set breakpoints in many various ways, allowing for different levels of interaction, precision, timing, and automation. All the breakpoints you define will

appear in the **Breakpoints** window. From this window you can conveniently view all breakpoints, enable and disable breakpoints, and open a dialog box for defining new breakpoints. The **Breakpoint Usage** window also lists all internally used breakpoints, see *Breakpoint consumers*, page 110.

Breakpoints are set with a higher precision than single lines, using the same mechanism as when stepping. For more information about the precision, see *Single stepping*, page 58.

You can set breakpoints while you edit your code even if no debug session is active. The breakpoints will then be validated when the debug session starts. Breakpoints are preserved between debug sessions.

Note: For most hardware debugger systems it is only possible to set breakpoints when the application is not executing.

BREAKPOINT TYPES

Depending on the C-SPY driver you are using, C-SPY supports different types of breakpoints.

Code breakpoints

Code breakpoints are used for code locations to investigate whether your program logic is correct or to get trace printouts. Code breakpoints are triggered when an instruction is fetched from the specified location. If you have set the breakpoint on a specific machine instruction, the breakpoint will be triggered and the execution will stop, before the instruction is executed.

Log breakpoints

Log breakpoints provide a convenient way to add trace printouts without having to add any code to your application source code. Log breakpoints are triggered when an instruction is fetched from the specified location. If you have set the breakpoint on a specific machine instruction, the breakpoint will be triggered and the execution will temporarily stop and print the specified message in the C-SPY **Debug Log** window.

Trace Start and Stop breakpoints

Trace Start and Stop breakpoints start and stop trace data collection—a convenient way to analyze instructions between two execution points.

Data breakpoints

Data breakpoints are primarily useful for variables that have a fixed address in memory. If you set a breakpoint on an accessible local variable, the breakpoint is set on the corresponding memory location. The validity of this location is only guaranteed for

small parts of the code. Data breakpoints are triggered when data is accessed at the specified location. The execution will usually stop directly after the instruction that accessed the data has been executed.

Data Log breakpoints

Data log breakpoints are triggered when a specified memory address is accessed. A log entry is written in the **Data Log** window for each access. Data logs can also be displayed on the Data Log graph in the **Timeline** window, if that window is enabled.

You can set data log breakpoints using the **Breakpoints** window, the **Memory** window, and the editor window.

Using a single instruction, the microcontroller can only access values that are one byte. If you specify a data log breakpoint on a memory location that cannot be accessed by one instruction, for example a `double` or a too large area in the **Memory** window, the result might not be what you intended.


Immediate breakpoints

The C-SPY Simulator lets you set *immediate* breakpoints, which will halt instruction execution only temporarily. This allows a C-SPY macro function to be called when the simulated processor is about to read data from a location or immediately after it has written data. Instruction execution will resume after the action.

This type of breakpoint is useful for simulating memory-mapped devices of various kinds (for instance serial ports and timers). When the simulated processor reads from a memory-mapped location, a C-SPY macro function can intervene and supply appropriate data. Conversely, when the simulated processor writes to a memory-mapped location, a C-SPY macro function can act on the value that was written.

BREAKPOINT ICONS

A breakpoint is marked with an icon in the left margin of the editor window, and the icon varies with the type of breakpoint:

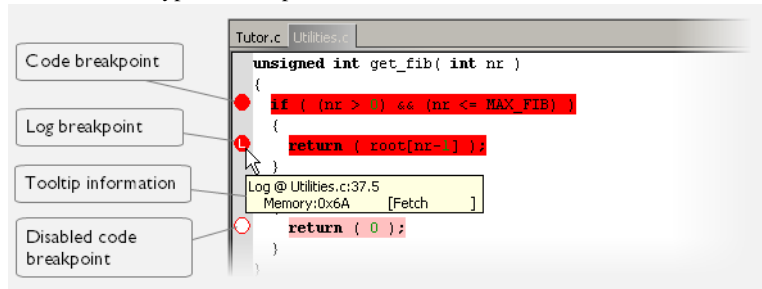

If the breakpoint icon does not appear, make sure the option **Show bookmarks** is selected, see Editor options in the *IDE Project Management and Building Guide for 8051*.



Just point at the breakpoint icon with the mouse pointer to get detailed tooltip information about all breakpoints set on the same location. The first row gives user breakpoint information, the following rows describe the physical breakpoints used for implementing the user breakpoint. The latter information can also be seen in the **Breakpoint Usage** window.

Note: The breakpoint icons might look different for the C-SPY driver you are using.

BREAKPOINTS IN THE C-SPY SIMULATOR

The C-SPY simulator supports all breakpoint types. The number of breakpoints is unlimited.

BREAKPOINTS IN THE C-SPY HARDWARE DEBUGGER DRIVERS

Using the C-SPY drivers for hardware debugger systems you can set various breakpoint types. The amount of breakpoints you can set depends on the number of *hardware breakpoints* available on the target system or—if the driver and the device support them—whether you have enabled *software breakpoints*, in which case the number of breakpoints you can set is unlimited.

A software breakpoint instruction temporarily replaces the application code with an instruction that hands the execution over to the driver. There are several ways of doing this, for example:

- Inserting an `LCALL #monitor` instruction, if you are using the IAR ROM-monitor
- Using an exception operation code, for example `0xA5`, to halt the execution.

This table summarizes the characteristics of breakpoints for the different target systems:

C-SPY hardware debugger driver	Code and Log breakpoints	Data breakpoints
Texas Instruments		
using 4 hardware breakpoints*	4	—
FS2 System Navigator		
using 2 hardware breakpoints*	2	2
using software breakpoints†	Unlimited	—
Infineon		
using 4 hardware breakpoints	4	4
using software breakpoints	Unlimited	—
Segger J-Link		
using 4 hardware breakpoints*	4	—
Nordic Semiconductor		
using 2 hardware breakpoints*	2	2
Nuvoton Nu-Link		
using 8 hardware breakpoints*	8	—
ROM-monitor – depends on the device		
Analog Devices		
using software breakpoints	Unlimited	—
Silicon Labs		
using 4 hardware breakpoints	4	4

Table 6: Available breakpoints in C-SPY hardware debugger drivers

* The number of available hardware breakpoints depends on the target system you are using.

If the driver and the device support software breakpoints and they are enabled, the debugger will first use any available hardware breakpoints before using software breakpoints. Exceeding the number of available hardware breakpoints, when software breakpoints are not enabled, causes the debugger to single step. This will significantly reduce the execution speed. For this reason you must be aware of the different breakpoint consumers.

Padding for safe insertion of breakpoint instruction(s)

When using the `LCALL` instruction as a code breakpoint, for example as in the IAR C-SPY ROM-monitor, padding with extra memory space might be needed to avoid overwriting application memory. In an assembler program this padding must be done

manually. In C programs you can use the compiler option `--rom_mon_bp_padding`. See the *IAR C/C++ Compiler User Guide for 8051* for reference information about this option.

To set the equivalent option in the IAR Embedded Workbench IDE, choose **Project>Options>C/C++ Compiler>Code>Padding for ROM-monitor breakpoints**.

Using this option makes it possible to set a breakpoint on every C statement.

Breakpoints in flash memory

When you set a software breakpoint in flash memory, the driver must flash the page(s) containing the breakpoint instruction byte(s) once.

If you set a conditional breakpoint, the driver must flash the page(s) every time the breakpoint is evaluated to check if the condition is met.

Every step you take at C level forces the driver to temporarily set breakpoints on each possible endup statement.

Note: The Analog Devices driver will cache breakpoints, and it will not flash the page until the execution has started.

BREAKPOINT CONSUMERS

A debugger system includes several consumers of breakpoints.

User breakpoints

The breakpoints you define in the breakpoint dialog box or by toggling breakpoints in the editor window often consume one physical breakpoint each, but this can vary greatly. Some user breakpoints consume several physical breakpoints and conversely, several user breakpoints can share one physical breakpoint. User breakpoints are displayed in the same way both in the **Breakpoint Usage** window and in the **Breakpoints** window, for example **Data @[R] callCount**.

C-SPY itself

C-SPY itself also consumes breakpoints. C-SPY will set a breakpoint if:

- The debugger option **Run to** has been selected, and any step command is used. These are temporary breakpoints which are only set during a debug session. This means that they are not visible in the **Breakpoints** window.
- The linker option **With I/O emulation modules** has been selected.

In the DLIB runtime environment, C-SPY will set a system breakpoint on the `__DebugBreak` label.

In the CLIB runtime environment, C-SPY will set a breakpoint if:

- the library functions `putchar` and `getchar` are used (low-level routines used by functions like `printf` and `scanf`)
- the application has an `exit` label.

You can disable the setting of system breakpoints on the `putchar` and `getchar` functions and on the `exit` label, see *Exclude system breakpoints on*, page 365.

These types of breakpoint consumers are displayed in the **Breakpoint Usage** window, for example, **C-SPY Terminal I/O & libsupport module**.

C-SPY plugin modules

For example, modules for real-time operating systems can consume additional breakpoints. Specifically, by default, the **Stack** window consumes one physical breakpoint.

To disable the breakpoint used by the Stack window:

- 1 Choose **Tools>Options>Stack**.
- 2 Deselect the **Stack pointer(s) not valid until program reaches: *label*** option.

To disable the **Stack** window entirely, choose **Tools>Options>Stack** and make sure all options are deselected.

Setting breakpoints

These tasks are covered:

- Various ways to set a breakpoint
- Toggling a simple code breakpoint
- Setting breakpoints using the dialog box
- Setting a data breakpoint in the Memory window
- Setting breakpoints using system macros
- Useful breakpoint hints

VARIOUS WAYS TO SET A BREAKPOINT

You can set a breakpoint in various ways:

- Toggling a simple code breakpoint.
- Using the **New Breakpoints** dialog box and the **Edit Breakpoints** dialog box available from the context menus in the editor window, **Breakpoints** window, and

in the **Disassembly** window. The dialog boxes give you access to all breakpoint options.

- Setting a data breakpoint on a memory area directly in the **Memory** window.
- Using predefined system macros for setting breakpoints, which allows automation.

The different methods offer different levels of simplicity, complexity, and automation.

TOGGLING A SIMPLE CODE BREAKPOINT

Toggling a code breakpoint is a quick method of setting a breakpoint. The following methods are available both in the editor window and in the **Disassembly** window:



- Click in the gray left-side margin of the window
- Place the insertion point in the C source statement or assembler instruction where you want the breakpoint, and click the **Toggle Breakpoint** button in the toolbar
- Choose **Edit>Toggle Breakpoint**
- Right-click and choose **Toggle Breakpoint** from the context menu.

SETTING BREAKPOINTS USING THE DIALOG BOX

The advantage of using a breakpoint dialog box is that it provides you with a graphical interface where you can interactively fine-tune the characteristics of the breakpoints. You can set the options and quickly test whether the breakpoint works according to your intentions.

All breakpoints you define using a breakpoint dialog box are preserved between debug sessions.

You can open the dialog box from the context menu available in the editor window, **Breakpoints** window, and in the **Disassembly** window.


To set a new breakpoint:

- 1 Choose **View>Breakpoints** to open the **Breakpoints** window.
- 2 In the **Breakpoints** window, right-click, and choose **New Breakpoint** from the context menu.
- 3 On the submenu, choose the breakpoint type you want to set. Depending on the C-SPY driver you are using, different breakpoint types are available.
- 4 In the breakpoint dialog box that appears, specify the breakpoint settings and click **OK**.

The breakpoint is displayed in the **Breakpoints** window.

To modify an existing breakpoint:

- 1 In the **Breakpoints** window, editor window, or in the **Disassembly** window, select the breakpoint you want to modify and right-click to open the context menu.

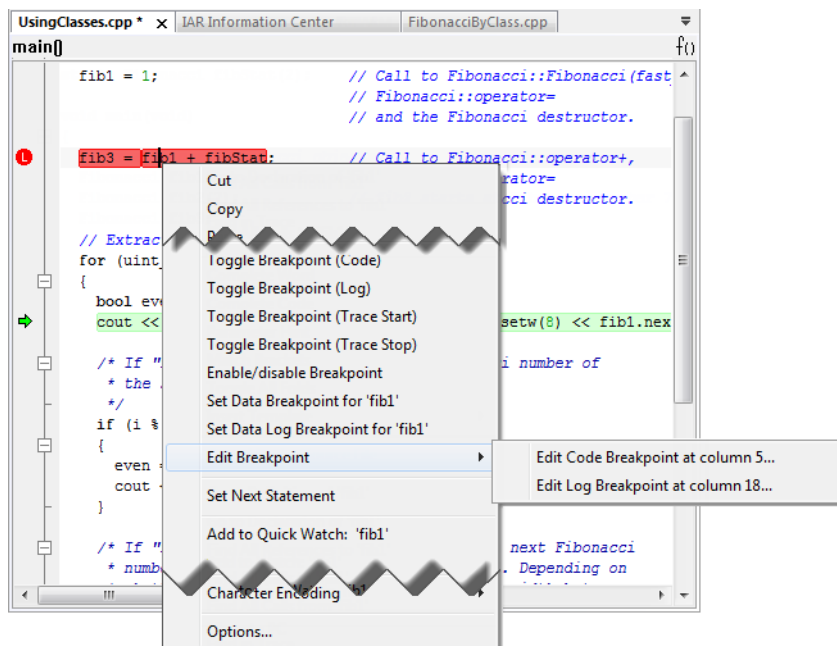

If there are several breakpoints on the same source code line, the breakpoints will be listed on a submenu.

- 2 On the context menu, choose the appropriate command.
- 3 In the breakpoint dialog box that appears, specify the breakpoint settings and click **OK**.

The breakpoint is displayed in the **Breakpoints** window.

SETTING A DATA BREAKPOINT IN THE MEMORY WINDOW

You can set breakpoints directly on a memory location in the **Memory** window. Right-click in the window and choose the breakpoint command from the context menu that appears. To set the breakpoint on a range, select a portion of the memory contents.

The breakpoint is not highlighted in the **Memory** window; instead, you can see, edit, and remove it using the **Breakpoints** window, which is available from the **View** menu. The breakpoints you set in the **Memory** window will be triggered for both read and

write accesses. All breakpoints defined in this window are preserved between debug sessions.

Note: Setting breakpoints directly in the **Memory** window is only possible if the driver you use supports this.

SETTING BREAKPOINTS USING SYSTEM MACROS

You can set breakpoints not only in the breakpoint dialog box but also by using built-in C-SPY system macros. When you use system macros for setting breakpoints, the breakpoint characteristics are specified as macro parameters.

Macros are useful when you have already specified your breakpoints so that they fully meet your requirements. You can define your breakpoints in a macro file, using built-in system macros, and execute the file at C-SPY startup. The breakpoints will then be set automatically each time you start C-SPY. Another advantage is that the debug session will be documented, and that several engineers involved in the development project can share the macro files.

Note: If you use system macros for setting breakpoints, you can still view and modify them in the **Breakpoints** window. In contrast to using the dialog box for defining breakpoints, all breakpoints that are defined using system macros are removed when you exit the debug session.

These breakpoint macros are available:

C-SPY macro for breakpoints	Simulator	TI / Nordic Semi /	FS2 / Infineon	Nu-Link
		Analog Devices / Segger J-Link	/ROM-monitor / Silicon Labs	
__setCodeBreak	Yes	Yes	Yes	Yes
__setDataBreak	Yes	—	Yes	—
__setLogBreak	Yes	Yes	Yes	—
__setSimBreak	Yes	—	—	—
__setTraceStartBreak	Yes	—	—	—
__setTraceStopBreak	Yes	—	—	—
__clearBreak	Yes	Yes	Yes	Yes

Table 7: C-SPY macros for breakpoints

For information about each breakpoint macro, see *Reference information on C-SPY system macros*, page 268.

Setting breakpoints at C-SPY startup using a setup macro file

You can use a setup macro file to define breakpoints at C-SPY startup. Follow the procedure described in *Using C-SPY macros*, page 255.

USEFUL BREAKPOINT HINTS

Below are some useful hints related to setting breakpoints.



Tracing incorrect function arguments

If a function with a pointer argument is sometimes incorrectly called with a `NULL` argument, you might want to debug that behavior. These methods can be useful:

- Set a breakpoint on the first line of the function with a condition that is true only when the parameter is 0. The breakpoint will then not be triggered until the problematic situation actually occurs. The advantage of this method is that no extra source code is needed. The drawback is that the execution speed might become unacceptably low.
- You can use the `assert` macro in your problematic function, for example:

```
int MyFunction(int * MyPtr)
{
    assert(MyPtr != 0); /* Assert macro added to your source
                        code. */

    /* Here comes the rest of your function. */
}
```

The execution will break whenever the condition is true. The advantage is that the execution speed is only slightly affected, but the drawback is that you will get a small extra footprint in your source code. In addition, the only way to get rid of the execution stop is to remove the macro and rebuild your source code.

- Instead of using the `assert` macro, you can modify your function like this:

```
int MyFunction(int * MyPtr)
{
    if(MyPtr == 0)
        MyDummyStatement; /* Dummy statement where you set a
                           breakpoint. */

    /* Here comes the rest of your function. */
}
```

You must also set a breakpoint on the extra dummy statement, so that the execution will break whenever the condition is true. The advantage is that the execution speed is only very slightly affected, but the drawback is that you will still get a small extra footprint in your source code. However, in this way you can get rid of the execution stop by just removing the breakpoint.



Performing a task and continuing execution

You can perform a task when a breakpoint is triggered and then automatically continue execution.

You can use the **Action** text box to associate an action with the breakpoint, for instance a C-SPY macro function. When the breakpoint is triggered and the execution of your application has stopped, the macro function will be executed. In this case, the execution will not continue automatically.

Instead, you can set a condition which returns 0 (false). When the breakpoint is triggered, the condition—which can be a call to a C-SPY macro that performs a task—is evaluated and because it is not true, execution continues.

Consider this example where the C-SPY macro function performs a simple task:

```
__var my_counter;

count ()
{
    my_counter += 1;
    return 0;
}
```

To use this function as a condition for the breakpoint, type `count ()` in the **Expression** text box under **Conditions**. The task will then be performed when the breakpoint is triggered. Because the macro function `count` returns 0, the condition is false and the execution of the program will resume automatically, without any stop.

Reference information on breakpoints

Reference information about:


- *Breakpoints window*, page 117
- *Breakpoint Usage window*, page 119
- *Code breakpoints dialog box*, page 120
- *Log breakpoints dialog box*, page 121
- *Range breakpoints dialog box*, page 123
- *Data breakpoints dialog box*, page 124
- *Data Log breakpoints dialog box*, page 126
- *Immediate breakpoints dialog box*, page 127
- *Enter Location dialog box*, page 128
- *Resolve Source Ambiguity dialog box*, page 130

See also:

- *Reference information on C-SPY system macros*, page 268
- *Reference information on trace*, page 178

Breakpoints window

The **Breakpoints** window is available from the **View** menu.

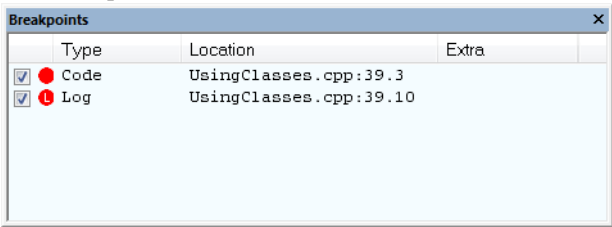

This window lists all breakpoints you define.

Use this window to conveniently monitor, enable, and disable breakpoints; you can also define new breakpoints and modify existing breakpoints.

Requirements


Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area lists all breakpoints you define. For each breakpoint, information about the breakpoint type, source file, source line, and source column is provided.

Context menu

This context menu is available:

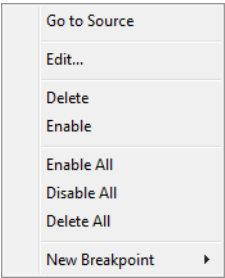

These commands are available:

Go to Source

Moves the insertion point to the location of the breakpoint, if the breakpoint has a source location. Double-click a breakpoint in the **Breakpoints** window to perform the same command.

Edit

Opens the breakpoint dialog box for the breakpoint you selected.

Delete

Deletes the breakpoint. Press the Delete key to perform the same command.

Enable

Enables the breakpoint. The check box at the beginning of the line will be selected. You can also perform the command by manually selecting the check box. This command is only available if the breakpoint is disabled.

Disable

Disables the breakpoint. The check box at the beginning of the line will be deselected. You can also perform this command by manually deselecting the check box. This command is only available if the breakpoint is enabled.

Enable All

Enables all defined breakpoints.

Disable All

Disables all defined breakpoints.

Delete All


Deletes all defined breakpoints.

New Breakpoint

Displays a submenu where you can open the breakpoint dialog box for the available breakpoint types. All breakpoints you define using this dialog box are preserved between debug sessions.

Breakpoint Usage window

The **Breakpoint Usage** window is available from the menu specific to the C-SPY driver you are using.

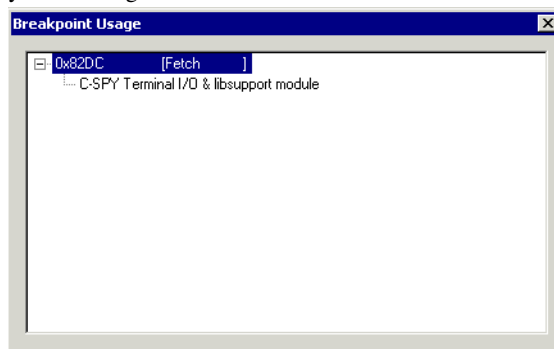

This window lists all breakpoints currently set in the target system, both the ones you have defined and the ones used internally by C-SPY. The format of the items in this window depends on the C-SPY driver you are using.

The window gives a low-level view of all breakpoints, related but not identical to the list of breakpoints displayed in this window.

C-SPY uses breakpoints when stepping. If your target system has a limited number of hardware breakpoints and software breakpoints are not enabled, exceeding the number of available hardware breakpoints will cause the debugger to single step. This will significantly reduce the execution speed. Therefore, in a debugger system with a limited amount of hardware breakpoints, you can use the Breakpoint Usage window for:

- Identifying all breakpoint consumers
- Checking that the number of active breakpoints is supported by the target system
- Configuring the debugger to use the available breakpoints in a better way, if possible.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

For each breakpoint in the list, the address and access type are displayed. Each breakpoint in the list can also be expanded to show its originator.

Code breakpoints dialog box

The **Code** breakpoints dialog box is available from the context menu in the editor window, **Breakpoints** window, and in the **Disassembly** window.

The dialog box is titled "Code" with a red dot icon. It contains the following fields and controls:

- Break at:** A text box for specifying the breakpoint location, with an "Edit..." button to its right.
- Size:** Radio buttons for "Auto" (selected) and "Manual". A text box next to "Manual" contains the value "0".
- Action:** A section with an "Expression:" text box.
- Conditions:** A section with an "Expression:" text box.
- Condition true:** A radio button (selected).
- Condition changed:** A radio button.
- Skip count:** A text box containing the value "0".

This figure reflects the C-SPY simulator.

Use the **Code** breakpoints dialog box to set a code breakpoint, see *Setting breakpoints using the dialog box*, page 112.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Break At

Specify the code location of the breakpoint in the text box. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Size

Determines whether there should be a size—in practice, a range—of locations where the breakpoint will trigger. Each fetch access to the specified memory range will trigger the breakpoint. Select how to specify the size:

Auto

The size will be set automatically, typically to 1.

Manual

Specify the size of the breakpoint range in the text box.

Action

Specify a valid C-SPY expression, which is evaluated when the breakpoint is triggered and the condition is true. For more information, see *Useful breakpoint hints*, page 115.

Conditions

Specify simple or complex conditions:

Expression

Specify a valid C-SPY expression, see *C-SPY expressions*, page 80.

Condition true

The breakpoint is triggered if the value of the expression is true.

Condition changed

The breakpoint is triggered if the value of the expression has changed since it was last evaluated.

Skip count

The number of times that the breakpoint condition must be fulfilled before the breakpoint starts triggering. After that, the breakpoint will trigger every time the condition is fulfilled.

Log breakpoints dialog box

The **Log** breakpoints dialog box is available from the context menu in the editor window, **Breakpoints** window, and in the **Disassembly** window.

The screenshot shows the 'Log' breakpoints dialog box. It has a title bar with a red 'L' icon and the text 'Log'. Inside the dialog, there is a 'Trigger at:' label followed by a text input field and an 'Edit...' button. Below this is a 'Message:' label followed by a checkbox labeled 'C-Spy macro "__message" style' and another text input field. At the bottom, there is a 'Conditions' section containing an 'Expression:' label and a text input field. Below the expression field are two radio buttons: 'Condition true' (which is selected) and 'Condition changed'.

This figure reflects the C-SPY simulator.

Use the **Log** breakpoints dialog box to set a log breakpoint, see *Setting breakpoints using the dialog box*, page 112.

Requirements

One of these alternatives:

- The C-SPY Texas Instruments driver
- The C-SPY FS2 System Navigator driver
- The C-SPY Infineon driver
- The C-SPY ROM-monitor driver
- The C-SPY Analog Devices driver
- The C-SPY Silicon Labs driver
- The C-SPY Segger J-Link driver
- The C-SPY simulator.

Trigger at

Specify the code location of the breakpoint. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Message

Specify the message you want to be displayed in the C-SPY **Debug Log** window. The message can either be plain text, or—if you also select the option **C-SPY macro** "**__message**" style—a comma-separated list of arguments.

C-SPY macro "**__message**" style

Select this option to make a comma-separated list of arguments specified in the **Message** text box be treated exactly as the arguments to the C-SPY macro language statement `__message`, see *Formatted output*, page 263.

Conditions

Specify simple or complex conditions:

Expression

Specify a valid C-SPY expression, see *C-SPY expressions*, page 80.

Condition true


The breakpoint is triggered if the value of the expression is true.

Condition changed

The breakpoint is triggered if the value of the expression has changed since it was last evaluated.

Range breakpoints dialog box

The **Range** breakpoints dialog box is available from the context menu in the editor window, Breakpoints window, the Memory window, and in the Disassembly window.

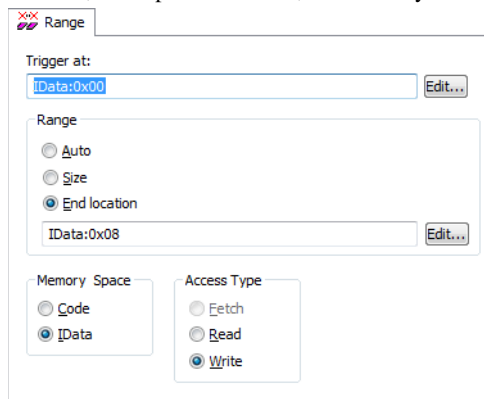

Use the **Range** breakpoints dialog box to set a breakpoint for a range, either in code or data memory.

Requirements

The C-SPY Infineon driver.

Trigger at

Specify the location of the breakpoint. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Range

Specify the range of memory where an access triggers the breakpoint:

Auto

Automatically calculates the range based on the type of the object where the breakpoint is set.

Size

Specify a size of the range in the text field.

End location

Specify the end location of the of the range in the text field. Alternatively, click the **Edit** button to display the **Enter Location** dialog box where you can specify the end location.

Memory Space

Specify the memory space for the breakpoint:

Code

The breakpoint will be set in the code memory space.

Idata

The breakpoint will be set in the Idata memory space.

Access Type

Selects the type of memory access that triggers the range breakpoint:

Fetch

Fetches from code memory.

Read

Reads from location.

Write

Writes to location.

Data breakpoints dialog box

The **Data** breakpoints dialog box is available from the context menu in the editor window, **Breakpoints** window, the **Memory** window, and in the **Disassembly** window.

This figure reflects the C-SPY simulator.

Use the **Data** breakpoints dialog box to set a data breakpoint, see *Setting breakpoints using the dialog box*, page 112. Data breakpoints never stop execution within a single instruction. They are recorded and reported after the instruction is executed.

Requirements

One of these alternatives:

- The C-SPY FS2 System Navigator driver
- The C-SPY Infineon driver
- The C-SPY ROM-monitor driver
- The C-SPY simulator.

Break At

Specify the data location of the breakpoint in the text box. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Access Type

Selects the type of memory access that triggers the breakpoint:

Read/Write

Reads from or writes to location.

Read

Reads from location.

Write

Writes to location.

Size

Determines whether there should be a size—in practice, a range—of locations where the breakpoint will trigger. Each fetch access to the specified memory range will trigger the breakpoint. Select how to specify the size:

Auto

The size will automatically be based on the type of expression the breakpoint is set on. For example, if you set the breakpoint on a 12-byte structure, the size of the breakpoint will be 12 bytes.

Manual

Specify the size of the breakpoint range in the text box.

For data breakpoints, this can be useful if you want the breakpoint to be triggered on accesses to data structures, such as arrays, structs, and unions.

Action

Specify a valid C-SPY expression, which is evaluated when the breakpoint is triggered and the condition is true. For more information, see *Useful breakpoint hints*, page 115.

Conditions

Specify simple or complex conditions:

Expression

Specify a valid C-SPY expression, see *C-SPY expressions*, page 80.

Condition true

The breakpoint is triggered if the value of the expression is true.

Condition changed


The breakpoint is triggered if the value of the expression has changed since it was last evaluated.

Skip count

The number of times that the breakpoint condition must be fulfilled before the breakpoint starts triggering. After that, the breakpoint will trigger every time the condition is fulfilled.

Data Log breakpoints dialog box

The **Data Log** breakpoints dialog box is available from the context menu in the **Breakpoints** window.

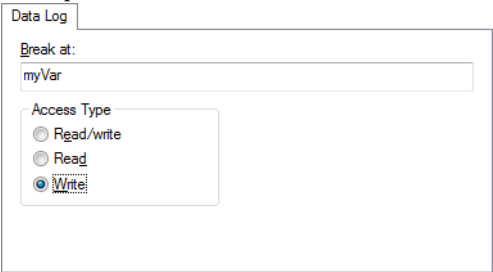

Use the **Data Log** breakpoints dialog box to set a maximum of four data log breakpoints on memory addresses, see *Setting breakpoints using the dialog box*, page 112.

See also *Data Log breakpoints*, page 107 and *Getting started using data logging*, page 193.

Requirements

The C-SPY simulator

Break At

Specify a memory location as a variable (with static storage duration) or as an address.

Access Type

Selects the type of access to the variable that generates a log entry:

Read/Write

Read and write accesses from or writes to location of the variable.

Read


Read accesses from the location of the variable.

Write

Write accesses to location of the variable.

Immediate breakpoints dialog box

The **Immediate** breakpoints dialog box is available from the context menu in the editor window, **Breakpoints** window, the **Memory** window, and in the **Disassembly** window.

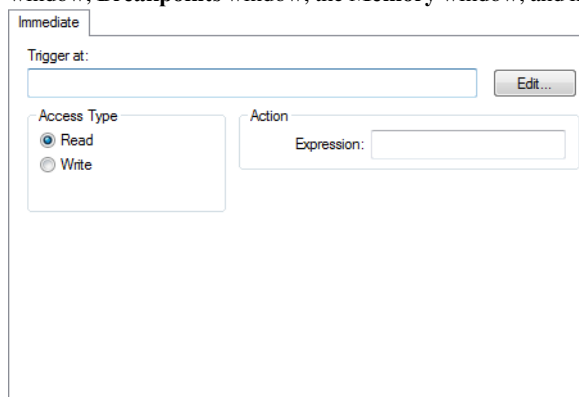

In the C-SPY simulator, you can use the **Immediate** breakpoints dialog box to set an immediate breakpoint, see *Setting breakpoints using the dialog box*, page 112.

Immediate breakpoints do not stop execution at all; they only suspend it temporarily.

Requirements

The C-SPY simulator.

Trigger at

Specify the data location of the breakpoint. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Access Type

Selects the type of memory access that triggers the breakpoint:

Read

Reads from location.

Write


Writes to location.

Action

Specify a valid C-SPY expression, which is evaluated when the breakpoint is triggered and the condition is true. For more information, see *Useful breakpoint hints*, page 115.

Enter Location dialog box

The **Enter Location** dialog box is available from the breakpoints dialog box, either when you set a new breakpoint or when you edit a breakpoint.

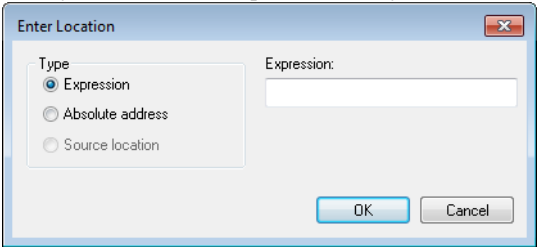

Use the **Enter Location** dialog box to specify the location of the breakpoint.

Note: This dialog box looks different depending on the **Type** you select.

Type

Selects the type of location to be used for the breakpoint, choose between:

Expression

A C-SPY expression, whose value evaluates to a valid code or data location.

A code location, for example the function `main`, is typically used for code breakpoints.

A data location is the name of a variable and is typically used for data breakpoints. For example, `my_var` refers to the location of the variable `my_var`, and `arr[3]` refers to the location of the fourth element of the array `arr`. For static variables declared with the same name in several functions, use the syntax `my_func:my_static_variable` to refer to a specific variable.

For more information about C-SPY expressions, see *C-SPY expressions*, page 80.

Absolute address

An absolute location on the form *zone:hexaddress* or simply *hexaddress* (for example `Memory:0x42`). *zone* refers to C-SPY memory zones and specifies in which memory the address belongs, see *C-SPY memory zones*, page 132.

Source location

A location in your C source code using the syntax:

`{filename}.row.column.`

filename specifies the filename and full path.

row specifies the row in which you want the breakpoint.

column specifies the column in which you want the breakpoint.


For example, `{C:\src\prog.c}.22.3` sets a breakpoint on the third character position on row 22 in the source file `prog.c`. Note that in quoted form, for example in a C-SPY macro, you must instead write

`{C:\\src\\prog.c}.22.3.`

Note that the Source location type is usually meaningful only for code locations in code breakpoints. Depending on the C-SPY driver you are using, **Source location** might not be available for data and immediate breakpoints.

Resolve Source Ambiguity dialog box

The **Resolve Source Ambiguity** dialog box appears, for example, when you try to set a breakpoint on templates and the source location corresponds to more than one function.

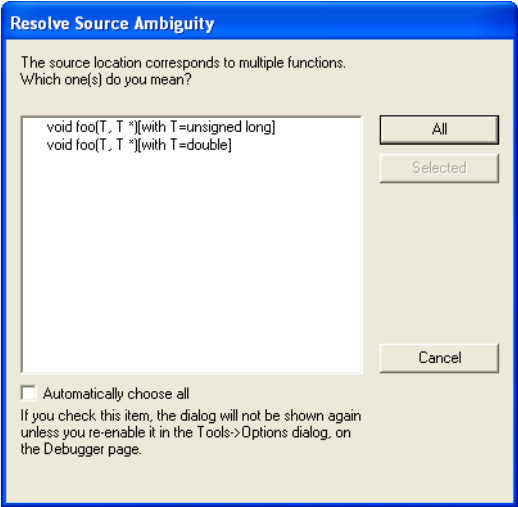

To resolve a source ambiguity, perform one of these actions:

- In the text box, select one or several of the listed locations and click **Selected**.
- Click **All**.

All

The breakpoint will be set on all listed locations.

Selected

The breakpoint will be set on the source locations that you have selected in the text box.

Cancel

No location will be used.

Automatically choose all

Determines that whenever a specified source location corresponds to more than one function, all locations will be used.

Note that this option can also be specified in the **IDE Options** dialog box, see Debugger options in the *IDE Project Management and Building Guide for 8051*.

Memory and registers

- Introduction to monitoring memory and registers
- Monitoring memory and registers
- Reference information on memory and registers

Introduction to monitoring memory and registers

These topics are covered:

- Briefly about monitoring memory and registers
- C-SPY memory zones
- Memory configuration for the C-SPY simulator
- Memory configuration for C-SPY hardware debugger drivers

BRIEFLY ABOUT MONITORING MEMORY AND REGISTERS

C-SPY provides many windows for monitoring memory and registers, most of them available from the **View** menu:

- The **Memory** window

Gives an up-to-date display of a specified area of memory—a memory zone—and allows you to edit it. *Data coverage* along with execution of your application is highlighted with different colors. You can fill specified areas with specific values and you can set breakpoints directly on a memory location or range. You can open several instances of this window, to monitor different memory areas. The content of the window can be regularly updated while your application is executing.
- The **Symbolic Memory** window

Displays how variables with static storage duration are laid out in memory. This can be useful for better understanding memory usage or for investigating problems caused by variables being overwritten, for example by buffer overruns.
- The **Stack** window

Displays the contents of the stack, including how stack variables are laid out in memory. In addition, integrity checks of the stack can be performed to detect and warn about problems with stack overflow. For example, the **Stack** window is useful for determining the optimal size of the stack. You can open up to two instances of this window, each showing different stacks or different display modes of the same stack.

- The **Registers** window

Gives an up-to-date display of the contents of the processor registers and SFRs, and allows you to edit them. Because of the large amount of registers—memory-mapped peripheral unit registers and CPU registers—it is inconvenient to show all registers concurrently in the **Registers** window. Instead you can divide registers into *application-specific groups*. You can choose to load either predefined register groups or define your own groups. You can open several instances of this window, each showing a different register group.

- The **SFR Setup** window

Displays the currently defined SFRs that C-SPY has information about, both factory-defined (retrieved from the device description file) and custom-defined SFRs. If required, you can use the **Edit SFR** dialog box to customize the SFR definitions.

To view the memory contents for a specific variable, simply drag the variable to the **Memory** window or the **Symbolic Memory** window. The memory area where the variable is located will appear.




Reading the value of some registers might influence the runtime behavior of your application. For example, reading the value of a UART status register might reset a pending bit, which leads to the lack of an interrupt that would have processed a received byte. To prevent this from happening, make sure that the **Registers** window containing any such registers is closed when debugging a running application.

C-SPY MEMORY ZONES

In C-SPY, the term *zone* is used for a named memory area. A memory address, or *location*, is a combination of a zone and a numerical offset into that zone. By default,

the 8051 architecture has four zones—Code, XData, IData, and SFR—that cover the whole 8051 memory range.

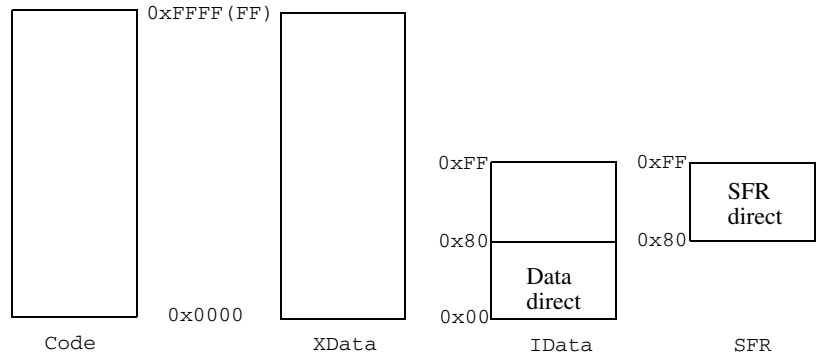

Memory zones are used in several contexts, most importantly in the **Memory** and **Disassembly** windows, and in C-SPY macros. In the windows, use the **Zone** box to choose which memory zone to display.

Device-specific zones

Memory information for device-specific zones is defined in the *device description files*. When you load a device description file, additional zones that adhere to the specific memory layout become available.

See the device description file for information about available memory zones.

For more information, see *Selecting a device description file*, page 45 and *Modifying a device description file*, page 49.

MEMORY CONFIGURATION FOR THE C-SPY SIMULATOR

To simulate the target system properly, the C-SPY simulator needs information about the memory configuration. By default, C-SPY uses a configuration based on information retrieved from the device description file.

The C-SPY simulator provides various mechanisms to improve the configuration further:

- If the default memory configuration does not specify the required memory address ranges, you can specify the memory address ranges shall be based on:
 - The zones predefined in the device description file
 - The section information available in the debug file
 - Or, you can define your own memory address ranges, which you typically might want to do if the files do not specify memory ranges for the *specific* device that

you are using, but instead for a *family* of devices (perhaps with various amounts of on-chip RAM).

- For each memory address range, you can specify an *access type*. If a memory access occurs that does not agree with the specified access type, C-SPY will regard this as an illegal access and warn about it. In addition, an access to memory that is not defined is regarded as an illegal access. The purpose of memory access checking is to help you to identify memory access violations.

For more information, see *Memory Access Setup dialog box*, page 169.

MEMORY CONFIGURATION FOR C-SPY HARDWARE DEBUGGER DRIVERS

To handle memory as efficiently as possible during debugging, C-SPY needs information about the memory configuration. By default, C-SPY uses a configuration based on information retrieved from the device description file.

You should make sure the memory address ranges match the memory available on your device. Providing C-SPY with information about the memory layout of the target system is helpful in terms of both performance and functionality:

- Reading (and writing) memory (if your debug probe is connected through a USB port) can be fast, but is usually the limiting factor when C-SPY needs to update many debugger windows. C-SPY can cache memory contents to speed up performance, provided it has correct information about the target memory.
- You can inform C-SPY that the content of certain memory address ranges will not be changed during a debug session. C-SPY can keep a copy of that memory readable even when the target system does not normally allow reading (such as when it is executing).

Note that if you specify the cache type **ROM/Flash**, C-SPY treats such memory as constant during the whole debug session (which improves efficiency, when updating some C-SPY windows). If your application modifies flash memory during runtime, do not use the **ROM/Flash** cache type.

- You can prevent C-SPY from accessing memory outside specified memory address ranges, which can be important for certain hardware.

The **Memory Configuration** dialog box is automatically displayed the first time you start the C-SPY driver for a given project, unless the device description file contains a memory description which is explicitly tagged as correct and complete. Subsequent starts will not display the dialog box unless you have made project changes that might cause the memory configuration to change, for example if you have selected another device description file.

For more information, see *Memory Configuration dialog box for C-SPY hardware debugger drivers*, page 164.

Monitoring memory and registers

These tasks are covered:


- Defining application-specific register groups
- Monitoring stack usage

DEFINING APPLICATION-SPECIFIC REGISTER GROUPS

Defining application-specific register groups minimizes the amount of registers displayed in the **Registers** windows and makes the debugging easier.

To define application-specific register groups:

- 1 Choose **View>Registers>Register User Groups Setup** during a debug session.

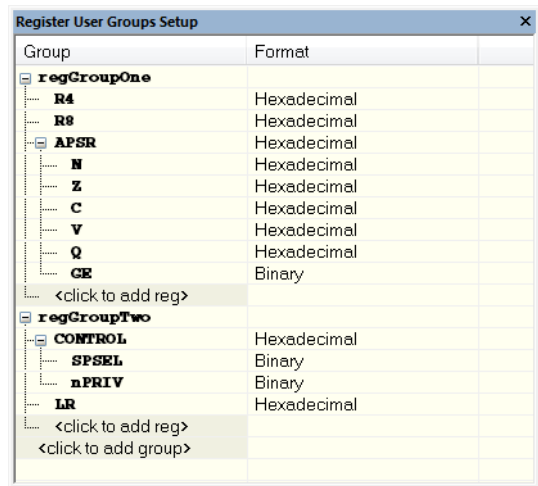

Right-clicking in the window displays a context menu with commands. For information about these commands, see *Register User Groups Setup window*, page 157.

- 2 Click on **<click to add group>** and specify the name of your group, for example **My Timer Group** and press Enter.
- 3 Underneath the group name, click on **<click to add reg>** and type the name of a register, and press Enter. You can also drag a register name from another window in the IDE. Repeat this for all registers that you want to add to your group.
- 4 As an optional step, right-click any registers for which you want to change the integer base, and choose **Format** from the context menu to select a suitable base.

- 5 When you are done, your new group is now available in the **Registers** windows.

If you want to define more application-specific groups, repeat this procedure for each group you want to define.

Note: If a certain SFR that you need cannot be added to a group, you can register your own SFRs. For more information, see *SFR Setup window*, page 159.

MONITORING STACK USAGE


These are the two main use cases for the **Stack** window:

- Monitoring stack memory usage
- Monitoring the stack memory content.

In both cases, C-SPY retrieves information about the defined stack size and its allocation from the definition in the linker configuration file of the segment holding the stack. If you, for some reason, have modified the stack initialization in the system startup code, `cstartup`, you should also change the segment definition in the linker configuration file accordingly, otherwise the **Stack** window cannot track the stack usage. For more information, see the *IAR C/C++ Compiler User Guide for 8051*.

To monitor stack memory usage:

- I Before you start C-SPY, choose **Tools>Options**. On the **Stack** page:
 - Select **Enable graphical stack display and stack usage tracking**. This option also enables the option **Warn when exceeding stack threshold**. Specify a suitable threshold value.
 - Note also the option **Warn when stack pointer is out of bounds**. Any such warnings are displayed in the **Debug Log** window.

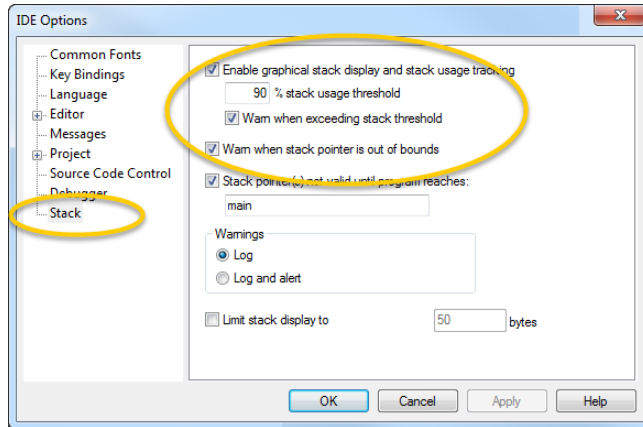

2 Start C-SPY.

When your application is first loaded, and upon each reset, the memory for the stack area is filled with the dedicated byte value `0xCD` before the application starts executing.


3 Choose **View>Stack>Stack 1** to open the **Stack** window.

Note that you can open up to two **Stack** windows, each showing a different stack—if several stacks are available—or the same stack with different display settings.

4 Start executing your application.

Whenever execution stops, the stack memory is searched from the end of the stack until a byte whose value is not `0xCD` is found, which is assumed to be how far the stack has been used. The light gray area of the stack bar represents the *unused* stack memory area, whereas the dark gray area of the bar represents the *used* stack memory.

For this example, you can see that only 44% of the reserved memory address range was used, which means that it could be worth considering decreasing the size of memory:

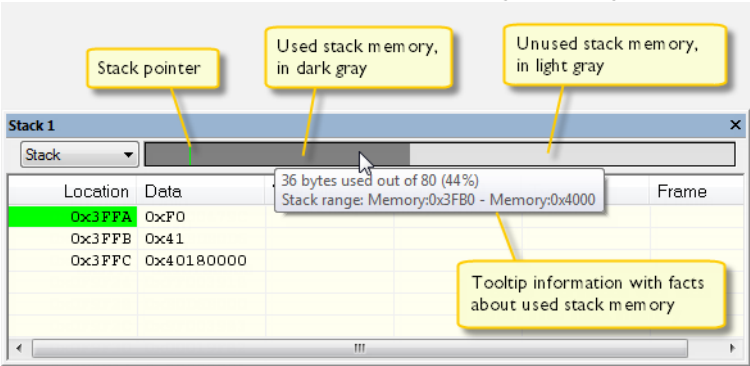

Note: Although this is a reasonably reliable way to track stack usage, there is no guarantee that a stack overflow is detected. For example, a stack *can* incorrectly grow outside its bounds, and even modify memory outside the stack area, without actually modifying any of the bytes near the end of the stack range. Likewise, your application might modify memory within the stack area by mistake.


To monitor the stack memory content:

- 1 Before you start monitoring stack memory, you might want to disable the option **Enable graphical stack display and stack usage tracking** to improve performance during debugging.
- 2 Start C-SPY.
- 3 Choose **View>Stack>Stack 1** to open the **Stack** window.

Note that you can access various context menus in the display area from where you can change display format, etc.

- 4 Start executing your application.

Whenever execution stops, you can monitor the stack memory, for example to see function parameters that are passed on the stack:

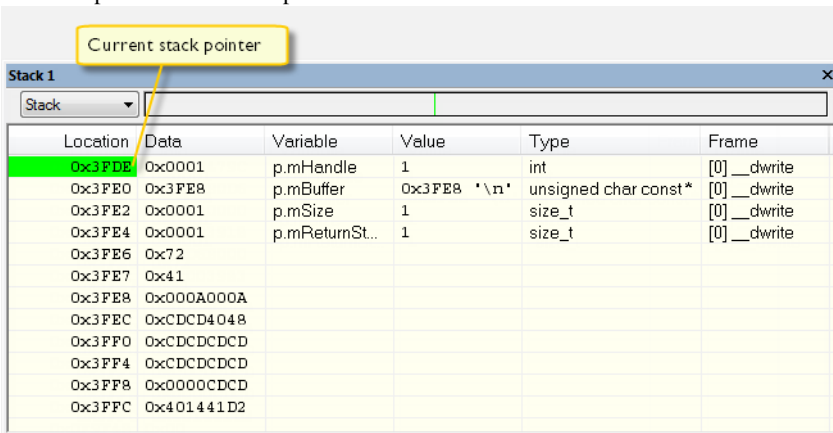

Location	Data	Variable	Value	Type	Frame
0x3FDE	0x0001	p.mHandle	1	int	[0] __dwrite
0x3FE0	0x3FE8	p.mBuffer	0x3FE8 '\n'	unsigned char const*	[0] __dwrite
0x3FE2	0x0001	p.mSize	1	size_t	[0] __dwrite
0x3FE4	0x0001	p.mReturnSt...	1	size_t	[0] __dwrite
0x3FE6	0x72				
0x3FE7	0x41				
0x3FE8	0x000A000A				
0x3FEC	0xCDCD4048				
0x3FF0	0xCDCDCDCD				
0x3FF4	0xCDCDCDCD				
0x3FF8	0x0000CDCD				
0x3FFC	0x401441D2				


Reference information on memory and registers

Reference information about:

- *Memory window*, page 140
- *Memory Save dialog box*, page 144
- *Memory Restore dialog box*, page 145
- *Fill dialog box*, page 146
- *Symbolic Memory window*, page 147
- *Stack window*, page 150
- *Registers window*, page 154
- *Register User Groups Setup window*, page 157
- *SFR Setup window*, page 159
- *Edit SFR dialog box*, page 162
- *Memory Configuration dialog box for C-SPY hardware debugger drivers*, page 164
- *Edit Memory Range dialog box for C-SPY hardware debugger drivers*, page 167
- *Memory Access Setup dialog box*, page 169
- *Edit Memory Access dialog box*, page 171

Memory window

The **Memory** window is available from the **View** menu.

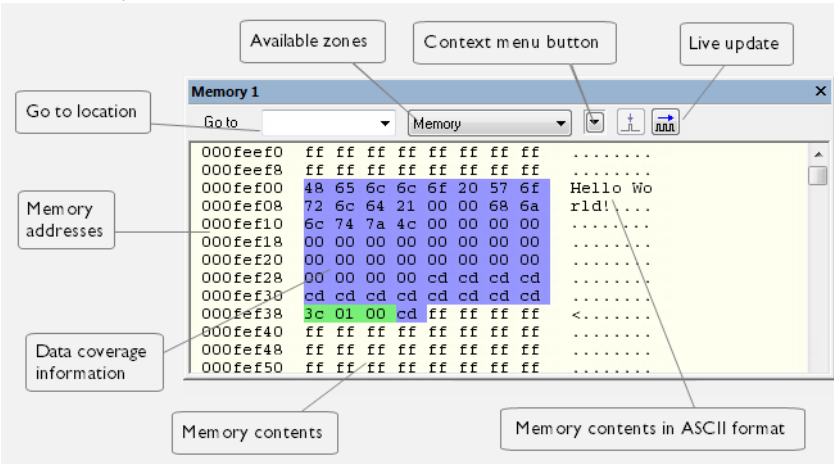

This window gives an up-to-date display of a specified area of memory—a memory zone—and allows you to edit it. You can open several instances of this window, which is very convenient if you want to keep track of several memory or register zones, or monitor different parts of the memory.



To view the memory corresponding to a variable, you can select it in the editor window and drag it to the **Memory** window.

See also *Editing in C-SPY windows*, page 48.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Toolbar

The toolbar contains:

Go to

The memory location or symbol you want to view.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Context menu button

Displays the context menu.

Update Now

Updates the content of the **Memory** window while your application is executing. This button is only enabled if the C-SPY driver you are using has access to the target system memory while your application is executing.

Live Update

Updates the contents of the **Memory** window regularly while your application is executing. This button is only enabled if the C-SPY driver you are using has access to the target system memory while your application is executing. To set the update frequency, specify an appropriate frequency in the **IDE Options>Debugger** dialog box.

Display area

The display area shows the addresses currently being viewed, the memory contents in the format you have chosen, and—provided that the display mode is set to **1x Units**—the memory contents in ASCII format. You can edit the contents of the display area, both in the hexadecimal part and the ASCII part of the area.


Data coverage is displayed with these colors:

Yellow	Indicates data that has been read.
Blue	Indicates data that has been written
Green	Indicates data that has been both read and written.

Note: Data coverage is not supported by all C-SPY drivers. Data coverage is supported by the C-SPY Simulator.

Context menu

This context menu is available:

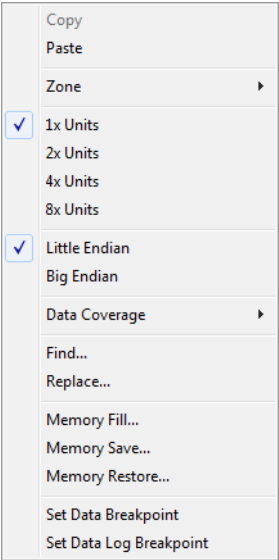

These commands are available:

Copy
Paste

Standard editing commands.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

1x Units

Displays the memory contents as single bytes.

2x Units

Displays the memory contents as 2-byte groups.

4x Units

Displays the memory contents as 4-byte groups.

8x Units

Displays the memory contents as 8-byte groups.

Little Endian

Displays the contents in little-endian byte order.

Big Endian

Displays the contents in big-endian byte order.

Data Coverage

Choose between:

Enable toggles data coverage on or off.

Show toggles between showing or hiding data coverage.

Clear clears all data coverage information.

These commands are only available if your C-SPY driver supports data coverage.

Find

Displays a dialog box where you can search for text within the **Memory** window; read about the **Find** dialog box in the *IDE Project Management and Building Guide for 8051*.

Replace

Displays a dialog box where you can search for a specified string and replace each occurrence with another string; read about the **Replace** dialog box in the *IDE Project Management and Building Guide for 8051*.

Memory Fill

Displays a dialog box, where you can fill a specified area with a value, see *Fill dialog box*, page 146.

Memory Save

Displays a dialog box, where you can save the contents of a specified memory area to a file, see *Memory Save dialog box*, page 144.

Memory Restore

Displays a dialog box, where you can load the contents of a file in Intel-hex or Motorola s-record format to a specified memory zone, see *Memory Restore dialog box*, page 145.

Set Data Breakpoint


Sets breakpoints directly in the **Memory** window. The breakpoint is not highlighted; you can see, edit, and remove it in the breakpoint dialog box. The breakpoints you set in this window will be triggered for both read and write access. For more information, see *Setting a data breakpoint in the Memory window*, page 113.

Set Data Log Breakpoint

Sets a breakpoint on the start address of a memory selection directly in the **Memory** window. The breakpoint is not highlighted; you can see, edit, and remove it in the breakpoint dialog box. The breakpoints you set in this window will be triggered by both read and write accesses; to change this, use the **Breakpoints** window. For more information, see *Data Log breakpoints*, page 107 and *Getting started using data logging*, page 193.

Memory Save dialog box

The **Memory Save** dialog box is available by choosing **Debug>Memory>Save** or from the context menu in the **Memory** window.

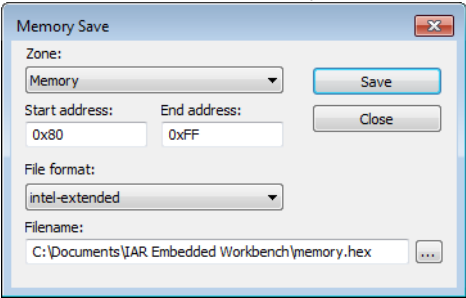

Use this dialog box to save the contents of a specified memory area to a file.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Start address

Specify the start address of the memory range to be saved.

End address

Specify the end address of the memory range to be saved.

File format

Selects the file format to be used, which is Intel-extended by default.

Filename


Specify the destination file to be used. A browse button is available.

Save

Saves the selected range of the memory zone to the specified file.

Memory Restore dialog box

The **Memory Restore** dialog box is available by choosing **Debug>Memory>Restore** or from the context menu in the **Memory** window.

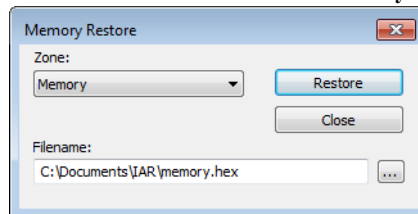

Use this dialog box to load the contents of a file in Intel-extended or Motorola S-record format to a specified memory zone.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Filename


Specify the file to be read. A browse button is available.

Restore

Loads the contents of the specified file to the selected memory zone.

Fill dialog box

The **Fill** dialog box is available from the context menu in the **Memory** window.

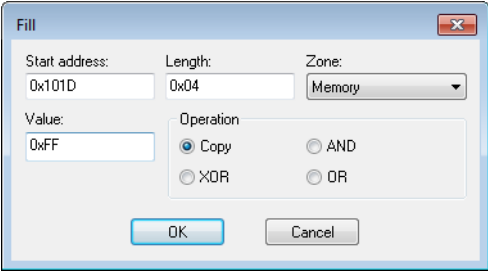

Use this dialog box to fill a specified area of memory with a value.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Start address

Type the start address—in binary, octal, decimal, or hexadecimal notation.

Length

Type the length—in binary, octal, decimal, or hexadecimal notation.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Value

Type the 8-bit value to be used for filling each memory location.

Operation

These are the available memory fill operations:

Copy

Value will be copied to the specified memory area.

AND

An AND operation will be performed between Value and the existing contents of memory before writing the result to memory.

XOR

An XOR operation will be performed between Value and the existing contents of memory before writing the result to memory.

OR

An OR operation will be performed between Value and the existing contents of memory before writing the result to memory.

Symbolic Memory window

The **Symbolic Memory** window is available from the **View** menu during a debug session.

Symbolic Memory					
Go to:		Data		Previous	Next
Location	Data	Variable	Value	Type	
0x21	0x0000	callCount	0	int	
0x23	0x0001	Fib[0]	1	unsigned int	
0x25	0x0001	Fib[1]	1	unsigned int	
0x27	0x0002	Fib[2]	2	unsigned int	
0x29	0x0003	Fib[3]	3	unsigned int	
0x2B	0x0005	Fib[4]	5	unsigned int	
0x2D	0x0008	Fib[5]	8	unsigned int	
0x2F	0x000D	Fib[6]	13	unsigned int	
0x31	0x0015	Fib[7]	21	unsigned int	
0x33	0x0022	Fib[8]	34	unsigned int	

This window displays how variables with static storage duration, typically variables with file scope but also static variables in functions and classes, are laid out in memory. This can be useful for better understanding memory usage or for investigating problems caused by variables being overwritten, for example buffer overruns. Other areas of use are spotting alignment holes or for understanding problems caused by buffers being overwritten.



To view the memory corresponding to a variable, you can select it in the editor window and drag it to the **Symbolic Memory** window.

See also *Editing in C-SPY windows*, page 48.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Toolbar

The toolbar contains:

Go to

The memory location or symbol you want to view.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Previous

Highlights the previous symbol in the display area.

Next

Highlights the next symbol in the display area.

Display area

This area contains these columns:

Location

The memory address.

Data

The memory contents in hexadecimal format. The data is grouped according to the size of the symbol. This column is editable.

Variable

The variable name; requires that the variable has a fixed memory location. Local variables are not displayed.

Value

The value of the variable. This column is editable.

Type

The type of the variable.


There are several different ways to navigate within the memory space:

- Text that is dropped in the window is interpreted as symbols
- The scroll bar at the right-side of the window
- The **Next** and **Previous** toolbar buttons
- The **Go to** toolbar list box can be used for locating specific locations or symbols.

Note: Rows are marked in red when the corresponding value has changed.

Context menu

This context menu is available:

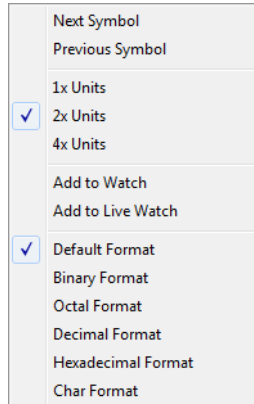

These commands are available:

Next Symbol

Highlights the next symbol in the display area.

Previous Symbol

Highlights the previous symbol in the display area.

1x Units

Displays the memory contents as single bytes. This applies only to rows that do not contain a variable.

2x Units

Displays the memory contents as 2-byte groups.

4x Units

Displays the memory contents as 4-byte groups.

Add to Watch

Adds the selected symbol to the **Watch** window.

Add to Live Watch

Adds the selected symbol to the **Live Watch** window.

Default format

Displays the memory contents in the default format.

Binary format

Displays the memory contents in binary format.

Octal format

Displays the memory contents in octal format.

Decimal format

Displays the memory contents in decimal format.

Hexadecimal format


Displays the memory contents in hexadecimal format.

Char format

Displays the memory contents in char format.

Stack window

The **Stack** window is available from the **View** menu.

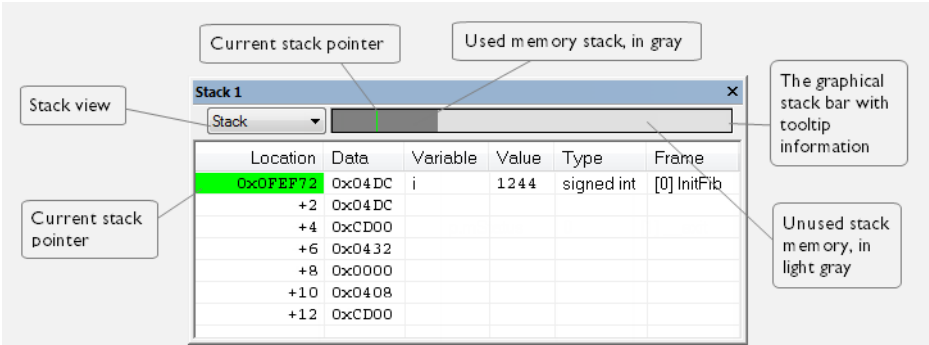

This window is a memory window that displays the contents of the stack. The graphical stack bar shows stack usage.

Note: By default, this window uses one physical breakpoint. For more information, see *Breakpoint consumers*, page 110.

For information about options specific to the **Stack** window, see the *IDE Project Management and Building Guide for 8051*.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Toolbar

The toolbar contains:

Stack

Selects which stack to view. This applies to microcontrollers with multiple stacks.

The graphical stack bar

Displays the state of the stack graphically.

The left end of the stack bar represents the bottom of the stack, in other words, the position of the stack pointer when the stack is empty. The right end represents the end of the memory address range reserved for the stack. The graphical stack bar turns red when the stack usage exceeds a threshold that you can specify.

To enable the stack bar, choose **Tools>Options>Stack>Enable graphical stack display and stack usage tracking**. This means that the functionality needed to detect and warn about stack overflows is enabled.



Place the mouse pointer over the stack bar to get tooltip information about stack usage.

Display area

This area contains these columns:

Location

Displays the location in memory. The addresses are displayed in increasing order. If your target system has a stack that grows toward high addresses, the top of the stack will consequently be located at the bottom of the window. The address referenced by the stack pointer, in other words the top of the stack, is highlighted in a green color.

Data

Displays the contents of the memory unit at the given location. From the **Stack** window context menu, you can select how the data should be displayed; as a 1-, 2-, or 4-byte group of data.

Variable

Displays the name of a variable, if there is a local variable at the given location. Variables are only displayed if they are declared locally in a function, and located on the stack and not in registers.

Value

Displays the value of the variable.

Type


Displays the data type of the variable.

Frame

Displays the name of the function that the call frame corresponds to.

Context menu

This context menu is available:

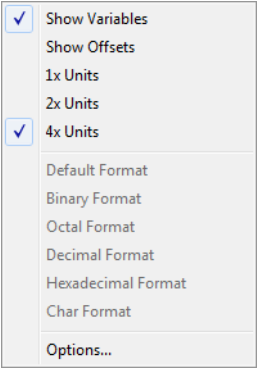

These commands are available:

Show variables

Displays separate columns named **Variables**, **Value**, and **Frame** in the **Stack** window. Variables located at memory addresses listed in the **Stack** window are displayed in these columns.

Show offsets

Displays locations in the **Location** column as offsets from the stack pointer. When deselected, locations are displayed as absolute addresses.

1x Units

Displays the memory contents as single bytes.

2x Units

Displays the memory contents as 2-byte groups.

4x Units

Displays the memory contents as 4-byte groups.

Default Format**Binary Format****Octal Format****Decimal Format****Hexadecimal Format****Char Format**

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:


Variables	The display setting affects only the selected variable, not other variables.
Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.
Structure fields	All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Options

Opens the **IDE Options** dialog box where you can set options specific to the **Stack** window, see the *IDE Project Management and Building Guide for 8051*.

Registers window

The **Registers** windows are available from the **View** menu.

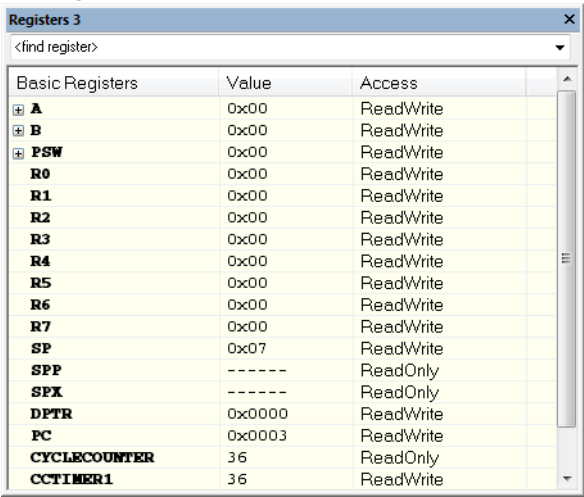

The screenshot shows a window titled "Registers 3" with a search bar containing "<find register>". Below the search bar is a table with three columns: "Basic Registers", "Value", and "Access". The table lists various registers including A, B, PSW, R0 through R7, SP, SPP, SFX, DPTR, PC, CYCLECOUNTER, and CCTIMER1, each with a corresponding hexadecimal or decimal value and an access type (ReadWrite or ReadOnly).

Basic Registers	Value	Access
A	0x00	ReadWrite
B	0x00	ReadWrite
PSW	0x00	ReadWrite
R0	0x00	ReadWrite
R1	0x00	ReadWrite
R2	0x00	ReadWrite
R3	0x00	ReadWrite
R4	0x00	ReadWrite
R5	0x00	ReadWrite
R6	0x00	ReadWrite
R7	0x00	ReadWrite
SP	0x07	ReadWrite
SPP	-----	ReadOnly
SFX	-----	ReadOnly
DPTR	0x0000	ReadWrite
PC	0x0003	ReadWrite
CYCLECOUNTER	36	ReadOnly
CCTIMER1	36	ReadWrite

These windows give an up-to-date display of the contents of the processor registers and special function registers, and allow you to edit the contents of some of the registers. Optionally, you can choose to load either predefined register groups or your own user-defined groups.

You can open up to four instances of this window, which is convenient for keeping track of different register groups.

See also *Editing in C-SPY windows*, page 48.

To enable predefined register groups:

- 1 Select a device description file that suits your device, see *Selecting a device description file*, page 45. These files contain predefined register groups.
- 2 Display the registers of a register group by selecting it from the **Group** drop-down menu on the toolbar, or by right-clicking in the window and choosing **View Group** from the context menu.

For information about creating your own user-defined register groups, see *Defining application-specific register groups*, page 135.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Toolbar

The toolbar contains:

Find

Specify the name, or part of a name, of a register (or group) that you want to find. Press the Enter key and the first matching register, or group with a matching register, is displayed. User-defined register groups are not searched. The search box preserves a history of previous searches. To repeat a search, select it from the search history and press Enter.

Group

Selects which predefined register group to display. Additional register groups are predefined in the device description files that make SFR registers available in the **Registers** windows. The device description file contains a section that defines the special function registers and their groups. If some of your SFRs are missing, you can register your own SFRs in a Custom group, see *SFR Setup window*, page 159.

Display area

Displays registers and their values. Some registers are expandable, which means that the register contains interesting bits or subgroups of bits.

If you drag a numerical value, a valid expression, or a register name from another part of the IDE to an editable value cell in a **Registers** window, the value will be changed to that of what you dragged. If you drop a register name somewhere else in the window, the window contents will change to display the first register group where this register is found.

Name

The name of the register.

Value

The current value of the register. Every time C-SPY stops, a value that has changed since the last stop is highlighted. Some of the registers are editable. To edit the contents of an editable register, click on the register and modify its value. Press Esc to cancel the change.

To change the display format of the value, right-click on the register and choose **Format** from the context menu.

Access


The access type of the register. Some of the registers are read-only, while others are write-only.

For the C-SPY Simulator (and some C-SPY hardware debugger drivers), these additional support registers are available in the Basic Registers group:

CYCLECOUNTER	Cleared when an application is started or reset, and is incremented with the number of used cycles during execution.
CCSTEP	Shows the number of used cycles during the last performed C/C++ source or assembler step.
CCTIMER1 and CCTIMER2	Two <i>trip counts</i> that can be cleared manually at any given time. They are incremented with the number of used cycles during execution.

Context menu

This context menu is available:

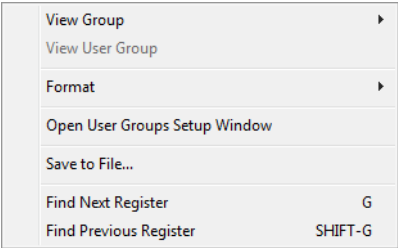

These commands are available:

- View Group**
Selects which predefined register group to display.
- View User Group**
Selects which user-defined register group to display. For information about creating your own user-defined register groups, see *Defining application-specific register groups*, page 135.
- Format**
Changes the display format for the contents of the register you clicked on. The display format setting affects different types of registers in different ways. Your selection of display format is saved between debug sessions.
- Open User Groups Setup Window**
Opens a window where you can create your own user-defined register groups, see *Register User Groups Setup window*, page 157.

Save to File

Opens a standard **Save** dialog box to save the contents of the window to a tab-separated text file.

Find Next Register


Finds the predefined register or register group that comes immediately after what your search found. After the last register was found, this search wraps around and finds the first register again.

Find Previous Register

Finds the matching predefined register or register group that comes immediately before what your search found. After the first register was found, this search wraps around and finds the last register again.

Register User Groups Setup window

The **Register User Groups Setup** window is available from the **View** menu or from the context menu in the **Registers** windows.

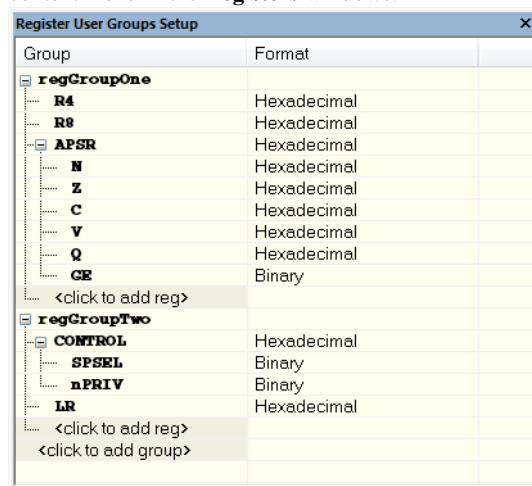

Use this window to define your own application-specific register groups. These register groups can then be viewed in the **Registers** windows.

Defining application-specific register groups means that the **Registers** windows can display just those registers that you need to watch for your current debugging task. This makes debugging much easier.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area contains these columns:

Group

The names of register groups and the registers they contain. Clicking on <click to add group> or <click to add reg> and typing the name of a register group or register, adds new groups and registers, respectively. You can also drag a register name from another window in the IDE. Click a name to change it.


A dimmed register name indicates that it is not supported by the selected device.

Format

Shows the display format for the register’s value. To change the display format of the value, right-click on the register and choose **Format** from the context menu. The selected format is used in all **Registers** windows.

Context menu

This context menu is available:

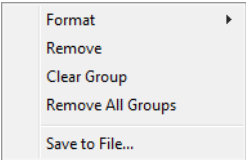

These commands are available:

Format

Changes the display format for the contents of the register you clicked on. The display format setting affects different types of registers in different ways. Your selection of display format is saved between debug sessions.

Remove

Removes the register or group you clicked on.

Clear Group

Removes all registers from the group you clicked on.

Remove All Groups


Deletes all user-defined register groups from your project.

Save to File

Opens a standard **Save** dialog box to save the contents of the window to a tab-separated text file.

SFR Setup window

The **SFR Setup** window is available from the **Project** menu.

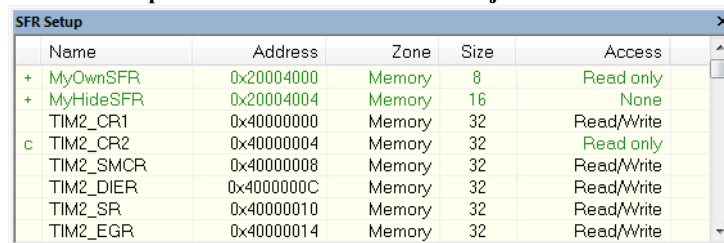

Name	Address	Zone	Size	Access
+ MyOwnSFR	0x20004000	Memory	8	Read only
+ MyHideSFR	0x20004004	Memory	16	None
TIM2_CR1	0x40000000	Memory	32	Read/Write
c TIM2_CR2	0x40000004	Memory	32	Read only
TIM2_SMCR	0x40000008	Memory	32	Read/Write
TIM2_DIER	0x4000000C	Memory	32	Read/Write
TIM2_SR	0x40000010	Memory	32	Read/Write
TIM2_EGR	0x40000014	Memory	32	Read/Write

This window displays the currently defined SFRs that C-SPY has information about. You can choose to display only factory-defined or custom-defined SFRs, or both. If required, you can use the **Edit SFR** dialog box to customize the SFR definitions, see *Edit SFR dialog box*, page 162. For factory-defined SFRs (that is, retrieved from the `ddf` file in use), you can only customize the access type.

To quickly find an SFR, drag a text or hexadecimal number string and drop in this window. If what you drop starts with a 0 (zero), the **Address** column is searched, otherwise the **Name** column is searched.

Any custom-defined SFRs are added to a dedicated register group called Custom, which you can choose to display in the **Registers** window. Your custom-defined SFRs are saved in `projectCustomSFR.sfr`. This file is automatically loaded in the IDE when you start C-SPY with a project whose name matches the prefix of the filename of the `sfr` file.

You can only add or modify SFRs when the C-SPY debugger is not running.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area contains these columns:

Status

A character that signals the status of the SFR, which can be one of:
blank, a factory-defined SFR.

C, a factory-defined SFR that has been modified.

+, a custom-defined SFR.

?, an SFR that is ignored for some reason. An SFR can be ignored when a factory-defined SFR has been modified, but the SFR is no longer available, or it is located somewhere else or with a different size. Typically, this might happen if you change to another device.

Name

A unique name of the SFR.

Address

The memory address of the SFR.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Size

The size of the register, which can be any of **8**, **16**, **32**, or **64**.

Access

The access type of the register, which can be one of **Read/Write**, **Read only**, **Write only**, or **None**.

You can click a name or an address to change the value. The hexadecimal 0x prefix for the address can be omitted, the value you enter will still be interpreted as hexadecimal. For example, if you enter 4567, you will get 0x4567.


You can click a column header to sort the SFRs according to the column property.

Color coding used in the display area:

- Green, which indicates that the corresponding value has changed
- Red, which indicates an ignored SFR.

Context menu

This context menu is available:

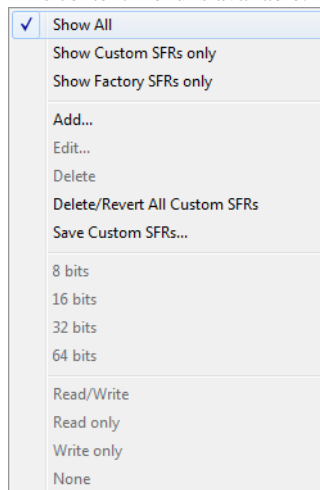

These commands are available:

Show All

Shows all SFR.

Show Custom SFRs only

Shows all custom-defined SFRs.

Show Factory SFRs only

Shows all factory-defined SFRs retrieved from the ddf file.

Add

Displays the **Edit SFR** dialog box where you can add a new SFR, see *Edit SFR dialog box*, page 162.

Edit

Displays the **Edit SFR** dialog box where you can edit an SFR, see *Edit SFR dialog box*, page 162.

Delete

Deletes an SFR. This command only works on custom-defined SFRs.

Delete/revert All Custom SFRs

Deletes all custom-defined SFRs and reverts all modified factory-defined SFRs to their factory settings.

Save Custom SFRs

Opens a standard **Save** dialog box to save all custom-defined SFRs.

8|16|32|64 bits


Selects display format for the selected SFR, which can be **8**, **16**, **32**, or **64** bits. Note that the display format can only be changed for custom-defined SFRs.

Read/Write|Read only|Write only|None

Selects the access type of the selected SFR, which can be **Read/Write**, **Read only**, **Write only**, or **None**. Note that for factory-defined SFRs, the default access type is indicated.

Edit SFR dialog box

The **Edit SFR** dialog box is available from the context menu in the **SFR Setup** window.

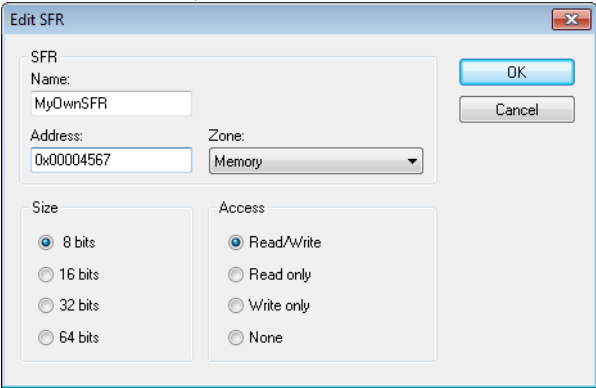

Definitions of the SFRs are retrieved from the device description file in use. Use this dialog box to either modify these factory-defined definitions or define new SFRs. See also *SFR Setup window*, page 159.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Name

Specify the name of the SFR that you want to add or edit.

Address

Specify the address of the SFR that you want to add or edit. The hexadecimal 0x prefix for the address can be omitted, the value you enter will still be interpreted as hexadecimal. For example, if you enter 4567, you will get 0x4567.

Zone

Selects the memory zone for the SFR you want to add or edit. The list of zones is retrieved from the `ddf` file that is currently used.

Size


Selects the size of the SFR. Choose between **8**, **16**, **32**, or **64** bits. Note that the display format can only be changed for custom-defined SFRs.

Access

Selects the access type of the SFR. Choose between **Read/Write**, **Read only**, **Write only**, or **None**. Note that for factory-defined SFRs, the default access type is indicated.

Memory Configuration dialog box for C-SPY hardware debugger drivers

The Memory Configuration dialog box is available from the C-SPY driver menu.

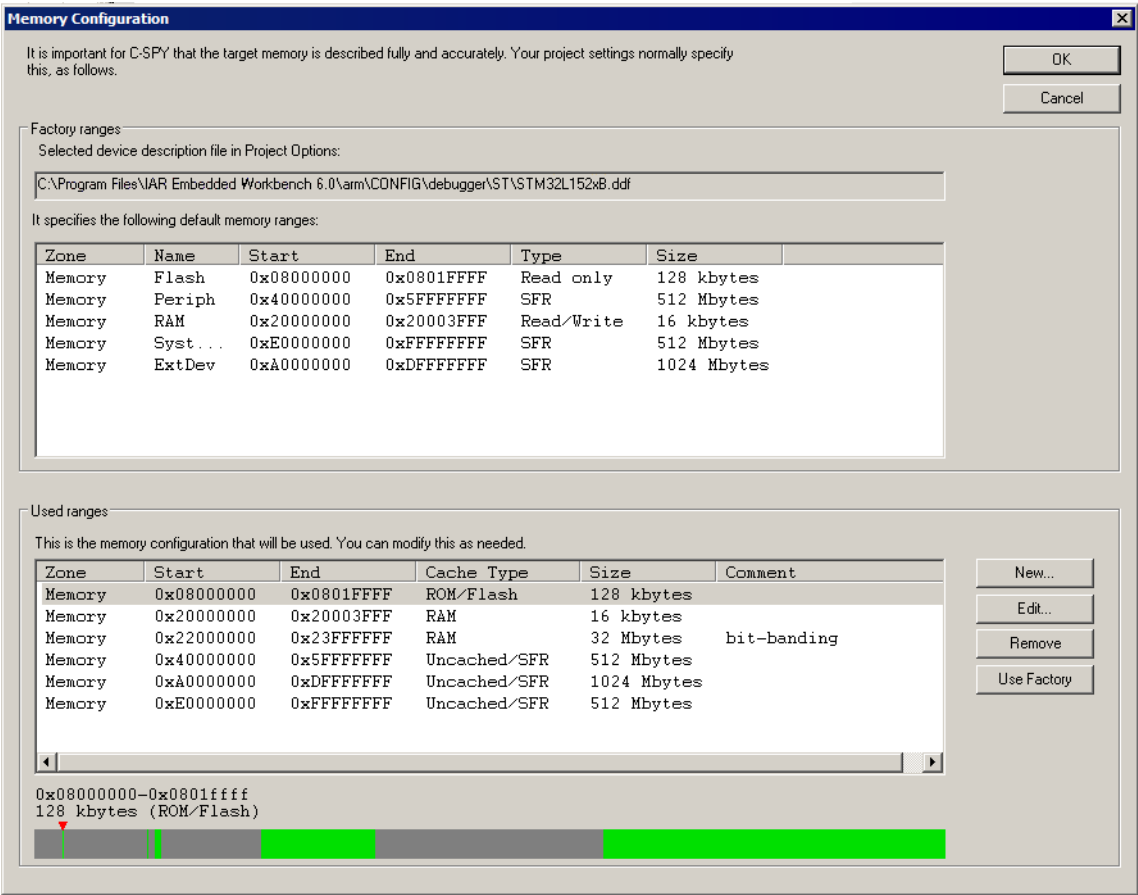

C-SPY uses a default memory configuration based on information retrieved from the device description file that you select, or if memory configuration is missing in the device description file, tries to provide a usable factory default. See *Selecting a device description file*, page 45.

Use this dialog box to verify, and if needed, modify the memory areas so that they match the memory available on your device. Providing C-SPY with information about the

memory layout of the target system is helpful both in terms of performance and functionality:

- Reading (and writing) memory (if your debug probe is connected through a USB port) can be fast, but is usually the limiting factor when C-SPY needs to update many debugger windows. Caching memory can speed up the performance, but then C-SPY needs information about the target memory.
- If C-SPY has been informed that the content of certain memory areas will be changed during a debug session, C-SPY can keep a copy of that memory readable even when the target does not normally allow reading (such as when executing).
- C-SPY can prevent accesses to areas without any memory at all, which can be important for certain hardware.

The **Memory Configuration** dialog box is automatically displayed the first time you start the C-SPY driver for a given project, unless the device description file contains a memory description which is already specified as correct and complete. Subsequent starts will not display the dialog box unless you have made project changes that might cause the memory configuration to change, for example, if you have selected another device description file.

You can only change the memory configuration when C-SPY is not running.

See also *Memory configuration for C-SPY hardware debugger drivers*, page 134.

Requirements

The C-SPY Segger J-Link driver

Factory ranges

Identifies which device description file that is currently selected and lists the default memory address ranges retrieved from the file in these columns:

Zone

The memory zone, see *C-SPY memory zones*, page 132.

Name

The name of the memory address range.

Start

The start address for the memory address range, in hexadecimal notation.

End

The end address for the memory address range, in hexadecimal notation.

Type

The access type of the memory address range.

Size

The size of the memory address range.

Used ranges

These columns list the memory address ranges that will be used by C-SPY. The columns are normally identical to the factory ranges, unless you have added, removed, or modified ranges.

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Start

The start address for the memory address range, in hexadecimal notation.

End

The end address for the memory address range, in hexadecimal notation.

Cache Type

The cache type of the memory address range.

Size

The size of the memory address range.

Comment

Memory area information.

Use the buttons to override the default memory address ranges that are retrieved from the device description file.

Graphical bar

A graphical bar that visualizes the entire theoretical memory address range for the device. Defined ranges are highlighted in green.

Buttons

These buttons are available for manual ranges:

New

Opens the **Edit Memory Range** dialog box, where you can specify a new memory address range and associate a cache type with it, see *Edit Memory Range dialog box for C-SPY hardware debugger drivers*, page 167.

Edit

Opens the **Edit Memory Range** dialog box, where you can edit the selected memory address area. See *Edit Memory Range dialog box for C-SPY hardware debugger drivers*, page 167.

Remove


Removes the selected memory address range definition.

Use Factory

Restores the list of used ranges to the factory ranges.

Edit Memory Range dialog box for C-SPY hardware debugger drivers

The **Edit Memory Range** dialog box is available from the **Memory Configuration** dialog box.

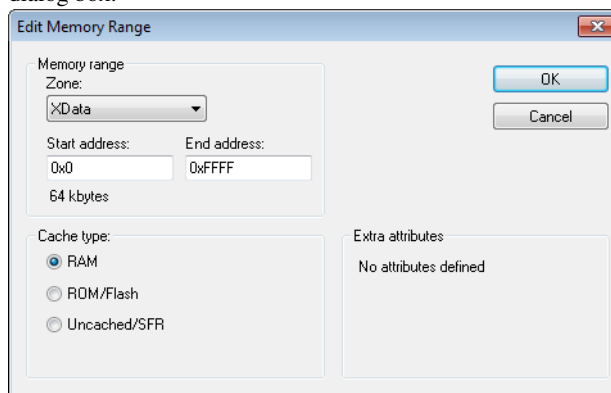

Use this dialog box to specify the memory address ranges, and assign a cache type to each range.

See also *Memory configuration for C-SPY hardware debugger drivers*, page 134.

Requirements

The C-SPY Segger J-Link driver

Memory range

Defines the memory address range specific to your device:

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Start address

Specify the start address for the memory address range, in hexadecimal notation.

End address

Specify the end address for the memory address range, in hexadecimal notation.

Cache type

Selects a cache type to the memory address range. Choose between:

RAM

When the target CPU is not executing, all read accesses from memory are loaded into the cache. For example, if two **Memory** windows show the same part of memory, the actual memory is only read once from the hardware to update both windows. If you modify memory from a C-SPY window, your data is written to cache only. Before any target execution, even stepping a single machine instruction, the RAM cache is flushed so that all modified bytes are written to the memory on your hardware.

ROM/Flash

This memory is assumed not to change during a debug session. Any code within such a range that is downloaded when you start a debug session (or technically, any such code that is part of the application being debugged) is stored in the cache and remains there. Other parts of such ranges are loaded into the cache from memory on demand, but are then kept during the debug session. Note that C-SPY will not allow you to modify such memory from C-SPY windows.

Even though flash memory is normally used as a fixed read-only memory, there are applications that modify parts of flash memory at runtime. For example, some part of flash memory might be used for a file system or simply to store non-volatile information. To reflect this in C-SPY, you should choose the **RAM** cache type for those instead. Then C-SPY will assume that those parts can change at any time during execution.

SFR/Uncached

A range of this type is completely uncached. All read or write commands from a C-SPY window will access the hardware immediately. Typically, this type is useful for special function registers, which can have all sorts of unusual behavior, such as having different values at every read access. This can in turn have side-effects on other registers when they are written, not containing the same value as was previously written, etc.

If you do not have the appropriate information about your device, you can specify an entire memory as **SFR/Uncached**. This is not incorrect, but might make C-SPY slower when updating windows. In fact, this caching type is sometimes used by the default when there is no memory address range information available.

If required, you can disable caching; choose *C-SPY driver*>**Disable Debugger Cache**.


Extra attributes

Provides extra attributes.

This option might not be available in the C-SPY driver you are using.

Memory Access Setup dialog box

The **Memory Access Setup** dialog box is available from the C-SPY driver menu.

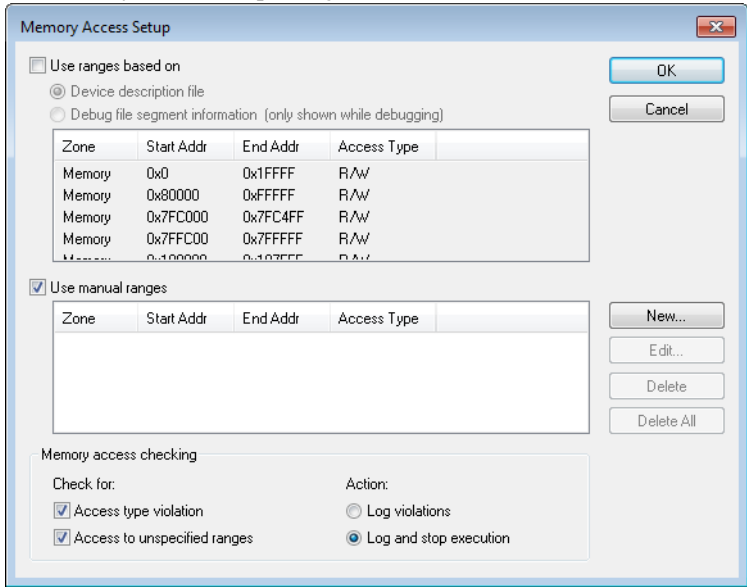

Use this dialog box to specify which set of memory address ranges to be used by C-SPY during debugging.

Note: If you enable both the **Use ranges based on** and the **Use manual ranges** option, memory accesses are checked for all defined ranges.

For information about the columns and the properties displayed, see *Edit Memory Access dialog box*, page 171. See also *Memory configuration for the C-SPY simulator*, page 133.

Requirements

The C-SPY simulator.

Use ranges based on

Specify if the memory configuration should be retrieved from a predefined configuration. Choose between:

Device description file

Retrieves the memory configuration from the device description file that you have specified. See *Selecting a device description file*, page 45.

This option is used by default.

Debug file segment information

Retrieves the memory configuration from the debug file, which has retrieved it from the linker configuration file. This information is only available during a debug session. The advantage of using this option is that the simulator can catch memory accesses outside the linked application.

Use manual ranges

Specify your own ranges manually via the **Edit Memory Access** dialog box. To open this dialog box, click **New** to specify a new memory address range, or select an existing memory address range and choose **Edit** to modify it. For more information, see *Edit Memory Access dialog box*, page 171.

The ranges you define manually are saved between debug sessions.

Memory access checking

Check for determines what to check for:

- **Access type violation**
- **Access to unspecified ranges**

Action selects the action to be performed if an access violation occurs. Choose between:

- **Log violations**
- **Log and stop execution**

Any violations are logged in the **Debug Log** window.

Buttons

These buttons are available for manual ranges:

New

Opens the **Edit Memory Access** dialog box, where you can specify a new memory address range and associate an access type with it, see *Edit Memory Access dialog box*, page 171.

Edit

Opens the **Edit Memory Access** dialog box, where you can edit the selected memory address range. See *Edit Memory Access dialog box*, page 171.

Delete


Deletes the selected memory address range definition.

Delete All

Deletes all defined memory address range definitions.

Edit Memory Access dialog box

The **Edit Memory Access** dialog box is available from the **Memory Access Setup** dialog box.

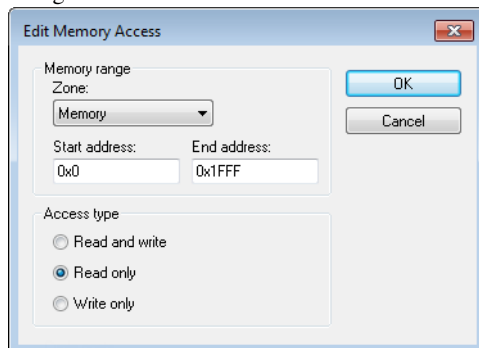

Use this dialog box to specify your memory address ranges for which you want to detect illegal accesses during the simulation, and assign an access type to each range.

Requirements

The C-SPY simulator.

Memory range

Defines the memory address range specific to your device:

Zone

Selects a memory zone, see *C-SPY memory zones*, page 132.

Start address

Specify the start address for the memory address range, in hexadecimal notation.

End address

Specify the end address for the memory address range, in hexadecimal notation.

Access type


Selects an access type to the memory address range. Choose between:

- **Read and write**
- **Read only**
- **Write only.**

Part 2. Analyzing your application

This part of the *C-SPY® Debugging Guide for 8051* includes these chapters:

- Trace
- The application timeline
- Profiling
- Code coverage

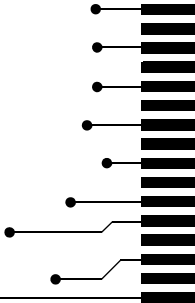



Trace

- Introduction to using trace
- Collecting and using trace data
- Reference information on trace

Introduction to using trace

These topics are covered:

- Reasons for using trace
- Briefly about trace
- Requirements for using trace

See also:

- *Getting started using data logging*, page 193
- *Getting started using interrupt logging*, page 236
- *Profiling*, page 211

REASONS FOR USING TRACE

By using trace, you can inspect the program flow up to a specific state, for instance an application crash, and use the trace data to locate the origin of the problem. Trace data can be useful for locating programming errors that have irregular symptoms and occur sporadically.

BRIEFLY ABOUT TRACE

To use trace in C-SPY requires that your target system can generate trace data. Once generated, C-SPY can collect it and you can visualize and analyze the data in various windows and dialog boxes.

Trace features in C-SPY

In C-SPY, you can use the trace-related windows—**Trace**, **Function Trace**, **Timeline**, and **Find in Trace**.

Depending on your C-SPY driver, you:

- Can set various types of trace breakpoints to control the collection of trace data.

- Have access to windows such as the **Interrupt Log**, **Interrupt Log Summary**, **Data Log**, and **Data Log Summary**.

In addition, several other features in C-SPY also use trace data, features such as Profiling, Code coverage, and Instruction profiling.

REQUIREMENTS FOR USING TRACE

The C-SPY simulator supports trace-related functionality, and there are no specific requirements.

The IAR C-SPY hardware debugger drivers do not support trace.

Collecting and using trace data

These tasks are covered:

- Getting started with trace
- Trace data collection using breakpoints
- Searching in trace data
- Browsing through trace data

GETTING STARTED WITH TRACE

To collect trace data, no specific build settings are required.



- 1 After you have built your application and started C-SPY, open the **Trace** window—available from the driver-specific menu—and click the **Activate** button to enable collecting trace data.
- 2 Start the execution. When the execution stops, for example because a breakpoint is triggered, trace data is displayed in the **Trace** window. For more information about the window, see *Trace window*, page 178.

TRACE DATA COLLECTION USING BREAKPOINTS

A convenient way to collect trace data between two execution points is to start and stop the data collection using dedicated breakpoints.

Choose between these alternatives:

- In the editor or **Disassembly** window, position your insertion point, right-click, and toggle a **Trace Start** or **Trace Stop** breakpoint from the context menu.
- In the **Breakpoints** window, choose **New Breakpoint>Trace Start** or **Trace Stop** from the context menu.

- The C-SPY system macros `__setTraceStartBreak` and `__setTraceStopBreak` can also be used.

For more information about these breakpoints, see *Trace Start breakpoint dialog box*, page 182 and *Trace Stop breakpoint dialog box*, page 183, respectively.

SEARCHING IN TRACE DATA

When you have collected trace data, you can perform searches in the collected data to locate the parts of your code or data that you are interested in, for example, a specific interrupt or accesses of a specific variable.

You specify the search criteria in the **Find in Trace** dialog box and view the result in the **Find in Trace** window.

The **Find in Trace** window is very similar to the **Trace** window, showing the same columns and data, but *only* those rows that match the specified search criteria. Double-clicking an item in the **Find in Trace** window brings up the same item in the **Trace** window.

To search in your trace data:



- 1 On the **Trace** window toolbar, click the **Find** button.
- 2 In the **Find in Trace** dialog box, specify your search criteria.

Typically, you can choose to search for:

- A specific piece of text, for which you can apply further search criteria
- An address range
- A combination of these, like a specific piece of text within a specific address range.

For more information about the various options, see *Find in Trace dialog box*, page 186.

- 3 When you have specified your search criteria, click **Find**. The **Find in Trace** window is displayed, which means you can start analyzing the trace data. For more information, see *Find in Trace window*, page 187.

BROWSING THROUGH TRACE DATA

To follow the execution history, simply look and scroll in the **Trace** window. Alternatively, you can enter *browse mode*.



To enter browse mode, double-click an item in the **Trace** window, or click the **Browse** toolbar button.

The selected item turns yellow and the source and **Disassembly** windows will highlight the corresponding location. You can now move around in the trace data using the up and down arrow keys, or by scrolling and clicking; the source and **Disassembly** windows

will be updated to show the corresponding location. This is like stepping backward and forward through the execution history.

Double-click again to leave browse mode.

Reference information on trace

Reference information about:

- *Trace window*, page 178
- *Function Trace window*, page 181
- *Trace Start breakpoint dialog box*, page 182
- *Trace Stop breakpoint dialog box*, page 183
- *Trace Expressions window*, page 184
- *Find in Trace dialog box*, page 186
- *Find in Trace dialog box*, page 186

Trace window

The **Trace** window is available from the C-SPY driver menu.

This window displays the collected trace data.

See also *Collecting and using trace data*, page 176.

Requirements

The C-SPY simulator.

Trace toolbar

The toolbar in the **Trace** window and in the **Function Trace** window contains:



Enable/Disable

Enables and disables collecting and viewing trace data in this window. This button is not available in the **Function Trace** window.



Clear trace data

Clears the trace buffer. Both the **Trace** window and the **Function Trace** window are cleared.



Toggle source

Toggles the **Trace** column between showing only disassembly or disassembly together with the corresponding source code.

**Browse**

Toggles browse mode on or off for a selected item in the **Trace** window.

**Find**

Displays a dialog box where you can perform a search, see *Find in Trace dialog box*, page 186.

**Save**


Displays a standard **Save As** dialog box where you can save the collected trace data to a text file, with tab-separated columns.

**Edit Settings**

In the C-SPY simulator, this button is not enabled.

Edit Expressions (C-SPY simulator only)

Opens the **Trace Expressions** window, see *Trace Expressions window*, page 184.

**Progress bar**

When a large amount of trace data has been collected, there might be a delay before all of it has been processed and can be displayed. The progress bar reflects that processing.

Display area

This area displays a collected sequence of executed machine instructions. In addition, the window can display trace data for expressions.

Trace					
#	Cycles	Trace			callCount
1396	2766	FFF80574	MOV.L	SP, R2	10
1397	2767	FFF80576	MOV	#0x01:4, R1	10
1398	2771	FFF80578	BSR.A	__DebugBreak	10
__DebugBreak:					
1399	2777	FFF804E0	RTS		10
1400	2780	FFF8057C	BRA.B	0xFFF80572	10
1401	2781	FFF80572	MOV.L	R6, [SP]	10
1402	2782	FFF80574	MOV.L	SP, R2	10
1403	2783	FFF80576	MOV	#0x01:4, R1	10

This area contains these columns for the C-SPY simulator:

#

A serial number for each row in the trace buffer. Simplifies the navigation within the buffer.

Cycles

The number of cycles elapsed to this point.

Trace

The collected sequence of executed machine instructions. Optionally, the corresponding source code can also be displayed.


Expression

Each expression you have defined to be displayed appears in a separate column. Each entry in the expression column displays the value *after* executing the instruction on the same row. You specify the expressions for which you want to collect trace data in the **Trace Expressions** window, see *Trace Expressions window*, page 184.

A red-colored row indicates that the previous row and the red row are not consecutive. This means that there is a gap in the collected trace data, for example because trace data has been lost due to an overflow.

Context menu

This context menu is available:

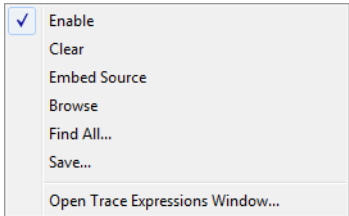

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Enable

Enables and disables collecting and viewing trace data in this window.

Clear

Clears the trace buffer. Both the **Trace** window and the **Function Trace** window are cleared.

Embed source

Toggles the **Trace** column between showing only disassembly or disassembly together with the corresponding source code.

Browse

Toggles browse mode on or off for a selected item in the **Trace** window.

Find All

Displays a dialog box where you can perform a search in the **Trace** window, see *Find in Trace dialog box*, page 186. The search results are displayed in the **Find in Trace** window—available by choosing the **View>Messages** command, see *Find in Trace window*, page 187.

Save


Displays a standard **Save As** dialog box where you can save the collected trace data to a text file, with tab-separated columns.

Open Trace Expressions Window

Opens the **Trace Expressions** window, see *Trace Expressions window*, page 184.

Function Trace window

The **Function Trace** window is available from the C-SPY driver menu during a debug session.

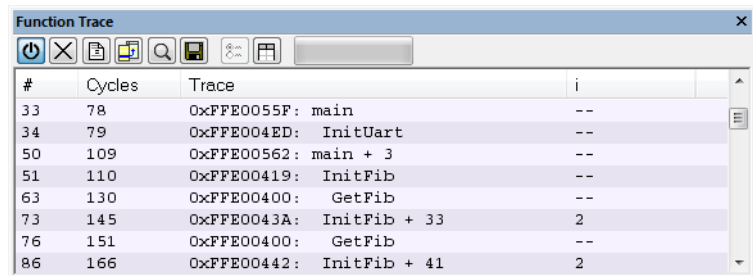

#	Cycles	Trace	i
33	78	0xFFE0055F: main	--
34	79	0xFFE004ED: InitUart	--
50	109	0xFFE00562: main + 3	--
51	110	0xFFE00419: InitFib	--
63	130	0xFFE00400: GetFib	--
73	145	0xFFE0043A: InitFib + 33	2
76	151	0xFFE00400: GetFib	--
86	166	0xFFE00442: InitFib + 41	2

This window displays a subset of the trace data displayed in the **Trace** window. Instead of displaying all rows, the **Function Trace** window shows:

- The functions called or returned to, instead of the traced instruction
- The corresponding trace data.

See also *Memory configuration for the C-SPY simulator*, page 133.

Requirements

The C-SPY simulator.

Toolbar

For information about the toolbar, see *Trace window*, page 178.

Display area


For information about the columns in the display area, see *Trace window*, page 178

Context menu

The context menu in this window is a subset of the context menu in the **Trace** window. All operations performed using this context menu will have effect also in the **Trace** window, and vice versa. For a description of the menu commands, see *Trace window*, page 178.

Trace Start breakpoint dialog box

The **Trace Start** dialog box is available from the context menu that appears when you right-click in the **Breakpoints** window.

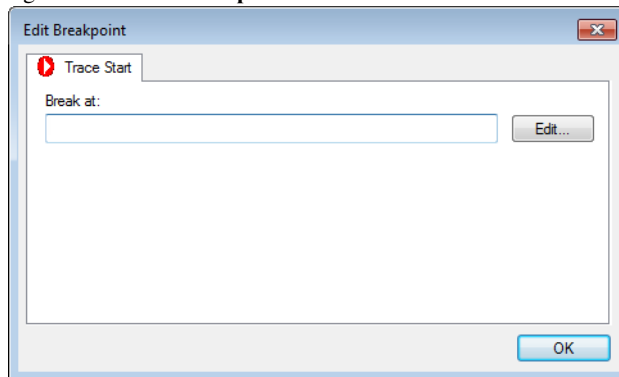

Use this dialog box to set a Trace Start breakpoint where you want to start collecting trace data. If you want to collect trace data only for a specific range, you must also set a Trace Stop breakpoint where you want to stop collecting data.

See also *Trace Stop breakpoint dialog box*, page 183 and *Trace data collection using breakpoints*, page 176.

To set a Trace Start breakpoint:

- 1 In the editor or **Disassembly** window, right-click and choose **Trace Start** from the context menu.
Alternatively, open the **Breakpoints** window by choosing **View>Breakpoints**.
- 2 In the **Breakpoints** window, right-click and choose **New Breakpoint>Trace Start**.

Alternatively, to modify an existing breakpoint, select a breakpoint in the **Breakpoints** window and choose **Edit** on the context menu.

- 3 In the **Break at** text box, specify an expression, an absolute address, or a source location. Click **OK**.
- 4 When the breakpoint is triggered, the trace data collection starts.

Requirements


The C-SPY simulator.

Break At

Specify the code location of the breakpoint in the text box. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Trace Stop breakpoint dialog box

The **Trace Stop** dialog box is available from the context menu that appears when you right-click in the **Breakpoints** window.

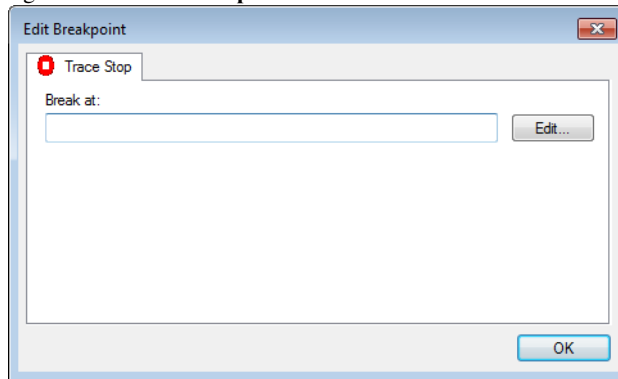

Use this dialog box to set a Trace Stop breakpoint where you want to stop collecting trace data. If you want to collect trace data only for a specific range, you might also need to set a Trace Start breakpoint where you want to start collecting data.

See also *Trace Start breakpoint dialog box*, page 182 and *Trace data collection using breakpoints*, page 176.

To set a Trace Stop breakpoint:

- 1 In the editor or **Disassembly** window, right-click and choose **Trace Stop** from the context menu.

Alternatively, open the **Breakpoints** window by choosing **View>Breakpoints**.

- 2 In the **Breakpoints** window, right-click and choose **New Breakpoint>Trace Stop**.
Alternatively, to modify an existing breakpoint, select a breakpoint in the **Breakpoints** window and choose **Edit** on the context menu.
- 3 In the **Break at** text box, specify an expression, an absolute address, or a source location. Click **OK**.
- 4 When the breakpoint is triggered, the trace data collection stops.

Requirements


The C-SPY simulator.

Break At

Specify the code location of the breakpoint in the text box. Alternatively, click the **Edit** button to open the **Enter Location** dialog box, see *Enter Location dialog box*, page 128.

Trace Expressions window

The **Trace Expressions** window is available from the **Trace** window toolbar.

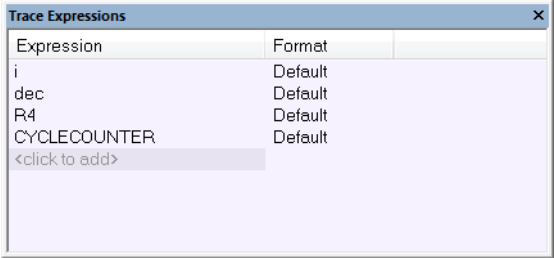

Use this window to specify, for example, a specific variable (or an expression) for which you want to collect trace data.

Requirements

The C-SPY simulator.

Display area

Use the display area to specify expressions for which you want to collect trace data:

Expression

Specify any expression that you want to collect data from. You can specify any expression that can be evaluated, such as variables and registers.

Format

Shows which display format that is used for each expression. Note that you can change display format via the context menu.

Each row in this area will appear as an extra column in the **Trace** window.

Context menu

This context menu is available:

Move Up
Move Down
Remove
Default
Binary
Octal
Decimal
Hexadecimal
Char

These commands are available:

Move Up

Moves the selected expression upward in the window.

Move Down

Moves the selected expression downward in the window.

Remove

Removes the selected expression from the window.

Default Format

Binary Format

Octal Format

Decimal Format

Hexadecimal Format

Char Format

Changes the display format of expressions. The display format setting affects different types of expressions in different ways. Your selection of display format is saved between debug sessions. These commands are available if a selected line in the window contains a variable.

The display format setting affects different types of expressions in these ways:


Variables	The display setting affects only the selected variable, not other variables.
------------------	--

Array elements	The display setting affects the complete array, that is, the same display format is used for each array element.
Structure fields	All elements with the same definition—the same field name and C declaration type—are affected by the display setting.

Find in Trace dialog box

The **Find in Trace** dialog box is available by clicking the **Find** button on the **Trace** window toolbar or by choosing **Edit>Find and Replace>Find**.

Note that the **Edit>Find and Replace>Find** command is context-dependent. It displays the **Find in Trace** dialog box if the **Trace** window is the current window or the **Find** dialog box if the editor window is the current window.

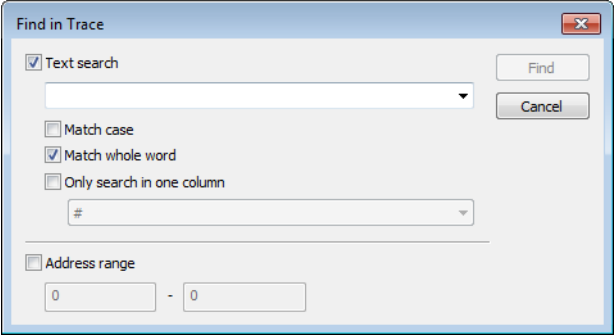

Use this dialog box to specify the search criteria for advanced searches in the trace data.

The search results are displayed in the **Find in Trace** window—available by choosing the **View>Messages** command, see *Find in Trace window*, page 187.

See also *Searching in trace data*, page 177.

Requirements

The C-SPY simulator.

Text search

Specify the string you want to search for. To specify the search criteria, choose between:

Match case

Searches only for occurrences that exactly match the case of the specified text. Otherwise **int** will also find **INT**, **Int**, and so on.

Match whole word

Searches only for the string when it occurs as a separate word. Otherwise **int** will also find **print**, **sprintf**, and so on.

Only search in one column


Searches only in the column you selected from the drop-down list.

Address range

Specify the address range you want to display or search. The trace data within the address range is displayed. If you have also specified a text string in the **Text search** field, the text string is searched for within the address range.

Find in Trace window

The **Find in Trace** window is available from the **View>Messages** menu. Alternatively, it is automatically displayed when you perform a search using the **Find in Trace** dialog box or perform a search using the **Find in Trace** command available from the context menu in the editor window.

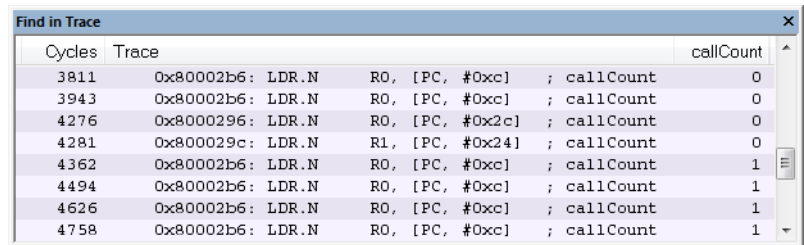

The screenshot shows a window titled "Find in Trace" with a table of results. The table has three columns: "Cycles", "Trace", and "callCount". The data rows are as follows:

Cycles	Trace	callCount
3811	0x80002b6: LDR.N R0, [PC, #0xc] ; callCount	0
3943	0x80002b6: LDR.N R0, [PC, #0xc] ; callCount	0
4276	0x8000296: LDR.N R0, [PC, #0x2c] ; callCount	0
4281	0x800029c: LDR.N R1, [PC, #0x24] ; callCount	0
4362	0x80002b6: LDR.N R0, [PC, #0xc] ; callCount	1
4494	0x80002b6: LDR.N R0, [PC, #0xc] ; callCount	1
4626	0x80002b6: LDR.N R0, [PC, #0xc] ; callCount	1
4758	0x80002b6: LDR.N R0, [PC, #0xc] ; callCount	1

This window displays the result of searches in the trace data. Double-click an item in the **Find in Trace** window to bring up the same item in the **Trace** window.

Before you can view any trace data, you must specify the search criteria in the **Find in Trace** dialog box, see *Find in Trace dialog box*, page 186.

See also *Searching in trace data*, page 177.

Requirements

The C-SPY simulator.

Display area

The **Find in Trace** window looks like the **Trace** window and shows the same columns and data, but *only* those rows that match the specified search criteria.

The application timeline

- Introduction to analyzing your application's timeline
- Analyzing your application's timeline
- Reference information on application timeline

Introduction to analyzing your application's timeline

These topics are covered:

- Briefly about analyzing the timeline
- Requirements for timeline support

See also:

- *Trace*, page 175

BRIEFLY ABOUT ANALYZING THE TIMELINE

C-SPY can provide information for various aspects of your application, collected when the application is running. This can help you to analyze the application's behavior.

You can view the timeline information in different representations:

- As different *graphs* that correlate with the running application in relation to a shared *time axis*.
- As detailed logs
- As summaries of the logs.

Timeline information can be provided for:

Call stack Can be represented in the **Timeline** window, as a graph that displays the sequence of function calls and returns collected by the trace system. You get timing information between the function invocations.

Note that there is also a related **Call Stack** window and a **Function Trace** window, see *Call Stack window*, page 70 and *Function Trace window*, page 181, respectively.

- Data logging

Based on data logs collected by the trace system for up to four different variables or address ranges, specified by means of *Data Log breakpoints*. Choose to display the data logs:

- In the **Timeline** window, as a graph of how the values change over time.
 - In the **Data Log** window and the **Data Log Summary** window.
- Interrupt logging

Based on interrupt logs collected by the trace system. Choose to display the interrupt logs:

- In the **Timeline** window, as a graph of the interrupt events during the execution of your application.
 - In the **Interrupt Log** window and the **Interrupt Log Summary** window.

Interrupt logging can, for example, help you locate which interrupts you can fine-tune to make your application more efficient.

For more information, see the chapter *Interrupts*.

REQUIREMENTS FOR TIMELINE SUPPORT

Trace-based timeline information is supported for:

Target system	Call Stack	Data Logging	Interrupt Logging
C-SPY simulator	Yes	Yes	Yes
C-SPY hardware debugger drivers	—	—	—

Table 8: Supported graphs in the Timeline window

For more information about requirements related to trace data, see *Requirements for using trace*, page 176.

Analyzing your application’s timeline

- These tasks are covered:
- Displaying a graph in the Timeline window
 - Navigating in the graphs
 - Analyzing performance using the graph data
 - Getting started using data logging

See also:

- *Using the interrupt system*, page 233

DISPLAYING A GRAPH IN THE TIMELINE WINDOW

The **Timeline** window can display several graphs; follow this example procedure to display any of these graphs. For an overview of the graphs and what they display, see *Briefly about analyzing the timeline*, page 189.

- 1 Choose **Timeline** from the C-SPY driver menu to open the **Timeline** window.
- 2 In the **Timeline** window, right-click in the window and choose **Select Graphs** from the context menu to select which graphs to be displayed.
- 3 In the **Timeline** window, right-click in the graph area and choose **Enable** from the context menu to enable a specific graph.
- 4 For the Data Log graph, you must set a Data Log breakpoint for each variable you want a graphical representation of in the **Timeline** window. See *Data Log breakpoints dialog box*, page 126.
- 5 Click **Go** on the toolbar to start executing your application. The graphs that you have enabled appear.

NAVIGATING IN THE GRAPHS

After you have performed the steps in *Displaying a graph in the Timeline window*, page 191, you can use any of these alternatives to navigate in the graph:


- Right-click and from the context menu choose **Zoom In** or **Zoom Out**. Alternatively, use the + and – keys. The graph zooms in or out depending on which command you used.
- Right-click in the graph and from the context menu choose **Navigate** and the appropriate command to move backwards and forwards on the graph. Alternatively, use any of the shortcut keys: arrow keys, Home, End, and Ctrl+End.
- Double-click on a sample of interest to highlight the corresponding source code in the editor window and in the **Disassembly** window.
- Click on the graph and drag to select a time interval, which will correlate to the running application. The selection extends vertically over all graphs, but appears highlighted in a darker color for the selected graph. Press Enter or right-click and

from the context menu choose **Zoom>Zoom to Selection**. The selection zooms in. Use the navigation keys in combination with the Shift key to extend the selection.

ANALYZING PERFORMANCE USING THE GRAPH DATA


The **Timeline** window provides a set of tools for analyzing the graph data.

- 1 In the **Timeline** window, right-click and choose **Time Axis Unit** from the context menu. Select which unit to be used on the time axis; choose between **Seconds** and **Cycles**. If **Cycles** is not available, the graphs are based on different clock sources.
- 2 Execute your application to display a graph, following the steps described in *Displaying a graph in the Timeline window*, page 191.
- 3 Whenever execution stops, point at the graph with the mouse pointer to get detailed tooltip information for that location.

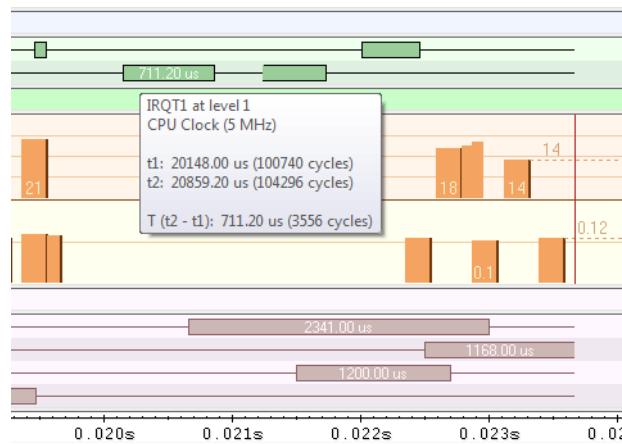

Note that if you have enabled several graphs, you can move the mouse pointer over the different graphs to get graph-specific information.

- 4 Click in the graph and drag to select a time interval. Point in the graph with the mouse pointer to get timing information for the selection.

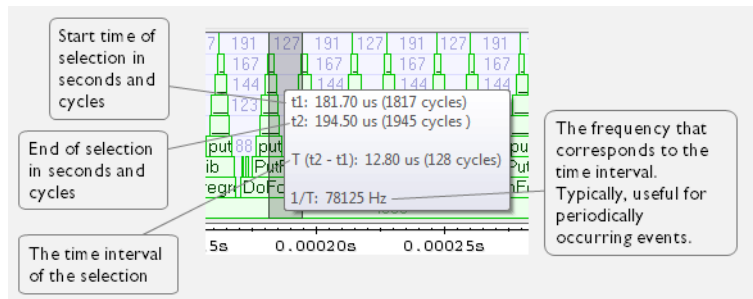

GETTING STARTED USING DATA LOGGING

- I To set a data log breakpoint, use one of these methods:
 - In the **Breakpoints** window, right-click and choose **New Breakpoint>Data Log** to open the breakpoints dialog box. Set a breakpoint on the memory location that you want to collect log information for. This can be specified either as a variable or as an address.
 - In the **Memory** window, select a memory area, right-click and choose **Set Data Log Breakpoint** from the context menu. A breakpoint is set on the start address of the selection.
 - In the editor window, select a variable, right-click and choose **Set Data Log Breakpoint** from the context menu. The breakpoint will be set on the part of the variable that the microcontroller can access using one instruction.

You can set up to four data log breakpoints. For more information, see *Data Log breakpoints*, page 107.

- 2 Choose **C-SPY driver>Data Log** to open the **Data Log** window. Optionally, you can also choose:
 - **C-SPY driver>Data Log Summary** to open the **Data Log Summary** window
 - **C-SPY driver>Timeline** to open the **Timeline** window to view the Data Log graph.
- 3 From the context menu, available in the **Data Log** window, choose **Enable** to enable the logging.
- 4 Start executing your application program to collect the log information.
- 5 To view the data log information, look in the **Data Log** window, the **Data Log Summary** window, or the Data Log graph in the **Timeline** window.
- 6 If you want to save the log or summary to a file, choose **Save to log file** from the context menu in the window in question.

- 7 To disable data logging, choose **Disable** from the context menu in each window where you have enabled it.

Reference information on application timeline

Reference information about:


- *Timeline window—Call Stack graph*, page 194
- *Timeline window—Data Log graph*, page 198
- *Data Log window*, page 202
- *Data Log Summary window*, page 205
- *Viewing Range dialog box*, page 208

See also:

- *Timeline window—Interrupt Log graph*, page 248

Timeline window—Call Stack graph

The **Timeline** window is available from the *C-SPY driver* menu during a debug session.

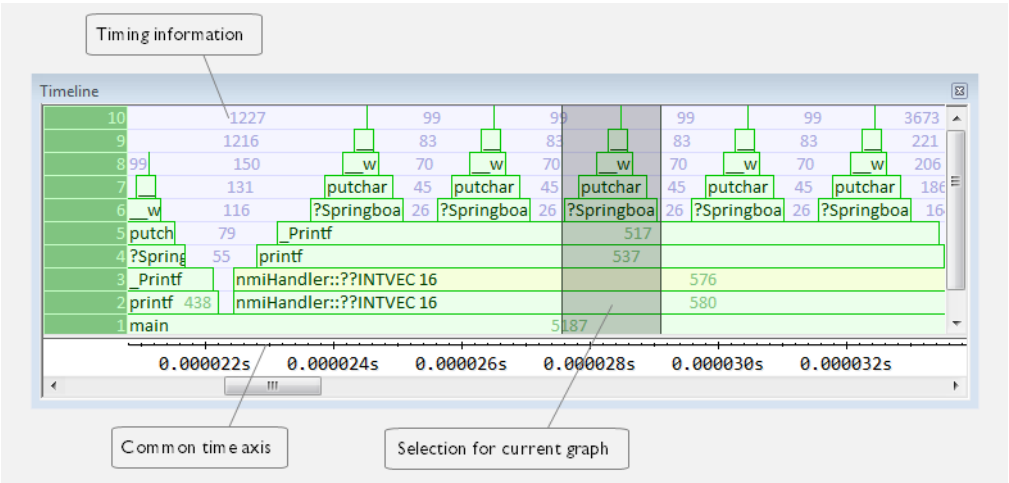

This window displays trace data represented as different graphs, in relation to a shared time axis.

The Call Stack graph displays the sequence of function calls and returns collected by the trace system.

Note: There is a limit on the number of saved logs. When this limit is exceeded, the oldest entries in the buffer are erased.

Requirements

The C-SPY simulator.

Display area for the Call Stack graph

Each function invocation is displayed as a horizontal bar which extends from the time of entry until the return. Called functions are displayed above its caller. The horizontal bars use four different colors:

- Medium green for normal C functions with debug information
- Light green for functions known to the debugger through an assembler label
- Medium yellow for normal interrupt handlers, with debug information
- Light yellow for interrupt handlers known to the debugger through an assembler label

The timing information represents the number of cycles spent in, or between, the function invocations.


At the bottom of the window, there is a shared time axis that uses seconds or cycles as the time unit.

Click in the graph to display the corresponding source code.

Note: For highly optimized code, C-SPY might not be able to identify all calls. This means that for highly optimized code, the call stack is not entirely trustworthy.

Context menu

This context menu is available:

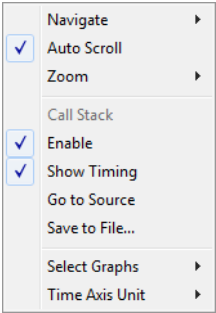

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Navigate

Commands for navigating the graph(s). Choose between:

Next moves the selection to the next relevant point in the graph. Shortcut key: right arrow.

Previous moves the selection backward to the previous relevant point in the graph. Shortcut key: left arrow.

First moves the selection to the first data entry in the graph. Shortcut key: Home.

Last moves the selection to the last data entry in the graph. Shortcut key: End.

End moves the selection to the last data in any displayed graph, in other words the end of the time axis. Shortcut key: Ctrl+End.

Auto Scroll

Toggles automatic scrolling on or off. When on, the most recently collected data is automatically displayed when you choose **Navigate>End**.

Zoom

Commands for zooming the window, in other words, changing the time scale. Choose between:

Zoom to Selection makes the current selection fit the window. Shortcut key: Return.

Zoom In zooms in on the time scale. Shortcut key: +

Zoom Out zooms out on the time scale. Shortcut key: –

10ns, 100ns, 1us, etc makes an interval of 10 nanoseconds, 100 nanoseconds, 1 microsecond, respectively, fit the window.

1ms, 10ms, etc makes an interval of 1 millisecond or 10 milliseconds, respectively, fit the window.

10m, 1h, etc makes an interval of 10 minutes or 1 hour, respectively, fit the window.

Call Stack

A heading that shows that the Call stack-specific commands below are available.

Enable

Toggles the display of the graph on or off. If you disable a graph, that graph will be indicated as **OFF** in the window. If no data has been collected for a graph, **no data** will appear instead of the graph.

Show Timing

Toggles the display of the timing information on or off.

Go To Source

Displays the corresponding source code in an editor window, if applicable.

Save to File

Saves all contents (or the selected contents) of the Call Stack graph to a file. The menu command is only available when C-SPY is not running.

Select Graphs

Selects which graphs to be displayed in the **Timeline** window.

Time Axis Unit

Selects the unit used in the time axis; choose between **Seconds** and **Cycles**.


If **Cycles** is not available, the graphs are based on different clock sources. In that case you can view cycle values as tooltip information by pointing at the graph with your mouse pointer.

Profile Selection

Enables profiling time intervals in the **Function Profiler** window. Note that this command is only available if the C-SPY driver supports PC Sampling.

Timeline window—Data Log graph

The **Timeline** window is available from the C-SPY driver menu during a debug session.

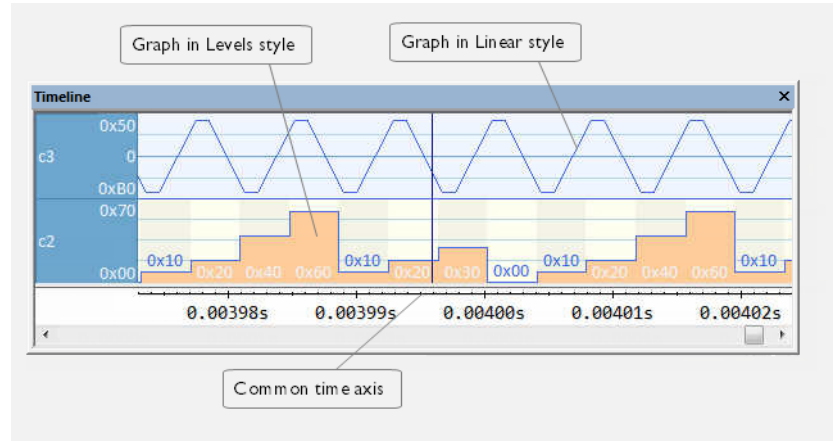

This window displays trace data represented as different graphs, in relation to a shared time axis.

The Data Log graph displays the data logs collected by the trace system, for up to four different variables or address ranges specified as Data Log breakpoints.

Note: There is a limit on the number of saved logs. When this limit is exceeded, the oldest entries in the buffer are erased.

Requirements

The C-SPY simulator.

Display area for the Data Log graph

Where:


- The label area at the left end of the graph displays the variable name or the address for which you have specified the Data Log breakpoint.
- The graph itself displays how the value of the variable changes over time. The label area also displays the limits, or range, of the Y-axis for a variable. You can use the context menu to change these limits. The graph is a graphical representation of the information in the **Data Log** window, see *Data Log window*, page 202.
- The graph can be displayed either as a thin line between consecutive logs or as a rectangle for every log (optionally color-filled).

- A red vertical line indicates overflow, which means that the communication channel failed to transmit all data logs from the target system. A red question mark indicates a log without a value.

At the bottom of the window, there is a shared time axis that uses seconds or cycles as the time unit.

Context menu

This context menu is available:

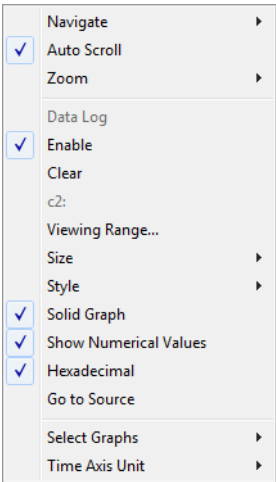

Note: The contents of this menu are dynamic and depend on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Navigate

Commands for navigating the graph(s). Choose between:

Next moves the selection to the next relevant point in the graph. Shortcut key: right arrow.

Previous moves the selection backward to the previous relevant point in the graph. Shortcut key: left arrow.

First moves the selection to the first data entry in the graph. Shortcut key: Home.

Last moves the selection to the last data entry in the graph. Shortcut key: End.

End moves the selection to the last data in any displayed graph, in other words the end of the time axis. Shortcut key: Ctrl+End.

Auto Scroll

Toggles automatic scrolling on or off. When on, the most recently collected data is automatically displayed when you choose **Navigate>End**.

Zoom

Commands for zooming the window, in other words, changing the time scale. Choose between:

Zoom to Selection makes the current selection fit the window. Shortcut key: Return.

Zoom In zooms in on the time scale. Shortcut key: +

Zoom Out zooms out on the time scale. Shortcut key: –

10ns, **100ns**, **1us**, etc makes an interval of 10 nanoseconds, 100 nanoseconds, 1 microsecond, respectively, fit the window.

1ms, **10ms**, etc makes an interval of 1 millisecond or 10 milliseconds, respectively, fit the window.

10m, **1h**, etc makes an interval of 10 minutes or 1 hour, respectively, fit the window.

Data Log

A heading that shows that the Data Log-specific commands below are available.

Enable

Toggles the display of the graph on or off. If you disable a graph, that graph will be indicated as **OFF** in the window. If no data has been collected for a graph, **no data** will appear instead of the graph.

Clear

Deletes the log information. Note that this will also happen when you reset the debugger.

Variable

The name of the variable for which the Data Log-specific commands below apply. This menu command is context-sensitive, which means it reflects the Data Log graph you selected in the **Timeline** window (one of up to four).

Viewing Range

Displays a dialog box, see *Viewing Range dialog box*, page 208.

Size

Determines the vertical size of the graph; choose between **Small**, **Medium**, and **Large**.

Solid Graph

Displays the graph as a color-filled solid graph instead of as a thin line.

Show Numerical Value

Shows the numerical value of the variable, in addition to the graph.

Hexadecimal

Toggles between displaying the selected value in decimal or hexadecimal format. Note that this setting also affects the log window.

Go To Source

Displays the corresponding source code in an editor window, if applicable.

Select Graphs

Selects which graphs to be displayed in the **Timeline** window.


Time Axis Unit

Selects the unit used in the time axis; choose between **Seconds** and **Cycles**.

If **Cycles** is not available, the graphs are based on different clock sources. In that case you can view cycle values as tooltip information by pointing at the graph with your mouse pointer.

Data Log window

The **Data Log** window is available from the C-SPY driver menu.

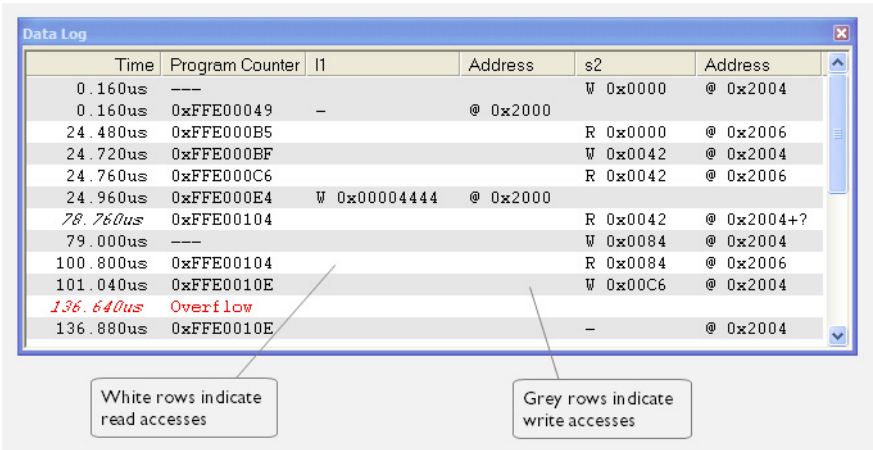

Use this window to log accesses to up to four different memory locations or areas.

Note: There is a limit on the number of saved logs. When this limit is exceeded, the oldest entries in the buffer are erased.

See also *Getting started using data logging*, page 193.

Requirements

The C-SPY simulator.

Display area

Each row in the display area shows the time, the program counter, and, for every tracked data object, its value and address. All information is cleared on reset. The information is displayed in these columns:

Time

If the time is displayed in italics, the target system has not been able to collect a correct time, but instead had to approximate it.

This column is available when you have selected **Show time** from the context menu.

Cycles

The number of cycles from the start of the execution until the event.

If a cycle is displayed in italics, the target system has not been able to collect a correct time, but instead had to approximate it.

This column is available when you have selected **Show cycles** from the context menu.

Program Counter*

Displays one of these:

An address, which is the content of the PC, that is, the address of the instruction that performed the memory access.

---, the target system failed to provide the debugger with any information.

Overflow in red, the communication channel failed to transmit all data from the target system.

Value

Displays the access type and the value (using the access size) for the location or area you want to log accesses to. For example, if zero is read using a byte access it will be displayed as 0x00, and for a long access it will be displayed as 0x00000000.

To specify what data you want to log accesses to, use the **Data Log** breakpoint dialog box. See *Data Log breakpoints*, page 107.


Address

The actual memory address that is accessed. For example, if only a byte of a word is accessed, only the address of the byte is displayed. The address is calculated as base address + offset, where the base address is retrieved from the **Data Log** breakpoint dialog box and the offset is retrieved from the logs. If the log from the target system does not provide the debugger with an offset, the offset contains + ?.

* You can double-click a line in the display area. If the value of the PC for that line is available in the source code, the editor window displays the corresponding source code (this does not include library source code).

Context menu

This context menu is available:

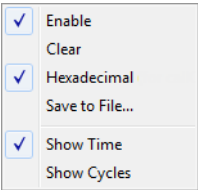

These commands are available:

Enable

Enables the logging system. The system will log information also when the window is closed.

Clear

Deletes the log information. Note that this will also happen when you reset the debugger.

Hexadecimal

Toggles between displaying the selected value in decimal or hexadecimal format. Note that this setting also affects the log window.

Save to File

Displays a standard file selection dialog box where you can select the destination file for the log information. The entries in the log file are separated by TAB and LF characters. An **X** in the **Approx** column indicates that the timestamp is an approximation.

Show Time

Displays the **Time** column.

If the **Time** column is displayed by default in the C-SPY driver you are using, this menu command is not available.

Show Cycles

Displays the **Cycles** column.

If the **Cycles** column is not supported in the C-SPY driver you are using, this menu command is not available.

Data Log Summary window

The **Data Log Summary** window is available from the C-SPY driver menu.

Data	Total Accesses	Read Accesses	Write Accesses	Unknown Accesses
tVar1	42	0	25	17
tVar2	66	17	49	0
tVar3	32	32	0	0
Approximative time count: 16 Overflow count: 8 Current time: 4301.52 us				

This window displays a summary of data accesses to specific memory location or areas.

See also *Getting started using data logging*, page 193.

Requirements

The C-SPY simulator.

Display area

Each row in this area displays the type and the number of accesses to each memory location or area in these columns. Summary information is listed at the bottom of the display area.

Data

The name of the data object you have selected to log accesses to. To specify what data object you want to log accesses to, use the **Data Log** breakpoint dialog box. See *Data Log breakpoints*, page 107.

Total Accesses

The total number of accesses.

If the sum of read accesses and write accesses is less than the total accesses, the target system for some reason did not provide valid access type information for all accesses.

Read Accesses

The total number of read accesses.

Write Accesses

The total number of write accesses.

Unknown Accesses

The number of unknown accesses, in other words, accesses where the access type is not known.

Approximative time count

The information displayed depends on the C-SPY driver you are using.

For some C-SPY drivers, this information is not displayed or the value is always zero. In this case, all logs have an exact time stamp.

For other C-SPY drivers, a non-zero value is displayed. The value represents the amount of logs with an approximative time stamp. This might happen if the bandwidth in the communication channel is too low compared to the amount of data packets generated by the CPU or if the CPU generated packets with an approximative time stamp.

Overflow count

The information displayed depends on the C-SPY driver you are using.

For some C-SPY drivers, this information is not displayed or the value is always zero.

For other C-SPY drivers, the number represents the amount of overflows in the communication channel which can cause logs to be lost. If this happens, it indicates that logs might be incomplete. To solve this, make sure not to use all C-SPY log features simultaneously or check used bandwidth for the communication channel.

Current time

/Current cycles


The information displayed depends on the C-SPY driver you are using.

For some C-SPY drivers, the value is always zero or not visible at all.

For other C-SPY drivers, the number represents the current time or cycles—the number of cycles or the execution time since the start of execution.

Context menu

This context menu is available:

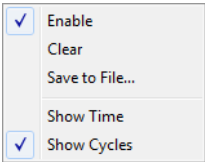

These commands are available:

Enable

Enables the logging system. The system will log information also when the window is closed.

Clear

Deletes the log information. Note that this will also happen when you reset the debugger.

Save to File

Displays a standard file selection dialog box where you can select the destination file for the log information. The entries in the log file are separated by `TAB` and `LF` characters. An **X** in the **Approx** column indicates that the timestamp is an approximation.

Show Time

Displays the **Time** column.

If the **Time** column is displayed by default in the C-SPY driver you are using, this menu command is not available.


Show Cycles

Displays the **Cycles** column.

If the **Cycles** column is not supported in the C-SPY driver you are using, this menu command is not available.

Viewing Range dialog box

The **Viewing Range** dialog box is available from the context menu that appears when you right-click in any graph in the **Timeline** window that uses the linear, levels or columns style.

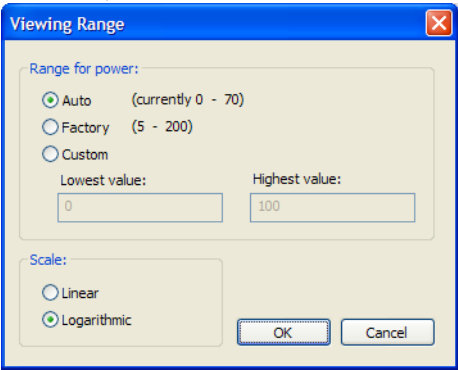

Use this dialog box to specify the value range, that is, the range for the Y-axis for the graph.

Requirements

The C-SPY simulator.

Range for ...

Selects the viewing range for the displayed values:

Auto

Uses the range according to the range of the values that are actually collected, continuously keeping track of minimum or maximum values. The currently computed range, if any, is displayed in parentheses. The range is rounded to reasonably *even* limits.

Factory

For the Power Log graph: Uses the range according to the properties of the measuring hardware (only if supported by the product edition you are using).

For the other graphs: Uses the range according to the value range of the variable, for example 0–65535 for an unsigned 16-bit integer.

Custom

Use the text boxes to specify an explicit range.

Scale

Selects the scale type of the Y-axis:

- **Linear**
- **Logarithmic**

Profiling

- Introduction to the profiler
- Using the profiler
- Reference information on the profiler

Introduction to the profiler

These topics are covered:

- Reasons for using the profiler
- Briefly about the profiler
- Requirements for using the profiler

REASONS FOR USING THE PROFILER

Function profiling can help you find the functions in your source code where the most time is spent during execution. You should focus on those functions when optimizing your code. A simple method of optimizing a function is to compile it using speed optimization. Alternatively, you can move the data used by the function into more efficient memory. For detailed information about efficient memory usage, see the *IAR C/C++ Compiler User Guide for 8051*.

Alternatively, you can use *filtered profiling*, which means that you can exclude, for example, individual functions from being profiled. To profile only a specific part of your code, you can select a *time interval*—using the **Timeline** window—for which C-SPY produces profiling information.

Instruction profiling can help you fine-tune your code on a very detailed level, especially for assembler source code. Instruction profiling can also help you to understand where your compiled C/C++ source code spends most of its time, and perhaps give insight into how to rewrite it for better performance.

BRIEFLY ABOUT THE PROFILER

Function profiling information is displayed in the **Function Profiler** window, that is, timing information for the functions in an application. Profiling must be turned on explicitly using a button on the window's toolbar, and will stay enabled until it is turned off.

Instruction profiling information is displayed in the **Disassembly** window, that is, the number of times each instruction has been executed.

Profiling sources

The profiler can use different mechanisms, or *sources*, to collect profiling information. Depending on the available trace source features, one or more of the sources can be used for profiling:

- *Trace (calls)*
The full instruction trace is analyzed to determine all function calls and returns. When the collected instruction sequence is incomplete or discontinuous, the profiling information is less accurate.
- *Trace (flat)*
Each instruction in the full instruction trace or each PC Sample is assigned to a corresponding function or code fragment, without regard to function calls or returns. This is most useful when the application does not exhibit normal call/return sequences, such as when you are using an RTOS, or when you are profiling code which does not have full debug information.

REQUIREMENTS FOR USING THE PROFILER

The C-SPY simulator support the profiler; there are no specific requirements.

Using the profiler

These tasks are covered:

- Getting started using the profiler on function level
- Analyzing the profiling data
- Getting started using the profiler on instruction level

GETTING STARTED USING THE PROFILER ON FUNCTION LEVEL

To display function profiling information in the Function Profiler window:

- I Build your application using these options:

Category	Setting
C/C++ Compiler	Output>Generate debug information
Linker	Output>Format>Debug information for C-SPY

Table 9: Project options for enabling the profiler



- 2 When you have built your application and started C-SPY, choose **C-SPY driver>Function Profiler** to open the **Function Profiler** window, and click the **Enable** button to turn on the profiler. Alternatively, choose **Enable** from the context menu that is available when you right-click in the **Function Profiler** window.
- 3 Start executing your application to collect the profiling information.
- 4 Profiling information is displayed in the **Function Profiler** window. To sort, click on the relevant column header.



- 5 When you start a new sampling, you can click the **Clear** button—alternatively, use the context menu—to clear the data.


ANALYZING THE PROFILING DATA

Here follow some examples of how to analyze the data.

The first figure shows the result of profiling using **Source: Trace (calls)**. The profiler follows the program flow and detects function entries and exits.


- For the **InitFib** function, **Flat Time** 231 is the time spent inside the function itself.
- For the **InitFib** function, **Acc Time** 487 is the time spent inside the function itself, including all functions **InitFib** calls.
- For the **InitFib/GetFib** function, **Acc Time** 256 is the time spent inside **GetFib** (but only when called from **InitFib**), including any functions **GetFib** calls.

- Further down in the data, you can find the **GetFib** function separately and see all of its subfunctions (in this case none).

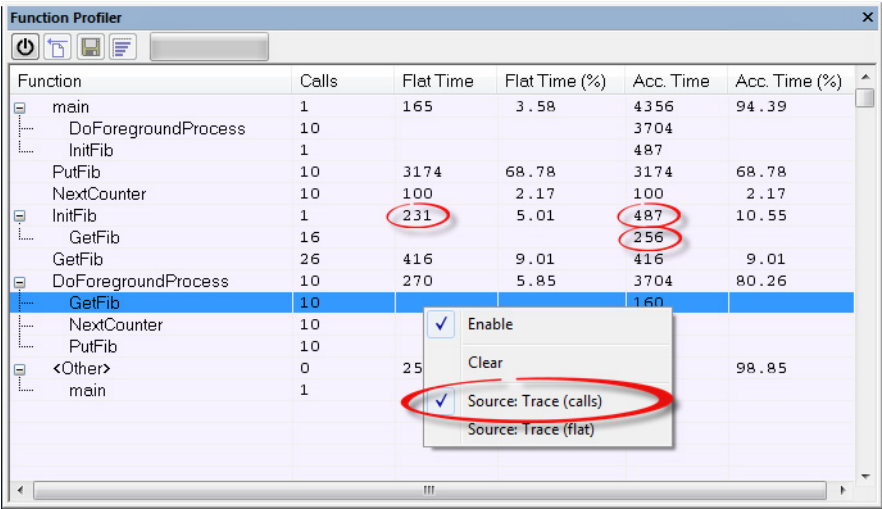

The second figure shows the result of profiling using **Source: Trace (flat)**. In this case, the profiler does not follow the program flow, instead the profiler only detects whether the PC address is within the function scope. For incomplete trace data, the data might contain minor errors.

For the **InitFib** function, **Flat Time** 231 is the time (number of hits) spent inside the function itself.

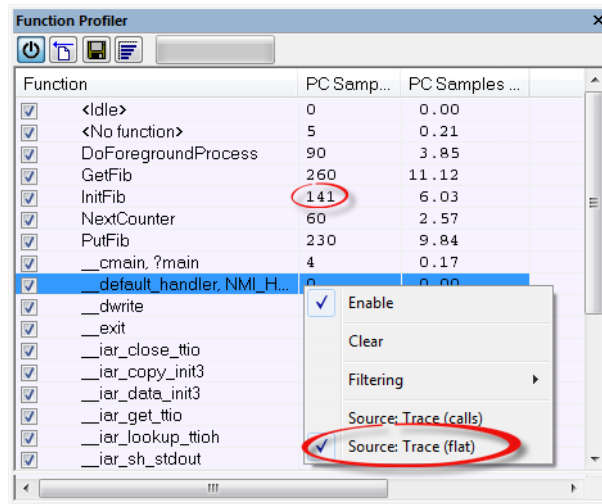


To secure valid data when using a debug probe, make sure to use the maximum trace buffer size and set a breakpoint in your code to stop the execution before the buffer is full.

Note: The <No function> entry represents PC values that are not within the known C-SPY ranges for the application.

GETTING STARTED USING THE PROFILER ON INSTRUCTION LEVEL

To display instruction profiling information in the Disassembly window:

- 1 When you have built your application and started C-SPY, choose **View>Disassembly** to open the **Disassembly** window, and choose **Instruction Profiling>Enable** from the context menu that is available when you right-click in the left-hand margin of the **Disassembly** window.
- 2 Make sure that the **Show** command on the context menu is selected, to display the profiling information.
- 3 Start executing your application to collect the profiling information.
- 4 When the execution stops, for instance because the program exit is reached or a breakpoint is triggered, you can view instruction level profiling information in the left-hand margin of the window.

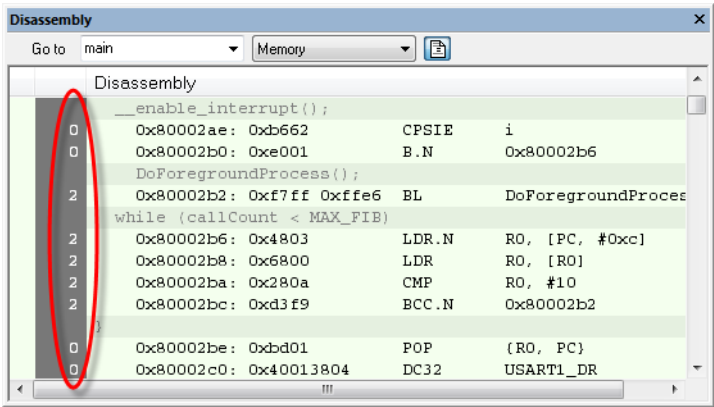

For each instruction, the number of times it has been executed is displayed.

Reference information on the profiler

Reference information about:

- *Function Profiler window*, page 216

See also:

- *Disassembly window*, page 65

Function Profiler window

The **Function Profiler** window is available from the C-SPY driver menu.

A screenshot of the 'Function Profiler' window. It has a title bar 'Function Profiler' and a toolbar with icons for power, refresh, save, and print. The main area is a table with the following data:

Function	Calls	Flat Time	Flat Time (%)	Acc. Time	Acc. Time (%)
DoForegroundProcess	49	5770	31.14	7198	38.84
GetFib	0	0	0.00	0	0.00
InitFib	0	0	0.00	0	0.00
InitUart	0	0	0.00	0	0.00
PutFib	4	1332	7.19	1332	7.19
UartReceiveHandler	4	96	0.52	1428	7.71
main	0	0	0.00	0	0.00

This window displays function profiling information.

When Trace (flat) is selected, a checkbox appears on each line in the left-side margin of the window. Use these checkboxes to include or exclude lines from the profiling. Excluded lines are dimmed but not removed.

See also *Using the profiler*, page 212.

Requirements

The C-SPY simulator.

Toolbar

The toolbar contains:



Enable/Disable

Enables or disables the profiler.



Clear

Clears all profiling data.



Save

Opens a standard **Save As** dialog box where you can save the contents of the window to a file, with tab-separated columns. Only non-expanded rows are included in the list file.



Graphical view

Overlays the values in the percentage columns with a graphical bar.

Progress bar

Displays a backlog of profiling data that is still being processed. If the rate of incoming data is higher than the rate of the profiler processing the data, a backlog is accumulated. The progress bar indicates that the profiler is still processing data, but also approximately how far the profiler has come in the process.

Note that because the profiler consumes data at a certain rate and the target system supplies data at another rate, the amount of data remaining to be processed can both increase and decrease. The progress bar can grow and shrink accordingly.

Display area

The content in the display area depends on which source that is used for the profiling information:

- *For the Trace (calls) source*, the display area contains one line for each function compiled with debug information enabled. When some profiling information has been collected, it is possible to expand rows of functions that have called other

functions. The child items for a given function list all the functions that have been called by the parent function and the corresponding statistics.

- *For the Trace (flat) source*, the display area contains one line for each C function of your application, but also lines for sections of code from the runtime library or from other code without debug information, denoted only by the corresponding assembler labels. Each executed PC address from trace data is treated as a separate sample and is associated with the corresponding line in the **Profiling** window. Each line contains a count of those samples.

For information about which views that are supported in the C-SPY driver you are using, see *Requirements for using the profiler*, page 212.

More specifically, the display area provides information in these columns:

Function (All sources)

The name of the profiled C function.

Calls (Trace (calls))

The number of times the function has been called.

Flat time (Trace (calls))

The time expressed as the estimated number of cycles spent inside the function.

Flat time (%) (Trace (calls))

Flat time expressed as a percentage of the total time.

Acc. time (Trace (calls))

The time expressed as the estimated number of cycles spent inside the function and everything called by the function.

Acc. time (%) (Trace (calls))

Accumulated time expressed as a percentage of the total time.

PC Samples (Trace (flat))


The number of PC samples associated with the function.

PC Samples (%) (Trace (flat))

The number of PC samples associated with the function as a percentage of the total number of samples.

Context menu

This context menu is available:

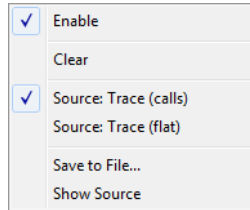

The contents of this menu depend on the C-SPY driver you are using.

These commands are available:

Enable

Enables the profiler. The system will also collect information when the window is closed.

Clear

Clears all profiling data.

Filtering

Selects which part of your code to profile. Choose between:

Check All—Excludes all lines from the profiling.

Uncheck All—Includes all lines in the profiling.

Load—Reads all excluded lines from a saved file.

Save—Saves all excluded lines to a file. Typically, this can be useful if you are a group of engineers and want to share sets of exclusions.

These commands are only available when using Trace (flat).

Source

Selects which source to be used for the profiling information. See also *Profiling sources*, page 212.

Note that the available sources depend on the C-SPY driver you are using.

Choose between:

Trace (calls)—the instruction count for instruction profiling is only as complete as the collected trace data.

Trace (flat)—the instruction count for instruction profiling is only as complete as the collected trace data.

Save to File

Saves all profiling data to a file.

Show Source

Opens the editor window (if not already opened) and highlights the selected source line.

Code coverage

- Introduction to code coverage
- Using code coverage
- Reference information on code coverage

Introduction to code coverage

These topics are covered:

- Reasons for using code coverage
- Briefly about code coverage
- Requirements and restrictions for using code coverage

REASONS FOR USING CODE COVERAGE

The code coverage functionality is useful when you design your test procedure to verify whether all parts of the code have been executed. It also helps you identify parts of your code that are not reachable.

BRIEFLY ABOUT CODE COVERAGE

The **Code Coverage** window reports the status of the current code coverage analysis for C or C++ code. For every program, module, and function, the analysis shows the percentage of code that has been executed since code coverage was turned on up to the point where the application has stopped. In addition, all statements that have not been executed are listed. The analysis will continue until turned off.

Note: Assembler code is not covered in the **Code Coverage** window. To view code coverage for assembler code, use the **Disassembly** window.

REQUIREMENTS AND RESTRICTIONS FOR USING CODE COVERAGE

Code coverage is supported by the C-SPY simulator and there are no specific requirements or restrictions.

Using code coverage

These tasks are covered:

- Getting started using code coverage


GETTING STARTED USING CODE COVERAGE

To get started using code coverage:

- 1 Before you can use the code coverage functionality, you must build your application using these options:

Category	Setting
C/C++ Compiler	Output>Generate debug information
Linker	Format>Debug information for C-SPY

Table 10: Project options for enabling code coverage

- 2 After you have built your application and started C-SPY, choose **View>Code Coverage** to open the **Code Coverage** window.
- 3  Click the **Activate** button, alternatively choose **Activate** from the context menu, to switch on code coverage.
- 4 Start the execution. When the execution stops, for instance because the program exit is reached or a breakpoint is triggered, the code coverage information is updated automatically.

Reference information on code coverage


Reference information about:

- *Code Coverage window*, page 223

See also *Single stepping*, page 58.

Code Coverage window

The **Code Coverage** window is available from the **View** menu.

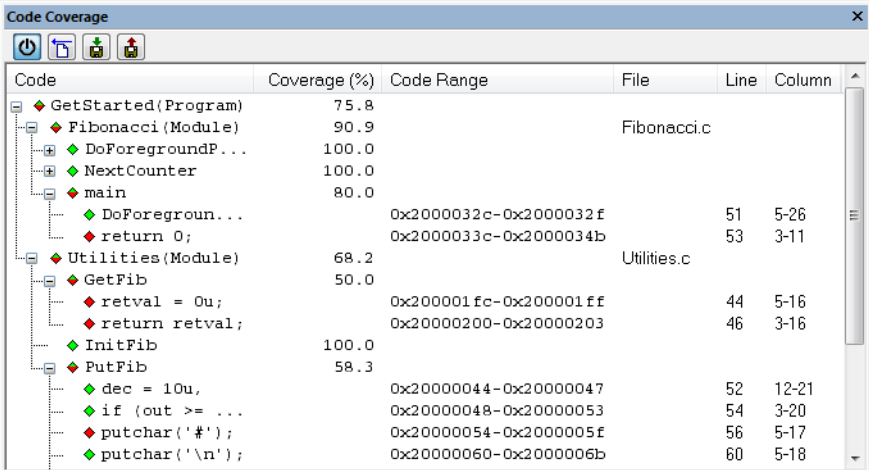

Code	Coverage (%)	Code Range	File	Line	Column
GetStarted(Program)	75.8				
Fibonacci(Module)	90.9		Fibonacci.c		
DoForegroundP...	100.0				
NextCounter	100.0				
main	80.0				
DoForegroun...		0x2000032c-0x2000032f		51	5-26
return 0;		0x2000033c-0x2000034b		53	3-11
Utilities(Module)	68.2		Utilities.c		
GetFib	50.0				
retval = 0u;		0x200001fc-0x200001ff		44	5-16
return retval;		0x20000200-0x20000203		46	3-16
InitFib	100.0				
PutFib	58.3				
dec = 10u;		0x20000044-0x20000047		52	12-21
if (out >= ...		0x20000048-0x20000053		54	3-20
putchar('#');		0x20000054-0x2000005f		56	5-17
putchar('\n');		0x20000060-0x2000006b		60	5-18

This window reports the status of the current code coverage analysis. For every program, module, and function, the analysis shows the percentage of code that has been executed since code coverage was turned on up to the point where the application has stopped. In addition, all statements that have not been executed are listed. The analysis will continue until turned off.

Only source code that was compiled with debug information is displayed. Therefore, startup code, exit code, and library code are not displayed in the window. Furthermore, coverage information for statements in inlined functions is not displayed. Only the statement containing the inlined function call is marked as executed.

A statement is considered to be executed when all its instructions have been executed. By default, when a statement has been executed, it is removed from the window and the percentage is increased correspondingly.

Requirements

The C-SPY simulator.

Display area

Double-clicking a statement or a function in the **Code Coverage** window displays that statement or function as the current position in the editor window, which becomes the active window.

These columns are available:

Code

The code coverage information as a tree structure, showing the program, module, function, and statement levels. The plus sign and minus sign icons allow you to expand and collapse the structure.

These icons give you an overview of the current status on all levels:

- Red diamond: 0% of the modules or functions has been executed.
- Green diamond: 100% of the modules or functions has been executed.
- Red and green diamond: Some of the modules or functions have been executed.

Red, green, and yellow colors can be used as highlight colors in the source editor window. In the editor window, the yellow color signifies partially executed.

Coverage (%)

The amount of statements that has been covered so far, that is, the number of executed statements divided with the total number of statements.

Code Range

The address range in code memory where the statement is located.

File

The source file where the step point is located.

Line


The source file line where the step point is located.

Column

The source file column where the step point is located.

Context menu

This context menu is available:

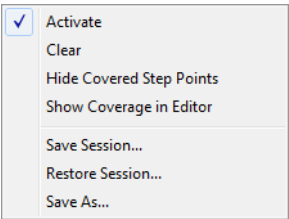

These commands are available:



Activate

Switches code coverage on and off during execution.

**Clear**

Clears the code coverage information. All step points are marked as not executed.

Hide Covered Step Points

Toggles the display of covered step points on and off. When this option is selected, executed statements are removed from the window.

Show Coverage in Editor

Toggles the red, green, and yellow highlight colors that indicate code coverage in the source editor window on and off.

**Save session**

Saves your code coverage session data to a *.dat file. This is useful if you for some reason must abort your debug session, but want to continue the session later on. This command is available on the toolbar. This command might not be supported by the C-SPY driver you are using.

**Restore session**

Restores previously saved code coverage session data. This is useful if you for some reason must abort your debug session, but want to continue the session later on. This command is available on the toolbar. This command might not be supported by the C-SPY driver you are using.


Save As

Saves the current code coverage result in a text file.

Part 3. Advanced debugging

This part of the *C-SPY® Debugging Guide for 8051* includes these chapters:

- Interrupts
- C-SPY macros
- The C-SPY command line utility—`cspybat`

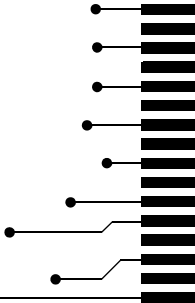



Interrupts

- Introduction to interrupts
- Using the interrupt system
- Reference information on interrupts

Introduction to interrupts

These topics are covered:

- Briefly about the interrupt simulation system
- Interrupt characteristics
- Interrupt simulation states
- C-SPY system macros for interrupt simulation
- Target-adapting the interrupt simulation system
- Briefly about interrupt logging

See also:

- *Reference information on C-SPY system macros*, page 268
- *Breakpoints*, page 105
- *The IAR C/C++ Compiler User Guide for 8051*

BRIEFLY ABOUT THE INTERRUPT SIMULATION SYSTEM

By simulating interrupts, you can test the logic of your interrupt service routines and debug the interrupt handling in the target system long before any hardware is available. If you use simulated interrupts in conjunction with C-SPY macros and breakpoints, you can compose a complex simulation of, for instance, interrupt-driven peripheral devices.

The C-SPY Simulator includes an interrupt simulation system where you can simulate the execution of interrupts during debugging. You can configure the interrupt simulation system so that it resembles your hardware interrupt system.

The interrupt system has the following features:

- Simulated interrupt support for the 8051 microcontroller
- Single-occasion or periodical interrupts based on the cycle counter
- Predefined interrupts for various devices

- Configuration of hold time, probability, and timing variation
- State information for locating timing problems
- Configuration of interrupts using a dialog box or a C-SPY system macro—that is, one interactive and one automating interface. In addition, you can instantly force an interrupt.
- A log window that continuously displays events for each defined interrupt.
- A status window that shows the current interrupt activities.


All interrupts you define using the **Interrupt Setup** dialog box are preserved between debug sessions, unless you remove them. A forced interrupt, on the other hand, exists only until it has been serviced and is not preserved between sessions.



The interrupt simulation system is activated by default, but if not required, you can turn off the interrupt simulation system to speed up the simulation. To turn it off, use either the **Interrupt Setup** dialog box or a system macro.

INTERRUPT CHARACTERISTICS

The simulated interrupts consist of a set of characteristics which lets you fine-tune each interrupt to make it resemble the real interrupt on your target hardware. You can specify a *first activation time*, a *repeat interval*, a *hold time*, a *variance*, and a *probability*.

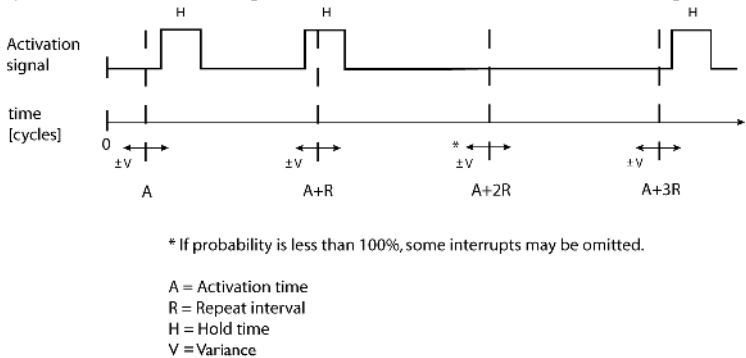

The interrupt simulation system uses the cycle counter as a clock to determine when an interrupt should be raised in the simulator. You specify the *first activation time*, which is based on the cycle counter. C-SPY will generate an interrupt when the cycle counter has passed the specified activation time. However, interrupts can only be raised between instructions, which means that a full assembler instruction must have been executed before the interrupt is generated, regardless of how many cycles an instruction takes.


To define the periodicity of the interrupt generation you can specify the *repeat interval* which defines the amount of cycles after which a new interrupt should be generated. In addition to the repeat interval, the periodicity depends on the two options *probability*—

the probability, in percent, that the interrupt will actually appear in a period—and *variance*—a time variation range as a percentage of the repeat interval. These options make it possible to randomize the interrupt simulation. You can also specify a *hold time* which describes how long the interrupt remains pending until removed if it has not been processed. If the hold time is set to *infinite*, the corresponding pending bit will be set until the interrupt is acknowledged or removed.


INTERRUPT SIMULATION STATES

The interrupt simulation system contains status information that you can use for locating timing problems in your application. The **Interrupt Status** window displays the available status information. For an interrupt, these states can be displayed: *Idle*, *Pending*, *Executing*, or *Suspended*.

Normally, a repeatable interrupt has a specified repeat interval that is longer than the execution time. In this case, the status information at different times looks like this:

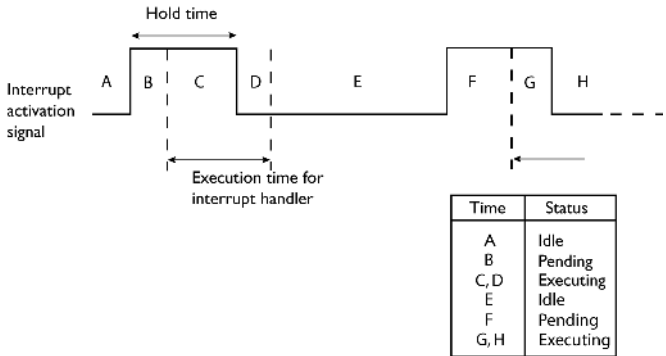

However, if the interrupt repeat interval is shorter than the execution time, and the interrupt is reentrant (or non-maskable), the status information at different times looks like this:

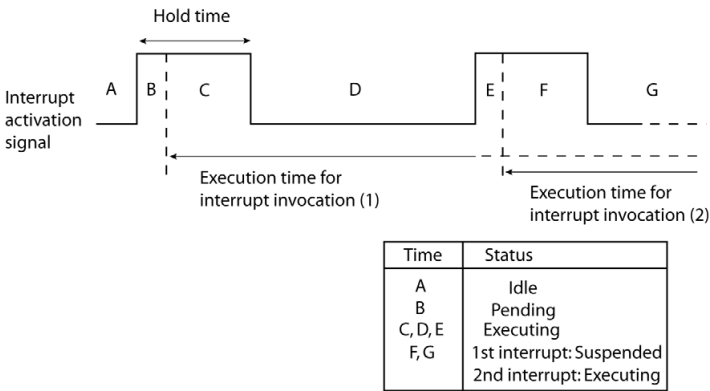

An execution time that is longer than the repeat interval might indicate that you should rewrite your interrupt handler and make it faster, or that you should specify a longer repeat interval for the interrupt simulation system.

C-SPY SYSTEM MACROS FOR INTERRUPT SIMULATION

Macros are useful when you already have sorted out the details of the simulated interrupt so that it fully meets your requirements. If you write a macro function containing definitions for the simulated interrupts, you can execute the functions automatically when C-SPY starts. Another advantage is that your simulated interrupt definitions will be documented if you use macro files, and if you are several engineers involved in the development project you can share the macro files within the group.

The C-SPY Simulator provides these predefined system macros related to interrupts:

- __cancelAllInterrupts
- __cancelInterrupt
- __disableInterrupts
- __enableInterrupts
- __orderInterrupt
- __popSimulatorInterruptExecutingStack

The parameters of the first five macros correspond to the equivalent entries of the **Interrupt Setup** dialog box.

For more information about each macro, see *Reference information on C-SPY system macros*, page 268.

TARGET-ADAPTING THE INTERRUPT SIMULATION SYSTEM

The interrupt simulation system is easy to use. However, to take full advantage of the interrupt simulation system you should be familiar with how to adapt it for the processor you are using.

The behavior of the interrupt simulation resembles the hardware—the main difference is that the simulation does not have interrupt priority. This means that the execution of an interrupt is dependent on the status of the global interrupt enable bit. The execution of maskable interrupts is also dependent on the status of the individual interrupt enable bits.

To simulate device-specific interrupts, the interrupt system must have detailed information about each available interrupt. This information is provided in the device description files.

For information about device description files, see *Selecting a device description file*, page 45.

BRIEFLY ABOUT INTERRUPT LOGGING

Interrupt logging provides you with comprehensive information about the interrupt events. This might be useful, for example, to help you locate which interrupts you can fine-tune to become faster. You can log entrances and exits to and from interrupts. You can also log internal interrupt status information, such as triggered, expired, etc. In the IDE:

- The logs are displayed in the **Interrupt Log** window
- A summary is available in the **Interrupt Log Summary** window
- The Interrupt graph in the **Timeline** window provides a graphical view of the interrupt events during the execution of your application

Requirements for interrupt logging

Interrupt logging is supported by the C-SPY simulator.

See also *Getting started using interrupt logging*, page 236.

Using the interrupt system

These tasks are covered:

- Simulating a simple interrupt
- Simulating an interrupt in a multi-task system
- Getting started using interrupt logging

See also:

- *Using C-SPY macros*, page 255 for details about how to use a setup file to define simulated interrupts at C-SPY startup
- The tutorial *Simulating an interrupt* in the Information Center.

SIMULATING A SIMPLE INTERRUPT

This example demonstrates the method for simulating a timer interrupt. However, the procedure can also be used for other types of interrupts.

To simulate and debug an interrupt:

- I Assume this simple application which contains an interrupt service routine for a timer, which increments a tick variable. The main function sets the necessary status registers. The application exits when 100 interrupts have been generated.

```
#include "io8051.h"
#include <stdio.h>
#include <intrinsics.h>

volatile int ticks = 0;
void main (void)
{

    /* Setup timer 0 */
    TCON_bit.TF0 = 0;
    TCON_bit.TR0 = 1; /* Start timer 0 */

    /* 16 bit timer mode */
    TMOD_bit.M00 = 1;
    TMOD_bit.M10 = 0;

    /* Set the time with 16 bits. To get a repeat interval of 2000
    cycles we loads TLH0:TL0 with 0xFFFF - 1 - 2000 = 0xF82E. */
    TL0 = 0x2E;
    TH0 = 0xF8;

    IE_bit.ET0 = 1;                /* Enable timer 0 interrupts */
    __enable_interrupt();          /* Enable interrupts */
    while (ticks < 100);           /* Endless loop */
    printf("Done\n");
}
```

```
#pragma vector = TFO_int
__interrupt void basic_timer(void)
{
    ticks += 1;
    TCON_bit.TF0 = 0;
}
```

- 2 Add your interrupt service routine to your application source code and add the file to your project.
- 3 Choose **Project>Options>Debugger>Setup** and select a device description file. The device description file contains information about the interrupt that C-SPY needs to be able to simulate it. Use the **Use device description file** browse button to locate the `ddf` file—`io8051.ddf` in the `config\devices_generic` directory.
- 4 Build your project and start the simulator.
- 5 Choose **Simulator>Interrupt Setup** to open the **Interrupts Setup** dialog box. Select the **Enable interrupt simulation** option to enable interrupt simulation. Click **New** to open the **Edit Interrupt** dialog box. For the Timer example, verify these settings:

Option	Settings
Interrupt	TF0_int
First activation	1000
Repeat interval	500
Hold time	10
Probability (%)	100
Variance (%)	0

Table 11: Timer interrupt settings

Click **OK**.

- 6 Execute your application. If you have enabled the interrupt properly in your application source code, C-SPY will:
 - Generate an interrupt when the cycle counter has passed 1000
 - Continuously repeat the interrupt after approximately 500 cycles.
- 7 To watch the interrupt in action, choose **Simulator>Interrupt Log** to open the Interrupt Log window.
- 8 From the context menu, available in the **Interrupt Log** window, choose **Enable** to enable the logging. If you restart program execution, status information about entrances and exits to and from interrupts will now appear in the **Interrupt Log** window.

For information about how to get a graphical representation of the interrupts correlated with a time axis, see *Timeline window—Interrupt Log graph*, page 248.

SIMULATING AN INTERRUPT IN A MULTI-TASK SYSTEM

If you are using interrupts in such a way that the normal instruction used for returning from an interrupt handler is not used, for example in an operating system with task-switching, the simulator cannot automatically detect that the interrupt has finished executing. The interrupt simulation system will work correctly, but the status information in the **Interrupt Setup** dialog box might not look as you expect. If too many interrupts are executing simultaneously, a warning might be issued.

To simulate a normal interrupt exit:

- 1 Set a code breakpoint on the instruction that returns from the interrupt function.
- 2 Specify the `__popSimulatorInterruptExecutingStack` macro as a condition to the breakpoint.

When the breakpoint is triggered, the macro is executed and then the application continues to execute automatically.

GETTING STARTED USING INTERRUPT LOGGING

- 1 Choose **C-SPY driver>Interrupt Log** to open the **Interrupt Log** window. Optionally, you can also choose:
 - **C-SPY driver>Interrupt Log Summary** to open the **Interrupt Log Summary** window
 - **C-SPY driver>Timeline** to open the **Timeline** window and view the Interrupt graph
- 2 From the context menu in the **Interrupt Log** window, choose **Enable** to enable the logging.
- 3 Start executing your application program to collect the log information.
- 4 To view the interrupt log information, look in the **Interrupt Log** or **Interrupt Log Summary** window, or the Interrupt graph in the **Timeline** window.
- 5 If you want to save the log or summary to a file, choose **Save to log file** from the context menu in the window in question.
- 6 To disable interrupt logging, from the context menu in the **Interrupt Log** window, toggle **Enable** off.


Reference information on interrupts

Reference information about:

- *Interrupt Setup dialog box*, page 237
- *Edit Interrupt dialog box*, page 239
- *Forced Interrupt window*, page 240
- *Interrupt Status window*, page 241
- *Interrupt Log window*, page 243
- *Interrupt Log Summary window*, page 246
- *Timeline window—Interrupt Log graph*, page 248

Interrupt Setup dialog box

The **Interrupt Setup** dialog box is available by choosing **Simulator>Interrupt Setup**.

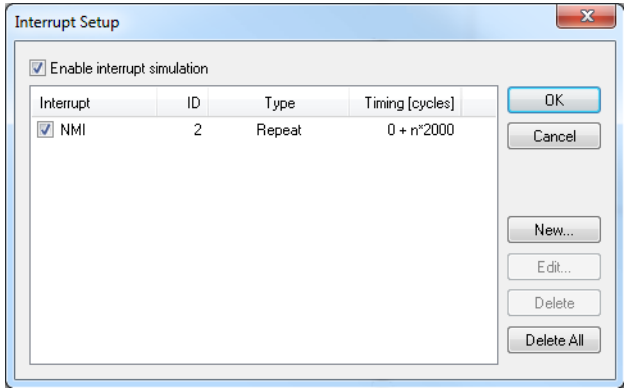

This dialog box lists all defined interrupts. Use this dialog box to enable or disable the interrupt simulation system, as well as to enable or disable individual interrupts.

See also *Using the interrupt system*, page 233.

Requirements

The C-SPY simulator.

Enable interrupt simulation

Enables or disables interrupt simulation. If the interrupt simulation is disabled, the definitions remain but no interrupts are generated. Note that you can also enable and disable installed interrupts individually by using the check box to the left of the interrupt name in the list of installed interrupts.

Display area

This area contains these columns:

Interrupt

Lists all interrupts. Use the checkbox to enable or disable the interrupt.

ID

A unique interrupt identifier.

Type

Shows the type of the interrupt. The type can be one of:

Forced, a single-occasion interrupt defined in the **Forced Interrupt** window.

Single, a single-occasion interrupt.

Repeat, a periodically occurring interrupt.

If the interrupt has been set from a C-SPY macro, the additional part (**macro**) is added, for example: **Repeat(macro)**.

Timing

The timing of the interrupt. For a **Single** and **Forced** interrupt, the activation time is displayed. For a **Repeat** interrupt, the information has the form: *Activation Time + n*Repeat Time*. For example, *2000 + n*2345*. This means that the first time this interrupt is triggered, is at 2000 cycles and after that with an interval of 2345 cycles.

Buttons

These buttons are available:

New

Opens the **Edit Interrupt** dialog box, see *Edit Interrupt dialog box*, page 239.

Edit

Opens the **Edit Interrupt** dialog box, see *Edit Interrupt dialog box*, page 239.

Delete


Removes the selected interrupt.

Delete All

Removes all interrupts.

Edit Interrupt dialog box

The **Edit Interrupt** dialog box is available from the **Interrupt Setup** dialog box.

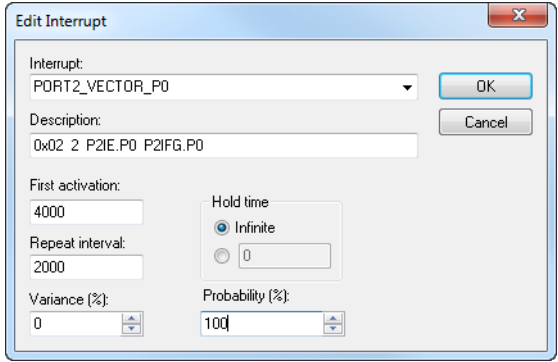

Use this dialog box to interactively fine-tune the interrupt parameters. You can add the parameters and quickly test that the interrupt is generated according to your needs.

Note: You can only edit or remove non-forced interrupts.

See also *Using the interrupt system*, page 233.

Requirements

The C-SPY simulator.

Interrupt

Selects the interrupt that you want to edit. The drop-down list contains all available interrupts. Your selection will automatically update the **Description** box. The list is populated with entries from the device description file that you have selected.

Description

A description of the selected interrupt, if available. The description is retrieved from the selected device description file. For interrupts specified using the system macro `__orderInterrupt`, the **Description** box is empty.

First activation

Specify the value of the cycle counter after which the specified type of interrupt will be generated.

Repeat interval

Specify the periodicity of the interrupt in cycles.

Variance %

Selects a timing variation range, as a percentage of the repeat interval, in which the interrupt might occur for a period. For example, if the repeat interval is 100 and the variance 5%, the interrupt might occur anywhere between T=95 and T=105, to simulate a variation in the timing.

Hold time


Specify how long, in cycles, the interrupt remains pending until removed if it has not been processed. If you select **Infinite**, the corresponding pending bit will be set until the interrupt is acknowledged or removed.

Probability %

Selects the probability, in percent, that the interrupt will actually occur within the specified period.

Forced Interrupt window

The **Forced Interrupt** window is available from the C-SPY driver menu.

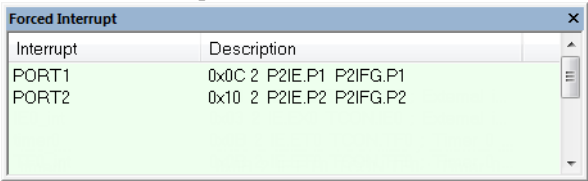

Interrupt	Description
PORT1	0x0C 2 P2IE.P1 P2IFG.P1
PORT2	0x10 2 P2IE.P2 P2IFG.P2

Use this window to force an interrupt instantly. This is useful when you want to check your interrupt logic and interrupt routines. Just start typing an interrupt name and focus shifts to the first line found with that name.

The hold time for a forced interrupt is infinite, and the interrupt exists until it has been serviced or until a reset of the debug session.

To sort the window contents, click on either the **Interrupt** or the **Description** column header. A second click on the same column header reverses the sort order.

To force an interrupt:

- 1 Enable the interrupt simulation system, see *Interrupt Setup dialog box*, page 237.
- 2 Double-click the interrupt in the **Forced Interrupt** window, or activate it by using the **Force** command available on the context menu.

Requirements


The C-SPY simulator.

Display area

This area lists all available interrupts and their definitions. This information is retrieved from the selected device description file. See this file for a detailed description.

Context menu

This context menu is available:



This command is available:

Force

Triggers the interrupt you selected in the display area.

Interrupt Status window

The **Interrupt Status** window is available from the C-SPY driver menu.

Interrupt Status					
Interrupt	ID	Type	Status	Next Time	Timing [cycles]
TIM_INT	1	Single	Idle	0	0
NMI	0	Single	Idle	0	0
SCI0_I0	2	Repeat (macro)	Idle	4000	4000 + n*2000

This window shows the status of all the currently active interrupts, in other words interrupts that are either executing or waiting to be executed.

Requirements

The C-SPY simulator.

Display area

This area contains these columns:

Interrupt

Lists all interrupts.

ID

A unique interrupt identifier.

Type

The type of the interrupt. The type can be one of:

Forced, a single-occasion interrupt defined in the **Forced Interrupt** window.

Single, a single-occasion interrupt.

Repeat, a periodically occurring interrupt.

If the interrupt has been set from a C-SPY macro, the additional part (**macro**) is added, for example: **Repeat(macro)**.

Status

The state of the interrupt:

Idle, the interrupt activation signal is low (deactivated).

Pending, the interrupt activation signal is active, but the interrupt has not been yet acknowledged by the interrupt handler.

Executing, the interrupt is currently being serviced, that is the interrupt handler function is executing.

Suspended, the interrupt is currently suspended due to execution of an interrupt with a higher priority.

(deleted) is added to **Executing** and **Suspended** if you have deleted a currently active interrupt. **(deleted)** is removed when the interrupt has finished executing.

Next Time

The next time an idle interrupt is triggered. Once a repeatable interrupt starts executing, a copy of the interrupt will appear with the state Idle and the next time set. For interrupts that do not have a next time—that is pending, executing, or suspended—the column will show --.

Timing

The timing of the interrupt. For a **Single** and **Forced** interrupt, the activation time is displayed. For a **Repeat** interrupt, the information has the form: $\text{Activation Time} + n * \text{Repeat Time}$. For example, $2000 + n * 2345$. This means that the first time this interrupt is triggered, is at 2000 cycles and after that with an interval of 2345 cycles.

Interrupt Log window

The **Interrupt Log** window is available from the C-SPY driver menu.

Time	Interrupt	Status	Program Counter	Execution Time
109.32 us	IRQ0	Triggered	0x13E8	
111.26 us	IRQ0	Enter	0x13F0	
135.78 us	IRQ1	Enter	0x1126	
148.72 us	IRQ1	Leave	0x1378	12.94 us
189.34 us	Overflow			
207.30 us	IRQ0	Leave	0x1126	96.04 us
230.00 us	IRQ0	Triggered	0x1110	
231.34 us	IRQ0	Enter	0x1126	
240.26 us	IRQ0	Leave	0x1122	8.92 us
300.00 us	IRQ1	Enter	---	
371.12 us	IRQ1	Leave	0x1120	71.12 us
431.30 us	IROT1	Enter	---	

Red indicates overflows and italic indicates approximate values

Light-colored rows indicate entrances to interrupts

Darker rows indicate exits from interrupts

This window logs entrances to and exits from interrupts. The C-SPY simulator also logs internal state changes.

The information is useful for debugging the interrupt handling in the target system. When the **Interrupt Log** window is open, it is updated continuously at runtime.

Note: There is a limit on the number of saved logs. When this limit is exceeded, the oldest entries in the buffer are erased.

For more information, see *Getting started using interrupt logging*, page 236.

For information about how to get a graphical view of the interrupt events during the execution of your application, see *Timeline window—Interrupt Log graph*, page 248.

Requirements

The C-SPY simulator.

Display area

This area contains these columns:

Time

The time for the interrupt entrance, based on an internally specified clock frequency.

This column is available when you have selected **Show Time** from the context menu.

Cycles

The number of cycles from the start of the execution until the event.

This column is available when you have selected **Show Cycles** from the context menu.

Interrupt

The interrupt as defined in the device description file.

Status

Shows the event status of the interrupt:

Triggered, the interrupt has passed its activation time.

Forced, the same as Triggered, but the interrupt was forced from the **Forced Interrupt** window.

Enter, the interrupt is currently executing.

Leave, the interrupt has been executed.

Expired, the interrupt hold time has expired without the interrupt being executed.

Rejected, the interrupt has been rejected because the necessary interrupt registers were not set up to accept the interrupt.

Program Counter


The value of the program counter when the event occurred.

Execution Time/Cycles

The time spent in the interrupt, calculated using the Enter and Leave timestamps. This includes time spent in any subroutines or other interrupts that occurred in the specific interrupt.

Context menu

This context menu is available:

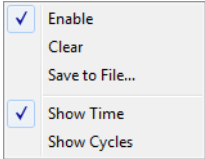

These commands are available:

Enable

Enables the logging system. The system will log information also when the window is closed.

Clear

Deletes the log information. Note that this will also happen when you reset the debugger.

Save to File

Displays a standard file selection dialog box where you can select the destination file for the log information. The entries in the log file are separated by `TAB` and `LF` characters. An **X** in the **Approx** column indicates that the timestamp is an approximation.

Show Time

Displays the **Time** column.

If the **Time** column is displayed by default in the C-SPY driver you are using, this menu command is not available.

Show Cycles

Displays the **Cycles** column.

If the **Cycles** column is not supported in the C-SPY driver you are using, this menu command is not available.

Interrupt Log Summary window

The **Interrupt Log Summary** window is available from the C-SPY driver menu.

Interrupt Log Summary								
Interrupt	Count	First Time	Total (Time)	Total (%)	Fastest	Slowest	Min Interval	Max Interval
ADC	5	25.560us	95.400us	17.61	16.320us	30.120us	192.640us	1284.100us
RTC	4	41.700us	55.200us	22.66	13.800us	13.800us	27.060us	2687.420us
Approximative time count: 1								
Overflow count: 1								
Current time: 3350.080us us								

This window displays a summary of logs of entrances to and exits from interrupts.

For more information, see *Getting started using interrupt logging*, page 236.

For information about how to get a graphical view of the interrupt events during the execution of your application, see *Timeline window—Interrupt Log graph*, page 248.

Requirements

The C-SPY simulator.

Display area

Each row in this area displays statistics about the specific interrupt based on the log information in these columns:

Interrupt

The type of interrupt that occurred.

At the bottom of the column, the current time or cycles is displayed—the number of cycles or the execution time since the start of execution.

Count

The number of times the interrupt occurred.

First time

The first time the interrupt was executed.

Total (Time)**

The accumulated time spent in the interrupt.

Total (%)

The time in percent of the current time.

Fastest**

The fastest execution of a single interrupt of this type.

Slowest**

The slowest execution of a single interrupt of this type.

Min interval

The shortest time between two interrupts of this type.

The interval is specified as the time interval between the entry time for two consecutive interrupts.

Max interval


The longest time between two interrupts of this type.

The interval is specified as the time interval between the entry time for two consecutive interrupts.

** Calculated in the same way as for the Execution time/cycles in the **Interrupt Log** window.

Context menu

This context menu is available:

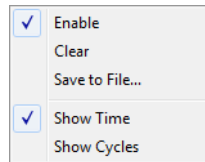

These commands are available:

Enable

Enables the logging system. The system will log information also when the window is closed.

Clear

Deletes the log information. Note that this will also happen when you reset the debugger.

Save to File

Displays a standard file selection dialog box where you can select the destination file for the log information. The entries in the log file are separated by TAB and LF characters. An **X** in the **Approx** column indicates that the timestamp is an approximation.

Show Time

Displays the **Time** column.

If the **Time** column is displayed by default in the C-SPY driver you are using, this menu command is not available.


Show Cycles

Displays the **Cycles** column.

If the **Cycles** column is not supported in the C-SPY driver you are using, this menu command is not available.

Timeline window—Interrupt Log graph

The Interrupt Log graph displays interrupts collected by the trace system. In other words, the graph provides a graphical view of the interrupt events during the execution of your application.

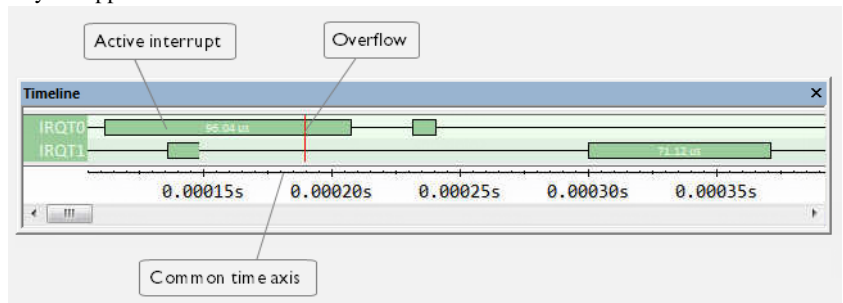

Note: There is a limit on the number of saved logs. When this limit is exceeded, the oldest entries in the buffer are erased.

Requirements

The C-SPY simulator.

Display area


- The label area at the left end of the graph displays the names of the interrupts.
- The graph itself shows active interrupts as a thick green horizontal bar where the white figure indicates the time spent in the interrupt. This graph is a graphical representation of the information in the **Interrupt Log** window, see *Interrupt Log window*, page 243.
- If the bar is displayed without horizontal borders, there are two possible causes:
 - The interrupt is reentrant and has interrupted itself. Only the innermost interrupt will have borders.

- There are irregularities in the interrupt enter-leave sequence, probably due to missing logs.
- If the bar is displayed without a vertical border, the missing border indicates an approximate time for the log.
- A red vertical line indicates overflow, which means that the communication channel failed to transmit all interrupt logs from the target system.

At the bottom of the window, there is a common time axis that uses seconds as the time unit.

Context menu

This context menu is available:

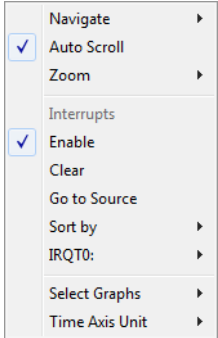

Note: The exact contents of the context menu you see on the screen depends on which features that your combination of software and hardware supports. However, the list of menu commands below is complete and covers all possible commands.

These commands are available:

Navigate

Commands for navigating the graph(s). Choose between:

Next moves the selection to the next relevant point in the graph. Shortcut key: right arrow.

Previous moves the selection backward to the previous relevant point in the graph. Shortcut key: left arrow.

First moves the selection to the first data entry in the graph. Shortcut key: Home.

Last moves the selection to the last data entry in the graph. Shortcut key: End.

End moves the selection to the last data in any displayed graph, in other words the end of the time axis. Shortcut key: Ctrl+End.

Auto Scroll

Toggles automatic scrolling on or off. When on, the most recently collected data is automatically displayed when you choose **Navigate>End**.

Zoom

Commands for zooming the window, in other words, changing the time scale. Choose between:

Zoom to Selection makes the current selection fit the window. Shortcut key: Return.

Zoom In zooms in on the time scale. Shortcut key: +

Zoom Out zooms out on the time scale. Shortcut key: –

10ns, 100ns, 1us, etc makes an interval of 10 nanoseconds, 100 nanoseconds, 1 microsecond, respectively, fit the window.

1ms, 10ms, etc makes an interval of 1 millisecond or 10 milliseconds, respectively, fit the window.

10m, 1h, etc makes an interval of 10 minutes or 1 hour, respectively, fit the window.

Interrupt

A heading that shows that the Interrupt Log-specific commands below are available.

Enable

Toggles the display of the graph on or off. If you disable a graph, that graph will be indicated as **OFF** in the window. If no data has been collected for a graph, **no data** will appear instead of the graph.

Clear

Deletes the log information. Note that this will also happen when you reset the debugger.

Go To Source

Displays the corresponding source code in an editor window, if applicable.

Sort by

Sorts the entries according to their ID or name. The selected order is used in the graph when new interrupts appear.

source

Goes to the previous/next log for the selected source.

Select Graphs

Selects which graphs to be displayed in the **Timeline** window.

Time Axis Unit

Selects the unit used in the time axis; choose between **Seconds** and **Cycles**.

If **Cycles** is not available, the graphs are based on different clock sources. In that case you can view cycle values as tooltip information by pointing at the graph with your mouse pointer.

C-SPY macros

- Introduction to C-SPY macros
- Using C-SPY macros
- Reference information on the macro language
- Reference information on reserved setup macro function names
- Reference information on C-SPY system macros
- Graphical environment for macros

Introduction to C-SPY macros

These topics are covered:

- Reasons for using C-SPY macros
- Briefly about using C-SPY macros
- Briefly about setup macro functions and files
- Briefly about the macro language

REASONS FOR USING C-SPY MACROS

You can use C-SPY macros either by themselves or in conjunction with complex breakpoints and interrupt simulation to perform a wide variety of tasks. Some examples where macros can be useful:

- Automating the debug session, for instance with trace printouts, printing values of variables, and setting breakpoints.
- Hardware configuring, such as initializing hardware registers.
- Feeding your application with simulated data during runtime.
- Simulating peripheral devices, see the chapter *Interrupts*. This only applies if you are using the simulator driver.
- Developing small debug utility functions.

BRIEFLY ABOUT USING C-SPY MACROS

To use C-SPY macros, you should:

- Write your macro variables and functions and collect them in one or several *macro files*
- Register your macros
- Execute your macros

For registering and executing macros, there are several methods to choose between. Which method you choose depends on which level of interaction or automation you want, and depending on at which stage you want to register or execute your macro.

BRIEFLY ABOUT SETUP MACRO FUNCTIONS AND FILES

There are some reserved *setup macro function names* that you can use for defining macro functions which will be called at specific times, such as:

- Once after communication with the target system has been established but before downloading the application software
- Once after your application software has been downloaded
- Each time the reset command is issued
- Once when the debug session ends

To define a macro function to be called at a specific stage, you should define and register a macro function with one of the reserved names. For instance, if you want to clear a specific memory area before you load your application software, the macro setup function `execUserPreload` should be used. This function is also suitable if you want to initialize some CPU registers or memory-mapped peripheral units before you load your application software.

You should define these functions in a *setup macro file*, which you can load before C-SPY starts. Your macro functions will then be automatically registered each time you start C-SPY. This is convenient if you want to automate the initialization of C-SPY, or if you want to register multiple setup macros.

For more information about each setup macro function, see *Reference information on reserved setup macro function names*, page 265.

BRIEFLY ABOUT THE MACRO LANGUAGE

The syntax of the macro language is very similar to the C language. There are:

- *Macro statements*, which are similar to C statements.
- *Macro functions*, which you can define with or without parameters and return values.

- Predefined built-in *system macros*, similar to C library functions, which perform useful tasks such as opening and closing files, setting breakpoints, and defining simulated interrupts.
- *Macro variables*, which can be global or local, and can be used in C-SPY expressions.
- *Macro strings*, which you can manipulate using predefined system macros.

For more information about the macro language components, see *Reference information on the macro language*, page 260.

Example

Consider this example of a macro function which illustrates the various components of the macro language:

```
__var oldVal;
CheckLatest(val)
{
    if (oldVal != val)
    {
        __message "Message: Changed from ", oldVal, " to ", val, "\n";
        oldVal = val;
    }
}
```

Note: Reserved macro words begin with double underscores to prevent name conflicts.

Using C-SPY macros

These tasks are covered:

- Registering C-SPY macros—an overview
- Executing C-SPY macros—an overview
- Registering and executing using setup macros and setup files
- Executing macros using Quick Watch
- Executing a macro by connecting it to a breakpoint
- Aborting a C-SPY macro

For more examples using C-SPY macros, see:

- The tutorial about simulating an interrupt, which you can find in the Information Center
- *Initializing target hardware before C-SPY starts*, page 49

REGISTERING C-SPY MACROS—AN OVERVIEW

C-SPY must know that you intend to use your defined macro functions, and therefore you must *register* your macros. There are various ways to register macro functions:

- You can register macro functions during the C-SPY startup sequence, see *Registering and executing using setup macros and setup files*, page 257.
- You can register macros interactively in the **Macro Registration** window, see *Macro Registration window*, page 302. Registered macros appear in the **Debugger Macros** window, see *Debugger Macros window*, page 304.
- You can register a file containing macro function definitions, using the system macro `__registerMacroFile`. This means that you can dynamically select which macro files to register, depending on the runtime conditions. Using the system macro also lets you register multiple files at the same moment. For information about the system macro, see *__registerMacroFile*, page 287.

Which method you choose depends on which level of interaction or automation you want, and depending on at which stage you want to register your macro.

EXECUTING C-SPY MACROS—AN OVERVIEW

There are various ways to execute macro functions:

- You can execute macro functions during the C-SPY startup sequence and at other predefined stages during the debug session by defining setup macro functions in a setup macro file, see *Registering and executing using setup macros and setup files*, page 257.
- The **Quick Watch** window lets you evaluate expressions, and can thus be used for executing macro functions. For an example, see *Executing macros using Quick Watch*, page 257.
- The **Macro Quicklaunch** window is similar to the **Quick Watch** window, but is more specifically designed for C-SPY macros. See *Macro Quicklaunch window*, page 306.
- A macro can be connected to a breakpoint; when the breakpoint is triggered the macro is executed. For an example, see *Executing a macro by connecting it to a breakpoint*, page 258.

Which method you choose depends on which level of interaction or automation you want, and depending on at which stage you want to execute your macro.

REGISTERING AND EXECUTING USING SETUP MACROS AND SETUP FILES

It can be convenient to register a macro file during the C-SPY startup sequence. To do this, specify a macro file which you load before starting the debug session. Your macro functions will be automatically registered each time you start the debugger.

If you use the reserved setup macro function names to define the macro functions, you can define exactly at which stage you want the macro function to be executed.

To define a setup macro function and load it during C-SPY startup:

- 1 Create a new text file where you can define your macro function.

For example:

```
execUserSetup()
{
    ...
    __registerMacroFile("MyMacroUtils.mac");
    __registerMacroFile("MyDeviceSimulation.mac");
}
```

This macro function registers the additional macro files `MyMacroUtils.mac` and `MyDeviceSimulation.mac`. Because the macro function is defined with the function name `execUserSetup`, it will be executed directly after your application has been downloaded.

- 2 Save the file using the filename extension `mac`.
- 3 Before you start C-SPY, choose **Project>Options>Debugger>Setup**. Select the **Use macro file** option, and choose the macro file you just created.

The macros will now be registered during the C-SPY startup sequence.

EXECUTING MACROS USING QUICK WATCH


The **Quick Watch** window lets you dynamically choose when to execute a macro function.

- 1 Consider this simple macro function that checks the status of a timer enable bit:

```
TimerStatus()
{
    if ((TimerStatreg & 0x01) != 0) /* Checks the status of reg */
        return "Timer enabled"; /* C-SPY macro string used */
    else
        return "Timer disabled"; /* C-SPY macro string used */
}
```

- 2 Save the macro function using the filename extension `mac`.
- 3 To load the macro file, choose **View>Macros>Macro Registration**. The **Macro Registration** window is displayed. Click **Add** and locate the file using the file browser. The macro file appears in the list of macros in the **Macro Registration** window.
- 4 Select the macro you want to register and your macro will appear in the **Debugger Macros** window.
- 5 Choose **View>Quick Watch** to open the **Quick Watch** window, type the macro call `TimerStatus()` in the text field and press Return,

Alternatively, in the macro file editor window, select the macro function name `TimerStatus()`. Right-click, and choose **Quick Watch** from the context menu that appears.

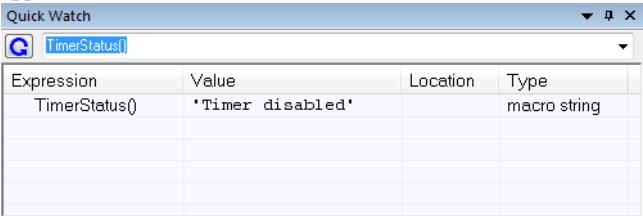

Expression	Value	Location	Type
TimerStatus()	'Timer disabled'		macro string

The macro will automatically be displayed in the **Quick Watch** window. For more information, see *Quick Watch window*, page 97.

EXECUTING A MACRO BY CONNECTING IT TO A BREAKPOINT

You can connect a macro to a breakpoint. The macro will then be executed when the breakpoint is triggered. The advantage is that you can stop the execution at locations of particular interest and perform specific actions there.



For instance, you can easily produce log reports containing information such as how the values of variables, symbols, or registers change. To do this you might set a breakpoint on a suspicious location and connect a log macro to the breakpoint. After the execution you can study how the values of the registers have changed.

To create a log macro and connect it to a breakpoint:

- 1 Assume this skeleton of a C function in your application source code:

```
int fact(int x)
{
    ...
}
```

- 2 Create a simple log macro function like this example:

```
logfact ()
{
    __message "fact ( " ,x, " ) ";
}
```

The `__message` statement will log messages to the **Debug Log** window.

Save the macro function in a macro file, with the filename extension `mac`.

- 3 To register the macro, choose **View>Macros>Macro Registration** to open the **Macro Registration** window and add your macro file to the list. Select the file to register it. Your macro function will appear in the **Debugger Macros** window.
- 4 To set a code breakpoint, click the **Toggle Breakpoint** button on the first statement within the function `fact` in your application source code. Choose **View>Breakpoints** to open the **Breakpoints** window. Select your breakpoint in the list of breakpoints and choose the **Edit** command from the context menu.
- 5 To connect the log macro function to the breakpoint, type the name of the macro function, `logfact()`, in the **Action** field and click **OK** to close the dialog box.
- 6 Execute your application source code. When the breakpoint is triggered, the macro function will be executed. You can see the result in the **Debug Log** window.

Note that the expression in the **Action** field is evaluated only when the breakpoint causes the execution to really stop. If you want to log a value and then automatically continue execution, you can either:

- Use a **Log** breakpoint, see *Log breakpoints dialog box*, page 121
- Use the **Condition** field instead of the **Action** field. For an example, see *Performing a task and continuing execution*, page 115.

- 7 You can easily enhance the log macro function by, for instance, using the `__fmessage` statement instead, which will print the log information to a file. For information about the `__fmessage` statement, see *Formatted output*, page 263.

For an example where a serial port input buffer is simulated using the method of connecting a macro to a breakpoint, see the tutorial *Simulating an interrupt* in the Information Center.

ABORTING A C-SPY MACRO

To abort a C-SPY macro:

- 1 Press **Ctrl+Shift+.** (period) for a short while.
- 2 A message that says that the macro has terminated is displayed in the **Debug Log** window.

This method can be used if you suspect that something is wrong with the execution, for example because it seems not to terminate in a reasonable time.

Reference information on the macro language

Reference information about:

- *Macro functions*, page 260
- *Macro variables*, page 260
- *Macro parameters*, page 261
- *Macro strings*, page 261
- *Macro statements*, page 262
- *Formatted output*, page 263

MACRO FUNCTIONS

C-SPY macro functions consist of C-SPY variable definitions and macro statements which are executed when the macro is called. An unlimited number of parameters can be passed to a macro function, and macro functions can return a value on exit.

A C-SPY macro has this form:

```
macroName (parameterList)
{
    macroBody
}
```

where *parameterList* is a list of macro parameters separated by commas, and *macroBody* is any series of C-SPY variable definitions and C-SPY statements.

Type checking is neither performed on the values passed to the macro functions nor on the return value.

MACRO VARIABLES

A macro variable is a variable defined and allocated outside your application. It can then be used in a C-SPY expression, or you can assign application data—values of the variables in your application—to it. For more information about C-SPY expressions, see *C-SPY expressions*, page 80.

The syntax for defining one or more macro variables is:

```
__var nameList;
```

where *nameList* is a list of C-SPY variable names separated by commas.

A macro variable defined outside a macro body has global scope, and it exists throughout the whole debugging session. A macro variable defined within a macro body is created when its definition is executed and destroyed on return from the macro.

By default, macro variables are treated as signed integers and initialized to 0. When a C-SPY variable is assigned a value in an expression, it also acquires the type of that expression. For example:

Expression	What it means
<code>myvar = 3.5;</code>	<code>myvar</code> is now type <code>double</code> , value <code>3.5</code> .
<code>myvar = (int*)i;</code>	<code>myvar</code> is now type <code>pointer to int</code> , and the value is the same as <code>i</code> .

Table 12: Examples of C-SPY macro variables

In case of a name conflict between a C symbol and a C-SPY macro variable, C-SPY macro variables have a higher precedence than C variables. Note that macro variables are allocated on the debugger host and do not affect your application.

MACRO PARAMETERS

A macro parameter is intended for parameterization of device support. The named parameter will behave as a normal C-SPY macro variable with these differences:

- The parameter definition can have an initializer
- Values of a parameters can be set through options (either in the IDE or in `cspybat`).
- A value set from an option will take precedence over a value set by an initializer
- A parameter must have an initializer, be set through an option, or both. Otherwise, it has an undefined value, and accessing it will cause a runtime error.

The syntax for defining one or more macro parameters is:

```
__param param[=value, ...;]
```

Use the command line option `--macro_param` to specify a value to a parameter, see `--macro_param`, page 335.

MACRO STRINGS

In addition to C types, macro variables can hold values of *macro strings*. Note that macro strings differ from C language strings.

When you write a string literal, such as `"Hello!"`, in a C-SPY expression, the value is a macro string. It is not a C-style character pointer `char*`, because `char*` must point to a sequence of characters in target memory and C-SPY cannot expect any string literal to actually exist in target memory.

You can manipulate a macro string using a few built-in macro functions, for example `__strFind` or `__subString`. The result can be a new macro string. You can

concatenate macro strings using the + operator, for example `str + "tail"`. You can also access individual characters using subscription, for example `str[3]`. You can get the length of a string using `sizeof(str)`. Note that a macro string is not NULL-terminated.

The macro function `__toString` is used for converting from a NULL-terminated C string in your application (`char*` or `char[]`) to a macro string. For example, assume this definition of a C string in your application:

```
char const *cstr = "Hello";
```

Then examine these macro examples:

```
__var str;           /* A macro variable */
str = cstr           /* str is now just a pointer to char */
sizeof str          /* same as sizeof (char*), typically 2 or 4 */
str = __toString(cstr,512) /* str is now a macro string */
sizeof str          /* 5, the length of the string */
str[1]              /* 101, the ASCII code for 'e' */
str += " World!"    /* str is now "Hello World!" */
```

See also *Formatted output*, page 263.

MACRO STATEMENTS

Statements are expected to behave in the same way as the corresponding C statements would do. The following C-SPY macro statements are accepted:

Expressions

```
expression;
```

For more information about C-SPY expressions, see *C-SPY expressions*, page 80.

Conditional statements

```
if (expression)
    statement
```

```
if (expression)
    statement
else
    statement
```

Loop statements

```
for (init_expression; cond_expression; update_expression)
    statement
```

```
while (expression)
    statement
```

```
do
    statement
while (expression);
```

Return statements

```
return;
```

```
return expression;
```

If the return value is not explicitly set, signed int 0 is returned by default.

Blocks

Statements can be grouped in blocks.

```
{
    statement1
    statement2
    .
    .
    .
    statementN
}
```

FORMATTED OUTPUT

C-SPY provides various methods for producing formatted output:

<code>__message <i>argList</i>;</code>	Prints the output to the Debug Log window.
<code>__fmessage <i>file</i>, <i>argList</i>;</code>	Prints the output to the designated file.
<code>__smessage <i>argList</i>;</code>	Returns a string containing the formatted output.

where *argList* is a comma-separated list of C-SPY expressions or strings, and *file* is the result of the `__openFile` system macro, see `__openFile`, page 281.

To produce messages in the **Debug Log** window:

```
var1 = 42;
var2 = 37;
__message "This line prints the values ", var1, " and ", var2,
" in the Debug Log window.";
```

This produces this message in the **Debug Log** window:

This line prints the values 42 and 37 in the Debug Log window.

To write the output to a designated file:

```
__fmessage myfile, "Result is ", res, "!\n";
```

To produce strings:

```
myMacroVar = __smessage 42, " is the answer.";
myMacroVar now contains the string "42 is the answer.".
```

Specifying display format of arguments

To override the default display format of a scalar argument (number or pointer) in *argList*, suffix it with a `:` followed by a format specifier. Available specifiers are:

<code>%b</code>	for binary scalar arguments
<code>%o</code>	for octal scalar arguments
<code>%d</code>	for decimal scalar arguments
<code>%x</code>	for hexadecimal scalar arguments
<code>%c</code>	for character scalar arguments

These match the formats available in the **Watch** and **Locals** windows, but number prefixes and quotes around strings and characters are not printed. Another example:

```
__message "The character '", cvar:%c, "' has the decimal value
", cvar;
```

Depending on the value of the variables, this produces this message:

The character 'A' has the decimal value 65

Note: A character enclosed in single quotes (a character literal) is an integer constant and is not automatically formatted as a character. For example:

```
__message 'A', " is the numeric value of the character ",
'A':%c;
```


would produce:

65 is the numeric value of the character A

Note: The default format for certain types is primarily designed to be useful in the **Watch** window and other related windows. For example, a value of type `char` is formatted as 'A' (0x41), while a pointer to a character (potentially a C string) is formatted as 0x8102 "Hello", where the string part shows the beginning of the string (currently up to 60 characters).

When printing a value of type `char*`, use the `%x` format specifier to print just the pointer value in hexadecimal notation, or use the system macro `__toString` to get the full string value.

Reference information on reserved setup macro function names

There are reserved setup macro function names that you can use for defining your setup macro functions. By using these reserved names, your function will be executed at defined stages during execution. For more information, see *Briefly about setup macro functions and files*, page 254.

Reference information about:

- `execUserPreload`
- `execUserExecutionStarted`
- `execUserExecutionStopped`
- `execUserSetup`
- `execUserPreReset`
- `execUserReset`
- `execUserExit`

execUserPreload

Syntax	<code>execUserPreload</code>
For use with	All C-SPY drivers.
Description	<p>Called after communication with the target system is established but before downloading the target application.</p> <p>Implement this macro to initialize memory locations and/or registers which are vital for loading data properly.</p>


execUserExecutionStarted

Syntax	<code>execUserExecutionStarted</code>
For use with	The C-SPY simulator. The C-SPY Texas Instruments driver. The C-SPY Infineon driver. The C-SPY ROM-monitor driver. The C-SPY Analog Devices driver. The C-SPY Silicon Labs driver. The C-SPY Segger J-Link driver.
Description	Called when the debugger is about to start or resume execution. The macro is not called when performing a one-instruction assembler step, in other words, Step or Step Into in the Disassembly window.

execUserExecutionStopped

Syntax	<code>execUserExecutionStopped</code>
For use with	The C-SPY simulator. The C-SPY Texas Instruments driver. The C-SPY Infineon driver. The C-SPY ROM-monitor driver. The C-SPY Analog Devices driver. The C-SPY Silicon Labs driver. The C-SPY Segger J-Link driver.
Description	Called when the debugger has stopped execution. The macro is not called when performing a one-instruction assembler step, in other words, Step or Step Into in the Disassembly window.

execUserSetup

Syntax	<code>execUserSetup</code>
For use with	All C-SPY drivers.
Description	<p>Called once after the target application is downloaded.</p> <p>Implement this macro to set up the memory map, breakpoints, interrupts, register macro files, etc.</p> <p> If you define interrupts or breakpoints in a macro file that is executed at system start (using <code>execUserSetup</code>) we strongly recommend that you also make sure that they are removed at system shutdown (using <code>execUserExit</code>). An example is available in <code>SetupSimple.mac</code>, see the tutorials in the Information Center.</p> <p>The reason for this is that the simulator saves interrupt settings between sessions and if they are not removed they will get duplicated every time <code>execUserSetup</code> is executed again. This seriously affects the execution speed.</p>

execUserPreReset

Syntax	<code>execUserPreReset</code>
For use with	All C-SPY drivers.
Description	<p>Called each time just before the reset command is issued.</p> <p>Implement this macro to set up any required device state.</p>

execUserReset

Syntax	<code>execUserReset</code>
For use with	All C-SPY drivers.
Description	<p>Called each time just after the reset command is issued.</p> <p>Implement this macro to set up and restore data.</p>

execUserExit

Syntax	execUserExit
For use with	All C-SPY drivers.
Description	Called once when the debug session ends. Implement this macro to save status data etc.

Reference information on C-SPY system macros

This section gives reference information about each of the C-SPY system macros.
This table summarizes the pre-defined system macros:

Macro	Description
__abortLaunch	Aborts the launch of the debugger
__cancelAllInterrupts	Cancels all ordered interrupts
__cancelInterrupt	Cancels an interrupt
__clearBreak	Clears a breakpoint
__closeFile	Closes a file that was opened by __openFile
__delay	Delays execution
__disableInterrupts	Disables generation of interrupts
__driverType	Verifies the driver type
__enableInterrupts	Enables generation of interrupts
__evaluate	Interprets the input string as an expression and evaluates it
__fillMemory8	Fills a specified memory area with a byte value
__fillMemory16	Fills a specified memory area with a 2-byte value
__fillMemory32	Fills a specified memory area with a 4-byte value
__getSelectedCore	Only for use with IAR Embedded Workbench products that support multicore debugging
__isBatchMode	Checks if C-SPY is running in batch mode or not.
__loadImage	Loads a debug image
__memoryRestore	Restores the contents of a file to a specified memory zone

Table 13: Summary of system macros

Macro	Description
<code>__memorySave</code>	Saves the contents of a specified memory area to a file
<code>__messageBoxYesCancel</code>	Displays a Yes/Cancel dialog box for user interaction
<code>__messageBoxYesNo</code>	Displays a Yes/No dialog box for user interaction
<code>__openFile</code>	Opens a file for I/O operations
<code>__orderInterrupt</code>	Generates an interrupt
<code>__popSimulatorInterruptExecutingStack</code>	Informs the interrupt simulation system that an interrupt handler has finished executing
<code>__readFile</code>	Reads from the specified file
<code>__readFileByte</code>	Reads one byte from the specified file
<code>__readMemory8,</code> <code>__readMemoryByte</code>	Reads one byte from the specified memory location
<code>__readMemory16</code>	Reads two bytes from the specified memory location
<code>__readMemory32</code>	Reads four bytes from the specified memory location
<code>__registerMacroFile</code>	Registers macros from the specified file
<code>__resetFile</code>	Rewinds a file opened by <code>__openFile</code>
<code>__selectCore</code>	Only for use with IAR Embedded Workbench products that support multicore debugging
<code>__setCodeBreak</code>	Sets a code breakpoint
<code>__setDataBreak</code>	Sets a data breakpoint
<code>__setDataLogBreak</code>	Sets a data log breakpoint
<code>__setLogBreak</code>	Sets a log breakpoint
<code>__setSimBreak</code>	Sets a simulation breakpoint
<code>__setTraceStartBreak</code>	Sets a trace start breakpoint
<code>__setTraceStopBreak</code>	Sets a trace stop breakpoint
<code>__sourcePosition</code>	Returns the file name and source location if the current execution location corresponds to a source location
<code>__strFind</code>	Searches a given string for the occurrence of another string
<code>__subString</code>	Extracts a substring from another string
<code>__targetDebuggerVersion</code>	Returns the version of the target debugger
<code>__toLower</code>	Returns a copy of the parameter string where all the characters have been converted to lower case

Table 13: Summary of system macros (Continued)

Macro	Description
<code>__toString</code>	Prints strings
<code>__toUpper</code>	Returns a copy of the parameter string where all the characters have been converted to upper case
<code>__unloadImage</code>	Unloads a debug image
<code>__writeFile</code>	Writes to the specified file
<code>__writeFileByte</code>	Writes one byte to the specified file
<code>__writeMemory8,</code> <code>__writeMemoryByte</code>	Writes one byte to the specified memory location
<code>__writeMemory16</code>	Writes a two-byte word to the specified memory location
<code>__writeMemory32</code>	Writes a four-byte word to the specified memory location

Table 13: Summary of system macros (Continued)

`__abortLaunch`

Syntax	<code>__abortLaunch(message)</code>
Parameters	<p><i>message</i></p> <p>A string that is printed as an error message when the macro executes.</p>
Return value	None.
For use with	All C-SPY drivers.
Description	<p>This macro can be used for aborting a debugger launch, for example if another macro sees that something goes wrong during initialization and cannot perform a proper setup.</p> <p>This is an emergency stop when launching, not a way to end an ongoing debug session like the C library function <code>abort()</code>.</p>
Example	<pre>if (!__messageBoxYesCancel("Do you want to mass erase to unlock the device?", "Unlocking device")) { __abortLaunch("Unlock canceled. Debug session cannot continue."); }</pre>

__cancelAllInterrupts

Syntax	<code>__cancelAllInterrupts()</code>
Return value	<code>int 0</code>
For use with	The C-SPY Simulator.
Description	Cancels all ordered interrupts.

__cancelInterrupt

Syntax	<code>__cancelInterrupt(<i>interrupt_id</i>)</code>
Parameters	<i>interrupt_id</i> The value returned by the corresponding <code>__orderInterrupt</code> macro call (unsigned long).

Return value

Result	Value
Successful	<code>int 0</code>
Unsuccessful	Non-zero error number

Table 14: `__cancelInterrupt` return values

For use with	The C-SPY Simulator.
Description	Cancels the specified interrupt.

__clearBreak

Syntax	<code>__clearBreak(<i>break_id</i>)</code>
Parameters	<i>break_id</i> The value returned by any of the set breakpoint macros.
Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Clears a user-defined breakpoint.

See also *Breakpoints*, page 105.

__closeFile

Syntax	<code>__closeFile(<i>fileHandle</i>)</code>
Parameters	<i>fileHandle</i> A macro variable used as filehandle by the <code>__openFile</code> macro.
Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Closes a file previously opened by <code>__openFile</code> .

__delay

Syntax	<code>__delay(<i>value</i>)</code>
Parameters	<i>value</i> The number of milliseconds to delay execution.
Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Delays execution the specified number of milliseconds.

__disableInterrupts

Syntax	<code>__disableInterrupts()</code>
Return value	

Result	Value
Successful	<code>int 0</code>
Unsuccessful	Non-zero error number

Table 15: `__disableInterrupts` return values

For use with	The C-SPY Simulator.
--------------	----------------------

Description	Disables the generation of interrupts.						
__driverType							
Syntax	<code>__driverType(<i>driver_id</i>)</code>						
Parameters	<p><i>driver_id</i></p> <p>A string corresponding to the driver you want to check for. Choose one of these:</p> <ul style="list-style-type: none">"sim" corresponds to the simulator driver"emu_cc" corresponds to the C-SPY Texas Instruments driver"emu_fs2" corresponds to the C-SPY FS2 System Navigator driver"emu_if" corresponds to the C-SPY Infineon driver"emu_jlink" corresponds to the C-SPY Segger J-Link driver"emu_ns" corresponds to the C-SPY Nordic Semiconductor driver"rom" corresponds to the C-SPY ROM-monitor driver"rom_ad2" corresponds to the C-SPY Analog Devices driver"rom_sl" corresponds to the C-SPY Silicon Labs driver						
Return value	<table><tr><th>Result</th><th>Value</th></tr><tr><td>Successful</td><td>1</td></tr><tr><td>Unsuccessful</td><td>0</td></tr></table> <p>Table 16: __driverType return values</p>	Result	Value	Successful	1	Unsuccessful	0
Result	Value						
Successful	1						
Unsuccessful	0						
For use with	All C-SPY drivers.						
Description	Checks to see if the current C-SPY driver is identical to the driver type of the <i>driver_id</i> parameter.						
Example	<p><code>__driverType("sim")</code></p> <p>If the simulator is the current driver, the value 1 is returned. Otherwise 0 is returned.</p>						

__enableInterrupts

Syntax `__enableInterrupts()`

Return value

Result	Value
Successful	int 0
Unsuccessful	Non-zero error number

Table 17: `__enableInterrupts` return values

For use with The C-SPY Simulator.

Description Enables the generation of interrupts.

__evaluate

Syntax `__evaluate(string, valuePtr)`

Parameters

string
Expression string.

valuePtr
Pointer to a macro variable storing the result.

Return value

Result	Value
Successful	int 0
Unsuccessful	int 1

Table 18: `__evaluate` return values

For use with All C-SPY drivers.

Description This macro interprets the input string as an expression and evaluates it. The result is stored in a variable pointed to by *valuePtr*.

Example This example assumes that the variable `i` is defined and has the value 5:

`__evaluate("i + 3", &myVar)`

The macro variable `myVar` is assigned the value 8.

__fillMemory8

Syntax	<code>__fillMemory8(value, address, zone, length, format)</code>								
Parameters	<p><i>value</i> An integer that specifies the value.</p> <p><i>address</i> An integer that specifies the memory start address.</p> <p><i>zone</i> A string that specifies the memory zone, see <i>C-SPY memory zones</i>, page 132.</p> <p><i>length</i> An integer that specifies how many bytes are affected.</p> <p><i>format</i> A string that specifies the exact fill operation to perform. Choose between:</p> <table> <tr> <td>Copy</td><td><i>value</i> will be copied to the specified memory area.</td></tr> <tr> <td>AND</td><td>An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.</td></tr> <tr> <td>OR</td><td>An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.</td></tr> <tr> <td>XOR</td><td>An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.</td></tr> </table>	Copy	<i>value</i> will be copied to the specified memory area.	AND	An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.	OR	An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.	XOR	An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.
Copy	<i>value</i> will be copied to the specified memory area.								
AND	An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.								
OR	An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.								
XOR	An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.								
Return value	<code>int 0</code>								
For use with	All C-SPY drivers.								
Description	Fills a specified memory area with a byte value.								
Example	<code>__fillMemory8(0x80, 0x700, "", 0x10, "OR");</code>								

__fillMemory16

Syntax	<code>__fillMemory16(value, address, zone, length, format)</code>
Parameters	<p><i>value</i> An integer that specifies the value.</p>

	<i>address</i>
	An integer that specifies the memory start address.
	<i>zone</i>
	A string that specifies the memory zone, see <i>C-SPY memory zones</i> , page 132.
	<i>length</i>
	An integer that defines how many 2-byte entities to be affected.
	<i>format</i>
	A string that specifies the exact fill operation to perform. Choose between:
	Copy <i>value</i> will be copied to the specified memory area.
	AND An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.
	OR An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.
	XOR An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.
Return value	int 0
For use with	All C-SPY drivers.
Description	Fills a specified memory area with a 2-byte value.
Example	<code>__fillMemory16(0xCD CD, 0x7000, "", 0x200, "Copy");</code>

__fillMemory32

Syntax	<code>__fillMemory32(<i>value</i>, <i>address</i>, <i>zone</i>, <i>length</i>, <i>format</i>)</code>
Parameters	<i>value</i>
	An integer that specifies the value.
	<i>address</i>
	An integer that specifies the memory start address.
	<i>zone</i>
	A string that specifies the memory zone, see <i>C-SPY memory zones</i> , page 132.

	<i>length</i>	An integer that defines how many 4-byte entities to be affected.								
	<i>format</i>	A string that specifies the exact fill operation to perform. Choose between: <table><tr><td>Copy</td><td><i>value</i> will be copied to the specified memory area.</td></tr><tr><td>AND</td><td>An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.</td></tr><tr><td>OR</td><td>An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.</td></tr><tr><td>XOR</td><td>An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.</td></tr></table>	Copy	<i>value</i> will be copied to the specified memory area.	AND	An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.	OR	An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.	XOR	An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.
Copy	<i>value</i> will be copied to the specified memory area.									
AND	An AND operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.									
OR	An OR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.									
XOR	An XOR operation will be performed between <i>value</i> and the existing contents of memory before writing the result to memory.									
Return value	int 0									
For use with	All C-SPY drivers.									
Description	Fills a specified memory area with a 4-byte value.									
Example	<code>__fillMemory32(0x0000FFFF, 0x4000, "", 0x1000, "XOR");</code>									

__getSelectedCore

Description	This macro returns 0 for a single-core system. It is only useful for IAR Embedded Workbench products that support multicore debugging
-------------	---

__isBatchMode

Syntax	<code>__isBatchMode()</code>							
Return value	<table><tr><th>Result</th><th>Value</th></tr><tr><td>True</td><td>int 1</td></tr><tr><td>False</td><td>int 0</td></tr></table>		Result	Value	True	int 1	False	int 0
Result	Value							
True	int 1							
False	int 0							

Table 19: __isBatchMode return values

For use with	All C-SPY drivers.
Description	This macro returns True if the debugger is running in batch mode, otherwise it returns False.

__loadImage

Syntax	<code>__loadImage(path, offset, debugInfoOnly)</code>
Parameters	<p><i>path</i></p> <p>A string that identifies the path to the debug image to download. The path must either be absolute or use argument variables. For information about argument variables, see the <i>IDE Project Management and Building Guide for 8051</i>.</p> <p><i>offset</i></p> <p>An integer that identifies the offset to the destination address for the downloaded debug image.</p> <p><i>debugInfoOnly</i></p> <p>A non-zero integer value if no code or data should be downloaded to the target system, which means that C-SPY will only read the debug information from the debug file. Or, 0 (zero) for download.</p>

Return value	<table><tr><th>Value</th><th>Result</th></tr><tr><td>Non-zero integer number</td><td>A unique module identification.</td></tr><tr><td>int 0</td><td>Loading failed.</td></tr></table>	Value	Result	Non-zero integer number	A unique module identification.	int 0	Loading failed.
Value	Result						
Non-zero integer number	A unique module identification.						
int 0	Loading failed.						

Table 20: __loadImage return values

For use with	All C-SPY drivers.
Description	Loads a debug image (debug file).
Example 1	Your system consists of a ROM library and an application. The application is your active project, but you have a debug file corresponding to the library. In this case you can add this macro call in the <code>execUserSetup</code> macro in a C-SPY macro file, which you associate with your project:

```
__loadImage("ROMfile", 0x8000, 1);
```

This macro call loads the debug information for the ROM library *ROMfile* without downloading its contents (because it is presumably already in ROM). Then you can debug your application together with the library.

Example 2

Your system consists of a ROM library and an application, but your main concern is the library. The library needs to be programmed into flash memory before a debug session. While you are developing the library, the library project must be the active project in the IDE. In this case you can add this macro call in the `execUserSetup` macro in a C-SPY macro file, which you associate with your project:

```
__loadImage("ApplicationFile", 0x8000, 0);
```

The macro call loads the debug information for the application and downloads its contents (presumably into RAM). Then you can debug your library together with the application.

See also

Images, page 366 and *Loading multiple debug images*, page 47.

__memoryRestore

Syntax

```
__memoryRestore(zone, filename)
```

Parameters

zone

A string that specifies the memory zone, see *C-SPY memory zones*, page 132.

filename

A string that specifies the file to be read. The filename must include a path, which must either be absolute or use argument variables. For information about argument variables, see the *IDE Project Management and Building Guide for 8051*.

Return value

int 0

For use with

All C-SPY drivers.

Description

Reads the contents of a file and saves it to the specified memory zone.

Example

```
__memoryRestore("", "c:\\temp\\saved_memory.hex");
```

See also

Memory Restore dialog box, page 145.

__memorySave

Syntax

```
__memorySave(start, stop, format, filename)
```

Parameters

start

A string that specifies the first location of the memory area to be saved.

	<i>stop</i>
	A string that specifies the last location of the memory area to be saved.
	<i>format</i>
	A string that specifies the format to be used for the saved memory. Choose between:
	intel-extended
	motorola
	motorola-s19
	motorola-s28
	motorola-s37
	<i>filename</i>
	A string that specifies the file to write to. The filename must include a path, which must either be absolute or use argument variables. For information about argument variables, see the <i>IDE Project Management and Building Guide for 8051</i> .
Return value	int 0
For use with	All C-SPY drivers.
Description	Saves the contents of a specified memory area to a file.
Example	<pre>__memorySave(":0x00", ":0xFF", "intel-extended", "c:\\temp\\saved_memory.hex");</pre>
See also	<i>Memory Save dialog box</i> , page 144.

__messageBoxYesCancel

Syntax	<code>__messageBoxYesCancel (message, caption)</code>
Parameters	<i>message</i> A message that will appear in the message box. <i>caption</i> The title that will appear in the message box.

Return value

Result	Value
Yes	1
No	0

Table 21: `__messageBoxYesCancel` return values

For use with

All C-SPY drivers.

Description

Displays a Yes/Cancel dialog box when called and returns the user input. Typically, this is useful for creating macros that require user interaction.

`__messageBoxYesNo`

Syntax

`__messageBoxYesNo(message, caption)`

Parameters

message

A message that will appear in the message box.

caption

The title that will appear in the message box.

Return value

Result	Value
Yes	1
No	0

Table 22: `__messageBoxYesNo` return values

For use with

All C-SPY drivers.

Description

Displays a Yes/No dialog box when called and returns the user input. Typically, this is useful for creating macros that require user interaction.

`__openFile`

Syntax

`__openFile(filename, access)`

Parameters

filename

The file to be opened. The filename must include a path, which must either be absolute or use argument variables. For information about argument variables, see the *IDE Project Management and Building Guide for 8051*.

access

The access type (string).

These are mandatory but mutually exclusive:

"a" append, new data will be appended at the end of the open file

"r" read (by default in text mode; combine with b for binary mode: rb)

"w" write (by default in text mode; combine with b for binary mode: wb)

These are optional and mutually exclusive:

"b" binary, opens the file in binary mode

"t" ASCII text, opens the file in text mode

This access type is optional:

"+" together with r, w, or a; r+ or w+ is *read* and *write*, while a+ is *read* and *append*

Return value

Result	Value
Successful	The file handle
Unsuccessful	An invalid file handle, which tests as False

Table 23: __openFile return values

For use with

All C-SPY drivers.

Description

Opens a file for I/O operations. The default base directory of this macro is where the currently open project file (*.ewp) is located. The argument to __openFile can specify a location relative to this directory. In addition, you can use argument variables such as \$PROJ_DIR\$ and \$TOOLKIT_DIR\$ in the path argument.

Example

```
__var myFileHandle;          /* The macro variable to contain */
                             /* the file handle */
myFileHandle = __openFile("$PROJ_DIR$\Debug\Exe\test.tst",
"r");
if (myFileHandle)
{
    /* successful opening */
}
```

See also

For information about argument variables, see the *IDE Project Management and Building Guide for 8051*.

__orderInterrupt

Syntax	<pre>__orderInterrupt(<i>specification</i>, <i>first_activation</i>, <i>repeat_interval</i>, <i>variance</i>, <i>infinite_hold_time</i>, <i>hold_time</i>, <i>probability</i>)</pre>
Parameters	<p><i>specification</i></p> <p>The interrupt (string). The specification can either be the full specification used in the device description file (<code>ddf</code>) or only the name. In the latter case the interrupt system will automatically get the description from the device description file.</p> <p><i>first_activation</i></p> <p>The first activation time in cycles (integer)</p> <p><i>repeat_interval</i></p> <p>The periodicity in cycles (integer)</p> <p><i>variance</i></p> <p>The timing variation range in percent (integer between 0 and 100)</p> <p><i>infinite_hold_time</i></p> <p>1 if infinite, otherwise 0.</p> <p><i>hold_time</i></p> <p>The hold time (integer)</p> <p><i>probability</i></p> <p>The probability in percent (integer between 0 and 100)</p>
Return value	<p>The macro returns an interrupt identifier (unsigned long).</p> <p>If the syntax of <i>specification</i> is incorrect, it returns -1.</p>
For use with	The C-SPY Simulator.
Description	Generates an interrupt.
Example	<p>This example generates a repeating interrupt using an infinite hold time first activated after 4000 cycles:</p> <pre>__orderInterrupt("USARTR_VECTOR", 4000, 2000, 0, 1, 0, 100);</pre>

__popSimulatorInterruptExecutingStack

Syntax	<code>__popSimulatorInterruptExecutingStack(void)</code>
Return value	<code>int 0</code>
For use with	The C-SPY Simulator.
Description	<p>Informs the interrupt simulation system that an interrupt handler has finished executing, as if the normal instruction used for returning from an interrupt handler was executed.</p> <p>This is useful if you are using interrupts in such a way that the normal instruction for returning from an interrupt handler is not used, for example in an operating system with task-switching. In this case, the interrupt simulation system cannot automatically detect that the interrupt has finished executing.</p>
See also	<i>Simulating an interrupt in a multi-task system</i> , page 236.

__readFile

Syntax	<code>__readFile(fileHandle, valuePtr)</code>						
Parameters	<p><i>fileHandle</i></p> <p>A macro variable used as filehandle by the <code>__openFile</code> macro.</p> <p><i>valuePtr</i></p> <p>A pointer to a variable.</p>						
Return value	<table><tr><th>Result</th><th>Value</th></tr><tr><td>Successful</td><td>0</td></tr><tr><td>Unsuccessful</td><td>Non-zero error number</td></tr></table>	Result	Value	Successful	0	Unsuccessful	Non-zero error number
Result	Value						
Successful	0						
Unsuccessful	Non-zero error number						
For use with	All C-SPY drivers.						
Description	<p>Reads a sequence of hexadecimal digits from the given file and converts them to an unsigned long which is assigned to the <i>value</i> parameter, which should be a pointer to a macro variable.</p> <p>Only printable characters representing hexadecimal digits and white-space characters are accepted, no other characters are allowed.</p>						

Table 24: __readFile return values

Example

```
__var number;
if (__readFile(myFileHandle, &number) == 0)
{
    // Do something with number
}
```

In this example, if the file pointed to by `myFileHandle` contains the ASCII characters 1234 abcd 90ef, consecutive reads will assign the values 0x1234 0xabcd 0x90ef to the variable `number`.

__readFileByte**Syntax**

```
__readFileByte(fileHandle)
```

Parameters

fileHandle

A macro variable used as filehandle by the `__openFile` macro.

Return value

-1 upon error or end-of-file, otherwise a value between 0 and 255.

For use with

All C-SPY drivers.

Description

Reads one byte from a file.

Example

```
__var byte;
while ( (byte = __readFileByte(myFileHandle)) != -1 )
{
    /* Do something with byte */
}
```

__readMemory8, __readMemoryByte**Syntax**

```
__readMemory8(address, zone)
__readMemoryByte(address, zone)
```

Parameters

address

The memory address (integer).

zone

A string that specifies the memory zone, see *C-SPY memory zones*, page 132.

Return value

The macro returns the value from memory.

For use with

All C-SPY drivers.

Description	Reads one byte from a given memory location.
Example	<code>__readMemory8(0x0108, "");</code>
__readMemory16	
Syntax	<code>__readMemory16(address, zone)</code>
Parameters	<p><i>address</i></p> <p>The memory address (integer).</p> <p><i>zone</i></p> <p>A string that specifies the memory zone, see <i>C-SPY memory zones</i>, page 132.</p>
Return value	The macro returns the value from memory.
For use with	All C-SPY drivers.
Description	Reads a two-byte word from a given memory location.
Example	<code>__readMemory16(0x0108, "");</code>
__readMemory32	
Syntax	<code>__readMemory32(address, zone)</code>
Parameters	<p><i>address</i></p> <p>The memory address (integer).</p> <p><i>zone</i></p> <p>A string that specifies the memory zone, see <i>C-SPY memory zones</i>, page 132.</p>
Return value	The macro returns the value from memory.
For use with	All C-SPY drivers.
Description	Reads a four-byte word from a given memory location.
Example	<code>__readMemory32(0x0108, "");</code>

__registerMacroFile

Syntax	<code>__registerMacroFile(filename)</code>
Parameters	<p><i>filename</i></p> <p>A file containing the macros to be registered (string). The filename must include a path, which must either be absolute or use argument variables. For information about argument variables, see the <i>IDE Project Management and Building Guide for 8051</i>.</p>
Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Registers macros from a setup macro file. With this function you can register multiple macro files during C-SPY startup.
Example	<code>__registerMacroFile("c:\\testdir\\macro.mac");</code>
See also	<i>Using C-SPY macros</i> , page 255.

__resetFile

Syntax	<code>__resetFile(fileHandle)</code>
Parameters	<p><i>fileHandle</i></p> <p>A macro variable used as filehandle by the <code>__openFile</code> macro.</p>
Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Rewinds a file previously opened by <code>__openFile</code> .

__selectCore

Description	This macro can only be used with IAR Embedded Workbench products that support multicore debugging.
-------------	--

__setCodeBreak

Syntax

`__setCodeBreak(location, count, condition, cond_type, action)`

Parameters

`location`

A string that defines the code location of the breakpoint, either a valid C-SPY expression whose value evaluates to a valid address, an absolute location, or a source location. For more information about the location types, see *Enter Location dialog box*, page 128.

`count`

The number of times that a breakpoint condition must be fulfilled before a break occurs (integer).

`condition`

The breakpoint condition. This must be a valid C-SPY expression, for instance a C-SPY macro function.

`cond_type`

The condition type; either "CHANGED" or "TRUE" (string).

`action`

An expression, typically a call to a macro, which is evaluated when the breakpoint is detected.

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. This value must be used to clear the breakpoint.
Unsuccessful	0

Table 25: __setCodeBreak return values

For use with

All C-SPY drivers.

Description

Sets a code breakpoint, that is, a breakpoint which is triggered just before the processor fetches an instruction at the specified location.

Examples

```
__setCodeBreak("{D:\\src\\prog.c}.12.9", 3, "d>16", "TRUE", "ActionCode()");
```

This example sets a code breakpoint on the label `main` in your source:

```
__setCodeBreak("main", 0, "1", "TRUE", "");
```

See also

Breakpoints, page 105.

__setDataBreak

Syntax	<code>__setDataBreak(location, count, condition, cond_type, access, action)</code>
Parameters	<div><div><code>location</code> A string that defines the data location of the breakpoint, either a valid C-SPY expression whose value evaluates to a valid address or an absolute location. For information about the location types, see <i>Enter Location dialog box</i>, page 128.</div><div><code>count</code> The number of times that a breakpoint condition must be fulfilled before a break occurs (integer).</div><div><code>condition</code> The breakpoint condition (string).</div><div><code>cond_type</code> The condition type; either "CHANGED" or "TRUE" (string).</div><div><code>access</code> The memory access type: "R", for read, "W" for write, or "RW" for read/write.</div><div><code>action</code> An expression, typically a call to a macro, which is evaluated when the breakpoint is detected.</div></div>

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. This value must be used to clear the breakpoint.
Unsuccessful	0

Table 26: __setDataBreak return values

For use with

- The C-SPY Simulator.
- The C-SPY FS2 System Navigator driver.
- The C-SPY Infineon driver.
- The C-SPY ROM-monitor driver.

Description

Sets a data breakpoint, that is, a breakpoint which is triggered directly after the processor has read or written data at the specified location.

Example

```
__var brk;
brk = __setDataBreak(":0x4710", 3, "d>6", "TRUE",
    "W", "ActionData()");
...
__clearBreak(brk);
```

See also

Breakpoints, page 105.

__setDataLogBreak

Syntax

```
__setDataLogBreak(variable, access)
```

Parameters

variable

A string that defines the variable the breakpoint is set on, a variable of integer type with static storage duration. The microcontroller must also be able to access the variable with a single-instruction memory access, which means that you can only set data log breakpoints on 8-bit variables.

access

The memory access type: "R", for read, "W" for write, or "RW" for read/write.

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. This value must be used to clear the breakpoint.
Unsuccessful	0

Table 27: __setDataLogBreak return values

For use with

The C-SPY Simulator.

Description

Sets a data log breakpoint, that is, a breakpoint which is triggered when a specified variable is accessed. Note that a data log breakpoint does not stop the execution, it just generates a data log.

Example

```
__var brk;
brk = __setDataLogBreak("MyVar", "R");
...
__clearBreak(brk);
```

See also

Breakpoints, page 105 and *Getting started using data logging*, page 193.

__setLogBreak

Syntax

```
__setLogBreak(location, message, msg_type, condition,
               cond_type)
```

Parameters

- location*
- A string that defines the code location of the breakpoint, either a valid C-SPY expression whose value evaluates to a valid address, an absolute location, or a source location. For more information about the location types, see *Enter Location dialog box*, page 128.
- message*
- The message text.
- msg_type*
- The message type; choose between:
- TEXT, the message is written word for word.
- ARGS, the message is interpreted as a comma-separated list of C-SPY expressions or strings.
- condition*
- The breakpoint condition (string).
- cond_type*
- The condition type; either "CHANGED" or "TRUE" (string).

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. The same value must be used when you want to clear the breakpoint.
Unsuccessful	0

Table 28: __setLogBreak return values

For use with

- The C-SPY Simulator
- The C-SPY Texas Instruments driver
- The C-SPY FS2 System Navigator driver
- The C-SPY Infineon driver
- The C-SPY ROM-monitor driver
- The C-SPY Analog Devices driver
- The C-SPY Silicon Labs driver

The C-SPY Segger J-Link driver

Description

Sets a log breakpoint, that is, a breakpoint which is triggered when an instruction is fetched from the specified location. If you have set the breakpoint on a specific machine instruction, the breakpoint will be triggered and the execution will temporarily halt and print the specified message in the C-SPY **Debug Log** window.

Example

```
__var logBp1;
__var logBp2;

logOn()
{
    logBp1 = __setLogBreak ("C:\\temp\\Utilities.c).23.1",
        "\"Entering trace zone at :\", #PC:%X", "ARGS", "1", "TRUE");
    logBp2 = __setLogBreak ("C:\\temp\\Utilities.c).30.1",
        "Leaving trace zone...", "TEXT", "1", "TRUE");
}

logOff()
{
    __clearBreak(logBp1);
    __clearBreak(logBp2);
}
```

See also

Formatted output, page 263 and *Breakpoints*, page 105.

__setSimBreak

Syntax

```
__setSimBreak(location, access, action)
```

Parameters

location

A string that defines the data location of the breakpoint, either a valid C-SPY expression whose value evaluates to a valid address or an absolute location. For information about the location types, see *Enter Location dialog box*, page 128.

access

The memory access type: "R" for read or "W" for write.

action

An expression, typically a call to a macro, which is evaluated when the breakpoint is detected.

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. This value must be used to clear the breakpoint.
Unsuccessful	0

Table 29: `__setSimBreak` return values

For use with

The C-SPY Simulator.

Description

Use this system macro to set *immediate* breakpoints, which will halt instruction execution only temporarily. This allows a C-SPY macro function to be called when the processor is about to read data from a location or immediately after it has written data. Instruction execution will resume after the action.

This type of breakpoint is useful for simulating memory-mapped devices of various kinds (for instance serial ports and timers). When the processor reads at a memory-mapped location, a C-SPY macro function can intervene and supply the appropriate data. Conversely, when the processor writes to a memory-mapped location, a C-SPY macro function can act on the value that was written.

`__setTraceStartBreak`

Syntax

`__setTraceStartBreak(location)`

Parameters

location

A string that defines the code location of the breakpoint, either a valid C-SPY expression whose value evaluates to a valid address, an absolute location, or a source location. For more information about the location types, see *Enter Location dialog box*, page 128.

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. The same value must be used when you want to clear the breakpoint.
Unsuccessful	0

Table 30: `__setTraceStartBreak` return values

For use with

The C-SPY Simulator.

Description

Sets a breakpoint at the specified location. When that breakpoint is triggered, the trace system is started.

Example

```
__var startTraceBp;
__var stopTraceBp;

traceOn()
{
    startTraceBp = __setTraceStartBreak
        ("C:\\TEMP\\Utilities.c).23.1");
    stopTraceBp = __setTraceStopBreak
        ("C:\\temp\\Utilities.c).30.1");
}

traceOff()
{
    __clearBreak(startTraceBp);
    __clearBreak(stopTraceBp);
}
```

See also *Trace Start breakpoint dialog box*, page 182.

__setTraceStopBreak

Syntax

```
__setTraceStopBreak(location)
```

Parameters

location

A string that defines the code location of the breakpoint, either a valid C-SPY expression whose value evaluates to a valid address, an absolute location, or a source location. For more information about the location types, see *Enter Location dialog box*, page 128.

Return value

Result	Value
Successful	An unsigned integer uniquely identifying the breakpoint. The same value must be used when you want to clear the breakpoint.
Unsuccessful	int 0

Table 31: __setTraceStopBreak return values

For use with

The C-SPY Simulator.

Description

Sets a breakpoint at the specified location. When that breakpoint is triggered, the trace system is stopped.

Example

See *__setTraceStartBreak*, page 293.

See also *Trace Stop breakpoint dialog box*, page 183.

__sourcePosition

Syntax `__sourcePosition(linePtr, colPtr)`

Parameters

linePtr
Pointer to the variable storing the line number

colPtr
Pointer to the variable storing the column number

Return value

Result	Value
Successful	Filename string
Unsuccessful	Empty (" ") string

Table 32: __sourcePosition return values

For use with All C-SPY drivers.

Description If the current execution location corresponds to a source location, this macro returns the filename as a string. It also sets the value of the variables, pointed to by the parameters, to the line and column numbers of the source location.

__strFind

Syntax `__strFind(macroString, pattern, position)`

Parameters

macroString
A macro string.

pattern
The string pattern to search for

position
The position where to start the search. The first position is 0

Return value The position where the pattern was found or -1 if the string is not found.

For use with All C-SPY drivers.

Description	This macro searches a given string (<i>macroString</i>) for the occurrence of another string (<i>pattern</i>).
Example	<pre>__strFind("Compiler", "pile", 0) = 3 __strFind("Compiler", "foo", 0) = -1</pre>
See also	<i>Macro strings</i> , page 261.

__subString

Syntax	<code>__subString(<i>macroString</i>, <i>position</i>, <i>length</i>)</code>
Parameters	<p><i>macroString</i></p> <p>A macro string.</p> <p><i>position</i></p> <p>The start position of the substring. The first position is 0.</p> <p><i>length</i></p> <p>The length of the substring</p>
Return value	A substring extracted from the given macro string.
For use with	All C-SPY drivers.
Description	This macro extracts a substring from another string (<i>macroString</i>).
Example	<pre>__subString("Compiler", 0, 2)</pre> <p>The resulting macro string contains Co.</p> <pre>__subString("Compiler", 3, 4)</pre> <p>The resulting macro string contains pile.</p>
See also	<i>Macro strings</i> , page 261.

__targetDebuggerVersion

Syntax	<code>__targetDebuggerVersion()</code>
Return value	A string that represents the version number of the C-SPY debugger processor module.
For use with	All C-SPY drivers.

Description This macro returns the version number of the C-SPY debugger processor module.

Example

```
__var toolVer;
toolVer = __targetDebuggerVersion();
__message "The target debugger version is, ", toolVer;
```

__toLower

Syntax `__toLower(macroString)`

Parameters *macroString*

A macro string.

Return value The converted macro string.

For use with All C-SPY drivers.

Description This macro returns a copy of the parameter *macroString* where all the characters have been converted to lower case.

Example

```
__toLower("IAR")
```

The resulting macro string contains `iar`.

```
__toLower("Mix42")
```

The resulting macro string contains `mix42`.

See also *Macro strings*, page 261.

__toString

Syntax `__toString(C_string, maxlength)`

Parameters *C_string*

Any null-terminated C string.

maxlength

The maximum length of the returned macro string.

Return value Macro string.

For use with All C-SPY drivers.

Description This macro is used for converting C strings (`char*` or `char[]`) into macro strings.

Example Assuming your application contains this definition:

```
char const * hpstr = "Hello World!";
```

this macro call:

```
__toString(hpstr, 5)
```

would return the macro string containing `Hello`.

See also *Macro strings*, page 261.

__toUpper

Syntax `__toUpper(macroString)`

Parameters *macroString*
A macro string.

Return value The converted string.

For use with All C-SPY drivers.

Description This macro returns a copy of the parameter *macroString* where all the characters have been converted to upper case.

Example `__toUpper("string")`
The resulting macro string contains `STRING`.

See also *Macro strings*, page 261.

__unloadImage

Syntax `__unloadImage(module_id)`

Parameters *module_id*
An integer which represents a unique module identification, which is retrieved as a return value from the corresponding `__loadImage` C-SPY macro.

Return value

Value	Result
<i>module_id</i>	A unique module identification (the same as the input parameter).
<i>int 0</i>	The unloading failed.

Table 33: `__unloadImage` return values

For use with

All C-SPY drivers.

Description

Unloads debug information from an already downloaded debug image.

See also

Loading multiple debug images, page 47 and *Images*, page 366.

__writeFile

Syntax

`__writeFile(fileHandle, value)`

Parameters

fileHandle
A macro variable used as filehandle by the `__openFile` macro.

value
An integer.

Return value

int 0

For use with

All C-SPY drivers.

Description

Prints the integer value in hexadecimal format (with a trailing space) to the file *file*.

Note: The `__fmessage` statement can do the same thing. The `__writeFile` macro is provided for symmetry with `__readFile`.

__writeFileByte

Syntax

`__writeFileByte(fileHandle, value)`

Parameters

fileHandle
A macro variable used as filehandle by the `__openFile` macro.

value
An integer.

Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Writes one byte to the file <i>fileHandle</i> .

__writeMemory8, __writeMemoryByte

Syntax	<code>__writeMemory8(value, address, zone)</code> <code>__writeMemoryByte(value, address, zone)</code>
Parameters	<i>value</i> An integer. <i>address</i> The memory address (integer). <i>zone</i> A string that specifies the memory zone, see <i>C-SPY memory zones</i> , page 132.
Return value	<code>int 0</code>
For use with	All C-SPY drivers.
Description	Writes one byte to a given memory location.
Example	<code>__writeMemory8(0x2F, 0x8020, "");</code>

__writeMemory16

Syntax	<code>__writeMemory16(value, address, zone)</code>
Parameters	<i>value</i> An integer. <i>address</i> The memory address (integer). <i>zone</i> A string that specifies the memory zone, see <i>C-SPY memory zones</i> , page 132.
Return value	<code>int 0</code>

For use with	All C-SPY drivers.
Description	Writes two bytes to a given memory location.
Example	<pre>__writeMemory16(0x2FFF, 0x8020, "");</pre>
__writeMemory32	
Syntax	<pre>__writeMemory32(value, address, zone)</pre>
Parameters	<p><i>value</i></p> <p>An integer.</p> <p><i>address</i></p> <p>The memory address (integer).</p> <p><i>zone</i></p> <p>A string that specifies the memory zone, see <i>C-SPY memory zones</i>, page 132.</p>
Return value	<pre>int 0</pre>
For use with	All C-SPY drivers.
Description	Writes four bytes to a given memory location.
Example	<pre>__writeMemory32(0x5555FFFF, 0x8020, "");</pre>


Graphical environment for macros

Reference information about:

- *Macro Registration window*, page 302
- *Debugger Macros window*, page 304
- *Macro Quicklaunch window*, page 306

Macro Registration window

The **Macro Registration** window is available from the **View>Macros** submenu during a debug session.

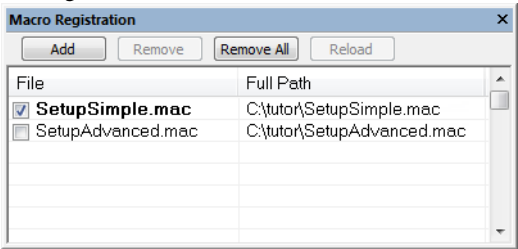

Use this window to list, register, and edit your debugger macro files.

Double-click a macro file to open it in the editor window and edit it.

See also *Registering C-SPY macros—an overview*, page 256.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area contains these columns:

File


The name of an available macro file. To register the macro file, select the check box to the left of the filename. The name of a registered macro file appears in bold style.

Full path

The path to the location of the added macro file.

Context menu

This context menu is available:

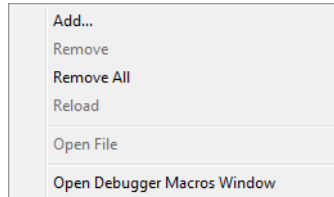

These commands are available:

Add

Opens a file browser where you can locate the macro file that you want to add to the list. This menu command is also available as a function button at the top of the window.

Remove

Removes the selected debugger macro file from the list. This menu command is also available as a function button at the top of the window.

Remove All

Removes all macro files from the list. This menu command is also available as a function button at the top of the window.

Reload

Registers the selected macro file. Typically, this is useful when you have edited a macro file. This menu command is also available as a function button at the top of the window.

Open File


Opens the selected macro file in the editor window.

Open Debugger Macros Window

Opens the **Debugger Macros** window.

Debugger Macros window

The **Debugger Macros** window is available from the **View>Macros** submenu during a debug session.

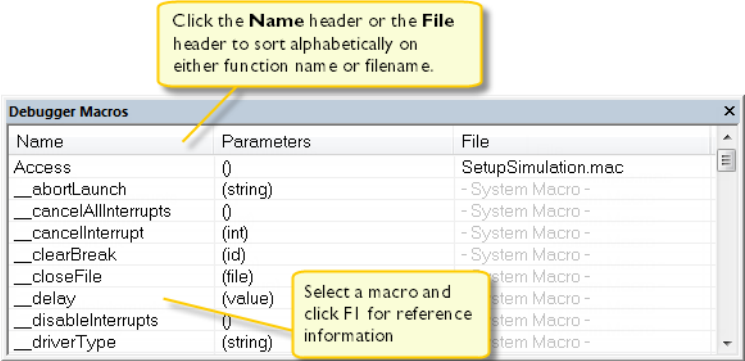

Use this window to list all registered debugger macro functions, either predefined system macros or your own. This window is useful when you edit your own macro functions and want an overview of all available macros that you can use.

- Click the column headers **Name** or **File** to sort alphabetically on either function name or filename.
- Double-clicking a macro defined in a file opens that file in the editor window.
- To open a macro in the **Macro Quicklaunch** window, drag it from the **Debugger Macros** window and drop it in the **Macro Quicklaunch** window.
- Select a macro and press F1 to get online help information for that macro.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area contains these columns:


Name
The name of the debugger macro.

Parameters
The parameters of the debugger macro.

File
For macros defined in a file, the name of the file is displayed. For predefined system macros, -System Macro- is displayed.

Context menu

This context menu is available:

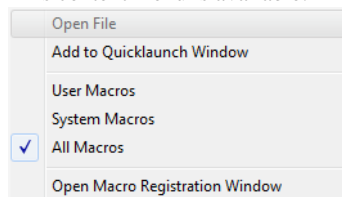

These commands are available:

Open File

Opens the selected debugger macro file in the editor window.

Add to Quicklaunch Window

Adds the selected macro to the **Macro Quicklaunch** window.

User Macros

Lists only the debugger macros that you have defined yourself.

System Macros

Lists only the predefined system macros.

All Macros


Lists all debugger macros, both predefined system macros and your own.

Open Macro Registration Window

Opens the **Macro Registration** window.

Macro Quicklaunch window

The **Macro Quicklaunch** window is available from the **View** menu.

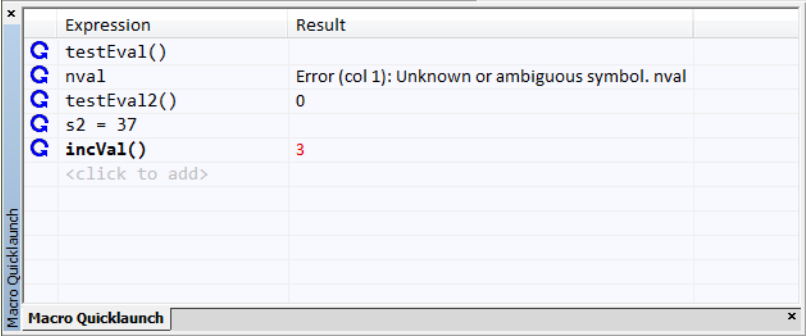

Use this window to evaluate expressions, typically C-SPY macros.

For some devices, there are predefined C-SPY macros available with device support, typically provided by the chip manufacturer. These macros are useful for performing certain device-specific tasks. The macros are available in the **Macro Quicklaunch** window and are easily identified by their green icon,

The **Macro Quicklaunch** window is similar to the **Quick Watch** window, but is primarily designed for evaluating C-SPY macros. The window gives you precise control over when to evaluate an expression.

See also *Executing C-SPY macros—an overview*, page 256.

To add an expression:

- I Choose one of these alternatives:
 - Drag the expression to the window
 - In the **Expression** column, type the expression you want to examine.

If the expression you add and want to evaluate is a C-SPY macro, the macro must first be registered, see *Registering C-SPY macros—an overview*, page 256.

To evaluate an expression:



- I Double-click the **Recalculate** icon to calculate the value of that expression.

Requirements

Can be used with all C-SPY debugger drivers and debug probes.

Display area

This area contains these columns:



Recalculate icon

To evaluate the expression, double-click the icon. The latest evaluated expression appears in bold style.

Expression


One or several expressions that you want to evaluate. Click <click to add> to add an expression. If the return value has changed since last time, the value will be displayed in red.

Result

Shows the return value from the expression evaluation.

Context menu

This context menu is available:



These commands are available:

Evaluate Now

Evaluates the selected expression.

Remove

Removes the selected expression.

Remove All

Removes all selected expressions.

The C-SPY command line utility—`cspybat`

- Using C-SPY in batch mode
- Summary of C-SPY command line options
- Reference information on C-SPY command line options

Using C-SPY in batch mode

You can execute C-SPY in batch mode if you use the command line utility `cspybat`, installed in the directory `common\bin`.

These topics are covered:

- Starting `cspybat`
- Output
- Invocation syntax

STARTING CSPYBAT

- 1 To start `cspybat` you must first create a batch file. An easy way to do that is to use one of the batch files that C-SPY automatically generates when you start C-SPY in the IDE.

C-SPY generates a batch file `projectname.buildconfiguration.cspy.bat` every time C-SPY is initialized. In addition, two more files are generated:

- `project.buildconfiguration.general.xcl`, which contains options specific to `cspybat`
- `project.buildconfiguration.driver.xcl`, which contains options specific to the C-SPY driver you are using

You can find the files in the directory `$PROJ_DIR$\settings`. The files contain the same settings as the IDE, and provide hints about additional options that you can use.

- 2 To start `cspybat`, you can use this command line:

```
project.cspybat.bat [debugfile]
```

Note that *debugfile* is optional. You can specify it if you want to use a different debug file than the one that is used in the *project.buildconfiguration.general.xcl* file.

OUTPUT

When you run *cspybat*, these types of output can be produced:

- *Terminal output from cspybat itself*
All such terminal output is directed to *stderr*. Note that if you run *cspybat* from the command line without any arguments, the *cspybat* version number and all available options including brief descriptions are directed to *stdout* and displayed on your screen.
- *Terminal output from the application you are debugging*
All such terminal output is directed to *stdout*, provided that you have used the *--plugin* option. See *--plugin*, page 338.
- *Error return codes*
cspybat returns status information to the host operating system that can be tested in a batch file. For *successful*, the value *int 0* is returned, and for *unsuccessful* the value *int 1* is returned.

INVOCATION SYNTAX

The invocation syntax for *cspybat* is:

```
cspybat processor_DLL driver_DLL debug_file
        [cspybat_options] --backend driver_options
```

Note: In those cases where a filename is required—including the DLL files—you are recommended to give a full path to the filename.

Parameters

The parameters are:

Parameter	Description
<i>processor_DLL</i>	The processor-specific DLL file; available in 8051\bin.
<i>driver_DLL</i>	The C-SPY driver DLL file; available in 8051\bin.
<i>debug_file</i>	The object file that you want to debug (filename extension d51). See also <i>--debug_file</i> , page 324.

Table 34: *cspybat* parameters

Parameter	Description
<i>cspybat_options</i>	The command line options that you want to pass to cspybat. Note that these options are optional. For information about each option, see <i>Reference information on C-SPY command line options</i> , page 318.
<i>--backend</i>	Marks the beginning of the parameters to the C-SPY driver; all options that follow will be sent to the driver. Note that this option is mandatory.
<i>driver_options</i>	The command line options that you want to pass to the C-SPY driver. Note that some of these options are mandatory and some are optional. For information about each option, see <i>Reference information on C-SPY command line options</i> , page 318.

Table 34: cspybat parameters (Continued)

Summary of C-SPY command line options

Reference information about:

- General cspybat options
- Options available for all C-SPY drivers
- Options available for the simulator driver
- Options available for the Texas Instruments driver
- Options available for the FS2 driver
- Options available for the Infineon driver
- Options available for the Segger J-Link driver
- Options available for the Nordic Semiconductor driver
- Options available for the ROM-monitor driver
- Options available for the Analog Devices driver
- Options available for the Silicon Labs driver

GENERAL CSPYBAT OPTIONS

<i>--application_args</i>	Passes command line arguments to the debugged application.
<i>--attach_to_running_target</i>	Makes the debugger attach to a running application at its current location, without resetting the target system.

<code>--backend</code>	Marks the beginning of the parameters to be sent to the C-SPY driver (mandatory).
<code>--code_coverage_file</code>	Enables the generation of code coverage information and places it in a specified file.
<code>--cycles</code>	Specifies the maximum number of cycles to run.
<code>--debug_file</code>	Specifies an alternative debug file.
<code>--download_only</code>	Downloads a code image without starting a debug session afterwards.
<code>-f</code>	Extends the command line.
<code>--macro</code>	Specifies a macro file to be used.
<code>--macro_param</code>	Assigns a value to a C-SPY macro parameter.
<code>--plugin</code>	Specifies a plugin file to be used.
<code>--silent</code>	Omits the sign-on message.
<code>--timeout</code>	Limits the maximum allowed execution time.

OPTIONS AVAILABLE FOR ALL C-SPY DRIVERS

<code>--core</code>	Specifies the core to be used.
<code>--nr_of_extra_images</code>	Specifies that extra debug images will be downloaded.
<code>-p</code>	Specifies the device description file to be used.
<code>--proc_alternative_sfr_addresses</code>	Specifies alternative addresses for some SFRs.
<code>--proc_code_model</code>	Specifies the code model.
<code>--proc_codebank_end</code>	Specifies the end address of the banked area.
<code>--proc_codebank_mask</code>	Sets the bank register as the active bits.
<code>--proc_codebank_reg</code>	Specifies the SFR address for the code bank register.
<code>--proc_codebank_start</code>	Specifies the start address of the banked area.
<code>--proc_core</code>	Specifies the core type.
<code>--proc_data_addr_24</code>	Enables the use of 24 bits wide data addresses.
<code>--proc_data_model</code>	Specifies the data model.

<code>--proc_DPHn</code>	Specifies the SFR address for the DPH registers.
<code>--proc_DPLn</code>	Specifies the SFR address for the DPL registers.
<code>--proc_dptr_automod_op</code>	Specifies the DPTR auto-modification operation.
<code>--proc_dptr_automod_type</code>	Specifies the type of DPTR auto-modification.
<code>--proc_dptr_DPC</code>	Specifies the SFR address for the DPTR configuration register.
<code>--proc_dptr_DPS</code>	Specifies the SFR address of the DPTR select register.
<code>--proc_dptr_mask</code>	Specifies the active bits in the DPTR select register.
<code>--proc_dptr_nr_of</code>	Specifies the number of DPTRs on the device.
<code>--proc_dptr_switch_method</code>	Specifies the method to change the DPTR select register.
<code>--proc_dptr_visibility</code>	Specifies the type of DPTR visibility in the SFR area.
<code>--proc_DPXn</code>	Specifies the SFR address for the DPX registers.
<code>--proc_driver</code>	Specifies which driver to use.
<code>--proc_exclude_exit_breakpoint</code>	Disables the breakpoint on the <code>exit</code> label.
<code>--proc_exclude_getchar_breakpoint</code>	Disables the breakpoint on the <code>getchar</code> function.
<code>--proc_exclude_putchar_breakpoint</code>	Disables the breakpoint on the <code>putchar</code> function.
<code>--proc_extended_stack</code>	Specifies the address of the extended stack.
<code>--proc_nr_virtual_regs</code>	Specifies the number of virtual registers.
<code>--proc_pc_readonly</code>	Informs the IDE that the hardware does not support writing to the PC register when C-SPY is running.
<code>--proc_pdata_bank_ext_reg_addr</code>	Specifies the address of the <code>MOVX@R0</code> instructions on devices with a 24-bit address bus.
<code>--proc_pdata_bank_reg_addr</code>	Specifies the address of the <code>MOVX@R0</code> instructions on devices with an 8- or 16-bit address bus.
<code>--proc_silent</code>	Sets silent operation.
<code>--proc_xdata_banking</code>	Makes registers display correctly in C-SPY for devices that support banked XDATA memory.

OPTIONS AVAILABLE FOR THE SIMULATOR DRIVER

<code>--disable_interrupts</code>	Disables the interrupt simulation.
<code>--function_profiling</code>	Analyzes your source code to find where the most time is spent during execution.
<code>--mapu</code>	Activates memory access checking.
<code>--sim_guard_stacks</code>	Stops execution of the simulator if your application attempts to write outside any of the stacks.

OPTIONS AVAILABLE FOR THE TEXAS INSTRUMENTS DRIVER

<code>--boot_lock</code>	Locks the boot sector.
<code>--communication_logfile</code>	Logs communication between C-SPY and the target system.
<code>--debug_lock</code>	Locks the debug interface.
<code>--erase_flash</code>	Erases all flash memory before download.
<code>--leave_target_running</code>	Makes the debugger leave the application running on the target after the debug session is closed.
<code>--lock_bits</code>	Protects the downloaded code against read/write accesses.
<code>--lock_bits_pages</code>	Locks the flash memory.
<code>--number_of_banks</code>	Sets the number of memory banks on the device.
<code>--reduce_speed</code>	Slows down communication between your host and the target board.
<code>--retain_memory</code>	Makes sure only the changed, new, or updated pages will be downloaded to flash.
<code>--retain_pages</code>	Makes certain pages remain untouched during download.
<code>--stack_overflow</code>	Enables stack overflow warnings.
<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--usb_id</code>	Specifies the ID of the evaluation board you are using.

<code>--verify_download</code>	Verifies that the program data has been correctly transferred.
--------------------------------	--

OPTIONS AVAILABLE FOR THE FS2 DRIVER

<code>--fs2_configuration</code>	Specifies the core to be used.
<code>--fs2_flash_cfg_entry</code>	Specifies how to write to the flash memory.
<code>--fs2_flash_in_code</code>	Specifies where program flash memory is located.
<code>--fs2_ram_in_code</code>	Specifies the location for program code in RAM.
<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--verify_download</code>	Verifies that the program data has been correctly transferred.

OPTIONS AVAILABLE FOR THE INFINEON DRIVER

<code>--connect_to</code>	Specifies which DAS debug port to connect to.
<code>--erase_flash</code>	Erases all flash memory before download.
<code>--infineon_ram_in_code</code>	Specifies the memory ranges where your device has program code in the XRAM memory area.
<code>--key_noN</code>	Specifies the key value for DAS server security key number <i>N</i> .
<code>--leave_target_running</code>	Makes the debugger leave the application running on the target after the debug session is closed.
<code>--server_address</code>	Specifies the address for the server on which the DAS server software is running.
<code>--server_name</code>	Specifies the type of DAS server to connect to.
<code>--software_breakpoints</code>	Enables the use of software breakpoints.
<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--verify_download</code>	Verifies that the program data has been correctly transferred.

OPTIONS AVAILABLE FOR THE SEGGER J-LINK DRIVER

<code>--drv_suppress_download</code>	Suppresses download of your application to flash memory.
<code>--drv_verify_download</code>	Verifies that the program data has been correctly transferred.
<code>--jlink_connection_id</code>	Specifies the ID of the debug probe you are using.
<code>--jlink_log_file</code>	Logs communication between the debug probe and the target system.
<code>--jlink_power</code>	Specifies that the debug probe provides the evaluation board with power.
<code>--jlink_speed</code>	Specifies the communication speed between the debug probe and the evaluation board.

OPTIONS AVAILABLE FOR THE NORDIC SEMICONDUCTOR DRIVER

<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--verify_download</code>	Verifies that the program data has been correctly transferred.

OPTIONS AVAILABLE FOR THE ROM-MONITOR DRIVER

<code>--drv_communication_log</code>	Logs communication between C-SPY and the ROM-monitor firmware.
<code>--rom_serial_port</code>	Specifies communication options for the ROM-monitor driver.
<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--toggle_DTR</code>	Toggles the DTR signal on the target board whenever the debugger is reset.
<code>--toggle_RTS</code>	Toggles the RTS signal on the target board whenever the debugger is reset.

<code>--verify_all</code>	Verifies that the program data has been correctly transferred.
---------------------------	--

OPTIONS AVAILABLE FOR THE ANALOG DEVICES DRIVER

<code>--ADe_protocol</code>	Specifies the use of an ADe device.
<code>--baud_rate</code>	Specifies the communication speed between C-SPY and the evaluation board.
<code>--core_clock_frequency</code>	Specifies the default CPU clock frequency.
<code>--erase_data_flash</code>	Erases the data flash area during download.
<code>--handshake_at_9600</code>	Handshakes at 9600 baud.
<code>--serial_port</code>	Specifies the port to be used for contact with the evaluation board.
<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--verify_all</code>	Verifies that the program data has been correctly transferred.

OPTIONS AVAILABLE FOR THE SILICON LABS DRIVER


<code>--banked_xdata</code>	Specifies the support for banked XDATA.
<code>--baud_rate</code>	Specifies the communication speed between C-SPY and the evaluation board.
<code>--devices_after</code>	Specifies the number of devices in the chain after the device to be debugged.
<code>--devices_before</code>	Specifies the number of devices in the chain before the device to be debugged.
<code>--drv_silabs_page_size</code>	Selects the size of the flash page.
<code>--multiple_devices</code>	Specifies that more than one device is connected to the same JTAG interface.
<code>--power_target</code>	Provides power to the target hardware.
<code>--preserve_hex_files</code>	Preserves hexadecimal files when flashing the device.

<code>--registers_after</code>	Specifies the number of JTAG registers in the chain after the device to be debugged.
<code>--registers_before</code>	Specifies the number of JTAG registers in the chain before the device to be debugged.
<code>--serial_port</code>	Specifies the port to be used for contact with the evaluation board.
<code>--silabs_2wire_interface</code>	Specifies the interface to the Silicon Labs 2-wire debugging interface.
<code>--suppress_download</code>	Suppresses download of your application to flash memory.
<code>--usb_interface</code>	Specifies the download interface to USB.
<code>--verify_all</code>	Verifies that the program data has been correctly transferred.

Reference information on C-SPY command line options


This section gives detailed reference information about each `cspybat` option and each option available to the C-SPY drivers.

--ADe_protocol


Syntax	<code>--ADe_protocol</code>
For use with	The C-SPY Analog Devices driver.
Description	Specifies that you are debugging using an ADe device.
	 Project>Options>Debugger>Analog Devices>Download>ADe device protocol

--application_args

Syntax	<code>--application_args="arg0 arg1 ..."</code>
Parameters	<i>arg</i> A command line argument.

For use with	cspybat
Description	<p>Use this option to pass command line arguments to the debugged application. These variables must be defined in the application:</p> <pre> /* __argc, the number of arguments in __argv. */ __no_init int __argc; /* __argv, an array of pointers to the arguments (strings); must be large enough to fit the number of arguments. */ __no_init const char * __argv[MAX_ARGS]; /* __argvbuf, a storage area for __argv; must be large enough to hold all command line arguments. */ __no_init __root char __argvbuf[MAX_ARG_SIZE]; </pre>
Example	<pre>--application_args="--logfile log.txt --verbose"</pre> <p> To set this option, use Project>Options>Debugger>Extra Options</p>

--attach_to_running_target

Syntax	--attach_to_running_target
For use with	<p>cspybat.</p> <p>Note: This option might not be supported by the combination of C-SPY driver and device that you are using. If you are using this option with an unsupported combination, C-SPY produces a message.</p>
Description	<p>Use this option to make the debugger attach to a running application at its current location, without resetting the target system.</p> <p>If you have defined any breakpoints in your project, the C-SPY driver will set them during attachment. If the C-SPY driver cannot set them without stopping the target system, the breakpoints will be disabled. The option also suppresses download and the Run to option.</p> <p> Project>Attach to Running Target</p>

--backend

Syntax	<code>--backend {<i>driver options</i>}</code>
Parameters	<i>driver options</i> Any option available to the C-SPY driver you are using.
For use with	<code>cspybat</code> (mandatory).
Description	Use this option to send options to the C-SPY driver. All options that follow <code>--backend</code> will be passed to the C-SPY driver, and will not be processed by <code>cspybat</code> itself.



This option is not available in the IDE.

--banked_xdata

Syntax	<code>--banked_xdata</code>
For use with	The C-SPY Silicon Labs driver.
Description	Use this option to inform C-SPY that your hardware system has an external memory module for XDATA that is larger than 64 Kbytes. Note: This option must be used in combination with the options <code>--data_model=far</code> and <code>--proc_DPX=param</code> , where <code>param</code> specifies the SFR address of the port that holds the address of the high byte.



Project>Options>Debugger>Silicon Labs>Download>Banked XDATA

--baud_rate

Syntax	<code>--baud_rate <i>rate</i></code>						
Parameters	<i>rate</i> is a value corresponding to the communication speed that you want to set. For the Analog Devices driver, <i>rate</i> can be one of these: <table><tr><td>2400</td><td>Sets the communication speed to 2400 bps</td></tr><tr><td>4800</td><td>Sets the communication speed to 4800 bps</td></tr><tr><td>9600</td><td>Sets the communication speed to 9600 bps</td></tr></table>	2400	Sets the communication speed to 2400 bps	4800	Sets the communication speed to 4800 bps	9600	Sets the communication speed to 9600 bps
2400	Sets the communication speed to 2400 bps						
4800	Sets the communication speed to 4800 bps						
9600	Sets the communication speed to 9600 bps						

19200	Sets the communication speed to 19200 bps
38400	Sets the communication speed to 38400 bps
57600	Sets the communication speed to 57600 bps
115200	Sets the communication speed to 115200 bps

For the Silicon Labs driver, *rate* can be one of these:

1	Sets the communication speed to 115200 bps
2	Sets the communication speed to 57600 bps
3	Sets the communication speed to 38400 bps
4	Sets the communication speed to 9600 bps
5	Sets the communication speed to 2400 bps

For use with	<ul style="list-style-type: none">• The C-SPY Analog Devices driver (for both serial and USB communication)• The C-SPY Silicon Labs driver.
Description	This option specifies the communication speed between C-SPY and the evaluation board. For the Analog Devices driver, if the option <code>--handshake_at_9600</code> is not used the only available speed is <code>115200</code> .
See also	<code>--handshake_at_9600</code> , page 331.



Project>Options>Debugger>Driver>Serial Port>Baud rate


--boot_lock

Syntax	<code>--boot_lock</code>
For use with	The C-SPY Texas Instruments driver.
Description	Use this option to protect your application on the microcontroller by locking the boot sector. To remove this lock, you must use the <code>--erase_flash</code> option.




Project>Options>Debugger>Texas Instruments>Download>Flash Lock Protection>Boot block lock


--code_coverage_file

Syntax	<code>--code_coverage_file file</code>
	Note that this option must be placed before the <code>--backend</code> option on the command line.
Parameters	<i>file</i> The name of the destination file for the code coverage information.
For use with	<code>cspybat</code>
Description	<p>Use this option to enable the generation of a text-based report file for code coverage information. The code coverage information will be generated after the execution has completed and you can find it in the specified file. Because most embedded applications do not terminate, you might have to use this option in combination with <code>--timeout</code> or <code>--cycles</code>.</p> <p>Note that this option requires that the C-SPY driver you are using supports code coverage. If you try to use this option with a C-SPY driver that does not support code coverage, an error message will be directed to <code>stderr</code>.</p>
See also	<i>Code coverage</i> , page 221, <i>--cycles</i> , page 324, <i>--timeout</i> , page 358.
	 To set this option, choose View>Code Coverage , right-click and choose Save As when the C-SPY debugger is running.


--communication_logfile

Syntax	<code>--communication_logfile path</code>
Parameters	<i>path</i> Where the log file will be saved.
For use with	The C-SPY Texas Instruments driver.
Description	<p>Use this option to log communication between C-SPY and the target system to a file. To interpret the result, detailed knowledge of the communication protocol is required. This log file can be useful if you intend to contact IAR Systems support for assistance.</p> <p> Project>Options>Debugger>Texas Instruments>Target>Log communication</p>

--connect_to

Syntax	<code>--connect_to jtag usb</code>
Parameters	<code>jtag usb</code> The type of debug port to connect to.
For use with	The C-SPY Infineon driver.
Description	Use this option to specify which DAS debug port to connect to.  This option is not available in the IDE.

--core

Syntax	<code>--core {plain pl extended1 e1 extended2 e2}</code>
Parameters	<code>plain pl extended1 e1 extended2 ex2</code> The core you are using. This option reflects the corresponding compiler option. For information about the cores, see the <i>IAR C/C++ Compiler User Guide for 8051</i> .
For use with	All C-SPY drivers.
Description	Use this option to specify the core you are using.  Project>Options>General Options>Target>CPU core

--core_clock_frequency

Syntax	<code>--core_clock_frequency n</code>
Parameters	<code>n</code> The frequency, from 0 to 999999999 Hz.
For use with	The C-SPY Analog Devices driver.
Description	Use this option if you have modified the hardware in such a way that the CPU clock frequency has changed.



Project>Options>Debugger>Analog Devices>Serial Port>Override default CPU clock frequency

--cycles

Syntax	<code>--cycles <i>cycles</i></code> Note that this option must be placed before the <code>--backend</code> option on the command line.
Parameters	<i>cycles</i> The number of cycles to run.
For use with	<code>cspybat</code>
Description	Use this option to specify the maximum number of cycles to run. If the target program executes longer than the number of cycles specified, the target program will be aborted. Using this option requires that the C-SPY driver you are using supports a cycle counter, and that it can be sampled while executing.



This option is not available in the IDE.

--debug_file

Syntax	<code>--debug_file <i>filename</i></code>
Parameters	<i>filename</i> The name of the debug file to use.
For use with	<code>cspybat</code> This option can be placed both before and after the <code>--backend</code> option on the command line.
Description	Use this option to make <code>cspybat</code> use the specified debug file instead of the one used in the generated <code>cpsybat.bat</code> file.



This option is not available in the IDE.

--debug_lock

Syntax	<code>--debug_lock</code>
For use with	The C-SPY Texas Instruments driver.
Description	Use this option to protect your application on the microcontroller from read and write accesses by locking the debug interface. To remove this lock, you must use the <code>--erase_flash</code> option.



Project>Options>Debugger>Texas Instruments>Download>Flash Lock Protection>Debug interface lock

--devices_after

Syntax	<code>--devices_after <i>number</i></code>
Parameters	<i>number</i> The number of devices after the device to be debugged.
For use with	The C-SPY Silicon Labs driver.
Description	Use this option to specify the number of devices in the chain after the device to be debugged. This option must be specified when the option <code>--multiple_devices</code> is used.
See also	<code>--multiple_devices</code> , page 336.



Project>Options>Debugger>Silicon Labs>Download>JTAG chain>Multiple devices>Devices>After

--devices_before

Syntax	<code>--devices_before <i>number</i></code>
Parameters	<i>number</i> The number of devices before the device to be debugged.
For use with	The C-SPY Silicon Labs driver.

Description	Use this option to specify the number of devices in the chain before the device to be debugged. This option must be specified when the option <code>--multiple_devices</code> is used.
See also	<code>--multiple_devices</code> , page 336.



Project>Options>Debugger>Silicon Labs>Download>JTAG chain>Multiple devices>Devices>Before

--disable_interrupts

Syntax	<code>--disable_interrupts</code>
For use with	The C-SPY Simulator driver.
Description	Use this option to disable the interrupt simulation.



To set this option, choose **Simulator>Interrupt Setup** and deselect the **Enable interrupt simulation** option.

--download_only

Syntax	<code>--download_only</code> Note that this option must be placed before the <code>--backend</code> option on the command line.
For use with	<code>cspybat</code>
Description	Use this option to download the code image without starting a debug session afterwards.



To set a related option, choose:
Project>Options>Debugger>Setup and deselect **Run to**.

--drv_communication_log

Syntax	<code>--drv_communication_log path</code>
Parameters	<i>path</i> Where the log file will be saved.
For use with	The C-SPY ROM-monitor driver.

Description Use this option to log communication between C-SPY and the ROM-monitor firmware to a file.



Project>Options>Debugger>ROM-Monitor>Serial Port>Log communication

--drv_silabs_page_size

Syntax `--drv_silabs_page_size {512|1024}`

Parameters `512|1024`
The flash page size in bytes.

For use with The C-SPY Silicon Labs driver.

Description Informs C-SPY of the size of the flash page.



Project>Options>Debugger>Silicon Labs>Download>Flash page size

--drv_suppress_download

Syntax `--drv_suppress_download`

For use with The C-SPY Segger J-Link driver.

Description Use this option to suppress download of your application to flash memory. If you do, it is highly recommended that you also use `--verify_download`.

See also `--drv_verify_download`, page 327 and `--retain_memory`, page 353.



Project>Options>Debugger>Segger J-Link>Download>Suppress download

--drv_verify_download

Syntax `--drv_verify_download`

For use with The C-SPY Segger J-Link driver.

Description Use this option to verify that the downloaded code image can be read back from target memory with the correct contents.



Project>Options>Debugger>Segger J-Link>Download>Verify download

--erase_data_flash

Syntax	--erase_data_flash
For use with	The C-SPY Analog Devices driver.
Description	Use this option to erase the data flash area during download.



Project>Options>Debugger>Analog Devices>Download>Erase data flash

--erase_flash

Syntax	--erase_flash
For use with	<ul style="list-style-type: none">• The C-SPY Texas Instruments driver• The C-SPY Infineon driver.
Description	Use this option to erase all flash memory before download.



Project>Options>Debugger>Driver>Download>Erase flash

-f

Syntax	-f <i>filename</i>
Parameters	<i>filename</i> A text file that contains the command line options (default filename extension <i>xc1</i>).
For use with	<i>cspybat</i> This option can be placed either before or after the <i>--backend</i> option on the command line.
Description	Use this option to make <i>cspybat</i> read command line options from the specified file.

In the command file, you format the items exactly as if they were on the command line itself, except that you may use multiple lines, because the newline character is treated like a space or tab character.

Both C/C++ style comments are allowed in the file. Double quotes behave in the same way as in the Microsoft Windows command line environment.



To set this option, use **Project>Options>Debugger>Extra Options**.

--fs2_configuration

Syntax	<code>--fs2_configuration core</code>
Parameters	<p><code>core</code> is the core type of your device. Choose between:</p> <p><code>cast51-single-core</code></p> <p><code>m8051ew-single-core</code></p> <p><code>philips51-single-core</code></p> <p><code>handshake51-single-core</code></p>
For use with	The C-SPY FS2 driver.
Description	Use this option to specify which core your device is.



Project>Options>Debugger>FS2 System Navigator>Target>Configuration

--fs2_flash_cfg_entry

Syntax	<code>--fs2_flash_cfg_entry label</code>
Parameters	<p><code>label</code></p> <p>The label for the entry in the <code>flash.cfg</code> file that describes how to program the flash memory of the device.</p>
For use with	The C-SPY FS2 driver.
Description	Use this option to describe to the debugger how to program the flash memory of the device.



Project>Options>Debugger>FS2 System Navigator>Target>Entry in flash.cfg

--fs2_flash_in_code

Syntax	<code>--fs2_flash_in_code <i>ranges</i></code>
Parameters	<i>ranges</i> One or more memory ranges separated by commas, like this: 0x0000-0x1111, 0x2222-0x3333.
For use with	The C-SPY FS2 driver.
Description	Use this option to specify where the device has program flash memory.



Project>Options>Debugger>FS2 System Navigator>Target>Flash areas

--fs2_ram_in_code

Syntax	<code>--fs2_ram_in_code <i>ranges</i></code>
Parameters	<i>ranges</i> One or more memory ranges separated by commas, like this: 0x0000-0x1111, 0x2222-0x3333.
For use with	The C-SPY FS2 driver.
Description	Use this option to specify where the device has program code in RAM memory, if your device supports code in RAM. This means that software breakpoints will be used in this memory area.



Project>Options>Debugger>FS2 System Navigator>Target>RAM areas

--function_profiling

Syntax	<code>--function_profiling <i>filename</i></code>
Parameters	<i>filename</i> The name of the log file where the profiling data is saved.

For use with	The C-SPY simulator driver.
Description	Use this option to find the functions in your source code where the most time is spent during execution. The profiling information is saved to the specified file. For more information about function profiling, see <i>Profiling</i> , page 211.



C-SPY driver>Function Profiling

--handshake_at_9600

Syntax	--handshake_at_9600
For use with	The C-SPY Analog Devices driver.
Description	Use this option to handshake at 9600 baud before initiating communication. This option must be used if you debug via the UART interface.



Project>Options>Debugger>Analog Devices>Download>UART debug mode

--infineon_ram_in_code

Syntax	--infineon_ram_in_code <i>ranges</i>
Parameters	<i>ranges</i> One or more memory ranges where your device has program code in the Infineon XRAM memory area, for example 0x0000-0x1111,0x2222-0x3333.
For use with	The C-SPY Infineon driver.
Description	Use this option to specify one or more memory ranges (separated by commas) where your device has program code in the Infineon XRAM memory area. Use this option to make software breakpoints faster.



Project>Options>Debugger>Infineon>Target>Has code in XRAM

--jlink_connection_id

Syntax	<code>--jlink_connection_id {usb0 usb1 usb2 usb3 <i>serial_no</i>}</code>
Parameters	<code>usb0 usb1 usb2 usb3</code> The USB device number of the debug probe you are using. <code><i>serial_no</i></code> The serial number of the debug probe you are using.
For use with	The C-SPY Segger J-Link driver.
Description	Use this option to specify which debug probe you are using. If not specified, you will be prompted every time you start your debug session if more than one debug probe is connected.



Project>Options>Debugger>Segger J-Link>Communication>Connection type

--jlink_log_file

Syntax	<code>--jlink_log_file <i>filepath</i></code>
Parameters	<code><i>filepath</i></code> The file path of the log file.
For use with	The C-SPY Segger J-Link driver.
Description	Use this option to log the communication between the debug probe and the target system to a file. To interpret the result, detailed knowledge of the communication protocol is required.



Project>Options>Debugger>Segger J-Link>Communication>Communication log

--jlink_power

Syntax	<code>--jlink_power</code>
For use with	The C-SPY Segger J-Link driver.

Description Use this option to supply the target hardware with power from the Segger J-Link debug probe.



Project>Options>Debugger>Segger J-Link>Communication>Power supply from J-Link

--jlink_speed

Syntax `--jlink_speed comm_speed`

Parameters `comm_speed`

The communication speed in kHz that you want to set.

For use with The C-SPY Segger J-Link driver.

Description This option specifies the communication speed between C-SPY and the evaluation board.

For information about the possible communication speeds, see the technical specifications for your debug probe.



Project>Options>Debugger>Segger J-Link>Communication>Communication speed

--key_noN

Syntax `--key_noN value`

Parameters `N`

The number of the key, from 1 to 4.

`value`

The key value, 0x00000000–0x7FFFFFFF.



For use with The C-SPY Infineon driver.

Description The DAS server has security keys that can be used if they are enabled. The keys can be used to protect access to the device that is debugged. If used, specify the key value for each security key to connect to the server.




Project>Options>Debugger>Infineon>Target>Security keys>Key #n

--leave_target_running

Syntax	<code>--leave_target_running</code>
For use with	<code>cspybat</code> . For any of these C-SPY drivers: <ul style="list-style-type: none">● The C-SPY Infineon driver.● The C-SPY Texas Instruments driver. Note: Even if this option is supported by the C-SPY driver you are using, there might be device-specific limitations.
Description	Use this option to make the debugger leave the application running on the target hardware after the debug session is closed.  Any existing breakpoints will not be automatically removed. You might want to consider disabling all breakpoints before using this option.  C-SPY driver>Leave Target Running

--lock_bits

Syntax	<code>--lock_bits n</code>
Parameters	<i>n</i> The bit range to lock, from 0 to 7. 0 protects the whole flash memory from read/write accesses. If the parameter is 1–7, a section of flash pages is protected. Exactly which section varies from device to device; see the documentation for your device.
For use with	The C-SPY Texas Instruments driver.
Description	Protects your application on the device by locking the flash memory. To remove this lock, you must use the <code>--erase_flash</code> option. Note: For newer devices (for example CC2530) you should use the option <code>--lock_bits_pages</code> instead.  Project>Options>Debugger>Texas Instruments>Download>CC111x, CC243x, CC251x

--lock_bits_pages

Syntax	<code>--lock_bits_pages <i>pages</i></code>
Parameters	<p><i>pages</i></p> <p>A comma-separated string that specifies the pages or page intervals that will be protected. For example, 0-6,8,12.</p>
For use with	The C-SPY Texas Instruments driver.
Description	<p>Protects your application on the device by locking the flash memory. To remove this lock, you must use the <code>--erase_flash</code> option.</p> <p>Note: For older devices (for example CC2430) you should use the option <code>--lock_bits</code> instead.</p>



Project>Options>Debugger>Texas Instruments>Download>CC253x, CC254x

--macro


Syntax	<code>--macro <i>filename</i></code>
	Note that this option must be placed before the <code>--backend</code> option on the command line.
Parameters	<p><i>filename</i></p> <p>The C-SPY macro file to be used (filename extension <code>mac</code>).</p>
For use with	<code>cspybat</code>
Description	Use this option to specify a C-SPY macro file to be loaded before executing the target application. This option can be used more than once on the command line.
See also	<i>Briefly about using C-SPY macros</i> , page 254.




Project>Options>Debugger>Setup>Setup macros>Use macro file

--macro_param

Syntax	<code>--macro_param [<i>param=value</i>]</code>
	Note that this option must be placed before the <code>--backend</code> option on the command line.

Parameters	<i>param=value</i> <i>param</i> is a parameter defined using the <code>__param</code> C-SPY macro construction. <i>value</i> is a value.
For use with	<code>cspybat</code>
Description	Use this option to assign a value to a C-SPY macro parameter. This option can be used more than once on the command line.
See also	<i>Macro parameters</i> , page 261.
	 To set this option, use Project>Options>Debugger>Extra Options

--mapu

Syntax	<code>--mapu</code>
For use with	The C-SPY simulator driver.
Description	Specify this option to use the segment information in the debug file for memory access checking. During the execution, the simulator will then check for accesses to unspecified memory ranges. If any such access is found, the C function call stack and a message will be printed on <code>stderr</code> and the execution will stop.
See also	<i>Monitoring memory and registers</i> , page 135.
	 To set related options, choose: Simulator>Memory Access Setup

--multiple_devices

Syntax	<code>--multiple_devices</code>
For use with	The C-SPY Silicon Labs driver.
Description	Use this option to specify that more than one device is connected to the same JTAG interface. In this case, you must also specify <code>--devices_after</code> , <code>--devices_before</code> , <code>--registers_after</code> , and <code>--registers_before</code> .
See also	<i>--devices_after</i> , page 325, <i>--devices_before</i> , page 325, <i>--registers_after</i> , page 352, and <i>--registers_before</i> , page 352.



Project>Options>Debugger>Silicon Labs>Download>JTAG chain>Multiple devices

--nr_of_extra_images

Syntax	<code>--nr_of_extra_images n</code>
Parameters	<p><i>n</i></p> <p>The number of extra images you want to download.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify that extra debug images will be downloaded to the target system.



Project>Options>Debugger>Images

--number_of_banks

Syntax	<code>--number_of_banks {1 2 4 8 16}</code>
Parameters	<p><code>1 2 4 8 16</code></p> <p>The number of banks.</p>
For use with	The C-SPY Texas Instruments driver.
Description	<p>Informs C-SPY of the number of memory banks on the device.</p> <p>Some Texas Instrument devices have built-in support for expanding the program memory. See the device hardware manual to see how much program memory (flash memory) your device has.</p>



Project>Options>Debugger>Texas Instruments>Target>Number of banks

-p

Syntax	<code>-p filename</code>
Parameters	<i>filename</i> The device description file to be used.
For use with	All C-SPY drivers.
Description	Use this option to specify the device description file to be used.
See also	<i>Selecting a device description file</i> , page 45.



Project>Options>Debugger>Setup>Device description file

--plugin

Syntax	<code>--plugin filename</code> Note that this option must be placed before the <code>--backend</code> option on the command line.
Parameters	<i>filename</i> The plugin file to be used (filename extension <code>dll</code>).
For use with	<code>cspybat</code>
Description	<p>Certain C/C++ standard library functions, for example <code>printf</code>, can be supported by C-SPY—for example, the C-SPY Terminal I/O window—instead of by real hardware devices. To enable such support in <code>cspybat</code>, a dedicated plugin module called <code>8051bat.dll</code> located in the <code>\bin</code> directory must be used.</p> <p>Use this option to include this plugin during the debug session. This option can be used more than once on the command line.</p> <p>Note: You can use this option to also include other plugin modules, but in that case the module must be able to work with <code>cspybat</code> specifically. This means that the C-SPY plugin modules located in the <code>common\plugin</code> directory cannot normally be used with <code>cspybat</code>.</p>



Project>Options>Debugger>Plugins

--power_target

Syntax	<code>--power_target</code>
For use with	The C-SPY Silicon Labs driver.
Description	Use this option to provide power to the target hardware even after the debug session has been closed. This option is only applicable when <code>--usb_interface</code> is used.
See also	<code>--usb_interface</code> , page 359.



Project>Options>Debugger>Silicon Labs>Download>USB interface>Continuously power target

--preserve_hex_files

Syntax	<code>--preserve_hex_files</code>
For use with	The C-SPY Silicon Labs driver.
Description	Use this option to preserve the hexadecimal file generated during the download process.
	To set this option, use Project>Options>Debugger>Extra Options .



--proc_alternative_sfr_addresses

Syntax	<code>--proc_alternative_sfr_addresses name0:addr0[,name1:addr1,...]</code>
Parameters	<p><i>nameN</i></p> <p>The name of the special function register. This can be one of: A, B, DPH, DPL, DPS, DPS1, IE, MEX1, MEX2, MEX3, MEXSP, P1, P2, PSW, or SP.</p> <p><i>addrN</i></p> <p>The memory location of the specified register in hexadecimal notation, prefixed by 0x.</p>
For use with	All C-SPY drivers.
Description	Use this option to inform the debugger of the location of one or more special function registers, for which your device uses addresses that are not compliant with the original 8051 architecture.



To set this option, use **Project>Options>Debugger>Extra Options**.

--proc_code_model

Syntax	<code>--proc_code_model {near banked banked_ext2 far}</code>
Parameters	<div><div>near</div><div>Selects Near as the default code model.</div><div>banked</div><div>Selects Banked as the default code model.</div><div>banked_ext2</div><div>Selects Banked_ext2 as the default code model.</div><div>far</div><div>Selects Far as the default code model.</div></div>
For use with	All C-SPY drivers (mandatory).
Description	Use this option to specify the default code model.



Project>Options>General Options>Target>Code model

--proc_codebank_end

Syntax	<code>--proc_codebank_end address</code>
Parameters	<div><div>address</div><div>The end address of the banked area, from 0000 to FFFF.</div></div>
For use with	All C-SPY drivers.
Description	Use this option to specify the end address of the banked area. The end address must be specified when <code>--proc_code_model</code> is set to banked.



Project>Options>General Options>Code Bank>Bank end

--proc_codebank_mask

Syntax	<code>--proc_codebank_mask address</code>
Parameters	<p><i>address</i></p> <p>The active bits in the bank register, from 0x80 to 0xFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to set the active bits in the bank register when <code>--proc_code_model</code> is set to <code>banked</code> .



Project>Options>General Options>Code bank>Register mask

--proc_codebank_reg

Syntax	<code>--proc_codebank_reg address</code>
Parameters	<p><i>address</i></p> <p>The SFR address for the code bank register, from 0x80 to 0xFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify the SFR address for the code bank register when <code>--proc_code_model</code> is set to <code>banked</code> .



Project>Options>General Options>Code Bank>Register address

--proc_codebank_start

Syntax	<code>--proc_codebank_start address</code>
Parameters	<p><i>address</i></p> <p>The start address of the banked area, from 0000 to FFFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify the start address of the banked area. The start address must be specified when <code>--proc_code_model banked</code> is specified.



Project>Options>General Options>Code Bank>Bank start

--proc_core

Syntax	<code>--proc_core core</code>
Parameters	<code>core</code> The type of 8051 core you are using. Choose between: <code>plain extended1 extended2</code>
For use with	All C-SPY drivers (mandatory).
Description	Use this option to specify the instruction set extensions and other extensions that your application uses.



Project>Options>General Options>Target>CPU core

--proc_data_addr_24


Syntax	<code>--proc_data_addr_24</code>
For use with	All C-SPY drivers.
Description	Use this option to enable the use of 24-bit data addresses; mandatory when the device has a 24-bit address bus. If the option is omitted, the default is 16-bit addresses.




Project>Options>General Options>Data Pointer>Size

--proc_data_model

Syntax	<code>--proc_data_model {tiny small large far generic}</code>
Parameters	<code>tiny</code> Selects Tiny as the default data model. <code>small</code> Selects Small as the default data model.


	<code>large</code>
	Selects Large as the default data model.
	<code>far</code>
	Selects Far as the default data model.
	<code>generic</code>
	Selects Generic as the default data model.
For use with	All C-SPY drivers (mandatory).
Description	Use this option to specify the default data model.
	 Project>Options>General Options>Target>Code model

--proc_DPHn


Syntax	<code>--proc_DPHn address</code>
Parameters	<p><code>n</code></p> <p>The register number; <i>n</i> can be 1-7.</p> <p><code>address</code></p> <p>The address can be from 0x80 to 0xFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify the SFR address of the high part of the DPTR1–DPTR7 registers for your device. This option requires that <code>--proc_dpnr_of</code> is set to greater than 1 and that <code>--proc_dpnr_visibility</code> is used.
See also	<code>--proc_dpnr_of</code> , page 346 and <code>--proc_dpnr_visibility</code> , page 347
	 Project>Options>General Options>Data Pointer>DPTR addresses>Configure

--proc_DPLn

Syntax	<code>--proc_DPHn address</code>
Parameters	<p><code>n</code></p> <p>The register number; <i>n</i> can be 1-7.</p>

	<i>address</i> The address can be from 0x80 to 0xFF.
For use with	All C-SPY drivers.
Description	Use this option to specify the SFR address of the low part of the DPTR1–DPTR7 registers for your device. This option requires <code>--proc_dp_ptr_nr_of</code> to be set to greater than 1 and <code>--proc_dp_ptr_visibility</code> to be set to separate.
See also	<code>--proc_dp_ptr_nr_of</code> , page 346 and <code>--proc_dp_ptr_visibility</code> , page 347
	 Project>Options>General Options>Data Pointer>DPTR addresses>Configure

--proc_dp_ptr_automod_op

Syntax	<code>--proc_dp_ptr_automod_op toggle</code>
Parameters	<code>toggle</code> Makes the compiler use the DPTR auto-modification operation Toggle for derivatives that support this.
For use with	All C-SPY drivers.
Description	Use this option to specify the auto-modification operation for the DPTR register. This option requires that <code>--proc_dp_ptr_automod_type</code> is used.
	 This option is not available in the IDE.

--proc_dp_ptr_automod_type

Syntax	<code>--proc_dp_ptr_automod_type {cast_xc maxim_89c430 analog_adu}</code>
Parameters	<code>cast_xc maxim_89c430 analog_adu</code> The type of auto-modification used for the DPTR register.
For use with	All C-SPY drivers.
Description	Use this option to specify the type of auto-modification for the DPTR register. Not all devices have auto-modification capabilities. This option requires that <code>--proc_dp_ptr_nr_of</code> is set to a value higher than 1.



This option is not available in the IDE.

--proc_dptra_DPC

Syntax	<code>--proc_dptra_DPC address</code>
Parameters	<p><i>address</i></p> <p>The SFR address of the DPTR configuration register, from 0x80 to 0xFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify the SFR address of the DPTR configuration register that determines the properties and behavior of the DPTR register. This option can only be used if your device supports this type of register.



Project>Options>General Options>Data Pointer>Separate DPTR control register

--proc_dptra_DPS


Syntax	<code>--proc_dptra_DPS address</code>
Parameters	<p><i>address</i></p> <p>The SFR address of the DPTR select register, from 0x80 to 0xFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify the SFR address of the DPTR select register that switches DPTRs on your device. This option requires <code>--proc_dptra_nr_of</code> to be set to greater than 1 and <code>--proc_dptra_visibility</code> to be set to separate.




Project>Options>General Options>Data Pointer>DPTR select>Select register

--proc_dptra_mask


Syntax	<code>--proc_dptra_mask number</code>
Parameters	<p><i>number</i></p> <p>The active bits in the DPTR select register, from 0x80 to 0xFF.</p>

For use with	All C-SPY drivers.
Description	Use this option to specify the active bits in the DPTR select register.
	 Project>Options>General Options>Data Pointer>DPTR select>Set using XOR/AND>Mask

--proc_dpnr_nr_of

Syntax	<code>--proc_dpnr_nr_of <i>number</i></code>
Parameters	<i>number</i> The number of DPTRs on the device, from 1 to 8.
For use with	All C-SPY drivers.
Description	Use this option to specify the number of DPTRs on the device. The default value is 1.
	 Project>Options>General Options>Data Pointer>Number of DPTRs

--proc_dpnr_switch_method

Syntax	<code>--proc_dpnr_switch_method {INC XOR}</code>
Parameters	INC XOR The method to change the DPTR select register.
For use with	All C-SPY drivers.
Description	Use this option to specify the method to change the DPTR select register. You can use the INC method if your device has the DPTR mask register in the least significant bit and is followed by a write-protected bit. You must specify the switch method if <code>--proc_dpnr_nr_of</code> is greater than 1.
	 Project>Options>General Options>Data Pointer>DPTR select>Toggle using INC Project>Options>General Options>Data Pointer>DPTR select>Set using XOR/AND

--proc_dptr_visibility

Syntax	<code>--proc_dptr_visibility {separate shadowed}</code>
Parameters	<code>separate shadowed</code> The type of DPTR visibility in the SFR area.
For use with	All C-SPY drivers.
Description	Use this option to specify the number of DPTRs on the device. If all DPTRs share the same address for DPL, DPH, and DPX (if applicable), choose <code>shadowed</code> . Otherwise, choose <code>separate</code> . The visibility must be specified if <code>--proc_dptr_nr_of</code> is greater than 1.



Project>Options>General Options>Data Pointer>DPTR addresses

--proc_DPXn

Syntax	<code>--proc_DPXn address</code>
Parameters	<code>n</code> The register number; <i>n</i> can be 1–7. Omit <i>n</i> when you are referring to the DPX register. <code>address</code> The address can be from 0x80 to 0xFF.
For use with	All C-SPY drivers.
Description	Use this option to specify the SFR address for the DPTR1–DPTR7 registers if your device has a 24-bit address bus. This option requires <code>--proc_dptr_nr_of</code> to be set to greater than 1 and <code>--proc_dptr_visibility</code> to be set to <code>separate</code> .
See also	<code>--proc_dptr_nr_of</code> , page 346 and <code>--proc_dptr_visibility</code> , page 347



Project>Options>General Options>Data Pointer>DPTR addresses>Configure

--proc_driver

Syntax	<code>--proc_driver</code> <code>{ad chipcon infineon jlink rom silabs sim 3rd_party}</code>
Parameters	<div><div><code>ad</code></div><div>Specifies the Analog Devices driver.</div></div> <div><div><code>chipcon</code></div><div>Specifies the Texas Instruments driver.</div></div> <div><div><code>infineon</code></div><div>Specifies the Infineon driver.</div></div> <div><div><code>jlink</code></div><div>Specifies the Segger J-Link driver.</div></div> <div><div><code>rom</code></div><div>Specifies the ROM-monitor driver.</div></div> <div><div><code>silabs</code></div><div>Specifies the Silicon Labs driver.</div></div> <div><div><code>sim</code></div><div>Specifies the simulator driver.</div></div> <div><div><code>3rd_party</code></div><div>Specifies the third-party driver.</div></div>

--proc_exclude_exit_breakpoint

Syntax	<code>--proc_exclude_exit_breakpoint</code>
For use with	All C-SPY drivers.
Description	Use this option in the CLIB runtime environment to disable the system breakpoint on the <code>exit</code> label. Breakpoints are a critical resource in many hardware drivers. For more information, see <i>Breakpoint consumers</i> , page 110.



Project>Options>Debugger>Setup>Exclude system breakpoints on

--proc_exclude_getchar_breakpoint

Syntax	<code>--proc_exclude_getchar_breakpoint</code>
For use with	All C-SPY drivers.
Description	Use this option in the CLIB runtime environment to disable the system breakpoint on the <code>getchar</code> function when your application is linked with I/O emulation modules. Breakpoints are a critical resource in many hardware drivers. For more information, see <i>Breakpoint consumers</i> , page 110.



Project>Options>Debugger>Setup>Exclude system breakpoints on

--proc_exclude_putchar_breakpoint

Syntax	<code>--proc_exclude_putchar_breakpoint</code>
For use with	All C-SPY drivers.
Description	Use this option in the CLIB runtime environment to disable the system breakpoint on the <code>putchar</code> function when your application is linked with I/O emulation modules. Breakpoints are a critical resource in many hardware drivers. For more information, see <i>Breakpoint consumers</i> , page 110.



Project>Options>Debugger>Setup>Exclude system breakpoints on

--proc_extended_stack

Syntax	<code>--proc_extended_stack <i>address</i></code>
Parameters	<i>address</i> The address of the extended stack; 00-FFFFFF.
For use with	All C-SPY drivers.

Description	Use this option to specify the address of the extended stack if your application supports and uses an extended stack.
-------------	---



Project>Options>General Options>Target>Extended stack at

--proc_nr_virtual_regs

Syntax	<code>--proc_nr_virtual_regs <i>number</i></code>
--------	---

Parameters	<i>number</i> The number of virtual registers, from 8 to 32.
------------	---

For use with	All C-SPY drivers.
--------------	--------------------

Description	Use this option to specify the number of virtual registers.
-------------	---



Project>Options>General Options>Target>Number of virtual registers

--proc_pc_readonly

Syntax	<code>--proc_pc_readonly</code>
--------	---------------------------------

For use with	Any C-SPY hardware debugger driver.
--------------	-------------------------------------

Description	Use this option to inform the IDE that the hardware does not support writing to the PC register when C-SPY is running.
-------------	--




This option is not available in the IDE.

--proc_pdata_bank_ext_reg_addr


Syntax	<code>--proc_pdata_bank_ext_reg_addr <i>address</i></code>
--------	--

Parameters	<i>address</i> The address can be from 0x80 to 0xFF.
------------	---


For use with	All C-SPY drivers.
--------------	--------------------

Description	Use this option to specify the address of the MOVX@R0 instructions on devices with a 24-bit address bus.
	 Project>Options>General Options>Data Pointer>Page register address>Bit 16-23

--proc_pdata_bank_reg_addr

Syntax	<code>--proc_pdata_bank_reg_addr address</code>
Parameters	<p><i>address</i></p> <p>The address can be from 0x80 to 0xFF.</p>
For use with	All C-SPY drivers.
Description	Use this option to specify the address of the MOVX@R0 instructions on devices with a 16-bit address bus or the lower byte of the address on devices with a 24-bit address bus.
	 Project>Options>General Options>Data Pointer>Page register address>Bit 8-15

--proc_silent

Syntax	<code>--proc_silent</code>
For use with	All C-SPY drivers.
Description	Use this option to disable the output of messages during the debugging.
	 This option is not available in the IDE.

--proc_xdata_banking

Syntax	<code>--proc_xdata_banking</code>
For use with	All C-SPY drivers.
Description	Use this option to make registers display correctly in C-SPY for devices that support banked XDATA memory.



This option is not available in the IDE.

--reduce_speed

Syntax	<code>--reduce_speed</code>
For use with	The C-SPY Texas Instruments driver.
Description	Use this option to reduce the communication speed between your host computer and the target board. This can be very useful if you use a long cable or encounter communication problems or interference.



Project>Options>Debugger>Texas Instruments>Target>Reduce interface speed

--registers_after

Syntax	<code>--registers_after number</code>
Parameters	<i>number</i> Specifies the number of registers after the device to be debugged, 0–n.
For use with	The C-SPY Silicon Labs driver.
Description	Use this option to specify the number of JTAG registers in the chain after the device to be debugged. This option must be specified when <code>--multiple_devices</code> is used.
See also	<code>--multiple_devices</code> , page 336.



Project>Options>Debugger>Silicon Labs>Download>JTAG chain>Multiple devices>Devices>After

--registers_before

Syntax	<code>--registers_before number</code>
Parameters	<i>number</i> Specifies the number of registers before the device to be debugged, 0–n.
For use with	The C-SPY Silicon Labs driver.

Description	Use this option to specify the number of JTAG registers in the chain before the device to be debugged. This option must be specified when the option <code>--multiple_devices</code> is used.
See also	<code>--multiple_devices</code> , page 336.



Project>Options>Debugger>Silicon Labs>Download>JTAG chain>Multiple devices>Devices>Before

--retain_memory

Syntax	<code>--retain_memory</code>
For use with	The C-SPY Texas Instruments driver.
Description	Use this option to make sure only the changed, new, or updated bytes are downloaded to flash memory, to save flash cycles.
See also	<code>--suppress_download</code> , page 357.



Project>Options>Debugger>Texas Instruments>Download>Retain unchanged pages

--retain_pages

Syntax	<code>--retain_pages n</code>
Parameters	<i>n</i> The page number, 1– <i>n</i> .
For use with	The C-SPY Texas Instruments driver.
Description	Use this option to make sure that certain flash pages are not rewritten during download.



Project>Options>Debugger>Texas Instruments>Download>Retain flash pages

--rom_serial_port

Syntax	<code>--rom_serial_port port speed parity data stop handshake</code>
Parameters	<p><i>port</i></p> <p>The communication port can be any port from COM1 to COM64.</p> <p><i>speed</i></p> <p>The communication speed can be 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 baud.</p> <p><i>parity</i></p> <p>The parity value must be N.</p> <p><i>data</i></p> <p>Only 8 data bits is supported.</p> <p><i>stop</i></p> <p>The stop bit can be 1 or 2.</p> <p><i>handshake</i></p> <p>The handshaking value can be any of NONE, NONELOW, or RTSCTS.</p>
For use with	The C-SPY ROM-monitor driver.
Description	Use this option to specify the communication options for the ROM-monitor driver. C-SPY connects at 9600 baud and then changes to the communication speed of the selected serial port after making the first contact with the evaluation board. If these options have not been specified, C-SPY will try using the COM1 port.



Project>Options>Debugger>ROM-monitor>Serial Port

--serial_port

Syntax	<code>--serial_port port</code>
Parameters	<p><i>port</i> is the communication port that you want to use.</p> <p>For the Silicon Labs driver, choose between:</p> <p>1 2 3 4</p> <p>Sets the communication port to COM1, COM2, COM3, or COM4, respectively.</p>

	For the Analog Devices driver, choose between: COM1 COM2 COM3 COM4 COM5 COM6 COM7 COM8 COM9 Sets the communication port to COM1, COM2, COM3, COM4, COM5, COM6, COM7, COM8, or COM9, respectively
For use with	<ul style="list-style-type: none">• The C-SPY Silicon Labs driver• The C-SPY Analog Devices driver.
Description	Use this option to specify the communication options for the driver. C-SPY tries to connect with the selected serial port when making the first contact with the evaluation board. If you do not specify a port, C-SPY will try using the COM1 port.



Project>Options>Debugger>Driver>Serial Port>Port

--server_address

Syntax	<code>--server_address address</code>
Parameters	<i>address</i> The name or IP address of the connected server. Specify <code>localhost</code> if the server software is located on your host computer.
For use with	The C-SPY Infineon driver.
Description	Use this option to specify the server on which the DAS server software is running.



Project>Options>Debugger>Infineon>Target>Server>Address

--server_name

Syntax	<code>--server_name name</code>
Parameters	<i>name</i> is the type of DAS server to connect to (case sensitive). Choose between: "JTAG over USB Box" "JTAG over USB Chip" "UDAS "

	"JTAG over Tantino"
For use with	The C-SPY Infineon driver.
Description	Use this option to specify the type of DAS server. If the server is not specified, a dialog box will prompt you for a server name when the debug session starts.



Project>Options>Debugger>Infineon>Target>Server>Address

--silabs_2wire_interface

Syntax	--silabs_2wire_interface
For use with	The C-SPY Silicon Labs driver.
Description	The Silicon Labs C8051F3xx/F4xx/F5xx/F9xx devices use the Silicon Labs 2-wire debugging interface (C2). Use this option to set the interface to the Silicon Labs 2-wire debugging interface. You must specify this option to connect to any of these devices.



Project>Options>Debugger>Silicon Labs>Download>Silicon Labs 2-wire (C2) interface

--silent


Syntax	--silent
	Note that this option must be placed before the --backend option on the command line.
For use with	cspybat
Description	Use this option to omit the sign-on message.




This option is not available in the IDE.

--sim_guard_stacks


Syntax	--sim_guard_stacks
For use with	The C-SPY Simulator driver.

Description	Use this option to be alerted if the stack pointers are out of bounds.
	 Project>Options>Debugger>Simulator>Simulator>Guard stack pointers

--software_breakpoints

Syntax	--software_breakpoints
For use with	The C-SPY Infineon driver.
Description	To extend the number of code breakpoints, software breakpoints can be used. Use this option to make C-SPY use software breakpoints for code breakpoint when you run out of hardware breakpoints.
	 Project>Options>Debugger>Infineon>Target>Software breakpoints

--stack_overflow

Syntax	--stack_overflow
For use with	The C-SPY Texas Instruments driver.
Description	Use this option to enable IData stack overflow warnings. This is not a runtime check, but is done at the next stop, which means that it will not stop the execution if an IData stack overflow is encountered.
	 Project>Options>Debugger>Texas Instruments>Target>Enable stack overflow warning

--suppress_download

Syntax	--suppress_download
For use with	<ul style="list-style-type: none"> • The C-SPY Texas Instruments driver • The C-SPY FS2 driver • The C-SPY Infineon driver • The C-SPY Nordic Semiconductor driver • The C-SPY ROM-monitor driver • The C-SPY Silicon Labs driver.

Description	Use this option to suppress download of your application to flash memory. If you do, it is highly recommended that you also use <code>--verify_download</code> .
See also	<code>--verify_download</code> , page 360 and <code>--retain_memory</code> , page 353.



Project>Options>Debugger>Driver>Download>Suppress download

--timeout

Syntax	<code>--timeout milliseconds</code> Note that this option must be placed before the <code>--backend</code> option on the command line.
Parameters	<i>milliseconds</i> The number of milliseconds before the execution stops.
For use with	<code>cspybat</code>
Description	Use this option to limit the maximum allowed execution time.



This option is not available in the IDE.

--toggle_DTR

Syntax	<code>--toggle_DTR</code>
For use with	The C-SPY ROM-monitor driver.
Description	Use this option to toggle the DTR signal on your target board whenever the debugger is reset. If the DTR signal is connected to the RESET pin on the microcontroller, toggling the signal will force a target hardware reset.



Project>Options>Debugger>ROM-Monitor>Serial Port>On Reset>Toggle DTR

--toggle_RTS

Syntax	<code>--toggle_RTS</code>
For use with	The C-SPY ROM-monitor driver.

Description Use this option to toggle the RTS signal on your target board whenever the debugger is reset. If the RTS signal is connected to the RESET pin on the microcontroller, toggling the signal will force a target hardware reset.



Project>Options>Debugger>ROM-Monitor>Serial Port>On Reset>Toggle RTS

--usb_id

Syntax `--usb_id id`

Parameters `id`

The ID of the evaluation board you are using.

For use with The Texas Instruments driver.

Description Use this option to specify which evaluation board you are using. If not specified, you will be prompted every time you start your debug session if more than one evaluation board is connected.



Project>Options>Debugger>Texas Instruments>Target>Communication

--usb_interface

Syntax `--usb_interface`

For use with The C-SPY Silicon Labs driver.

Description Use this option to specify the download interface as USB. Use this option if you are using a USB debugger adapter.

See also The option `--power_target`, page 339.



Project>Options>Debugger>Silicon Labs>Download>USB interface

--verify_all

Syntax `--verify_all`

For use with

- The C-SPY ROM-monitor driver

	<ul style="list-style-type: none">● The C-SPY Analog Devices driver● The C-SPY Silicon Labs driver.
Description	Use this option to verify that the application data is correctly transferred from the driver to the device. This verification increases the programming sequence time.



Project>Options>Debugger>Driver>Download>Verify download

--verify_download

Syntax	<code>--verify_download {read_back_memory use_crc16}</code>
Parameters	<p>Parameters for the Texas Instruments driver only:</p> <p><code>read_back_memory</code> Verifies a target by reading back memory.</p> <p><code>use_crc16</code> Verifies a target using on-chip page CRC16.</p>
For use with	<ul style="list-style-type: none">● The C-SPY Texas Instruments driver● The C-SPY FS2 driver● The C-SPY Infineon driver● The C-SPY Nordic Semiconductor driver.
Description	Use this option to verify that the application data is correctly transferred from the driver to the device. This verification increases the programming sequence time, but the <code>read_back_memory</code> method increases the time overhead more than the <code>use_crc16</code> method.




Project>Options>Debugger>Driver>Download>Verify download

Part 4. Additional reference information

This part of the *C-SPY® Debugging Guide for 8051* includes these chapters:

- Debugger options
- Additional information on C-SPY drivers
- Target-adapting the ROM-monitor

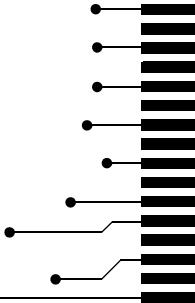



Debugger options

- Setting debugger options
- Reference information on general debugger options
- Reference information on C-SPY Texas Instruments driver options
- Reference information on C-SPY FS2 driver options
- Reference information on C-SPY Infineon driver options
- Reference information on C-SPY Segger J-Link driver options
- Reference information on C-SPY Nordic Semiconductor driver options
- Reference information on C-SPY ROM-monitor driver options
- Reference information on C-SPY Analog Devices driver options
- Reference information on C-SPY Silicon Labs driver options

Setting debugger options

Before you start the C-SPY debugger you might need to set some options—both C-SPY generic options and options required for the target system (C-SPY driver-specific options). This section gives detailed information about the options in the **Debugger** category.

To set debugger options in the IDE:

- 1 Choose **Project>Options** to display the **Options** dialog box.
- 2 Select **Debugger** in the **Category** list.

For more information about the generic options, see *Reference information on general debugger options*, page 364.

- 3 On the **Setup** page, select the appropriate C-SPY driver from the **Driver** drop-down list.
- 4 To set the driver-specific options, select the appropriate driver from the **Category** list. Depending on which C-SPY driver you are using, different options are available.

C-SPY driver	Available options pages
C-SPY Texas Instruments driver	Download options for Texas Instruments, page 370 Target options for Texas Instruments, page 372
C-SPY FS2 System Navigator driver	Download options for FS2, page 373 Target options for FS2, page 374
C-SPY Infineon driver	Download options for Infineon, page 375 Target options for Infineon, page 376
C-SPY Segger J-Link driver	Download options for Segger J-Link, page 377 Communication options for Segger J-Link, page 378
C-SPY Nordic Semiconductor driver	Download options for Nordic Semiconductor, page 379
C-SPY ROM-monitor driver	Download options for the ROM-monitor, page 380 Serial Port options for the ROM-monitor, page 381
C-SPY Analog Devices driver	Download options for Analog Devices, page 382 Serial Port options for Analog Devices, page 383
C-SPY Silicon Labs driver	Download options for Silicon Labs, page 384 Serial Port options for Silicon Labs, page 385
Third-party driver	Third-Party Driver options, page 369.

Table 35: Options specific to the C-SPY drivers you are using

- 5 To restore all settings to the default factory settings, click the **Factory Settings** button.
- 6 When you have set all the required options, click **OK** in the **Options** dialog box.

Reference information on general debugger options

Reference information about:

- *Setup*, page 365
- *Images*, page 366
- *Extra Options*, page 367
- *Plugins*, page 368
- *Third-Party Driver options*, page 369

Setup

The general **Setup** options select the C-SPY driver, the setup macro file, and device description file to use, and specify which default source code location to run to.

Driver

Selects the C-SPY driver for the target system you have.

Run to

Specifies the location C-SPY runs to when the debugger starts after a reset. By default, C-SPY runs to the `main` function.

To override the default location, specify the name of a different location you want C-SPY to run to. You can specify assembler labels or whatever can be evaluated as such, for example function names.

If the option is deselected, the program counter will contain the regular hardware reset address at each reset.

See also *Executing from reset*, page 44.

Exclude system breakpoints on

Controls the use of system breakpoints in the CLIB runtime environment. If the C-SPY Terminal I/O window is not required or if you do not need a breakpoint on the `exit` label, you can save hardware breakpoints by not reserving system breakpoints. Deselect or select the options **exit**, **putchar**, and **getchar**, respectively, if you want or do not want C-SPY to use system breakpoints for these. See *Breakpoint consumers*, page 110.

Setup macros

Registers the contents of a setup macro file in the C-SPY startup sequence. Select **Use macro file** and specify the path and name of the setup file, for example

SetupSimple.mac. If no extension is specified, the extension `mac` is assumed. A browse button is available for your convenience.

Device description file

A default device description file is selected automatically based on your project settings. To override the default file, select **Override default** and specify an alternative file. A browse button is available.

For information about the device description file, see *Modifying a device description file*, page 49.

Device description files for each 8051 device are provided in the directory `8051\config` and have the filename extension `ddf`.

Images

The **Images** options control the use of additional debug files to be downloaded.

Images

☒ Download extra image

Path:

Offset: ☐ Debug info only

☐ Download extra image

Path:

Offset: ☐ Debug info only

☐ Download extra image

Path:

Offset: ☐ Debug info only

Download extra Images

Controls the use of additional debug files to be downloaded:

Path

Specify the debug file to be downloaded. A browse button is available for your convenience.

Offset

Specify an integer that determines the destination address for the downloaded debug file.

Debug info only


Makes the debugger download only debug information, and not the complete debug file.

If you want to download more than three debug images, use the related C-SPY macro, see `__loadImage`, page 278.

For more information, see *Loading multiple debug images*, page 47.

Extra Options

The **Extra Options** page provides you with a command line interface to C-SPY.

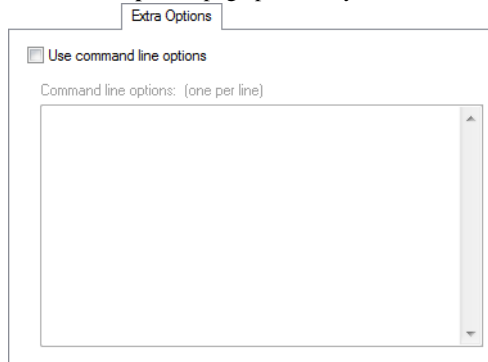

Use command line options

Specify command line arguments that are not supported by the IDE to be passed to C-SPY.

Note that it is possible to use the `/args` option to pass command line arguments to the debugged application.

Syntax: `/args arg0 arg1 ...`

Multiple lines with `/args` are allowed, for example:

```
/args --logfile log.txt
```

```
/args --verbose
```

If you use /args, these variables must be defined in your application:


```
/* __argc, the number of arguments in __argv. */
__no_init int __argc;

/* __argv, an array of pointers to strings that holds the
arguments; must be large enough to fit the number of
parameters.*/
__no_init const char * __argv[MAX_ARGS];

/* __argvbuf, a storage area for __argv; must be large enough to
hold all command line parameters. */
__no_init __root char __argvbuf[MAX_ARG_SIZE];
```

Plugins

The **Plugins** options select the C-SPY plugin modules to be loaded and made available during debug sessions.

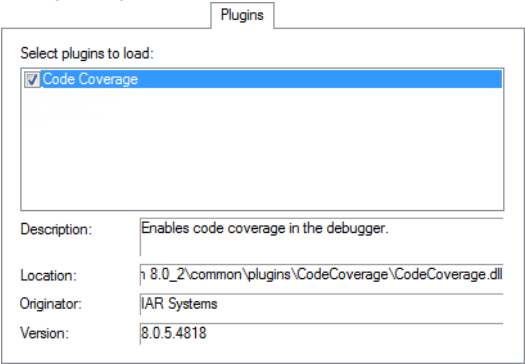

Select plugins to load

Selects the plugin modules to be loaded and made available during debug sessions. The list contains the plugin modules delivered with the product installation.

Description

Describes the plugin module.

Location

Informs about the location of the plugin module.

Generic plugin modules are stored in the common\plugins directory. Target-specific plugin modules are stored in the 8051\plugins directory.

Originator

Informs about the originator of the plugin module, which can be modules provided by IAR Systems or by third-party vendors.

Version

Informs about the version number.

Third-Party Driver options

The **Third-Party Driver** options are used for loading any driver plugin provided by a third-party vendor. These drivers must be compatible with the C-SPY debugger driver specification.

Third-Party Driver

IAR debugger driver plugin

Browse to your third-party driver

☒ Log communication

\$PROJ_DIR\$\cspycomm.log

In addition to the options you can set here, you can set options for the third-party driver using the **Project>Options>Debugger>Extra Options** page.

IAR debugger driver plugin

Specify the file path to the third-party driver plugin DLL file. A browse button is available for your convenience.

Suppress download

Disables the downloading of code, while preserving the present content of the flash. This command is useful if you want to debug an application that already resides in target memory.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Log communication

Logs the communication between C-SPY and the target system to a file. To interpret the result, detailed knowledge of the interface is required.

Reference information on C-SPY Texas Instruments driver options

This section gives reference information on C-SPY Texas Instruments driver options.

Download options for Texas Instruments

The Texas Instruments **Download** options control the download.

The screenshot shows a 'Download' dialog box with the following options:

- ☐ Erase flash
- ☐ Suppress download
- ☒ Retain unchanged pages
- ☐ Retain flash pages
- ☒ Verify download
 - ☒ CRC-16
 - ☐ Read back memory

Flash lock protection:

- ☒ Lock flash memory
 - ☒ CC111x, CC243x, CC251x
 - ☐ Boot block lock
 - Lock bits 000b (all pages)
 - <page size info. missing>
 - ☐ CC253x, CC254x

example: 0-6,8,12

- ☐ Debug interface lock

Erase flash

Erases all flash memories before download.

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Retain unchanged pages

Specifies that only changed, new, or updated pages are downloaded to flash memory, to save flash cycles.

Retain flash pages

Specify any flash pages that should not be rewritten during download. Type the page numbers separated by commas, as page intervals, or a combination of these, like 0-6, 8, 12.

Verify download

Verifies that the program data has been correctly transferred from the driver to the device. Choose between:

CRC-16

Verifies a target using on-chip page CRC16.

Read back memory

Verifies a target by reading back memory.

Lock flash memory

Protects your application on the device by locking the flash memory. Select the device family you are using and the parts of the flash memory you want to protect:

CC111x, CC243x, CC251x

Locks the flash memory of CC111x, CC243x, or CC251x devices.

Boot block lock

Locks the boot sector of CC111x, CC243x, or CC251x devices. Choose the lock bits from the drop-down menu. **Lock bits 000b** protects the whole flash memory, what the other options protect varies from device to device. The protected area is displayed under the drop-down menu.

CC253x, CC254x

Locks the flash memory of CC253x or CC254x devices. Type the flash pages you want to lock in the text box, separated by commas, as page intervals, or a combination of these, like 0-6, 8, 12.

To remove these locks, you must select the **Erase flash** option.

Debug interface lock

Protects your application on the microcontroller from read and write accesses by locking the debug interface. To remove the lock, you must select the **Erase flash** option.

Target options for Texas Instruments

The Texas Instruments **Target** options control target-specific features of the Texas Instruments driver.

The screenshot shows a dialog box titled "Target" with several configuration options. At the top, there is a checkbox for "Reduce interface speed". Below it is a checked checkbox for "Enable stack overflow warning". Underneath is a label "Number of banks :" followed by a dropdown menu showing the value "4". A section titled "Communication" contains two radio buttons: "Ask" (which is selected) and "USB ID" (which has a text field next to it containing "0000"). At the bottom, there is a checkbox for "Log communication" and a text field containing "communication.log" with a browse button (three dots) to its right.

Reduce interface speed

Reduces the communication speed between your host computer and the evaluation board. This can be very useful if you use a long cable or encounter communication problems or interference.

Enable stack overflow warning

Enables stack overflow warnings. This is not a runtime check, but is performed at the next stop, which means that it will not stop the execution if a stack overflow is encountered.

Number of banks

Specify the number of actual hardware memory banks on the device.

Communication

Specify the ID of the evaluation board you are using. If it is not specified, you will be prompted every time you start your debug session if more than one evaluation board is connected.

Log communication


Logs the communication between C-SPY and the target system to a file. To interpret the result, detailed knowledge of the communication protocol is required. This log file can be useful if you intend to contact IAR Systems support for assistance.

Reference information on C-SPY FS2 driver options

This section gives reference information on C-SPY FS2 driver options.

Download options for FS2

The FS2 **Download** options control the download.

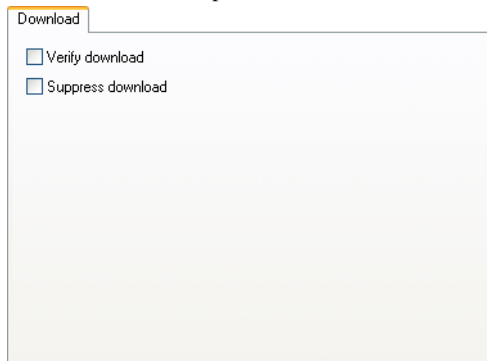A screenshot of a software dialog box titled "Download". It contains two unchecked checkboxes: "Verify download" and "Suppress download". The dialog box has a light gray background and a thin border. The title bar is at the top left, and the checkboxes are positioned below it.

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Target options for FS2

The FS2 **Target** options control target-specific features of the Infineon driver.

Target

Configuration: cast51-single-core

Program flash

☒ Has program flash

Entry in flash.cfg: nRF24LU1

Flash areas: 0x0000-0x7FFF

Program RAM

☒ Has program RAM

RAM areas: 0x8000-0x87FF,0xC000-0xC7FF

Configuration

Specify which core your device is. Choose between:

- cast51-single-core
- m8051ew-single-core
- philips51-single-core
- handshake51-single-core

Has program flash

Describes to the debugger how to program the flash memory of the device.

Entry in flash.cfg

The label for the entry in the `flash.cfg` file that describes how to program the flash memory of the device.

Flash areas

One or more memory ranges separated by commas, like this:
0x0000-0x1111, 0x2222-0x3333.

Has program RAM

Specify where the device has program code in RAM memory, if your device supports code in RAM. This means that software breakpoints will be used in this memory area.

RAM areas


One or more memory ranges separated by commas, like this:
0x0000-0x1111, 0x2222-0x3333.

Reference information on C-SPY Infineon driver options

This section gives reference information on C-SPY Infineon driver options.

Download options for Infineon

The Infineon **Download** options control the download.

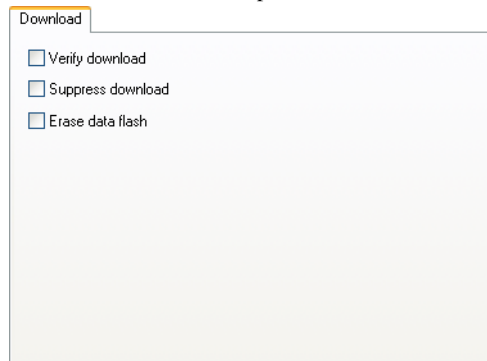A screenshot of a software dialog box titled "Download". It contains three unchecked checkboxes: "Verify download", "Suppress download", and "Erase data flash". The dialog box has a light gray background and a thin border.

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Erase data flash

Erases the data flash area during download.

Target options for Infineon

The Infineon **Target** options control target-specific features of the Infineon driver.

Target

Server

Address:localhost

Name:JTAG over USB Box

Security keys

Key #1:0

Key #2:0

Key #3:0

Key #4:0

☐ Software breakpoints

☐ Has code in XRAM:

0xF000-0xF5FF

Server

Specify the server on which the DAS server is running:

Address

The name or the IP address of the connected server. Specify `localhost` if the server is located on your host computer.

Name

Choose the DAS server to connect to.

Security keys

The DAS server has security keys which can be enabled and used to protect access to the device. If security keys are used, you must type the value for each key to connect to the server.

Software breakpoints

Enables software breakpoints, which increases the number of code breakpoints. If there are no hardware breakpoints available, software breakpoints will be used instead.

Note: Software breakpoints can only be used when the application is located in read/write memory. When you use this option, the breakpoints are implemented by a temporary substitution of the actual instruction. Before execution resumes, the original instruction will be restored. This generates some overhead.

Has code in XRAM


Specify the memory range where your device has program code in the Infineon XRAM memory area. Use this option to make software breakpoints faster.

Reference information on C-SPY Segger J-Link driver options

This section gives reference information on C-SPY Segger J-Link driver options.

Download options for Segger J-Link

The Segger J-Link **Download** options control the download.

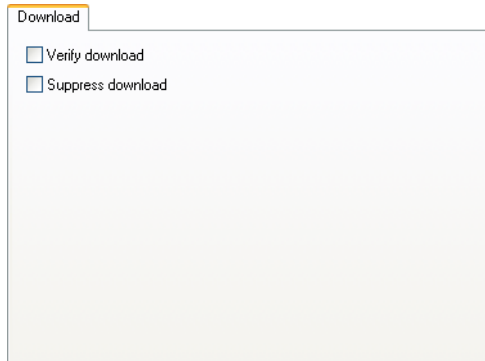A screenshot of a software dialog box titled "Download". It contains two unchecked checkboxes: "Verify download" and "Suppress download". The dialog box has a light gray background and a thin border.

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Communication options for Segger J-Link

The Segger J-Link **Communication** options control how the C-SPY Segger J-Link driver communicates with the evaluation board.

The screenshot shows a dialog box titled "Communication". It contains two main sections: "Connection" and "Communication log". In the "Connection" section, there is a "Connection type" dropdown menu set to "Serial number", a "Serial number" text input field, a "Select" button, a "Communication speed" section with radio buttons for "Automatic" and "Specific" (selected), a "12000" text input field followed by "kHz", and a "Power supply from J-Link" checkbox. The "Communication log" section has a "Use communication log" checkbox and a text input field containing "\$PROJ_DIRS\jlinkcomm.log" with a browse button ("...").

Connection type

Specify how to identify the debug probe that the debug session will use. Choose between:

USB device *n*

Identifies the debug probe using the USB device ID.

Serial number

Identifies the debug probe using the serial number specified by the **Serial number** option.

Serial number

Specify the serial number of the debug probe that the debug session will use. Click **Select** to choose one of the detected debug probes connected to your host PC.

Communication speed

Specify the communication speed between C-SPY and the debug probe. Choose between:

Automatic

C-SPY will use the communication speed set by the Segger J-Link debug probe.

Specific

Specify the communication speed in kHz.

Power supply from J-Link

Supplies the evaluation board with power from the Segger J-Link debug probe.

Log communication


Logs the communication between C-SPY and the target system to a file. To interpret the result, detailed knowledge of the communication protocol is required. This log file can be useful if you intend to contact IAR Systems support for assistance.

Reference information on C-SPY Nordic Semiconductor driver options

This section gives reference information on C-SPY Nordic Semiconductor driver options.

Download options for Nordic Semiconductor

The Nordic Semiconductor **Download** options control the download.

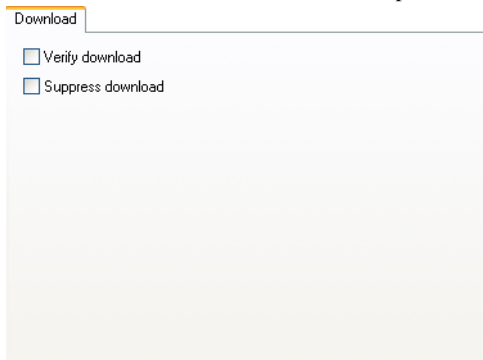

Download

☐ Verify download

☐ Suppress download

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.


If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Reference information on C-SPY ROM-monitor driver options

This section gives reference information on C-SPY ROM-monitor driver options.

Download options for the ROM-monitor

The ROM-monitor **Download** options control the download.

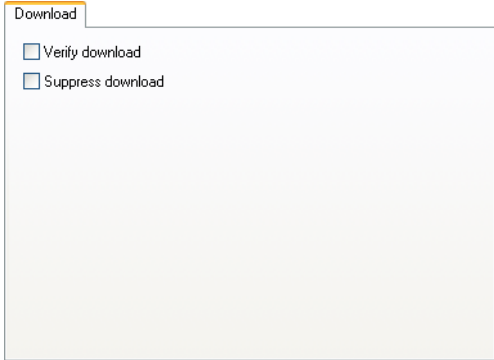

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Serial Port options for the ROM-monitor

The ROM-monitor **Serial Port** options determine how the serial port should be used.

Serial Port

Port: COM 1

Baud rate: 115200

Parity: None

Data bits: 8 data bits

Stop bit: 1 stop bit

Handshaking: None high

On Reset

☐ Toggle DTR

☐ Toggle RTS

☐ Log communication

cspycomm.log

Port

Selects one of the supported ports: COM1–COM64.

Baud rate

Selects one of these speeds: 2400, 4800, 9600, 14400, 19200, 38400, 57600, or 115200 baud.

C-SPY always tries to connect at 9600 baud and then changes to the speed of the selected serial port when making the first contact with the evaluation board. If these options have not been specified, C-SPY will try using the COM1 port.

Parity

Selects the parity; None, Even, or Odd.

Data bits

Selects the number of data bits; only 8 data bits is allowed.

Stop bits

Selects the number of stop bits: 1 or 2.

Handshaking

Selects the handshaking method; None high, None low, RTSCTS, or XONXOFF.

Toggle DTR

Toggles the DTR signal pin on the UART port when C-SPY resets the device.

Toggle RTS

Toggles the RTS signal pin on the UART port when C-SPY resets the device.

Log communication


Logs the communication between C-SPY and the target system to the specified log file, which can be useful for troubleshooting purposes. The communication will be logged in the file `cspycomm.log` located in the current working directory. If required, use the browse button to locate a different file.

Reference information on C-SPY Analog Devices driver options

This section gives reference information on C-SPY Analog Devices driver options.

Download options for Analog Devices

The Analog Devices **Download** options control the download.

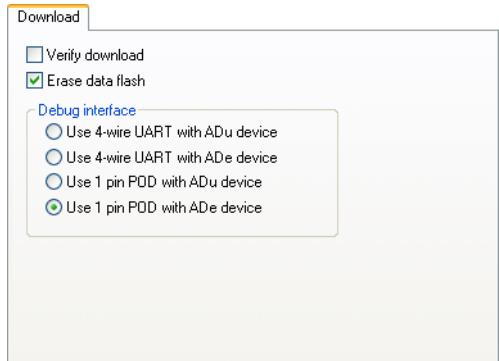A screenshot of a software dialog box titled "Download". It contains two checkboxes: "Verify download" (unchecked) and "Erase data flash" (checked). Below these is a section titled "Debug interface" with four radio button options: "Use 4-wire UART with ADu device", "Use 4-wire UART with ADe device", "Use 1 pin POD with ADu device", and "Use 1 pin POD with ADe device". The last option is selected.

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

Erase data flash

Erases the data flash area during download.

Debug interface

Specifies the communication method. Choose between:

- Use 4-wire UART with ADu device

- Use 4-wire UART with ADe device
- Use 1-pin POD with ADu device
- Use 1-pin POD with ADe device.

Serial Port options for Analog Devices

The Analog Devices **Serial Port** options determine how the serial port will be used.

Serial Port

Port: COM 1

Baud rate: 115200

☐ Override default CPU clock frequency

CPU clock freq.: 12582912 Hz

Port

Selects one of the supported ports: COM1–COM64.

Baud rate

Selects one of the supported speeds: 2400–115200 baud. If a debug interface for an ADe device has been specified, the only available communication speed is 115200 baud.

C-SPY connects at 9600 baud and then changes to the speed of the selected port when making the first contact with the evaluation board.

Override default CPU clock frequency

Specify the actual CPU clock frequency if you have modified the hardware in such a way that the clock frequency has changed.

Reference information on C-SPY Silicon Labs driver options

This section gives reference information on C-SPY Silicon Labs driver options.

Download options for Silicon Labs

The Silicon Labs **Download** options control the download.

Download

☐ Suppress download

☐ Verify download

☐ USB interface

☐ Continuously power target

☐ SiLabs 2-wire (C2) interface

Flash page size

☒ 512 bytes

☐ 1024 bytes

☐ Banked XDATA

JTAG chain

☐ Multiple devices

Devices

Before:

After:

Instr. registers

Before:

After:

Suppress download

Disables the downloading of code, while preserving the present content of the flash memory. This command is useful if you want to debug an application that already resides in target memory. The implicit reset performed by C-SPY at startup is not disabled, though.

If this option is combined with the **Verify download** option, the debugger will read back the code image from non-volatile memory and verify that it is identical to the debugged application.

Verify download

Verifies that the downloaded code image can be read back from target memory with the correct contents.

USB interface

Specifies that you are using a USB debugger adapter.

Continuously power target

Provides power to the target hardware even after the debug session has been terminated.

Silicon Labs 2-wire (C2) interface

The Silicon labs C8051F3xx/F4xx/F5xx/F7xx/F9xx devices use the Silicon Labs 2-wire debugging interface (C2). You must select this option to connect to any of these devices.

Flash page size

Informs C-SPY of the size of the flash page of your device. Choose between 512 and 1024 bytes.

Banked XDATA

Informs C-SPY that your hardware setup has an external memory module for XDATA that is larger than 64 Kbytes.

Note: This option must be used in combination with the Far data model.

Multiple devices

Informs C-SPY that there is more than one device connected to the same JTAG interface. In this case, you must also specify:

Devices


The number of devices in the chain before and after the device to be debugged.

Instr. registers

The number of JTAG registers in the chain before and after the device to be debugged.

Serial Port options for Silicon Labs

The Silicon Labs Serial Port options determine how the serial port will be used.

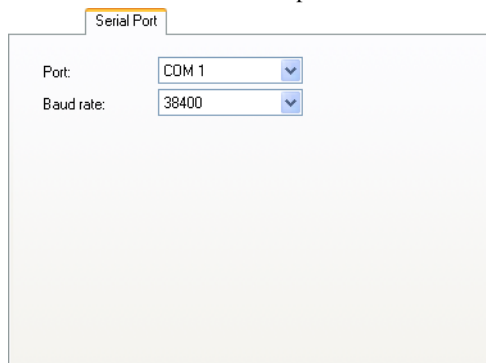

Serial Port

Port: COM 1

Baud rate: 38400

Port

Selects one of the supported ports: COM1–COM64. C-SPY connects with the selected serial port when making the first contact with the evaluation board. If you do not specify a port, C-SPY will try using the COM1 port.

Baud rate

Selects one of the supported speeds: 2400–115200 baud. C-SPY connects at 9600 baud and then changes to the speed of the selected port when making the first contact with the evaluation board.

Additional information on C-SPY drivers

This chapter describes the additional menus and features provided by the C-SPY® drivers. You will also find some useful hints about resolving problems.

Reference information on C-SPY driver menus

Reference information about:

- *C-SPY driver*, page 387
- *Simulator menu*, page 388
- *Texas Instruments Emulator menu*, page 390.
- *Infineon Emulator menu*, page 390
- *J-Link menu*, page 391
- *Silicon Labs Emulator menu*, page 391

C-SPY driver


Before you start the C-SPY debugger, you must first specify a C-SPY driver in the **Options** dialog box, using the option **Debugger>Setup>Driver**.

When you start a debug session, a menu specific to that C-SPY driver will appear on the menu bar, with commands specific to the driver.

When we in this guide write “choose *C-SPY driver*>” followed by a menu command, *C-SPY driver* refers to the menu. If the feature is supported by the driver, the command will be on the menu.

Simulator menu

When you use the simulator driver, the **Simulator** menu is added to the menu bar.

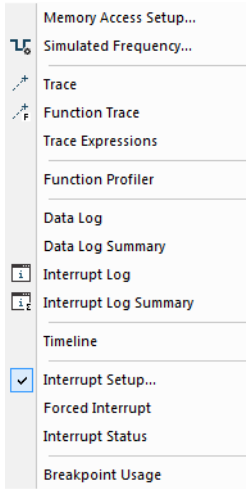

Menu commands

These commands are available on the menu:

Memory Access Setup

Displays a dialog box to simulate memory access checking by specifying memory areas with different access types, see *Memory Access Setup dialog box*, page 169.



Simulated Frequency

Opens the **Simulated Frequency** dialog box where you can specify the simulator frequency used when the simulator displays time information, for example in the log windows. Note that this does not affect the speed of the simulator. For more information, see *Simulated Frequency dialog box*, page 392.



Trace

Opens a window which displays the collected trace data, see *Trace window*, page 178.



Function Trace

Opens a window which displays the trace data for function calls and function returns, see *Function Trace window*, page 181.

Trace Expressions

Opens a window where you can specify specific variables and expressions for which you want to collect trace data, see *Trace Expressions window*, page 184.

Function Profiler

Opens a window which shows timing information for the functions, see *Function Profiler window*, page 216.

Data Log

Opens a window which logs accesses to up to four different memory locations or areas, see *Data Log window*, page 202.

Data Log Summary

Opens a window which displays a summary of data accesses to specific memory location or areas, see *Data Log Summary window*, page 205.

**Interrupt Log**

Opens a window which displays the status of all defined interrupts, see *Interrupt Log window*, page 243.

**Interrupt Log Summary**

Opens a window which displays a summary of the status of all defined interrupts, see *Interrupt Log Summary window*, page 246.

**Timeline**

Opens a window which gives a graphical view of various kinds of information on a timeline, see *Reference information on application timeline*, page 194.

Interrupt Setup

Displays a dialog box where you can configure C-SPY interrupt simulation, see *Interrupt Setup dialog box*, page 237.

Forced Interrupts

Opens a window from where you can instantly trigger an interrupt, see *Forced Interrupt window*, page 240.

Interrupt Status


Opens a window from where you can instantly trigger an interrupt, see *Interrupt Status window*, page 241.

**Breakpoint Usage**

Displays a window which lists all active breakpoints, see *Breakpoint Usage window*, page 119.

Texas Instruments Emulator menu

When you are using the C-SPY Texas Instruments driver, the **Texas Instruments Emulator** menu is added to the menu bar.



Menu commands

These commands are available on the menu:

Stop Timers on Halt

Stops the timers when the execution is stopped.

Leave Target Running


Leaves the application running on the target hardware after the debug session has been terminated.

Breakpoint Usage

Displays a window which lists all active breakpoints, see *Breakpoint Usage window*, page 119.

Infineon Emulator menu

When you are using the C-SPY Infineon driver, the **Infineon Emulator** menu is added to the menu bar.



Menu commands

These commands are available on the menu:

Leave Target Running


Leaves the application running on the target hardware after the debug session has been terminated.

Breakpoint Usage

Displays a window which lists all active breakpoints, see *Breakpoint Usage window*, page 119.

J-Link menu

When you are using the C-SPY Segger J-Link driver, the **J-Link** menu is added to the menu bar.



Menu commands

These commands are available on the menu:

Memory Configuration


Displays a dialog box where you configure C-SPY to match the memory of your device, see *Memory Configuration dialog box for C-SPY hardware debugger drivers*, page 164.

Breakpoint Usage

Displays a window which lists all active breakpoints, see *Breakpoint Usage window*, page 119.

Silicon Labs Emulator menu

When you are using the C-SPY Silicon Labs driver, the **Silicon Labs Emulator** menu is added to the menu bar.



Menu commands

These commands are available on the menu:

Breakpoint Usage

Displays a window which lists all active breakpoints, see *Breakpoint Usage window*, page 119.

Reference information on the C-SPY simulator


This section gives additional reference information the C-SPY simulator, reference information not provided elsewhere in this documentation.

Reference information about:

- *Simulated Frequency dialog box*, page 392

Simulated Frequency dialog box

The **Simulated Frequency** dialog box is available from the C-SPY driver menu.

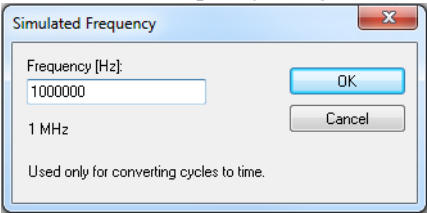

Use this dialog box to specify the simulator frequency used when the simulator displays time information.

Requirements

The C-SPY simulator.

Frequency

Specify the frequency in Hz.

Reference information on the C-SPY hardware debugger drivers


This section gives additional reference information on the C-SPY hardware debugger drivers, reference information not provided elsewhere in this documentation.

Reference information about:

- *Serial Number dialog box*, page 392
- *Server Selection dialog box*, page 393
- *USB Device Selection dialog box*, page 393.

Serial Number dialog box

The **Serial Number** dialog box is displayed when you click **Select** on the **Project>Options>Segger J-Link>Communication** options page.

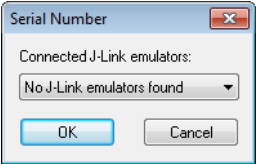


Use this dialog box to specify which debug probe that the debug session will use.

Connected J-Link emulators

Choose which debug probe that the debug session will use. If the serial number of your probe does not show, check that the Segger J-Link driver is correctly installed.

Server Selection dialog box

The **Server Selection** dialog box is displayed if a debug session starts without a DAS server name specified on the **Project>Options>Infineon>Target** page.

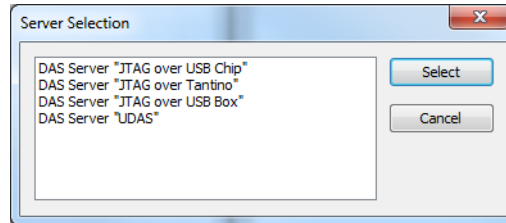


Use this dialog box to specify the type of DAS server connection.

Requirements

The C-SPY Infineon driver.

USB Device Selection dialog box

The **USB Device Selection** dialog box is displayed if a debug session starts with more than one Silicon Labs debug adapter connected to the host computer.

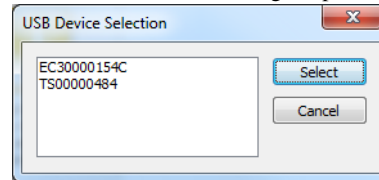

Use this dialog box to select the device you want to use.

Requirements

The C-SPY Silicon Labs driver.

Resolving problems

These topics are covered:

- Write failure during load
- No contact with the target hardware
- Monitor works, but application will not run
- No contact with the monitor

Debugging using the C-SPY hardware debugger systems requires interaction between many systems, independent from each other. For this reason, setting up this debug system can be a complex task. If something goes wrong, it might be difficult to locate the cause of the problem.

This section includes suggestions for resolving the most common problems that can occur when debugging with the C-SPY hardware debugger systems.

For problems concerning the operation of the evaluation board, refer to the documentation supplied with it, or contact your hardware distributor.

WRITE FAILURE DURING LOAD

There are several possible reasons for write failure during load. The most common is that your application has been incorrectly linked:

- Check the contents of your linker configuration file and make sure that your application has not been linked to the wrong address
- Check that you are using the correct linker configuration file.



In the IDE, the linker configuration file is automatically selected based on your choice of device.

To choose a device:

- 1** Choose **Project>Options**.
- 2** Select the **General Options** category.
- 3** Click the **Target** tab.
- 4** Choose the appropriate device from the **Device** drop-down list.

To override the default linker configuration file:

- 1** Choose **Project>Options**.
- 2** Select the **Linker** category.
- 3** Click the **Config** tab.

- 4 Select the **Override default** option, and choose the appropriate linker configuration file in the **Linker configuration file** area. A browse button is available.

NO CONTACT WITH THE TARGET HARDWARE

There are several possible reasons for C-SPY to fail to establish contact with the target hardware. Do this:

- Check the communication devices on your host computer
- Verify that the cable is properly plugged in and not damaged or of the wrong type
- Make sure that the evaluation board is supplied with sufficient power
- Check that the correct options for communication have been specified in the IAR Embedded Workbench IDE.

Examine the linker configuration file to make sure that the application has not been linked to the wrong address.

MONITOR WORKS, BUT APPLICATION WILL NOT RUN

The application is probably linked to some illegal code area (like the interrupt table). You might have to check the defined segment allocations in the used linker configuration file. Verify the start addresses of the `CODE` and `DATA` segments.

Make sure you disable the watchdog timer if it is not used. Typically this should be done in the `__low_level_init` routine. Otherwise the application program will restart, which would lead to unexpected behavior.

NO CONTACT WITH THE MONITOR

There are several possible reasons if C-SPY fails to establish contact with the ROM-monitor firmware.

- The communication speed between C-SPY and the ROM-monitor might make the connection unreliable. Try a lower communication speed.
- A protocol error might have occurred. Try resetting your evaluation board and restart C-SPY.
- Check that the correct options for serial communication have been specified in the IAR Embedded Workbench IDE. See the corresponding sections for the appropriate driver.
- Verify that the serial cable is properly plugged in and not damaged or of the wrong type.

Target-adapting the ROM-monitor

This chapter describes how you can easily adapt the generic ROM-monitor provided with IAR Embedded Workbench® to suit a device that does not have an existing debug solution supported by IAR Systems.

This chapter also describes ROM-monitor functionality in detail.

Building your own ROM-monitor

There are a large number of 8051 devices on the market. The variety makes it difficult for one ROM-monitor firmware to support them all. Therefore, a full ROM-monitor project is included in IAR Embedded Workbench that you can use to customize the ROM-monitor for a specific target.

Building your own ROM-monitor in four easy steps:

- 1 Setting up your ROM-monitor project.
- 2 Adapting the source files.
- 3 Debugging the ROM-monitor.

Note: To download your ROM-monitor to the target board, refer to the chip vendor websites for information about suitable tools. When you have successfully downloaded the ROM-monitor, you can use it to debug your application via C-SPY. For information about required C-SPY options, see *Debugger options*, page 363.

- 4 Building and downloading your ROM-monitor.

SETTING UP YOUR ROM-MONITOR PROJECT

Choose **Project>Create new project** and select the ready-made project **ROM-monitor**. Click **OK** and choose a project name and a destination folder in the **Save As** dialog box.

This project will contain generic monitor files and files that must be edited. The generic files are located in `src\rom\common_src` and are not copied, while the files that must be edited are copied automatically to the project directory.

ADAPTING THE SOURCE FILES

The ROM-monitor project contains many source and header files, but only a few need to be adapted to suit your target system:

<code>iotarget.h</code>	Includes the target-specific include file.
<code>chip_layout.h</code>	Holds target-specific definitions for special registers, etc.
<code>chip_layout.xcl</code>	Template linker command file for the ROM-monitor.
<code>uart_init.c</code>	UART initialization and baud rate function support.
<code>code_access.c</code>	Read and write functions for code memory.
<code>low_level_init.c</code>	Basic initialization code, executed early during system startup.
<code>high_level_init.c</code>	Additional initialization code called from the <code>main</code> function.

Setting up the `chip_layout.h` file

This is one of the most important files in the project, as it sets up the conditions for making the ROM-monitor work. Some of the sections of this file are highlighted here. There is more information available in the header file.

- Software and hardware breakpoints

The ROM-monitor uses the `LCALL` instruction as a generic software breakpoint. There is also support for target-specific breakpoint instructions, such as `0xA5`. Set `SW_BP_TYPE` to either `BP_OF_LCALL_TYPE` or `BP_OF_A5_TYPE`. If no software breakpoints are to be used, set `SW_BP_TYPE` to `NO_SW_BP`.

If required and if supported by the target board, the ROM-monitor can also handle code and data hardware breakpoints. In this case, you must set the symbols `CODE_HW_BP` and `DATA_HW_BP` to the number of breakpoints they support.

- Application bus width

The application bus width controls the addressable memory area. It is either 16 or 24 bits depending on the target or the location of the application on the target.

- Remapped IData memory

By default, the ROM-monitor will use `0x00-0x7F` in IData memory as working memory. When the ROM-monitor is running, application data located in this memory area will be stored in PData(XData)/IData memory. The symbol `MON_REMAP_IDATA_TO_MEM` controls which memory segment that is used for this copy.

- Special SFR registers

Some SFR registers are needed by the ROM-monitor and would be overwritten if shared with your application. To avoid this, these registers are stored/restored by the monitor. For this purpose, an SFR information `struct` is used, where SFRs that need special care can be added.

- Flash memory information

The flash page section defines the flash page properties such as page size and total memory size. When writing to memory, C-SPY will send the bytes to write at full speed via the UART. Depending on how long it takes to update the memory, a communication delay might have to be introduced to ensure that there is enough time to finish writing data to the flash memory. For this purpose, `FLASH_WRITE_DELAY` can be defined to insert a delay between each byte.

Setting up the serial communication—`uart_init.c`

You need to configure and initialize a UART to make the serial communication work between C-SPY and the ROM-monitor. One way to make sure that your UART setup works as intended is to create a small application that performs the initialization and then echoes any characters that the UART receives back to the transmitting device.

By doing this, you can debug your UART setup using a standard host computer and a terminal program (for example, Hyper Terminal) before you include it in your ROM-monitor.

The file `uart_init.c` is available in your ROM-monitor project as a starting point:

- In the function `uart_init()`, set up the UART.
- By default, for each new debug session the communication starts at 9600 baud. However, it is recommended to include support for 9600, 38400, and 57600 baud right from the start. You can achieve this by modifying the function `set_baudrate()`.
- Use a standard hyper terminal on your host computer to verify the UART setup.
- Once the application is running, you can include your `uart_init.c` file in your ROM-monitor project.

Make sure also that the baud rates supported by the device are updated accordingly in the file `chip_layout.h`.

Note: To understand how to configure the UART on your device, refer to its documentation.

Setting up for code memory accesses—`code_access.c`

Most memory access methods are the same for all 8051-compatible devices, except for the method for writing code. Writing to code memory is divided into three functions, all defined in the `code_access.c` file:

<code>prepare_download()</code>	This function is called before download and should prepare the target system for code download. If the code is to be downloaded into flash memory, this function should erase the flash memory.
<code>erase_flash_page()</code>	This function is called when rewriting a page. For example, when writing a software breakpoint located in flash memory. This function is usually called by the <code>prepare_download</code> function when erasing memory before download.
<code>byte_write_code()</code>	This function writes one byte to code memory. Any overhead, such as reading back, erasing, and writing data is handled automatically by the C-SPY driver.

Setting up target-specific details—`low_level_init.c`, `high_level_init.c`

In the source files `low_level_init.c` and `high_level_init.c`, you can set up the target-specific details to be performed before system startup, such as enabling memory, initializing clocks, etc. The `low_level_init` function is executed after a hard reset from the `cstartup.s51` file before initializing variables. The `high_level_init` function is called each time the ROM-monitor is entered.

To read more about the system startup code, see *IAR C/C++ Compiler User Guide for 8051*.

DEBUGGING THE ROM-MONITOR

Debugging a ROM-monitor can sometimes be difficult, because of the number of subsystems involved (host computer, host debugger, ROM-monitor firmware, hardware, and user application). Therefore, you are strongly recommended to use the available hardware resources on the target system as a way to provide feedback during the debugging process.

For example, if there is an LCD on the board you can use it to display status messages, or if a second UART is available the same can be done to a terminal program running on a host computer. If there is a LED available, it can be used as simple `printf` functionality.

Note: Because neither interrupts nor buffers for incoming data are used in the communication between C-SPY and the ROM-monitor, the overhead introduced by

making peripheral units log events during debugging can cause the ROM-monitor to lose its connection with C-SPY.



Divide the work needed to customize the ROM-monitor into small steps, and verify that each step works as intended before going on to the next step.

Debugging using the C-SPY simulator

You can also use the C-SPY simulator for debugging your ROM-monitor. You can make C-SPY simulate the UART and read the communication data from a file. There is a macro file `serialData.mac` included with the product that will set up the necessary interrupts and feed the simulated UART with data. There is also a UART data file `SerialData.txt` included, which contains some basic driver commands. When the macro is used, the data from the file will be sent as input to the monitor, triggering the different actions/calls. The files are located in `8051\src\rom`.

Note: In the macro file `serialData.mac`, the registers `SBUF` and `SCON` are used by default. Depending on the device you are using, you might need to modify the file by replacing these registers to make the macro simulate your target device.

BUILDING AND DOWNLOADING YOUR ROM-MONITOR

After you have adapted the source code files, you can build your project. Note that it is a good idea to divide this work into small steps by verifying only one part of the ROM-monitor at a time. Repeat the work until you have successfully managed to build and download the complete ROM-monitor.

Make sure that you pay attention to the following issues when you build your ROM-monitor project:


- It can sometimes be difficult to write to target memory during download; typically, the function `byte_write_code` (writing to code) can cause problems. Therefore, you are recommended to initially select **Suppress download**. This way you can start to verify that the ROM-monitor's basic functions work, such as reading memory and registers, or single stepping. Once this is done, you can deselect **Suppress download** and download a test application.
- The ROM-monitor only uses 1 DPTR. Choose **Project>Options>General Options>Data Pointer** and select 1 from the **Number of DPTRs** drop-down list.
- When you link your application program, you must verify that it is placed in memory that does not overlap your ROM-monitor. This means that you must also adapt the linker command file that you use for your application program accordingly. In other words, make sure to exclude the memory reserved for the ROM-monitor from the linker command file used when building your application program. See *Resources used by the ROM-monitor*, page 412.

Some error messages might be generated; in that case each error is located close to a function that needs to be corrected. You can easily move from error to error with the F4 key.

When you have successfully built your ROM-monitor project, you can download the generated ROM-monitor using an appropriate download tool. Create a simple test project. In the **Options** dialog box, choose **ROM-monitor** as the driver and set the baud rate.

The ROM-monitor in detail

This illustration shows the program flow (thick arrow), as well as actions and events (thin arrow) that can occur:

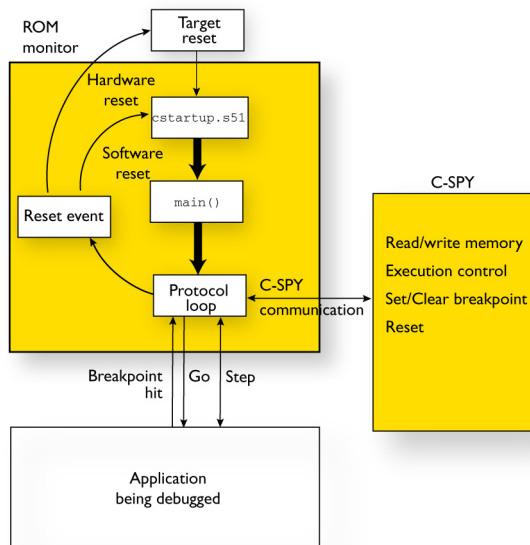

The ROM-monitor will be described by investigating source code implementation details for:

- Early initializations
- The protocol loop
- Leaving the ROM-monitor
- Entering the ROM-monitor
- Resources used by the ROM-monitor.

Note: Functions whose names end in `_R10` are ROM-monitor library functions, delivered with IAR Embedded Workbench.

EARLY INITIALIZATIONS

Before the main function

After a reset, neither variables nor the stack have any known values, which means they first have to be initialized. The ROM-monitor will execute, beginning with the `cstartup.s51` file which initializes the stack pointer, going on to call `__low_level_init` to perform any low-level initializations, and—depending on its return value—continuing with the initialization of variables.

In the main function

When the `main` function has been entered, the required subsystems can be initialized. This is illustrated by the following process:

- 1 The main function is structured in the following way:

```
void main( void )
{
/* - - - - -
* Enter a known runtime model.
*/
high_level_init();
```

In `high_level_init` you should implement all target-specific hardware initializations that are not time critical.

- 2 If you have any LEDs on your target system that you want to use for debugging the ROM-monitor, there is support for this prepared. In this case, the LED needs to be initialized:

```
#ifdef DEBUG_METHOD_BLINK
/* - - - - -
* Initialize the LED used for debugging.
*/
led_init();
```

To use this debug method, you must define the `DEBUG_METHOD_BLINK` symbol, for example in `debug_method.h`. In the same way, other visual and audible devices available can be used.

- 3 For communication between the ROM-monitor and the C-SPY debugger, you must initialize the UART for serial communication:

```

/* - - - - -
* Initialize the low level communication.
*/
uart_init();

```

Modify the `uart_init` function according to the needs of your target device.

The `uart_init` function will call the function `set_baudrate` to set the communication speed, which initially is set to 9600 baud. If required, you can add support for additional rates, for example 38400 and 57600. In this case, you must also modify the function `set_baudrate`.

Make sure the communication speeds supported by `set_baudrate` are also defined in the file `chip_layout.h`.

- 4 The following source code lines initialize the flags and variables used by the ROM-monitor protocol loop:

```

/* - - - - -
* Initialize the ROM-monitor protocol.
*/
communication_init();

```

You should not need to modify this function.

- 5 To notify C-SPY that a hardware reset has occurred and that the ROM-monitor has been reinitialized, the reset command `0xD8` is sent to C-SPY. This must be performed during the early initialization:

```

/* - - - - -
* Let the host debugger know that there is a reset.
* You will see the character 'Ø' (the hexadecimal value
* 0xD8) in a terminal that is connected to the UART.
*/
send_hw_reset();

```

You should not need to modify this function.

- 6 The ROM-monitor requires some space in the IData memory area `0x00-0x7F`. Any application data in this area will be temporarily stored in an array named `remapped_idata` while the ROM-monitor is executing. A small part of the IData memory, the special register area, is reserved for the ROM-monitor.

During the early initialization, registers are set to their initial values by the following part of the source code:

```
/* - - - - -
 * Application reset values for the critical registers
 */

spec_reg_A      = 0xCE;
spec_reg_PSW    = 0xCE;
spec_reg_R0     = 0xCE;
spec_reg_R1     = 0xCE;

#ifdef CHIP_PBANK_SFR
    spec_reg_PBANK = 0xCE;

    CHIP_PBANK_SFR = (MON_REMAPPED_IDATA_ADDR >> 8);
#endif /* CHIP_PBANK */

#ifdef CHIP_PBANK_EXT
    spec_reg_PDATA_EXT = 0xCE;

    CHIP_PBANK_EXT = (MON_REMAPPED_IDATA_ADDR >> 16);
#endif /* CHIP_PBANK_EXT */

#ifdef CHIP_XDATA_EN_SFR
    spec_reg_XDATA_EN = 0xCE;
#endif /* CHIP_XDATA_EN_REG */
```

There are additional fixed return codes that are used:

- 0xCC is returned when reading a protected SFR
- 0xCD is returned when the memory zone cannot be verified
- 0xCE is the uninitialized value for internal ROM-monitor registers.

- 7** To minimize stack consumption, entering the protocol loop is not performed using a standard function call. Instead a jump instruction is used. In addition, the return address is popped from the stack as the ROM-monitor never will return.

```
* Go to communication() step. Free the stack and LJMP to
* communication() because we will never exit. */
```

```
asm("POP A");
asm("POP A");


asm("LJMP communication");

#endif /* STEP2_BAUDRATE */
```

THE PROTOCOL LOOP

After all initializations have been performed, the ROM-monitor is ready to be used for debugging. The function `communication` in the file `communication.c` holds the main protocol loop. In this loop, the `Rx` flag is continuously polled to monitor whether a byte has been received on the UART. The `Tx` flag is used for two different purposes. In the main loop, the `Tx` flag is continuously polled to check whether data should be transmitted. While the application program is executing, the `Tx` flag is used for catching any requests for execution stops.

This illustrates the protocol loop:

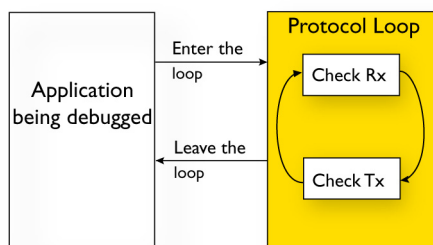

Enter the loop

- I Before the execution enters the actual loop, the `Tx` flag is checked:

```

if(CHIP_Tx_bit)
{
    CHIP_Tx_bit    = 0;

    modeRegister |= Mode_HALTED;

    /* Tell host driver that we have stopped */
    sendByte_R10( Ind_BREAK_REACHED );
}
  
```

This means that the application execution has stopped, either by:

- A stop execution command
- Single step
- Breakpoint hit.

In the loop

- I The protocol loop will loop while the halted flag `MODE_HALTED` is set, which means until the Go or any step commands are ordered by C-SPY:

```
while( modeRegister & Mode_HALTED) /* Main loop */
{...
```

Check Rx

- I The Rx flag is continuously checked and if it is set, a character has been received from C-SPY. The data is moved to the `receiveBuffer` and the Rx flag is cleared.

```
/* A byte was received */
if( CHIP_Rx_bit )
{
    receiveBuffer = CHIP_SBUF;

    CHIP_Rx_bit = 0;

    /* decode the received byte */
    received_byte = byteReceived_R10();

    /* if receivedByte != 0x0 then send the byte back */
    if( received_byte )
        sendByte_R10( received_byte );
}
```

The `byteReceived_R10()` function call will decode the received byte and update the ROM-monitor state accordingly. A packet of data is constructed by a start byte, payload, checksum, and a stop byte. If the received byte is part of a larger packet of data, the data is stored and the loop is re-entered.

The `byteReceived_R10` function might sometimes also return a value to be sent back to C-SPY. In most cases, this return value is an acknowledgment for the received data.

Check Tx

- I After the Rx flag has been checked, the Tx flag is checked for transmitted data. When sending data packets to C-SPY, each byte is sent as soon as the UART is free. A protocol library function holds the next byte to be sent, and the `getNextByte_R10` function is used for getting it.

```
/* A byte has been transmitted */
if( CHIP_Tx_bit )
{
    CHIP_Tx_bit = 0;
```

```

if( modeRegister & Mode_MEMORY_READ )
{
    /* load TXData with next character */
    getNextByte_R10();

    /* check if this is the last byte to send */
    if( TXData == Resp_END )
        modeRegister &= ~Mode_MEMORY_READ;

    /* send byte */
    sendByte_R10(TXData);
}
}

```

Leave the loop

- I When the Mode_HALTED flag is cleared, the ROM-monitor execution leaves the main loop to initiate a step or Go of the application program being debugged. Before application data and registers are restored, and before the execution is handed over to the application, the Rx and Tx flags are set/cleared.

```

if( flagRegister & Flag_LETS_STEP )
{
    CHIP_Rx_bit = 0;
    CHIP_Tx_bit = 1;
}
else /* GO is implicit */
{
    CHIP_Rx_bit = 0;
    CHIP_Tx_bit = 0;
}

c_runtime_leave();
}

```

The ROM-monitor uses the Tx interrupt mechanism by setting the Tx flag to execute one single instruction of the application (single step). Otherwise (Go), both Rx and Tx are cleared before continuing with the leave sequence.

LEAVING THE ROM-MONITOR

When the execution leaves the ROM-monitor, shared resources such as registers and data memory must be restored. This is done by the functions `c_runtime_leave` (written in C) and `monitor_leave` (written in assembler):

```
/* copy user R0 and R1 to special register area */
/* from user register bank */
spec_reg_R0 = remapped_idata[PSW & 0x18];
spec_reg_R1 = remapped_idata[(PSW & 0x18) + 1];

/* restore DPTR and SP */
#ifdef APP_EXTENDED_DPTR
    CHIP_DPX0 = app_reg[SPEC_SFR_DPX];
#endif /* APP_EXTENDED_DPTR */

DPH      = app_reg[SPEC_SFR_DPH];
DPL      = app_reg[SPEC_SFR_DPL];
SP        = app_reg[SPEC_SFR_SP];

/* Leave C-runtime level */
asm("LJMP    monitor_leave");
```

Before jumping to the `monitor_leave` function, the registers R0, R1, and DPTR, as well as the stack pointer of the application are restored.

The main reason for splitting the leave sequence into one C and one assembler routine is to keep as much source code as possible in C, which benefits portability and makes the code less device-specific.

The `monitor_leave` routine differs depending on where the IData memory of the debugged application is stored during ROM-monitor execution. This is controlled by the symbol `MON_REMAP_IDATA_TO_MEM` which is defined in `chip_layout.h`. In the following example, the source code for PData storage is used:

```
monitor_leave:

    MOV     R0, #MON_IDATA_END_ADDR      ; destination source end
                                           ; address -8 since we dont copy 0x78-0x7F
    MOV     R1, #BYTE1(remapped_idata) + MON_IDATA_END_ADDR
                                           ; source end address

#ifdef CHIP_PBank_SFR
    MOV     CHIP_PBank_SFR, #BYTE2(remapped_idata) ; PData bank
#else
    #pragma message="CHIP_PBank_SFR not set (defined in
chip_config.h)"
#endif
```

```

#ifdef CHIP_PBANK_EXT_SFR
    MOV        CHIP_PBANK_EXT_SFR, #BYTE3(remapped_idata)
                ; high bank
#endif

loop:
    MOVX       A, @R1
    XCH        A, @R0
    MOVX       @R1, A
    DEC        R1
    DEC        R0
    CJNE       R0, #0x01, loop

                ; restore register values
#ifdef CHIP_XDATA_EN_SFR
    MOV        CHIP_XDATA_EN_SFR, DATA_XDATA_EN
#endif

#ifdef CHIP_PBANK_SFR
    MOV        CHIP_PBANK_SFR, DATA_PBANK
#endif ; CHIP_PBANK_SFR

#ifdef CHIP_PBANK_EXT_SFR
    MOV        CHIP_PBANK_EXT_SFR, DATA_PBANK_EXT
#endif ; CHIP_PBANK_EXT_SFR

#ifdef CHIP_PBANK_SFR
    MOV        CHIP_PBANK_SFR, DATA_PBANK
#endif

    MOV        R1, DATA_R1
    MOV        R0, DATA_R0
    MOV        PSW, DATA_PSW
    MOV        A, DATA_A

    SETB       CHIP_EA_reab
    RETI

```

This assembler routine can be divided into two parts—copying data and restoring registers.

- Copying

R0 is loaded with the destination address in IData (0x7F). Then, R1 is set to the used offset within PData. The PData bank used is also initiated. The loop will then exchange data between the two memory areas and thus restore application IData memory.

- Restoring

Because the debugged application might also use the PData bank, its control register also needs to be restored, as well as the XData enable register if used. R0, R1, PSW, and A are restored. Interrupts are enabled. Finally, executing RETI will make the application PC be loaded from the stack, and thus the application program starts executing.

ENTERING THE ROM-MONITOR

While the application is executing, the ROM-monitor can be entered by one of the following possible reasons:

- Stop execution
- Single step
- Breakpoint hit.

Stop execution	When you click the Stop icon in the C-SPY toolbar or choose Debug>Stop Debugging , a stop command is sent to the ROM-monitor. The UART will then initiate an interrupt and thus break the application execution, and then jump back to the ROM-monitor. Then, the ROM-monitor will be entered again via the UART interrupt vector call to <code>__monitor_enter</code> .
Single step	Because single step execution is initialized by setting the <code>Tx</code> interrupt flag before leaving the ROM-monitor, this will trigger the interrupt after executing one instruction. Then, the ROM-monitor will be entered again via the UART interrupt vector call to <code>__monitor_enter</code> .
Breakpoint hit	Depending on which breakpoints that are supported, hitting a breakpoint might need some extra handling. Assuming that software breakpoints are supported, the original instruction is replaced by <code>CALL __monitor_enter</code> . In this case, a breakpoint hit is more like a change of program flow rather than an interrupt of program execution. Nevertheless, <code>__monitor_enter</code> will be executed and from there the ROM-monitor main protocol loop is entered.

In all these three cases, the status of the application execution is stored and the PC will be located on the application stack.

For any custom breakpoint implementations, you must make sure that the PC is stored on the stack in the same way as for interrupts and function calls, and to call the assembler routine `__monitor_enter` with all registers unchanged.

Note: Because execution of both single step and stop rely on triggering the UART interrupt, these stop mechanisms will be disabled if the debugged application program disables global interrupt handling.


RESOURCES USED BY THE ROM-MONITOR

The ROM-monitor executes in the same environment as your application program, which means it is vital that the two do not use the same resources concurrently. The ROM-monitor uses the following resources:

- The UART interrupt
- Approximately 128 bytes of IData/XData/PData memory
- Approximately 3.5 Kbytes of code memory
- Approximately 7 bytes of Data memory for the special register area.

When the ROM-monitor is executing, it uses IData memory for variables and the stack, and it stores application data.

The following illustration shows the ROM-monitor working memory:

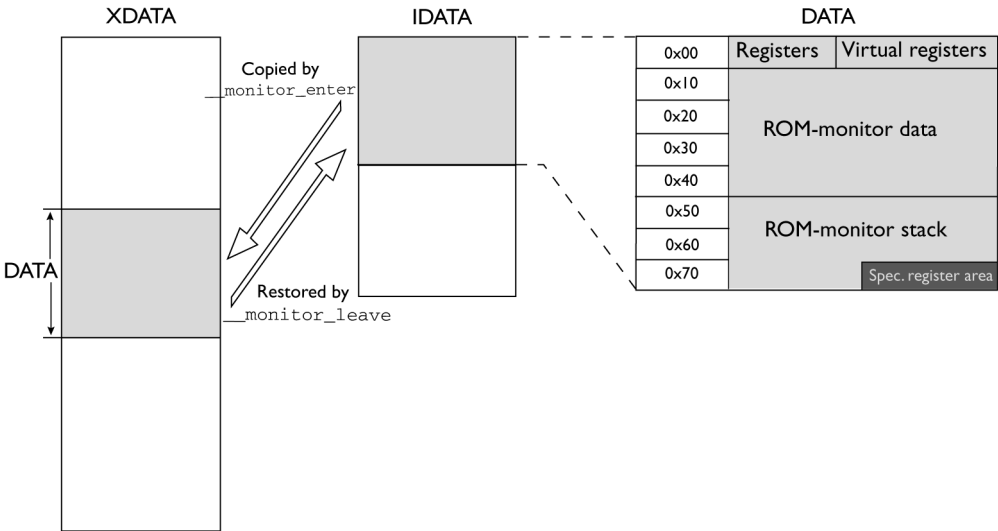

All memory except for the range 0x78-0x7F is restored when switching between the ROM-monitor and the application program.

A

- Abort (Report Assert option) 76
- __abortLaunch (C-SPY system macro). 270
- absolute location, specifying for a breakpoint. 129
- Access Type (Data breakpoints option) 124
- Access type (Edit Memory Access option) 172
- Access (Edit SFR option) 163
- Address Range (Find in Trace option) 187
- Address (Edit SFR option) 163
- ADe_protocol (C-SPY command line option) 318
- Ambiguous symbol (Resolve Symbol Ambiguity option). 102
- Analog Devices (C-SPY driver)
 - command line options 317
 - setting options for 382
- application_args (C-SPY command line option) 318
- application, built outside the IDE 46
- assembler labels, viewing 84
- assembler source code, fine-tuning 211
- assembler symbols, in C-SPY expressions 81
- assembler variables, viewing 84
- assumptions, programming experience. 23
- Auto Scroll (Timeline
 - window context menu) 196, 200, 250
- Auto window 85
- Autostep settings dialog box. 77

B

- attach_to_running_target (C-SPY command line option) 319
- backend (C-SPY command line option). 320
- backtrace information
 - viewing in Call Stack window 70
- banked_xdata (C-SPY command line option) 320
- batch mode, using C-SPY in 309
- Baud rate (ROM-monitor option) 381
- baud_rate (C-SPY command line option). 320
- Big Endian (Memory window context menu) 143
- blocks, in C-SPY macros 263

- bold style, in this guide 27
- boot_lock (C-SPY command line option). 321
- breakpoint condition, example 115
- breakpoint dialog box
 - Code 120
 - Data 124
 - Data Log 126
 - Immediate 127
 - Log 121
 - Trace Start 182
 - Trace Stop 183
- Breakpoint Usage window 119
- Breakpoint Usage (Infineon Emulator menu) 390
- Breakpoint Usage (J-Link menu) 391
- Breakpoint Usage (Silicon Labs Emulator menu) 391
- Breakpoint Usage (TI emulator menu) 390
- breakpoints
 - briefly about. 105
 - code, example 288
 - connecting a C-SPY macro 258
 - consumers of 110
 - data 124
 - data log 126
 - description of 105
 - disabling used by Stack window 111
 - icons for in the IDE 108
 - in different target systems 109
 - in flash memory 110
 - in Memory window 113
 - listing all 119
 - reasons for using 105
 - setting
 - in memory window 113
 - using system macros 114
 - using the dialog box 112
 - single-stepping if not available 44
 - toggling 112
 - types of 106
 - useful tips. 115

Breakpoints dialog box	
Range	123
Breakpoints window	117
Browse (Trace toolbar)	179
byte order, setting in Memory window	142

C

C function information, in C-SPY	63
C symbols, in C-SPY expressions	80
C variables, in C-SPY expressions	80
Cache type (Edit Memory Range option)	168
call chain, displaying in C-SPY	63
Call Stack graph (Timeline window)	194
Call stack information	63
Call Stack window	70
for backtrace information	63
Call Stack (Timeline window context menu)	197
__cancelAllInterrupts (C-SPY system macro)	271
__cancelInterrupt (C-SPY system macro)	271
Clear Group (Registers User Groups	
Setup window context menu)	158
Clear trace data (Trace toolbar)	178
__clearBreak (C-SPY system macro)	271
CLIB	
consuming breakpoints	111
library reference information for	26
naming convention	28
clock frequency, simulated	392
__closeFile (C-SPY system macro)	272
code breakpoints	
overview	106
padding	109
toggling	112
code coverage	
using	222
Code Coverage window	223
Code in XRAM (Infineon driver)	376
--code_coverage_file (C-SPY command line option)	322

code, covering execution of	223
command line options	318
typographic convention	27
command prompt icon, in this guide	27
communication problems	395
reducing speed (Texas Instruments driver)	372
communication (Analog Devices driver)	383
communication (ROM-monitor driver)	381
communication (Silicon Labs driver)	385
Communication (Texas Instruments driver)	372
--communication_logfile (C-SPY command line option)	322
computer style, typographic convention	26
conditional statements, in C-SPY macros	262
--connect_to (C-SPY command line option)	323
context menu, in windows	83
conventions, used in this guide	26
Copy Window Contents (Disassembly	
window context menu)	69
copyright notice	2
--core (C-SPY command line option)	323
Core (Cores window)	78
cores	
inspecting state of	77
Cores window	77
--core_clock_frequency (C-SPY command line option)	323
CPU clock frequency, overriding (Analog Devices driver)	383
cspybat	309
reading options from file (-f)	328
current position, in C-SPY Disassembly window	66
cursor, in C-SPY Disassembly window	66
--cycles (C-SPY command line option)	324
Cycles (Cores window)	78
C-SPY	
batch mode, using in	309
debugger systems, overview of	35
environment overview	31
plugin modules, loading	45
scripting. <i>See</i> macros	
setting up	43–44
starting the debugger	45

C-SPY drivers	
differences between drivers	38
overview	37
specifying	365
types of	36
C-SPY expressions	80
evaluating, using Macro Quicklaunch window	306
evaluating, using Quick Watch window	97
in C-SPY macros	262
Tooltip watch, using	79
Watch window, using	79
C-SPY macros	
blocks	263
conditional statements	262
C-SPY expressions	262
examples	255
checking status of register	257
creating a log macro	258
executing	255
connecting to a breakpoint	258
using Quick Watch	257
using setup macro and setup file	257
functions	81, 260
keywords	260–261, 263
loop statements	263
macro statements	262
parameters	261
setup macro file	254
executing	257
setup macro functions	254
summary	265
system macros, summary of	268
using	253
variables	82, 260
C-SPY options	
Extra Options	367
Images	366
Plugins	368
Setup	365

C-SPYLink	36
C-STAT for static analysis, documentation for	25
C++ terminology	26

D

DAS server	41
specifying connection	393
Data bits (ROM-monitor option)	381
data breakpoints, overview	106
Data Coverage (Memory window context menu)	143
data coverage, in Memory window	141
data log breakpoints, overview	107
Data Log graph (Timeline window)	198
Data Log Summary window	205
Data Log Summary (Simulator menu)	389
Data Log window	202
Data Log (Simulator menu)	389
Data Log (Timeline window context menu)	200
ddf (filename extension), selecting a file	45
Debug Log window	74
Debug menu (C-SPY main window)	51
Debug (Report Assert option)	76
--debug_file (cspsybat option)	324
debugger concepts, definitions of	33
debugger drivers	
setting options for	363
simulator	38
debugger drivers. <i>See</i> C-SPY drivers	
Debugger Macros window	304
debugger system overview	35
debugging projects	
externally built applications	46
loading multiple images	47
debugging, RTOS awareness	33
--debug_lock (C-SPY command line option)	325
__delay (C-SPY system macro)	272
Delay (Autostep Settings option)	77

Delete/revert All Custom SFRs (SFR Setup window context menu)	161
Description (Edit Interrupt option)	239
description (interrupt property).	239
Device description file (debugger option).	366
device description files	45
definition of	49
memory zones	133
modifying	49
register zone.	133
specifying interrupts	283
--devices_after (C-SPY command line option)	325
--devices_before (C-SPY command line option)	325
__disableInterrupts (C-SPY system macro)	272
--disable_interrupts (C-SPY command line option)	326
Disassembly window	65
context menu	67
disclaimer	2
DLIB	
consuming breakpoints	110
naming convention.	28
do (macro statement)	263
document conventions	26
documentation	
overview of guides.	25
overview of this guide	23
Download options (Analog Devices driver)	382
Download options (FS2 driver).	373
Download options (Infineon driver)	375
Download options (Nordic Semiconductor driver)	379
Download options (ROM-monitor driver)	380
Download options (Segger J-Link driver).	377
Download options (Silicon Labs driver)	384
Download options (Texas Instruments driver)	370
--download_only (C-SPY command line option)	326
Driver (debugger option)	365
__driverType (C-SPY system macro)	273
--drv_communication_log (C-SPY command line option)	326
--drv_silabs_page_size (C-SPY command line option).	327
--drv_suppress_download (C-SPY command line option)	327

--drv_verify_download (C-SPY command line option)	327
---	-----

E

Edit Expressions (Trace toolbar).	179
Edit Interrupt dialog box.	239
Edit Memory Access dialog box	171
Edit Memory Range dialog box	162
Edit Memory Range dialog box (for C-SPY hardware debugger drivers)	167
Edit Settings (Trace toolbar).	179
edition, of this guide	2
Enable interrupt simulation (Interrupt Setup option).	237
Enable Log File (Log File option).	75
Enable (Timeline window context menu)	197
__enableInterrupts (C-SPY system macro)	274
Enable/Disable Breakpoint (Disassembly window context menu)	69
Enable/Disable (Trace toolbar)	178
End address (Memory Save option)	144
endianness. <i>See</i> byte order	
Enter Location dialog box.	128
--erase_data_flash (C-SPY command line option)	328
--erase_flash (C-SPY command line option).	328
__evaluate (C-SPY system macro)	274
Evaluate Now (Macro Quicklaunch window context menu)	307
examples	
C-SPY macros	255
interrupts	
interrupt logging	236
timer	234
macros	
checking status of register.	257
creating a log macro	258
using Quick Watch	257
performing tasks and continue execution.	115
tracing incorrect function arguments	115
Exclude system breakpoints on (debugger option)	365
execUserExecutionStarted (C-SPY setup macro)	266

execUserExecutionStopped (C-SPY setup macro) 266
 execUserExit (C-SPY setup macro) 268
 execUserPreload (C-SPY setup macro) 265
 execUserPreReset (C-SPY setup macro) 267
 execUserReset (C-SPY setup macro) 267
 execUserSetup (C-SPY setup macro) 267
 executed code, covering 223
 execution history, tracing 177
 Execution state (Cores window) 77
 expressions. *See* C-SPY expressions
 extended command line file, for cspybat 328
 Extra Options, for C-SPY 367

F

-f (cspybat option) 328
 Factory ranges (Memory Configuration option) 165
 File format (Memory Save option) 144
 file types
 device description, specifying in IDE 45
 macro 44, 366
 filename extensions
 ddf, selecting device description file 45
 mac, using macro file 44
 Filename (Memory Restore option) 145
 Filename (Memory Save option) 145
 Fill dialog box 146
 __fillMemory8 (C-SPY system macro) 275
 __fillMemory16 (C-SPY system macro) 275
 __fillMemory32 (C-SPY system macro) 276
 Find in Trace dialog box 186
 Find in Trace window 187
 Find in Trace (Disassembly window context menu) 69
 Find (Memory window context menu) 143
 Find (Trace toolbar) 179
 first activation time (interrupt property)
 definition of 230
 First activation (Edit Interrupt option) 239

flash
 erasing (Analog Devices driver) 382
 erasing (Infineon driver) 375
 erasing (Texas Instruments driver) 370
 protecting (Texas Instruments driver) 371
 size of page (Silicon Labs driver) 385
 flash memory, load library module to 279
 __fmessage (C-SPY macro keyword) 263
 for (macro statement) 263
 Force (Forced Interrupt window context menu) 241
 Forced Interrupt window 240
 Forced Interrupts (Simulator menu) 389
 Format (Registers User Groups
 Setup window context menu) 158
 formats, C-SPY input 33
 FS2 System Navigator (C-SPY driver)
 command line options 315
 setting options for 373
 --fs2_configuration (C-SPY command line option) 329
 --fs2_flash_cfg_entry (C-SPY command line option) 329
 --fs2_flash_in_code (C-SPY command line option) 330
 --fs2_ram_in_code (C-SPY command line option) 330
 Function Profiler window 216
 Function Profiler (Simulator menu) 389
 Function Trace window 181
 functions
 C-SPY running to when starting 44, 365
 most time spent in, locating 211
 --function_profiling (cspybat option) 330

G

__getSelectedCore (C-SPY system macro) 277
 Go To Source (Timeline
 window context menu) 197, 201, 250
 Go (Debug menu) 61

H

--handshake_at_9600 (C-SPY command line option) . . .	331
Handshaking (ROM-monitor option)	381
highlighting, in C-SPY	62
Hold time (Edit Interrupt option)	240
hold time (interrupt property), definition of	231

I

IAR debugger driver plugin (debugger option)	369
icons	
in this guide	27
if else (macro statement)	262
if (macro statement)	262
Ignore (Report Assert option)	76
Images window	54
Images, loading multiple	366
immediate breakpoints, overview	107
Include (Log File option)	75
Infineon (C-SPY driver)	
command line options	315
setting options for	375
--infineon_ram_in_code (C-SPY command line option) . .	331
input formats, C-SPY	33
Input Mode dialog box	73
input, special characters in Terminal I/O window	73
installation directory	26
Instruction Profiling (Disassembly window context menu)	68
Intel-extended, C-SPY input format	33
Intel-extended, C-SPY output format	36
Interrupt Log graph in Timeline window	248
Interrupt Log Summary window	246
Interrupt Log window	243
Interrupt Setup dialog box	237
Interrupt Setup (Simulator menu)	389
Interrupt Status window	241
interrupt system, using device description file	233
Interrupt (Edit Interrupt option)	239

Interrupt (Timeline window context menu)	250
interrupts	
adapting C-SPY system for target hardware	233
simulated, introduction to	229
timer, example	234
using system macros	232
__isBatchMode (C-SPY system macro)	277
italic style, in this guide	27
I/O register. <i>See</i> SFR	

J

--jlink_connection_id (C-SPY command line option) . . .	332
--jlink_log_file (C-SPY command line option)	332
--jlink_power (C-SPY command line option)	332
--jlink_speed (C-SPY command line option)	333
J-Link menu	391

K

--key_noN (C-SPY command line option)	333
---	-----

L

labels (assembler), viewing	84
Leave Target Running (Infineon Emulator menu)	390
Leave Target Running (Texas Instruments Emulator menu)	390
--leave_target_running (C-SPY command line option) . .	334
Length (Fill option)	146
library functions	
C-SPY support for using, plugin module	338
online help for	26
lightbulb icon, in this guide	27
linker options	
typographic convention	27
consuming breakpoints	110
Little Endian (Memory window context menu)	142
Live Watch window	91

__loadImage (C-SPY system macro)	278
loading multiple debug files, list currently loaded	54
loading multiple images	47
Locals window	87
--lock_bits (C-SPY command line option)	334
--lock_bits_pages (C-SPY command line option)	335
log breakpoints, overview	106
Log communication (ROM-monitor option)	382
Log File dialog box	75
loop statements, in C-SPY macros	263

M

mac (filename extension), using a macro file	44
--macro (C-SPY command line option)	335
macro files, specifying	44, 366
Macro Quicklaunch window	306
Macro Registration window	302
macro statements	262
macros	
executing	255
using	253
--macro-param (C-SPY command line option)	335
main function, C-SPY running to when starting	44, 365
--mapu (C-SPY command line option)	336
Memory access checking (Memory Access Setup option)	170
Memory Access Setup dialog box	169
Memory Access Setup (Simulator menu)	388
Memory Configuration dialog box (for C-SPY hardware debugger drivers)	164
Memory Configuration (J-Link menu)	391
Memory Fill (Memory window context menu)	143
memory map	169
Memory Restore dialog box	145
Memory Restore (Memory window context menu)	143
Memory Save dialog box	144
Memory Save (Memory window context menu)	143
Memory window	140

memory zones	132
in device description file	133
__memoryRestore (C-SPY system macro)	279
__memorySave (C-SPY system macro)	279
menu bar, C-SPY-specific	51
__message (C-SPY macro keyword)	263
__messageBoxYesCancel (C-SPY system macro)	280
__messageBoxYesNo (C-SPY system macro)	281
Messages window, amount of output	74
migration, from earlier IAR compilers	25
MISRA C	
documentation	25
Mixed Mode (Disassembly window context menu)	69
Motorola, C-SPY input format	33
Motorola, C-SPY output format	36
Move to PC (Disassembly window context menu)	67
--multiple_devices (C-SPY command line option)	336

N

Name (Edit SFR option)	162
naming conventions	27
Navigate (Timeline window context menu)	196, 199, 249
Next Symbol (Symbolic Memory window context menu)	149
Nordic Semiconductor (C-SPY driver)	
command line options	316
setting options for	379
--nr_of_extra_images (C-SPY command line option)	337
--number_of_banks (C-SPY command line option)	337
Nu-Link (C-SPY driver)	
C-SPY support for	37

O

__openFile (C-SPY system macro)	281
Operation (Fill option)	146
operators, sizeof in C-SPY	82
optimizations, effects on variables	82

options	
in the IDE	363
on the command line	318, 367
Options (Stack window context menu)	153
__orderInterrupt (C-SPY system macro)	283
Originator (debugger option)	369

P

-p (C-SPY command line option)	338
__param (C-SPY macro keyword)	261
parameters	
tracing incorrect values of	63
typographic convention	27
Parity (ROM-monitor option)	381
part number, of this guide	2
PC (Cores window)	78
peripheral units	
displayed in Registers window	132
in C-SPY expressions	81
initializing using setup macros	254
peripherals register. <i>See</i> SFR	
Please select one symbol	
(Resolve Symbol Ambiguity option)	103
--plugin (C-SPY command line option)	338
plugin modules (C-SPY)	36
loading	45
Plugins (C-SPY options)	368
__popSimulatorInterruptExecutingStack (C-SPY system macro)	284
pop-up menu. <i>See</i> context menu	
Port (ROM-monitor option)	381
--power_target (C-SPY command line option)	339
prerequisites, programming experience	23
--preserve_hex_files (C-SPY command line option)	339
Previous Symbol (Symbolic Memory window context menu)	149
probability (interrupt property)	240
definition of	230
Probability % (Edit Interrupt option)	240

--proc_alternative_sfr_addresses (C-SPY command line option)	339
--proc_codebank_end (C-SPY command line option)	340
--proc_codebank_mask (C-SPY command line option)	341
--proc_codebank_reg (C-SPY command line option)	341
--proc_codebank_start (C-SPY command line option)	341
--proc_code_model (C-SPY command line option)	340
--proc_core (C-SPY command line option)	342
--proc_data_addr_24 (C-SPY command line option)	342
--proc_data_model (C-SPY command line option)	342
--proc_DPH <i>n</i> (C-SPY command line option)	343
--proc_DPL <i>n</i> (C-SPY command line option)	343
--proc_dptr_automod_op (C-SPY command line option)	344
--proc_dptr_automod_type (C-SPY command line option)	344
--proc_dptr_DPC (C-SPY command line option)	345
--proc_dptr_DPS (C-SPY command line option)	345
--proc_dptr_mask (C-SPY command line option)	345
--proc_dptr_nr_of (C-SPY command line option)	346
--proc_dptr_switch_method (C-SPY command line option)	346
--proc_dptr_visibility (C-SPY command line option)	347
--proc_DPX <i>n</i> (C-SPY command line option)	347
--proc_driver (C-SPY command line option)	348
--proc_exclude_exit_breakpoint (C-SPY command line option)	348
--proc_exclude_getchar_breakpoint (C-SPY command line option)	349
--proc_exclude_putchar_breakpoint (C-SPY command line option)	349
--proc_extended_stack (C-SPY command line option)	349
--proc_nr_virtual_regs (C-SPY command line option)	350
--proc_pc_readonly (C-SPY command line option)	350
--proc_pdata_bank_ext_reg_addr (C-SPY command line option)	350
--proc_pdata_bank_reg_addr (C-SPY command line option)	351
--proc_silent (C-SPY command line option)	351
--proc_xdata_banking (C-SPY command line option)	351
Profile Selection (Timeline window context menu)	197

- profiling
 - analyzing data 213
 - on function level 212
 - on instruction level. 215
- profiling information, on functions and instructions 211
- profiling sources
 - trace (calls) 212
 - trace (flat) 212
- program execution
 - breaking. 106–107
 - in C-SPY 57
- programming experience 23
- program. *See* application
- projects, for debugging externally built applications. . . . 46
- publication date, of this guide. 2

Q

- Quick Watch window 97
- executing C-SPY macros 257

R

- RAM (Edit Memory Access option) 168
- Range for (Viewing Range option) 208
- Range (Range breakpoints option) 123–124
- __readFile (C-SPY system macro) 284
- __readFileByte (C-SPY system macro) 285
- __readMemoryByte (C-SPY system macro) 285
- __readMemory8 (C-SPY system macro) 285
- __readMemory16 (C-SPY system macro) 286
- __readMemory32 (C-SPY system macro) 286
- reduce_speed (C-SPY command line option). 352
- reference information, typographic convention. 27
- register groups 132
- predefined, enabling. 154
- Register User Groups Setup window 157
- registered trademarks 2
- __registerMacroFile (C-SPY system macro) 287

- Registers window 154
- registers_after (C-SPY command line option) 352
- registers_before (C-SPY command line option). 352
- registers, displayed in Registers window 154
- Removal All Groups (Registers User Groups Setup window context menu) 158
- Remove All (Macro Quicklaunch window context menu) 307
- Remove (Macro Quicklaunch window context menu) . . . 307
- Remove (Registers User Groups Setup window context menu) 158
- Repeat interval (Edit Interrupt option) 239
- repeat interval (interrupt property), definition of 230
- Replace (Memory window context menu) 143
- Report Assert dialog box 76
- __resetFile (C-SPY system macro) 287
- Resolve Source Ambiguity dialog box 130
- Restore (Memory Restore option). 145
- retain_memory (C-SPY command line option) 353
- retain_pages (C-SPY command line option) 353
- return (macro statement). 263
- rom_mon_bp_padding (padding breakpoints) 110
- rom_serial_port (C-SPY command line option). 354
- ROM-monitor (C-SPY driver)
 - command line options 316
 - setting options for 380
- ROM-monitor, definition of 36
- ROM/Flash (Edit Memory Access option) 168
- RTOS awareness debugging 33
- RTOS awareness (C-SPY plugin module) 33
- Run to Cursor (Disassembly window context menu) 67
- Run to Cursor, command for executing 62
- Run to (C-SPY option) 44, 365

S

- Save Custom SFRs (SFR Setup window context menu) . . 162
- Save to File (Register User Groups Setup window context menu) 159
- Save to File (Timeline window context menu) 197

Save (Memory Save option)	145
Save (Trace toolbar)	179
Scale (Viewing Range option)	209
scripting C-SPY. <i>See</i> macros	
security keys (Infineon driver)	376
Segger J-Link (C-SPY driver)	
<i>See also</i> J-Link	
command line options	316
menu	391
setting options for	377
Select Graphs	
(Timeline window context menu)	197, 201, 251
Select plugins to load (debugger option)	368
__selectCore (C-SPY system macro)	287
Serial Number dialog box	392
Serial Port options (Analog Devices driver)	383
Serial Port options (ROM-monitor driver)	381
Serial Port options (Silicon Labs driver)	385
--serial_port (C-SPY command line option)	354
Server Selection dialog box	393
--server_address (C-SPY command line option)	355
--server_name (C-SPY command line option)	355
Set Data Breakpoint (Memory window context menu) ..	143
Set Data Log	
Breakpoint (Memory window context menu)	144
Set Next Statement (Disassembly window context menu) .	69
__setCodeBreak (C-SPY system macro)	288
__setDataBreak (C-SPY system macro)	289
__setDataLogBreak (C-SPY system macro)	290
__setLogBreak (C-SPY system macro)	291
__setSimBreak (C-SPY system macro)	292
__setTraceStartBreak (C-SPY system macro)	293
__setTraceStopBreak (C-SPY system macro)	294
setup macro file, registering	44
setup macro functions	254
reserved names.	265
Setup macros (debugger option)	365
Setup (C-SPY options)	365
SFR	
in Registers window	155
specify the memory location for.	339
using as assembler symbols	81
SFR Setup window	159
SFR/Uncached (Edit Memory Access option)	168
shortcut menu. <i>See</i> context menu	
Show All (SFR Setup window context menu)	161
Show Custom SFRs only (SFR Setup window context menu)	161
Show Factory SFRs only (SFR Setup window context menu)	161
Show Numerical Value (Timeline window context menu)	201
Show offsets (Stack window context menu)	152
Show variables (Stack window context menu)	152
Silabs (C-SPY driver)	
command line options	317
setting options for	383
--silabs_2wire_interface (C-SPY command line option) ..	356
--silent (C-SPY command line option)	356
Silicon Labs 2-wire interface (Cygnet Emulator option) ..	384
Simulated Frequency dialog box	392
simulating interrupts, enabling/disabling	237
Simulator menu.	388
simulator, introduction	38
--sim_guard_stacks (C-SPY command line option)	356
Size (Edit SFR option)	163
Size (Timeline window context menu)	201
sizeof	82
__smessage (C-SPY macro keyword)	263
software breakpoints	
behavior	108
enabling (Infineon driver)	376
use of	109
--software_breakpoints (C-SPY command line option) ..	357
Solid Graph (Timeline window context menu)	201
Sort by (Timeline window context menu)	250
__sourcePosition (C-SPY system macro)	295
special function registers (SFR)	
in Registers window	155
using as assembler symbols	81

stack overflow warnings (Texas Instruments driver) 372
 Stack window 150
 --stack_overflow (C-SPY command line option) 357
 standard C, sizeof operator in C-SPY 82
 Start address (Fill option) 146
 Start address (Memory Save option) 144
 static analysis
 documentation for 25
 Statics window 94
 Status (Cores window) 78
 stdin and stdout, redirecting to C-SPY window 72
 Step Into, description 59
 Step Out, description. 60
 Step Over, description. 59
 step points, definition of 58
 Stop bits (ROM-monitor option). 381
 Stop Timers on Halt (Texas Instruments Emulator menu) 390
 __strFind (C-SPY system macro) 295
 __subString (C-SPY system macro) 296
 Suppress download (debugger option) 369
 --suppress_download (C-SPY command line option) . . . 357
 Symbolic Memory window. 147
 Symbols window 100
 symbols, in C-SPY expressions 80

T

Target options (FS2 driver). 374, 378
 Target options (Infineon driver) 376
 Target options (Texas Instruments driver) 372
 target system, definition of 35
 __targetDebuggerVersion (C-SPY system macro) 296
 Terminal IO Log Files (Terminal IO Log Files option) . . 73
 Terminal I/O Log Files dialog box 73
 Terminal I/O window 63, 72
 terminology. 26
 Texas Instruments (C-SPY driver)
 command line options 314
 setting options for 370
 Text search (Find in Trace option) 186
 Third-Party Driver (debugger options) 369
 Time Axis Unit (Timeline
 window context menu) 197, 201, 251
 Timeline window 248
 Timeline window (Call Stack graph) 194
 Timeline window (Data Log graph) 198
 --timeout (C-SPY command line option) 358
 timer interrupt, example 234
 Toggle Breakpoint (Code) (Disassembly
 window context menu) 68
 Toggle Breakpoint (Log) (Disassembly
 window context menu) 68
 Toggle Breakpoint (Trace Start) (Disassembly
 window context menu) 68
 Toggle Breakpoint (Trace Stop) (Disassembly
 window context menu) 68
 Toggle DTR (ROM-monitor option). 381
 Toggle RTS (ROM-monitor option) 382
 Toggle source (Trace toolbar). 178
 --toggle_DTR (C-SPY command line option). 358
 --toggle_RTS (C-SPY command line option) 358
 __toLower (C-SPY system macro) 297
 tools icon, in this guide 27
 __toString (C-SPY system macro) 297
 __toUpper (C-SPY system macro) 298
 trace 175, 189
 Trace Expressions window 184
 trace start and stop breakpoints, overview 106
 Trace Start breakpoint dialog box 182
 Trace Stop breakpoint dialog box 183
 Trace window 178
 trace (calls), profiling source 212
 trace (flat), profiling source 212
 trademarks 2
 Trigger At (breakpoints option) 123
 typographic conventions 26

U

UBROF	33
Unavailable, C-SPY message	83
Universal Binary Relocatable Object Format. <i>See</i> UBROF	
__unloadImage(C-SPY system macro)	298
USB Device Selection dialog box	393
--usb_id (C-SPY command line option)	359
--usb_interface (C-SPY command line option)	359
Use command line options (debugger option)	367
Use Extra Images (debugger option)	366
Use manual ranges (Memory Access Setup option)	170
Use ranges based on (Memory Access Setup option)	170
Used ranges (Memory Configuration option)	166
user application, definition of	35

V

Value (Fill option)	146
__var (C-SPY macro keyword)	260
variables	
effects of optimizations	82
in C-SPY expressions	80
information, limitation on	82
variance (interrupt property), definition of	231
Variance % (Edit Interrupt option)	240
--verify_all (C-SPY command line option)	359
--verify_download (C-SPY command line option)	360
version of this guide	2
Viewing Range dialog box	208
Viewing Range (Timeline window context menu)	200
Visual State, C-SPY plugin module for	36

W

warnings icon, in this guide	27
Watch window	89
using	79

web sites, recommended	26
while (macro statement)	263
windows, specific to C-SPY	53
With I/O emulation modules (linker option), using	72
__writeFile (C-SPY system macro)	299
__writeFileByte (C-SPY system macro)	299
__writeMemoryByte (C-SPY system macro)	300
__writeMemory8 (C-SPY system macro)	300
__writeMemory16 (C-SPY system macro)	300
__writeMemory32 (C-SPY system macro)	301

X

XRAM, code in RAM (Infineon driver)	376
-------------------------------------	-----

Z

zone	
defined in device description file	133
in C-SPY	132
part of an absolute address	129
Zone (Edit SFR option)	163
Zoom (Timeline window context menu)	196, 200, 250

Symbols

__abortLaunch (C-SPY system macro)	270
__cancelAllInterrupts (C-SPY system macro)	271
__cancelInterrupt (C-SPY system macro)	271
__clearBreak (C-SPY system macro)	271
__closeFile (C-SPY system macro)	272
__delay (C-SPY system macro)	272
__disableInterrupts (C-SPY system macro)	272
__driverType (C-SPY system macro)	273
__enableInterrupts (C-SPY system macro)	274
__evaluate (C-SPY system macro)	274
__fillMemory8 (C-SPY system macro)	275
__fillMemory16 (C-SPY system macro)	275

__fillMemory32 (C-SPY system macro)	276	__var (C-SPY macro keyword)	260
__fmessage (C-SPY macro keyword)	263	__writeFile (C-SPY system macro)	299
__getSelectedCore (C-SPY system macro)	277	__writeFileByte (C-SPY system macro)	299
__isBatchMode (C-SPY system macro)	277	__writeMemoryByte (C-SPY system macro)	300
__loadImage (C-SPY system macro)	278	__writeMemory8 (C-SPY system macro)	300
__memoryRestore (C-SPY system macro)	279	__writeMemory16 (C-SPY system macro)	300
__memorySave (C-SPY system macro)	279	__writeMemory32 (C-SPY system macro)	301
__message (C-SPY macro keyword)	263	-f (cspybat option)	328
__messageBoxYesCancel (C-SPY system macro)	280	-p (C-SPY command line option)	338
__messageBoxYesNo (C-SPY system macro)	281	--Ade_protocol (C-SPY command line option)	318
__openFile (C-SPY system macro)	281	--application_args (C-SPY command line option)	318
__orderInterrupt (C-SPY system macro)	283	--attach_to_running_target (C-SPY command line option)	319
__param (C-SPY macro keyword)	261	--backend (C-SPY command line option)	320
__popSimulatorInterruptExecutingStack (C-SPY system macro)	284	--banked_xdata (C-SPY command line option)	320
__readFile (C-SPY system macro)	284	--baud_rate (C-SPY command line option)	320
__readFileByte (C-SPY system macro)	285	--boot_lock (C-SPY command line option)	321
__readMemoryByte (C-SPY system macro)	285	--code_coverage_file (C-SPY command line option)	322
__readMemory8 (C-SPY system macro)	285	--communication_logfile (C-SPY command line option)	322
__readMemory16 (C-SPY system macro)	286	--connect_to (C-SPY command line option)	323
__readMemory32 (C-SPY system macro)	286	--core (C-SPY command line option)	323
__registerMacroFile (C-SPY system macro)	287	--core_clock_frequency (C-SPY command line option)	323
__resetFile (C-SPY system macro)	287	--cycles (C-SPY command line option)	324
__selectCore (C-SPY system macro)	287	--debug_file (cspybat option)	324
__setCodeBreak (C-SPY system macro)	288	--debug_lock (C-SPY command line option)	325
__setDataBreak (C-SPY system macro)	289	--devices_after (C-SPY command line option)	325
__setDataLogBreak (C-SPY system macro)	290	--devices_before (C-SPY command line option)	325
__setLogBreak (C-SPY system macro)	291	--disable_interrupts (C-SPY command line option)	326
__setSimBreak (C-SPY system macro)	292	--download_only (C-SPY command line option)	326
__setTraceStartBreak (C-SPY system macro)	293	--drv_communication_log (C-SPY command line option)	326
__setTraceStopBreak (C-SPY system macro)	294	--drv_silabs_page_size (C-SPY command line option)	327
__smessage (C-SPY macro keyword)	263	--drv_suppress_download (C-SPY command line option)	327
__sourcePosition (C-SPY system macro)	295	--drv_verify_download (C-SPY command line option)	327
__strFind (C-SPY system macro)	295	--erase_data_flash (C-SPY command line option)	328
__subString (C-SPY system macro)	296	--erase_flash (C-SPY command line option)	328
__targetDebuggerVersion (C-SPY system macro)	296	--fs2_configuration (C-SPY command line option)	329
__toLower (C-SPY system macro)	297	--fs2_flash_cfg_entry (C-SPY command line option)	329
__toString (C-SPY system macro)	297	--fs2_flash_in_code (C-SPY command line option)	330
__toUpper (C-SPY system macro)	298	--fs2_ram_in_code (C-SPY command line option)	330
__unloadImage (C-SPY system macro)	298	--function_profiling (cspybat option)	330

--handshake_at_9600 (C-SPY command line option) . . .	331	--proc_dpnr_visibility (C-SPY command line option) . . .	347
--infineon_ram_in_code (C-SPY command line option) . .	331	--proc_DPXn (C-SPY command line option)	347
--jlink_connection_id (C-SPY command line option) . . .	332	--proc_driver (C-SPY command line option)	348
--jlink_log_file (C-SPY command line option)	332	--proc_exclude_exit_breakpoint (C-SPY command line option)	348
--jlink_power (C-SPY command line option)	332	--proc_exclude_getchar_breakpoint (C-SPY command line option)	349
--jlink_speed (C-SPY command line option)	333	--proc_exclude_putchar_breakpoint (C-SPY command line option)	349
--key_noN (C-SPY command line option)	333	--proc_extended_stack (C-SPY command line option) . .	349
--leave_target_running (C-SPY command line option) . .	334	--proc_nr_virtual_regs	313
--lock_bits (C-SPY command line option)	334	--proc_nr_virtual_regs (C-SPY command line option) . .	350
--lock_bits_pages (C-SPY command line option)	335	--proc_pc_readonly (C-SPY command line option)	350
--macro (C-SPY command line option)	335	--proc_pdata_bank_ext_reg_addr (C-SPY command line option)	350
--macro_param (C-SPY command line option)	335	--proc_pdata_bank_reg_addr (C-SPY command line option)	351
--mapu (C-SPY command line option)	336	--proc_silent (C-SPY command line option)	351
--multiple_devices (C-SPY command line option)	336	--proc_xdata_banking (C-SPY command line option) . .	351
--nr_of_extra_images (C-SPY command line option) . . .	337	--reduce_speed (C-SPY command line option)	352
--number_of_banks (C-SPY command line option)	337	--registers_after (C-SPY command line option)	352
--plugin (C-SPY command line option)	338	--registers_before (C-SPY command line option)	352
--power_target (C-SPY command line option)	339	--retain_memory (C-SPY command line option)	353
--preserve_hex_files (C-SPY command line option) . . .	339	--retain_pages (C-SPY command line option)	353
--proc_alternative_sfr_addressesl (C-SPY command line op- tion)	339	--rom_mon_bp_padding (padding breakpoints)	110
--proc_codebank_end (C-SPY command line option) . . .	340	--rom_serial_port (C-SPY command line option)	354
--proc_codebank_mask (C-SPY command line option) . .	341	--serial_port (C-SPY command line option)	354
--proc_codebank_reg (C-SPY command line option) . . .	341	--server_address (C-SPY command line option)	355
--proc_codebank_start (C-SPY command line option) . .	341	--server_name (C-SPY command line option)	355
--proc_code_model (C-SPY command line option)	340	--silabs_2wire_interface (C-SPY command line option) .	356
--proc_core (C-SPY command line option)	342	--silent (C-SPY command line option)	356
--proc_data_addr_24 (C-SPY command line option) . . .	342	--sim_guard_stacks (C-SPY command line option)	356
--proc_data_model (C-SPY command line option)	342	--software_breakpoints (C-SPY command line option) . .	357
--proc_DPHn (C-SPY command line option)	343	--stack_overflow (C-SPY command line option)	357
--proc_DPLn (C-SPY command line option)	343	--suppress_download (C-SPY command line option) . . .	357
--proc_dpnr_automod_op (C-SPY command line option) .	344	--timeout (C-SPY command line option)	358
--proc_dpnr_automod_type (C-SPY command line option)	344	--toggle_DTR (C-SPY command line option)	358
--proc_dpnr_DPC (C-SPY command line option)	345	--toggle_RTS (C-SPY command line option)	358
--proc_dpnr_DPS (C-SPY command line option)	345	--usb_id (C-SPY command line option)	359
--proc_dpnr_mask (C-SPY command line option)	345	--usb_interface (C-SPY command line option)	359
--proc_dpnr_nr_of (C-SPY command line option)	346		
--proc_dpnr_switch_method (C-SPY command line option)	346		

--verify_all (C-SPY command line option) 359
--verify_download (C-SPY command line option) 360

Numerics

1x Units (Symbolic Memory window context menu) 149
8x Units (Memory window context menu) 142